

EAGLE TUGS



Parts and Service Manual



Vehicle Types: TT-4, TT-5, TT-6, & TT-8

Engine Type: Yanmar Diesel 4TNV98 Tier II & Tier III Engine Models

This page was intentionally left blank

INTRODUCTION

From everyone at Eagle Industrial Truck Manufacturing, we would like to say Thank You for purchasing an Eagle TT-series tow tractor. We take a lot of pride in the quality of the products that we build, as well as our continued customer service. Our goal is to build a long term relationship with our customers. We want you, the customer, to be 100% satisfied with your Eagle experience. To us, this means that your Eagle TT-series tractor is functionally superior to any other products you have used. This also means that your Eagle product is continually supported in a professional, timely manner.

PURPOSE & USE OF THIS MANUAL

This manual is designed as a reference guide to make the reader more familiar with the components of the Eagle TT-4, TT-5, TT-6, and TT-8 tow tractor models. This manual includes part numbers and descriptions to assist the reader in ordering component spare/service parts. The manual also outlines the Scheduled Maintenance Intervals recommended by Eagle in order to keep your vehicle running properly. In this manual you will also find the Eagle Standard Warranty on all of the TT-series tow tractors. However, for more detailed information on the Eagle Warranty and procedure, as well as information pertaining to the safe operation of your Eagle product, please see the Eagle Operations Manual that was also included with your vehicle.

TECHNICAL ASSISTANCE

When addressing a repair procedure or operational problem, please remember that Eagle technical support is only a phone call away. Eagle technicians are available to assist you in vehicle diagnostics and recommended repair procedures. We encourage you to use this service to reduce machine down-time and to gain a better understanding of proper repair procedures.

ORDERING SPARE/SERVICE PARTS

Eagle inventories most of the component parts found in its TT-series tow tractors, and most spare/service parts can be shipped the same day the order is received. Parts orders need to be received at Eagle by 12:00 pm (Noon) EST in order for the parts to be shipped that same day. Parts ordered after 12:00 pm EST will most likely be shipped the following day.

Eagle Corporate Office

26111 Northline Rd

Taylor, MI 48180

(800) 671-0431

www.eagletugs.com

Customer Service

customerservice@eagletugs.com

(734) 442-1000 -- (800) 671-0431

Parts & Service

parts@eagletugs.com

(734) 442-1000 -- (800) 671-0431

Technical Support

support@eagletugs.com

(734) 442-1000 -- (800) 671-0431

TABLE OF CONTENTS

INTRODUCTION.....	3
PURPOSE & USE OF THIS MANUAL	3
TECHNICAL ASSISTANCE.....	3
ORDERING SPARE/SERVICE PARTS	3
CONTACT INFORMATION	3
WARRANTY.....	8
VEHICLE ID INFORMATION	8
WARRANTY REGISTRATION.....	9
THREEGLE WARRANTY INFORMATION	9
YANMAR WARRANTY REGISTRATION.....	10
AUTHORIZED YANMAR DISTRIBUTOR INFORMATION	10
EAGLE TUGS SERVICE BULLETIN ESB-02-08	11
SAFETY INFORMATION	12
SERVICE PARTS ILLUSTRATIONS & DETAIL.....	13
IDENTIFICATION KEY	13
POWER TRAIN	14
Engine Dress – Yanmar Tier II & Tier III Engines	14
Alternator Yanmar Tier II Engine.....	16
Alternator Yanmar Tier III Engine	17
Head Cover Assembly Yanmar Tier II & Tier III Engines.....	18
Cylinder Block Assembly Yanmar Tier II Engine	20
Cylinder Block Assembly Yanmar Tier III Engine	22
Crankshaft & Piston Yanmar Tier II Engine	24
Crankshaft & Piston Yanmar Tier III Engine	26
Camshaft & Driving Gear Yanmar Tier II Engine.....	28
Camshaft & Driving Gear Yanmar Tier III Engine.....	30
Governor Assembly Yanmar Tier III Engine Only.....	32
Oil Pan Assembly Yanmar Tier II & Tier III Engines.....	33
Lube, Oil System Yanmar Tier II & Tier III Engines	34
Gear Housing Yanmar Tier II & Tier III Engines.....	36
Engine Gaskets Yanmar Tier II Engine	38
Engine Gaskets Yanmar Tier III Engine.....	40
COOLING SYSTEM	42
Cooling System	42
DRIVELINE	46
Drive Shaft Assembly – Front	46
Drive Shaft Assembly – Rear.....	47
TRANSMISSION	48
Transaxle Mounting & Misc. Parts	48
Transaxle Case Extension & Retainer	50
AXLES	52
Axle Assembly – Front Non-Drive (2WD)	52
Axle Assembly – Front Drive (All Wheel Drive).....	53
Axle Assembly – Rear	54

TABLE OF CONTENTS

Recommended Axle Torque Specs	55
Axle Assembly Breakdown—Front Non-Drive (2WD)	56
Axle Assembly Breakdown—Front Drive (All Wheel Drive).....	58
Axle Assembly Breakdown—Rear Drive	62
BRAKES	66
Parking Brake Actuator Assembly	66
Drum Brake Assembly - Rear	68
Brake Actuator Assembly	70
Brake System Hydraulic	72
Hydraulic Assist.....	74
Hydraulic Assist Schematic.....	76
STEERING SYSTEM	78
Steering System Breakdown.....	78
FUEL SYSTEM	80
Fuel System Yanmar Tier II & Tier III	80
Fuel Injection Pump Yanmar Tier II	82
Fuel Injection Pump Yanmar Tier III.....	84
Engine Fuel Line Yanmar Tier II.....	86
Engine Fuel Line Yanmar Tier III	88
AIR CLEANER	90
Air Cleaner Assembly – Diesel	90
EXHAUST & INTAKE SYSTEM.....	91
Exhaust System Yanmar Tier II & Tier III Engines.....	91
Exhaust Manifold Yanmar Tier II Engine.....	92
Intake Manifold Yanmar TierII Engine.....	93
Exhaust Manifold Yanmar Tier III Engine	94
Intake Manifold Yanmar Tier III Engine.....	96
OPERATOR COMPARTMENT.....	98
Accelerator Pedal Assembly Yanmar Tier III Engine	98
Accelerator Pedal Assembly Yanmar Tier II Engine.....	99
Instrument Panel.....	100
Quick Start Guide	101
Transmission Control	102
ELECTRIAL SCHEMATICS	103
Dash Wiring Diagram	103
Yanmar Engine Wire Harness Tier II Engine	104
Yanmar Engine Wire Harness Tier III Engine.....	106
Vehicle Wiring Harness Yanmar Tier II Engine	108
Vehicle Wiring Harness Yanmar Tier III Engine	110
CE Option-Operator Presence Circuit Wiring Diagram	112
Cab Option Wiring Diagram.....	113
LIGHTS & ELECTRICAL.....	114
Headlights, taillights & Spotlight Assembly.....	114
OTHER ASSEMBLIES	116
Body Assembly.....	116
Seats	117

This page was intentionally left blank

TABLE OF CONTENTS

WHEELS & TIRES	118
Wheel & Tire Assembly	118
Wheel & Tire Assembly—Dual Rear Wheel Model	119
OPTIONS	120
Hitch Options	120
Strobe, Beacon & Floor Mats	121
Cab Option.....	122
Cab Heater	124
Other Options Not Shown.....	125
MAINTENANCE	126
Daily Operator Responsibilities & Filter Reference	126
Lubrication Chart	127
Preventative Maintenance Schedule	128
TT4—TT8 Specifications & Capacities	130
Yanmar Engine Trouble Shooting	132
Tips for All Weather Traction	134
Front End Alignment Procedure	135

WARRANTY

***WARNING – DO NOT** USE JET A FUEL IN THIS ENGINE. ANY USE OF JET A FUEL MAY VOID THE WARRANTY ON THE ENGINE, AND IN TIER III ENGINES WILL RESULT IN VIOLATION OF EPA EMISSIONS REGULATIONS

VEHICLE ID INFORMATION

This information can be found on the tractor's I.D. Plate located on the firewall next to the driver's seat. Additionally, there is a permanent serial number located on the rear bulkhead inside the engine compartment.


MODEL

SERIAL #

MFG DATE

ENGINE TYPE

ENGINE SERIAL #

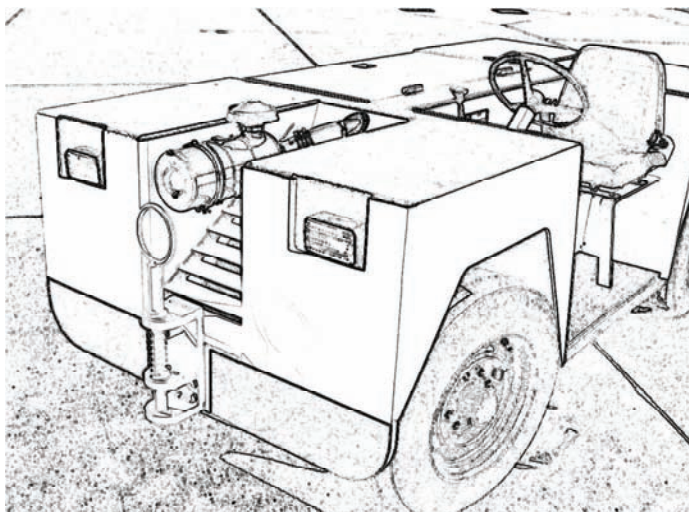

WARRANTY

WARRANTY REGISTRATION

Please fill out the engine warranty registration card that comes with your vehicle. This information is needed for completing warranty work on your engine if a problem occurs. See *Vehicle ID Information on previous page*.

ThreeagleSM Warranty Information*

The ThreeagleSM Warranty covers only Eagle TT-series aircraft tractors manufactured after October 1, 2006. Eagle Tugs (EAGLE) warrants that the Eagle TT-series tow tractors will be free from defects in material and workmanship for a period of 3 years or 3,000 operating hours, (except for the electrical and cooling systems which are 3 months or 500 hours), from date of delivery to the first customer (or first use), whichever comes first. Written notice of any claimed defect must be given to EAGLE within the warranty period and within thirty (30) days after such defect is discovered. Liability under this warranty is limited to either replacing or repairing, at EAGLE's election, any part or parts deemed defective after examination by EAGLE or an Authorized Service Representative. Any EAGLE machine or any of its parts returned by customer to EAGLE or an Authorized Service Representative via prepaid transportation, and which is found to be defective, will be repaired or replaced and returned to customer prepaid. On the other hand, should a part be found not defective, inspection and handling charges may be charged to the customer or Authorized Service Representative by EAGLE.

This warranty does not extend to the tires and batteries as these are warranted directly to the user by their respective manufacturer and not by EAGLE or the Authorized Service Representative.

This warranty does not apply to any EAGLE tow tractor, or component part(s) that have been subjected to misuse, accident or improper handling, maintenance or application; nor does it extend to the EAGLE machine and/or parts which have been repaired or altered outside of EAGLE's plant or the facility of an Authorized Service Representative.

This warranty does not apply to routine maintenance, ignition components, or wearable parts of the EAGLE machine such as filters, seals, plugs, hoses, belts, brake pads, light bulbs, fuses or similar items. Moreover, this warranty does not extend beyond its original term for any EAGLE machine or part replaced or repaired under warranty.

EXCEPT AS SET FORTH ABOVE, ALL WARRANTIES, CONDITIONS, REPRESENTATIONS, INDEMNITIES AND GUARANTEES, EXPRESS OR IMPLIED, WHETHER ARISING BY STATUTE, CUSTOM OF TRADE OR UNDER ORAL OR WRITTEN STATEMENTS MADE BY OR ON BEHALF OF EAGLE NEGOTIATIONS WITH CUSTOMER, DISTRIBUTOR, DEALER OR ANY REPRESENTATIVE, ARE HEREBY OVERWRITTEN AND EXCLUDED, AND NO LIABILITY SHALL ATTACH TO EAGLE, EITHER IN CONTRACT OR IN TORT, OR STRICT LIABILITY IN TORT, FOR ANY DAMAGE TO PROPERTY, LOSS OF PROFITS, DAMAGES, COSTS, CHARGES, LIABILITY OR EXPENSES, WHETHER DIRECT OR INDIRECT, CONSEQUENTIAL OR OTHERWISE, WHICH ARISE OUT OF OR IN CONNECTION WITH THE SALE OR USE OF ANY EAGLE MACHINE OR THE SUPPLY OF SERVICES.

SUBJECT TO CHANGE WITHOUT NOTICE

*Note - The ThreeagleSM Warranty covers only TT-series tow tractors manufactured after October 1, 2006. All TT-series manufactured prior to the date above, and all other Eagle Tugs models, are covered under our [Standard Warranty](#) of 1 Year or 2,000 hours. Eagle Bob Tails are covered under Ford Motor Company's Standard Warranty for each respective Ford truck model.

NOTE: At the time a warranty claim is filed it may be necessary for Eagle Tugs to request a copy the maintenance records kept on your tug. For your convenience a printable Preventative Maintenance Schedule page is available in the Maintenance section of this manual.

WARRANTY

YANMAR ENGINE WARRANTY REGISTRATION INFORMATION

The following pertains to warranty regarding the Yanmar engine only. For warranty issues not related to the engine in your tug please contact Eagle Tugs directly at 800-671-0431.

The Purchaser should register the Product as soon as possible after purchase. Registration may allow Yanmar to provide Product updates, Product improvements and other important information to the Purchaser. Registration will also make processing a future warranty claim more efficient and convenient for the Purchaser and Yanmar. A Purchaser should register the Product on-line by entering the required information into the Customer Registration screens found on Yanmar's website at <http://www.yanmar.co.jp>. To register product(click on the Customer Registration link. Go to Industrial Engines and then click on the Industrial Engine link. Enter the registration information in the necessary fields.

AUTHORIZED YANMAR DISTRIBUTOR INFORMATION

The Yanmar Distributor Information can be found on the Yanmar website at

www.yanmar.com/industrial/dealerlocatormainmap.asp. If you need help finding a distributor in your area please call Eagle Tugs at 800-671-0431.

WARRANTY



Eagle Tugs Service Bulletin

ESB-02-08

Date: October 14, 2008

Affected Models: Diesel powered TT series tow tractors

Subject: Tier 3/Stage IIIA diesel engine fuel requirements

Background:

The EPA mandated change to Tier 3 diesel engines and EC directives for Stage IIIA diesel engines with higher emission requirements has caused some changes to recommended and acceptable fuels. This document will clarify those requirements as they pertain to Eagle Tugs' products.

Tier 2:

Eagle Tugs is currently phasing out Tier 2 engines as part of EPA and EC mandated controls. These engines will no longer be available for sale unless part of a military exemption, or being exported to non-conforming countries.

Tier 2 engines will run on standard diesel fuels 1-D and 2-D with sulfur content up to 5000ppm without modification.

Tier 2 engines will run on jet fuels Jet-A and JP8 with either lubricity filter / additives, or OEM fuel system modifications to accommodate the lower lubricity jet fuels.

Tier 3 / Stage IIIA:

Eagle Tugs is currently phasing in Tier 3 / Stage IIIA conforming engines per EPA and EC mandates.

Tier 3 engines will run on fuels with sulfur content of less than 500 ppm or .05% without modification. This includes fuels commonly referred to Low Sulfur Diesel (LSD) and Ultra Low Sulfur Diesel (ULSD).

Tier 3 engines will NOT run properly on Jet-A or JP8 fuel due to the high sulfur content. The EGR system on tier 3 engines allows sulfur in the fuel to recirculate from the exhaust back into the intake where it is converted to sulfuric acid which corrodes internal engine components. In the future as jet fuel standards are directed towards lower sulfur content, this may change.

Tabulated Data:

	High-Sulfur Diesel Fuel	LSD or ULSD Fuel	JetA and JP8
Tier 2	No modification necessary	No modification necessary	Requires lubricity enhancement or engine modification
Tier 3 / Stage IIIA	Not acceptable	No modification necessary	Not acceptable

If you have any questions, please contact Eagle technical support at 734-442-1000.

Revision 1, 10/15/08

SAFETY INFORMATION

IMPORTANT SAFETY NOTICE

Appropriate service methods and proper repair procedures are essential for the safe, reliable operation of all industrial engines as well as the personal safety of the individual performing the work. This Service Manual provides general directions for accomplishing service and repair work with tested and effective techniques. Following them will help assure reliability.

There are numerous variations in procedures, techniques, tools and parts for servicing equipment, as well as in the skill of the individual doing the work. This Manual cannot possibly anticipate all such variations and provide advice or cautions as to each. Accordingly, anyone who departs from the instructions provided in this Manual must first establish he compromises his/her personal safety, and/or the equipment integrity by his/her choice of methods, tools or parts.

WARNINGS

The following list contains some general WARNINGS that you should follow when you work on equipment:

- Always wear safety glasses for eye protection.
- Use safety stands whenever a procedure requires you to be under the equipment.
- Be sure that the ignitions switch is always in the OFF position, unless otherwise required by the procedure.
- Set the parking brake (if equipped) when working on the equipment. Place wood blocks (4" x 4" or larger) to the front and rear surfaces of the tires to provide further restraint from inadvertent equipment movement.
- Operate the engine only in a well-ventilated area to avoid the danger of carbon monoxide.
- Keep yourself and your clothing away from moving parts when the engine is running, especially the fan and belts.
- To prevent serious burns, avoid contact with hot metal parts such as the radiator, exhaust manifold, tail pipe, catalytic converter and muffler.
- Do not smoke while working on the equipment.
- To avoid injury, always remove rings, watches, loose hanging jewelry, and loose clothing before beginning to work on the equipment. Tie long hair securely behind the head.
- Keep hands and other objects clear of the radiator and blades.

SERVICE PARTS ILLUSTRATIONS & DETAIL

IDENTIFICATION KEY

The following abbreviations are used throughout the parts lists in this section.

Abbreviation	Meaning	Purpose
NL	Not Listed	Part required but not shown on diagram
NPN	No Part Number	Parts shown and numbered, but not stocked and sold by Eagle. Typically used for bolts, clamps, etc...
AR	As required	

**!TO HELP US SERVICE YOU BETTER. HAVE TUG MODEL AND SERIAL NUMBER AVAILABLE
WHEN ORDERING PARTS**

NOTE: THIS MANUAL COVERS PARTS & SERVICE FOR EAGLE TT4—TT8 2WD AND ALL WHEEL DRIVE MODELS WITH BOTH THE YANMAR TIER II AND TIER III ENGINES. PLEASE BE SURE TO CHECK THE HEADING ON EACH PAGE TO SEE IF THE PARTS REFERENCED ARE FOR A :

YANMAR TIER II DIESEL

OR

YANMAR TIER III DIESEL

ALL PAGES WITHOUT THE ABOVE IN THE DESCRIPTION DENOTE PARTS ARE USED ON MODELS POWERED WITH BOTH A YANMAR TIER II AND YANMAR TIER III ENGINE.

TO DETERMINE IF YOUR TUG IS POWERED BY A TIER II OR TIER II ENGINE YOU CAN CHECK THE DISPLAY LOCATED ON THE DASHBOARD BY THE FOLLOWING.


1. TURN DISPLAY “ON”
2. PRESS ENTER
3. SCROLL TO “EAGLE SET UP”
4. PRESS ENTER
5. YOU WILL SEE “SELECT ENGINE : YANMAR TIER II OR YANMAR TIER III” ON YOUR SCREEN

TO DETERMINE IF YOUR TUG IS POWERED BY A TIER II OR TIER III ENGINE WITHOUT TURNING ON DISPLAY.

ALL TIER II TUGS ARE EQUIPPED WITH A MANUAL ALUMINUM FOOT PEDAL AND ALL TIER III TUGS ARE EQUIPEED WITH A BLACK PLASTIC ELECTRONIC FOOT PEDAL.

POWER TRAIN

ENGINE DRESS

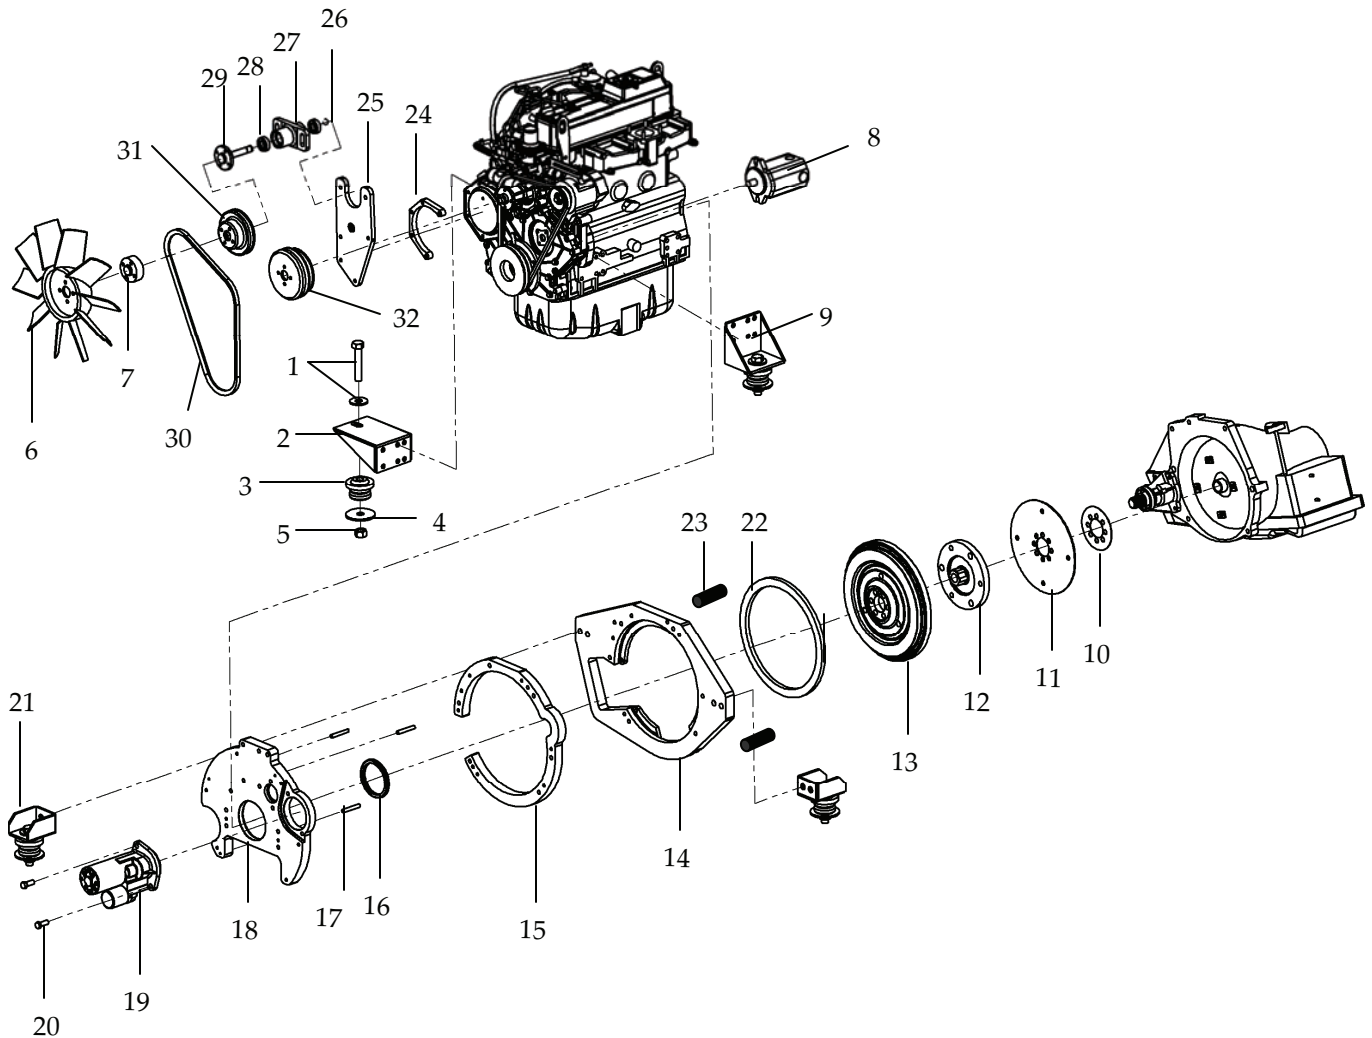

Note: Torque values shown in this manual are for clean, non-lubricated fasteners unless otherwise specified.

CAUTION: The tightening torque in the above Standard Torque Chart should be applied only to the bolts with a "7" head. (JIS strength classification 71).

*Apply 60% torque to bolts that are not listed.

POWER TRAIN


ENGINE DRESS

Item	Part Number	Qty	Description
1	NPN	4	3/4-16.5 BOLT & 3/4" FLAT WASHER
2	B-TT5D-00008-1	1	ENGINE MOUNT
3	A-TT5D-00013-1	4	ISOLATOR
4	A-TT5D-00010	4	LORD WASHER
5	NPN	4	3/4" LOCK NUT
6	A-TT8-00312	1	FAN
7	A-TT8-00360	1	FAN SPACER
8	SP20PB11L145H9L	1	PRINCE PUMP
9	B-TT5D-00006-1	1	FRONT ENGINE MOUNT
10	TM27C00305-ID	1	FLEX PLATE WASHER
11	B-TT10TD-00016-ID	1	FLEX PLATE
12	B-TT5D-00017-4TNV	1	FLEX PLATE ADAPTER
13	129953-21570	1	FLYWHEEL WITH RING GEAR
14	B-TT10TD-00001-4TNV	1	TRANS PLATE
15	B-TT10TD-00002	1	TRANS PLATE SPACER
16	129900-01780	1	OIL SEAL
17	41HN28	3	ADJ PLATE DOWEL PINS 3/8 X 2.5
18	TMD27B00521-4TNV	1	ENGINE PLATE
19	129940-77010	1	STARTER
20	26116-120302	2	BOLT, M12 X 30 PLATED
21	B-TT5D-00009	2	ENGINE MOUNT TRANS PLATE
22	129900-21600	1	RING GEAR
23	5240849	2	TRANSMISSION DOWEL PIN
24	A-TT4-00361	1	FAN BRACKET SPACER
25	A-TT8-00354	1	REMOTE FAN BRACKET
26	A-TT8-00358	1	REMOTE FAN SNAP RING
27	A-TT8-00355	1	REMOTE FAN SHAFT HOUSING
28	A-TT8-00357	2	REMOTE FAN BEARING
29	A-TT8-00356	1	REMOTE FAN SHAFT
30	A-TT8-00359	1	REMOTE FAN BELT
31	129900-42450	1	PULLEY

STANDARD TORQUE CHART							
Thread Size x Pitch mm		M6 x 1.0	M8 x 1.25	M10 x 1.5	M12 x 1.75	M14 x 1.5	M16 x 1.5
Tightening Torque	in-lb	87-105					
	ft-lb		17-21	32-40	58-72	94-108	160-174
	N-m	9.8-11.8	22.6-28.4	45-54.8	78.5-98.10	127.2-146.8	216.2-235.8
	kgf/m	1.1	2.03-2.09	4.5-5.5	8.0-10.0	12.5-15.5	21-25

POWER TRAIN


40 AMP ALTERNATOR ASSEMBLY— YANMAR TIER II DIESEL

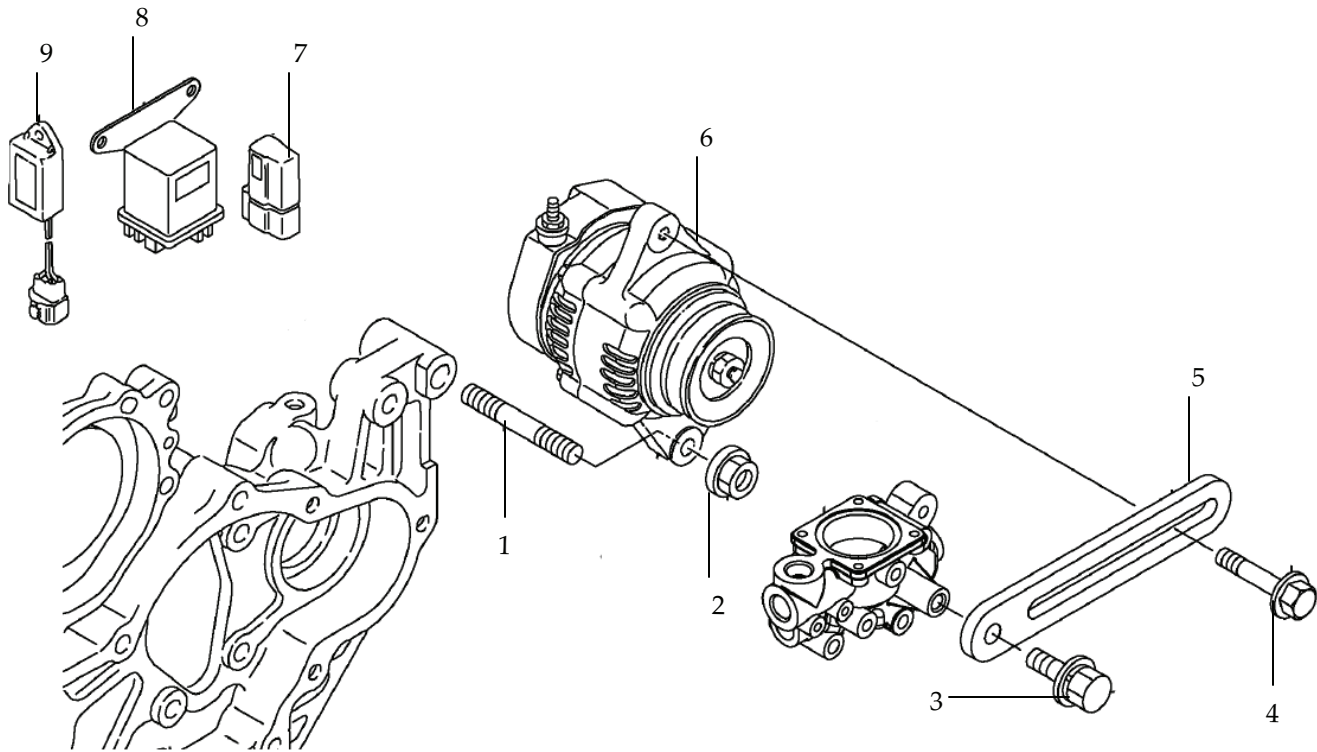

Item	Part Number	Qty	Description
1	129795-01900	1	STUD, ALTERNATOR
2	26306-100002	2	NUT, ALTERNATOR
3	26014-080252	1	BOLT, M8 X 25 PLATED
4	119810-77340	1	BOLT ,ADJUSTING
5	129900-77330	1	ADJUSTER BRACKET, ALTERNATOR 40 AMP
6	129423-77200	1	ALTERNATOR 40 AMP(BLUE ID TAG)
7	119643-66900	1	DIODE
8	119650-77910	1	RELAY, GLOW
9	128300-77920	1	TIMER

POWER TRAIN

55 AND 80 AMP ALTERNATOR ASSEMBLY – YANMAR TIER III DIESEL

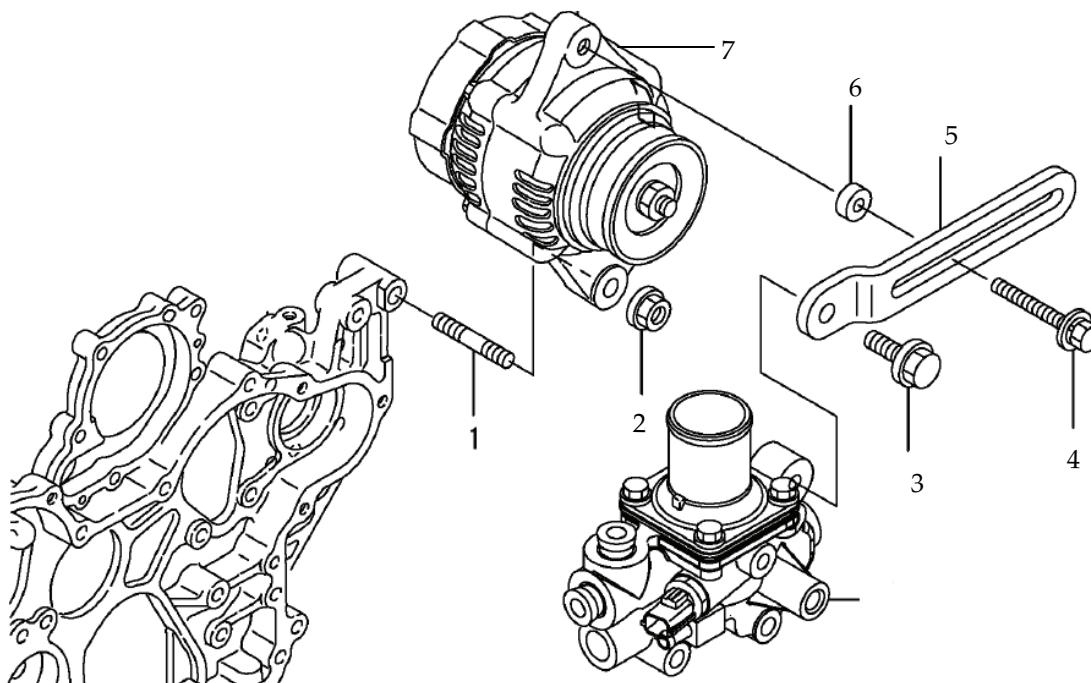


Item	Part Number	Qty	Description
1	129795-01900	1	STUD, ALTERNATOR 55 AMP ALT
1	26116-101202	1	STUD, ALTERNATOR 80 AMP ALT
2	26306-100002	2	NUT, ALTERNATOR 55 AMP ALT
2	26366-100002	2	NUT, ALTERNATOR 80 AMP ALT
3	26106-080222	1	BOLT, M8 X 22 PLATED 55 AMP ALT
3	26014-080252	2	STUD 80 AMP ALT
4	129972-77341	1	BOLT ,ADJUSTING
5	129972-77330	1	ADJUSTER BRACKET 55 AMP ALT
5	129900-77330	1	ADJUSTER BRACKET 80 AMP ALT
6	119940-77270	1	SPACER 55 AMP ALT (RED ID TAG)
6	129470-77340	1	SPACER 80 AMP ALT
7	119626-77210	1	ALTERNATOR 55 AMP
7	129612-77290	1	ALTERNATOR 80 AMP

**55 AMP ALTERNATORS 10-07 THRU 1-08 **80 AMP ALTERNATORS THERE AFTER . **TRANSIT PRO MODELS MAY BE EQUIPPED WITH AN OPTIONAL 105 AMP ALTERNATOR.

POWER TRAIN

HEAD COVER ASSEMBLY

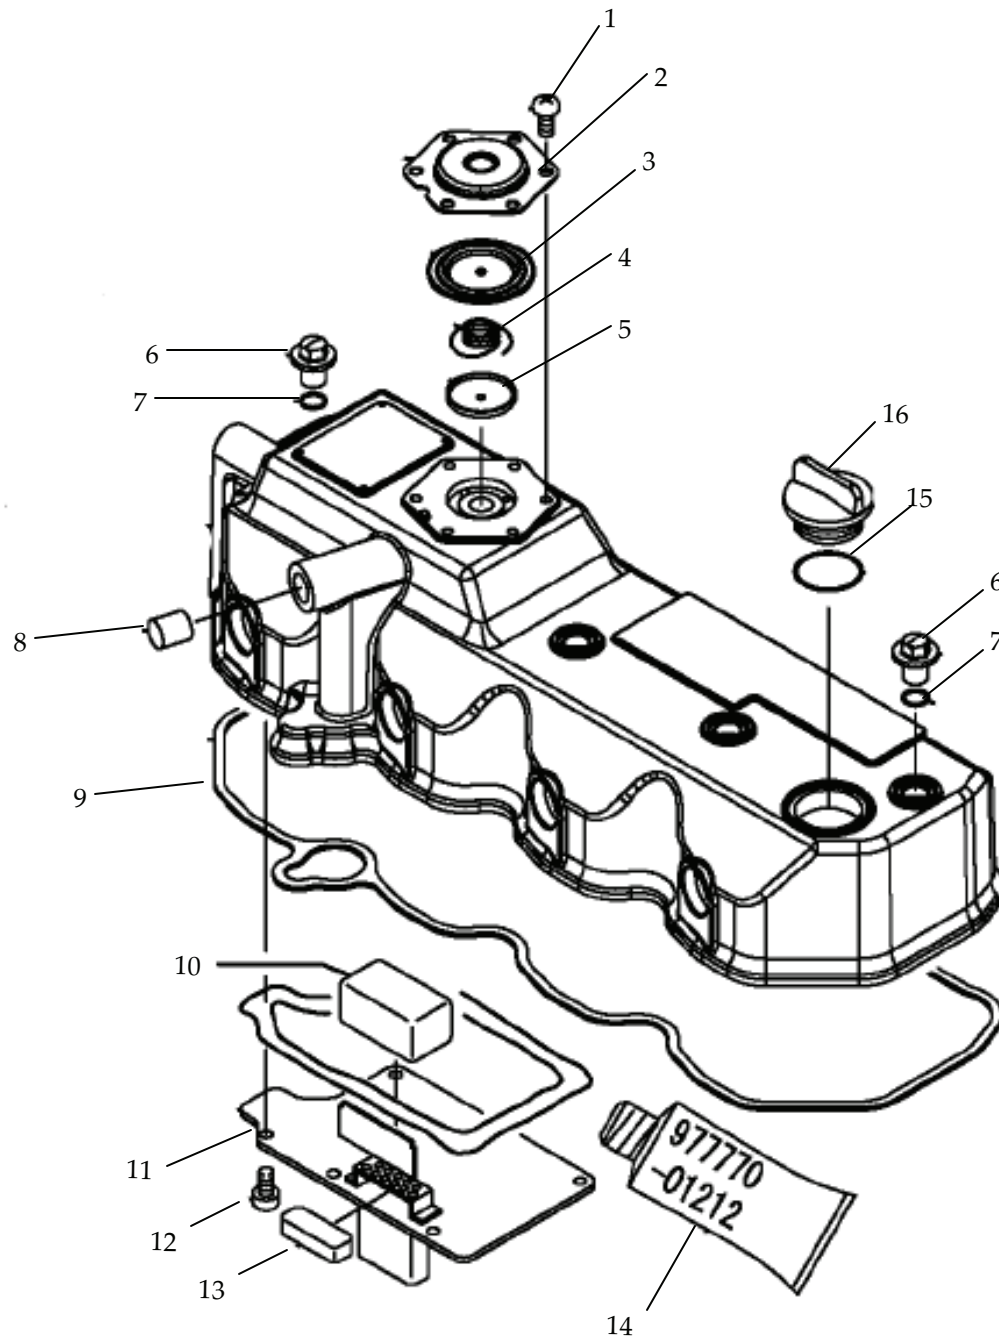


POWER TRAIN

HEAD COVER ASSEMBLY

Item	Part Number	Qty	Description
1	22857-500100	6	SCREW 5 X 10 TAPIING
2	123907-03120	1	PLATE, BREATHER
3	123907-03100	1	DIAPHRAM, BREATHER
4	123907-03140	1	SPRING, DIAPHRAM
5	123907-03110	1	CENTER PLATE
6	124160-11360	4	KNOB
7	24311-000120	4	O-RING 1A P12.0
8	119640-61400	1	PLUG
9	129907-11310	1	HEAD COVER GASKET
10	129907-03070	1	BAFFLE
11	129907-03010	1	BAFFLE PLATE
12	22857-500100	6	SCREW 5 X 10 TAPIING
13	129907-03060	1	BAFFLE
14	977770-01212	1	GASKET, LIQUID
15	24311-000320	1	O-RING 1A P32.0
16	124160-01751	1	OIL FILLER CAP
17	129907-11320	1	HEAD COVER ASSY INCLUDES ITEMS 1-13

POWER TRAIN

CYLINDER BLOCK ASSEMBLY—YANMAR TIER II DIESEL

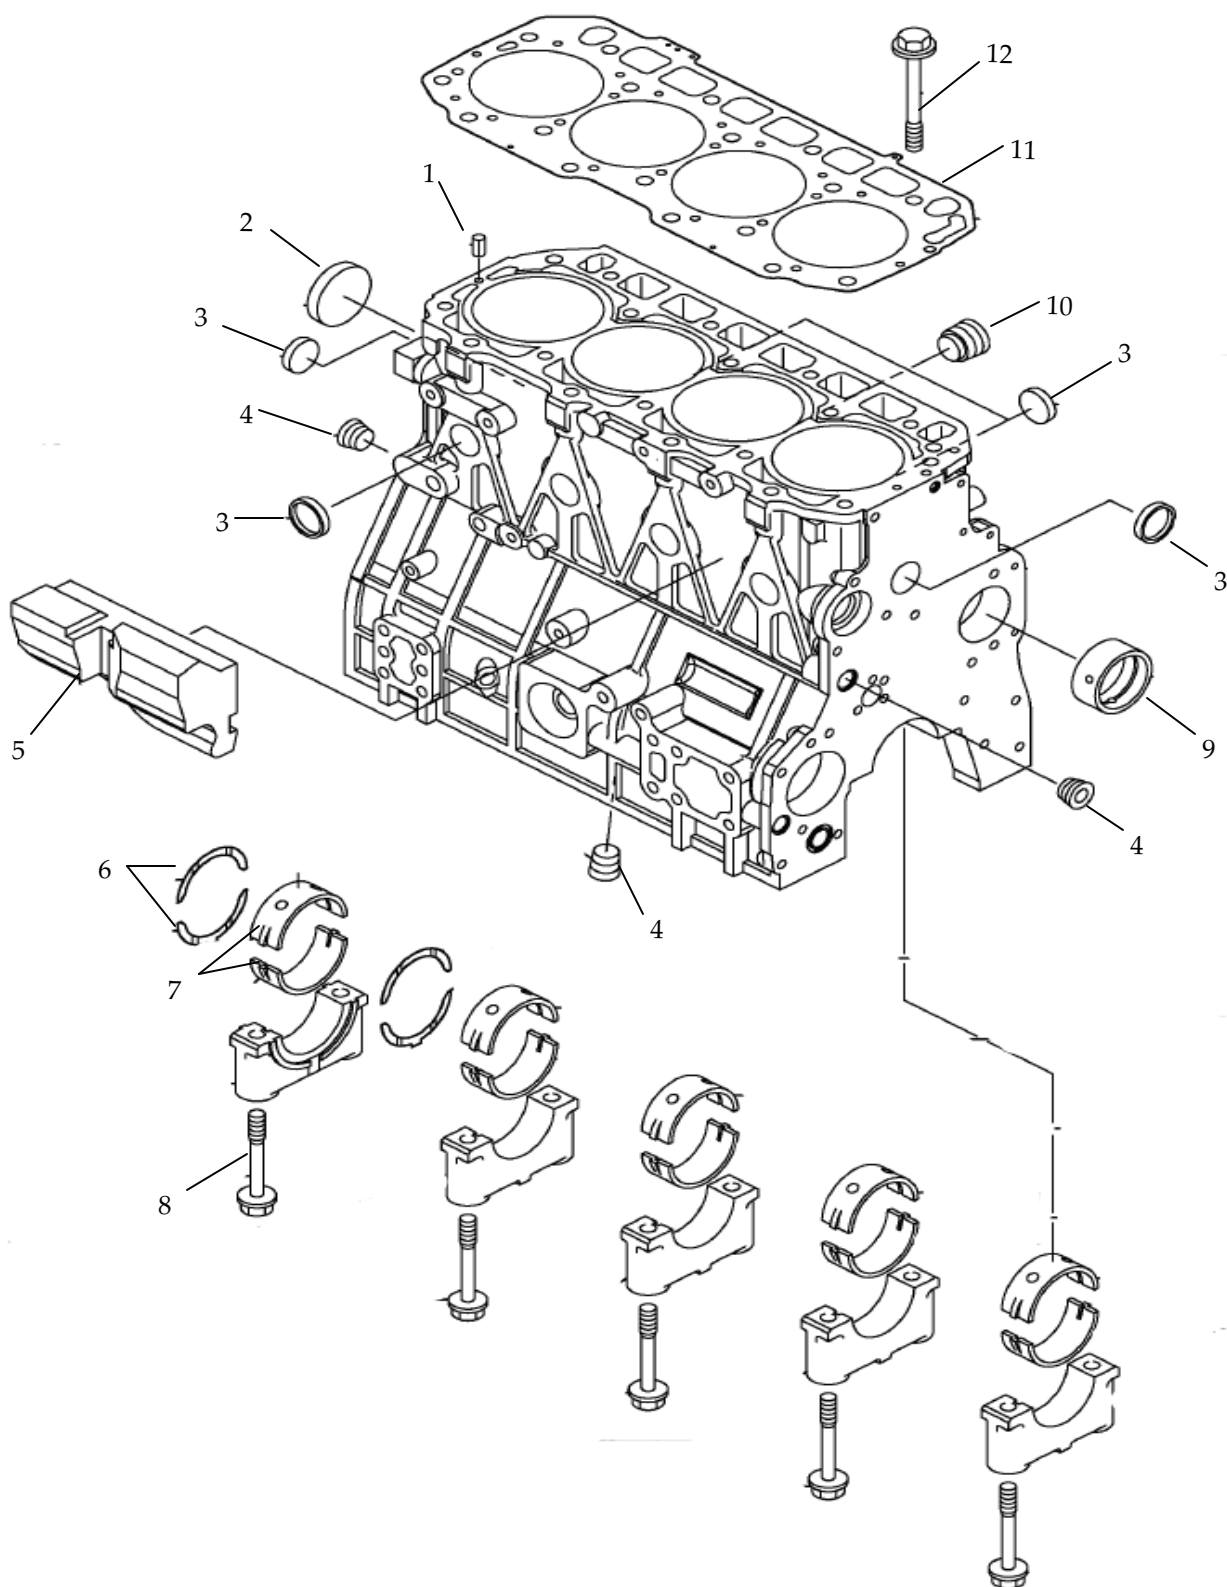


POWER TRAIN

CYLINDER BLOCK ASSEMBLY—YANMAR TIER II

Item	Part Number	Qty	Description
1	22351-060012	2	SPRING PIN 6 X 12
2	129900-01250	1	PLUG 55
3	27241-300000	8	PLUG 30
4	23876-030000	3	PLUG PT 3/8 SCREW
5	129907-01190	1	SPACER
6	129900-02930	2	BEARING ASSY, THRUST
6	129900-02940	2	BEARING ASSY, THRUST O/S=.025
7	729900-02800	5	MAIN BEARING SET
7	129900-02340	5	MAIN BEARING SET O/S=.025
8	129900-02020	10	BOLT, METAL CAP
9	129900-02410	1	BUSH, CAMSHAFT
10	171051-01921	1	PLUG
11	129907-01331	1	CYLINDER HEAD GASKET
12	129900-01200	18	BOLT, HEAD
13	729907-01560	1	CYLINDER BLOCK ASSY, INC ITEMS 1-10

POWER TRAIN

CYLINDER BLOCK ASSEMBLY—YANMAR TIER III DIESEL

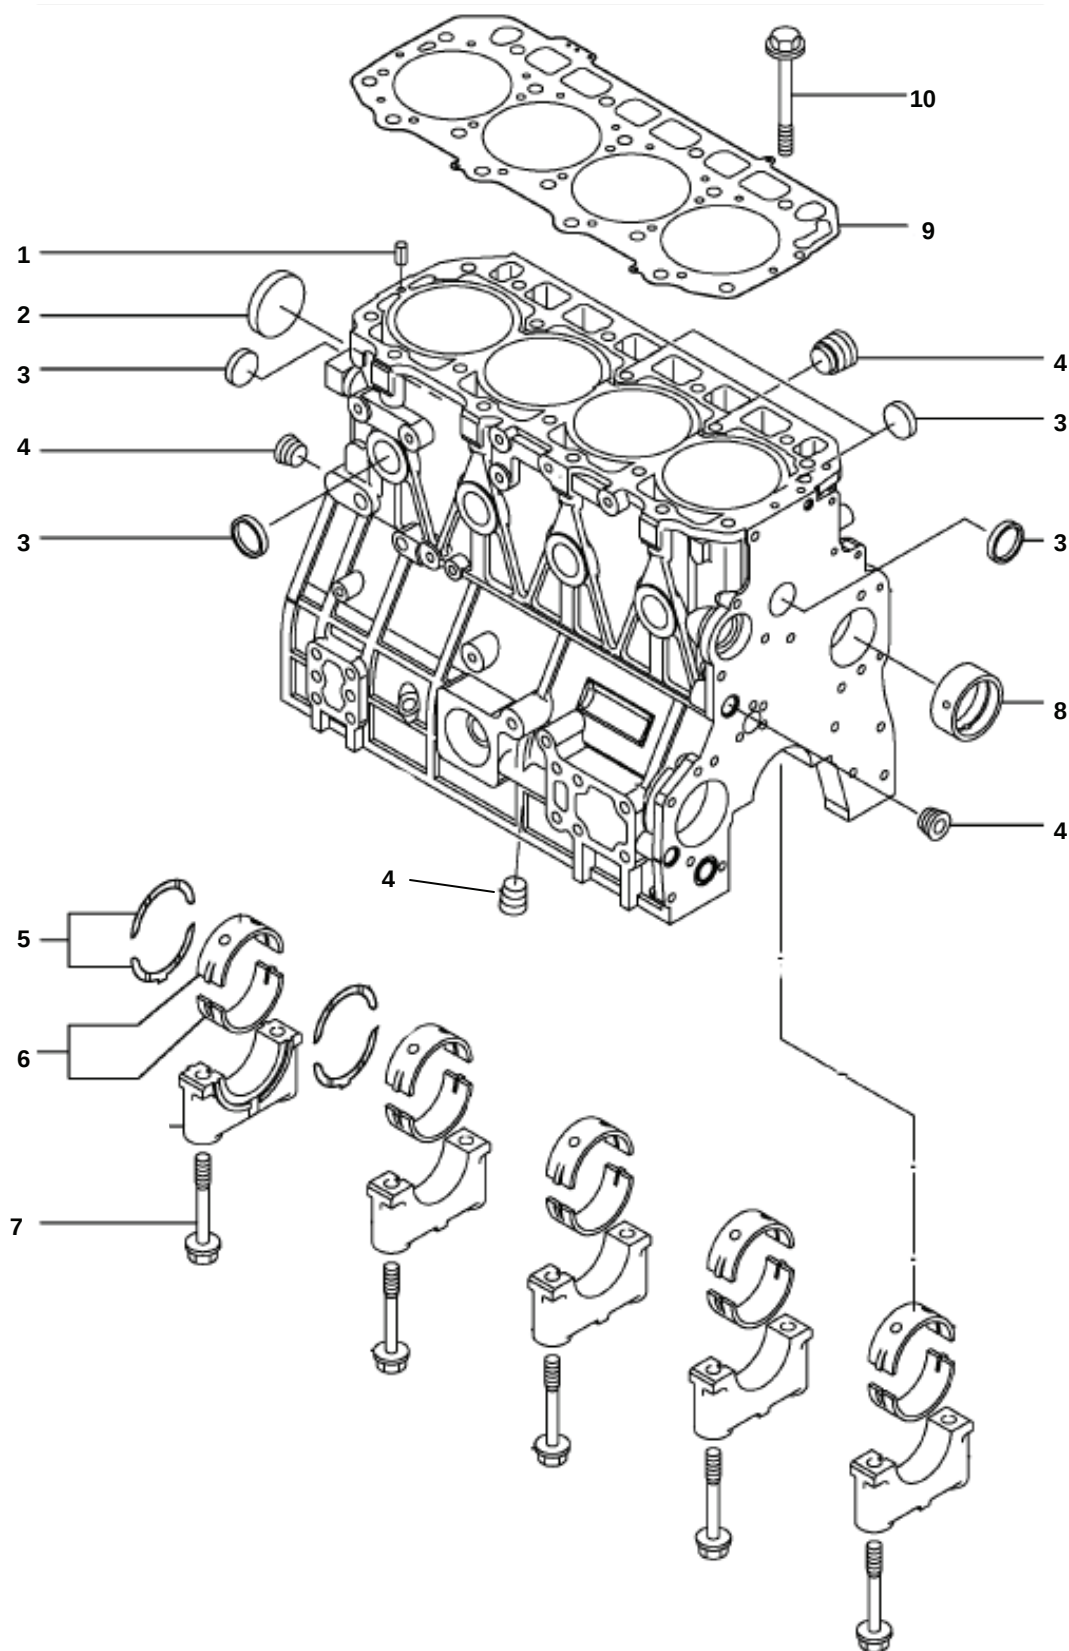


POWER TRAIN

CYLINDER BLOCK ASSEMBLY—YANMAR TIER III DIESEL

Item	Part Number	Qty	Description
1	22351-060012	2	SPRING PIN 6 X 12
2	129900-01250	1	PLUG 55
3	27241-300000	8	PLUG 30
4	23876-030000	3	PLUG PT 3/8 SCREW
5	129900-02931	2	BEARING ASSY, THRUST
5	129900-02941	2	BEARING ASSY, THRUST O/S=.025
6	729900-02801	5	MAIN BEARING SET
6	129900-02341	5	MAIN BEARING SET O/S=.025
7	129900-02020	10	BOLT, METAL CAP
8	129900-02410	1	BUSH, CAMSHAFT
9	129907-01331	1	CYLINDER HEAD GASKET
10	129900-01200	18	BOLT, HEAD
11	729927-01560	1	CYLINDER BLOCK ASSY, INC ITEMS 1-10

CRANKSHAFT & PISTON—YANMAR TIER II DIESEL

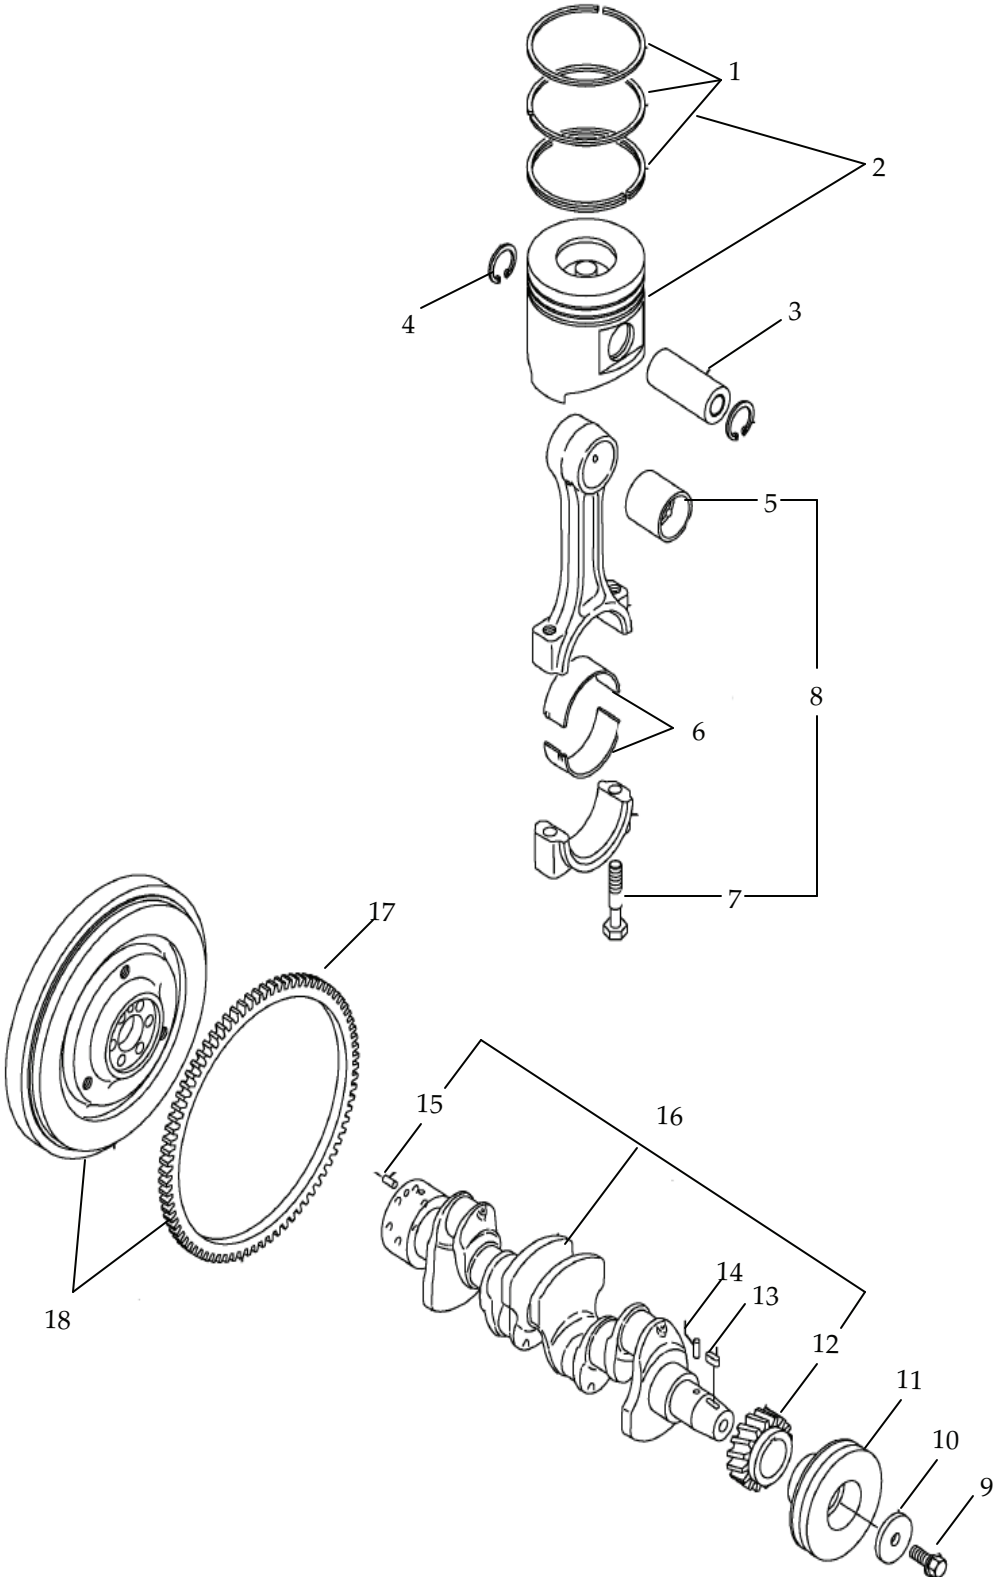


POWER TRAIN

CRANKSHAFT & PISTON—YANMAR TIER II DIESEL

Item	Part Number	Qty	Description
1	129907-22050	4	RING SET STANDARD
1	729907-22950	4	RING SET O/S=0.25
2	129907-22090	4	PISTON WITH RING STANDARD
2	129907-22910	4	PISTON WITH RING STANDARD O/S=0.25
3	120130-22301	4	PISTON PIN
4	22252-000300	8	CIRCLIP 30
5	129900-23910	4	BUSH, PISTON PIN
6	129900-23600	4	BEARING ASSY, CRANKCASE PIN STANDARD
6	129900-23610	4	BEARING PIN O/S=.025
7	129900-23200	8	BOLT, ROD
8	129900-23000	4	CONNECTING ROD ASSY
9	121850-21680	1	BOLT, V-PULLEY
10	129900-21640	1	WASHER
11	129907-21660	1	V-PULLEY, CRANKCASE
12	129900-21200	1	GEAR, CRANKSHAFT
13	22512-070140	1	KEY 7 X 14
14	121850-21290	1	PARALLEL PIN
15	121850-21920	1	PARALLEL PIN 10 X 22
16	129902-21000	1	CRANKSHAFT ASSY INCLUDES ITEMS 12-15
17	129900-21600	1	RING GEAR
18	129953-21570	1	FLYWHEEL WITH RING GEAR

POWER TRAIN

CRANKSHAFT & PISTON—YANMAR TIER III DIESEL

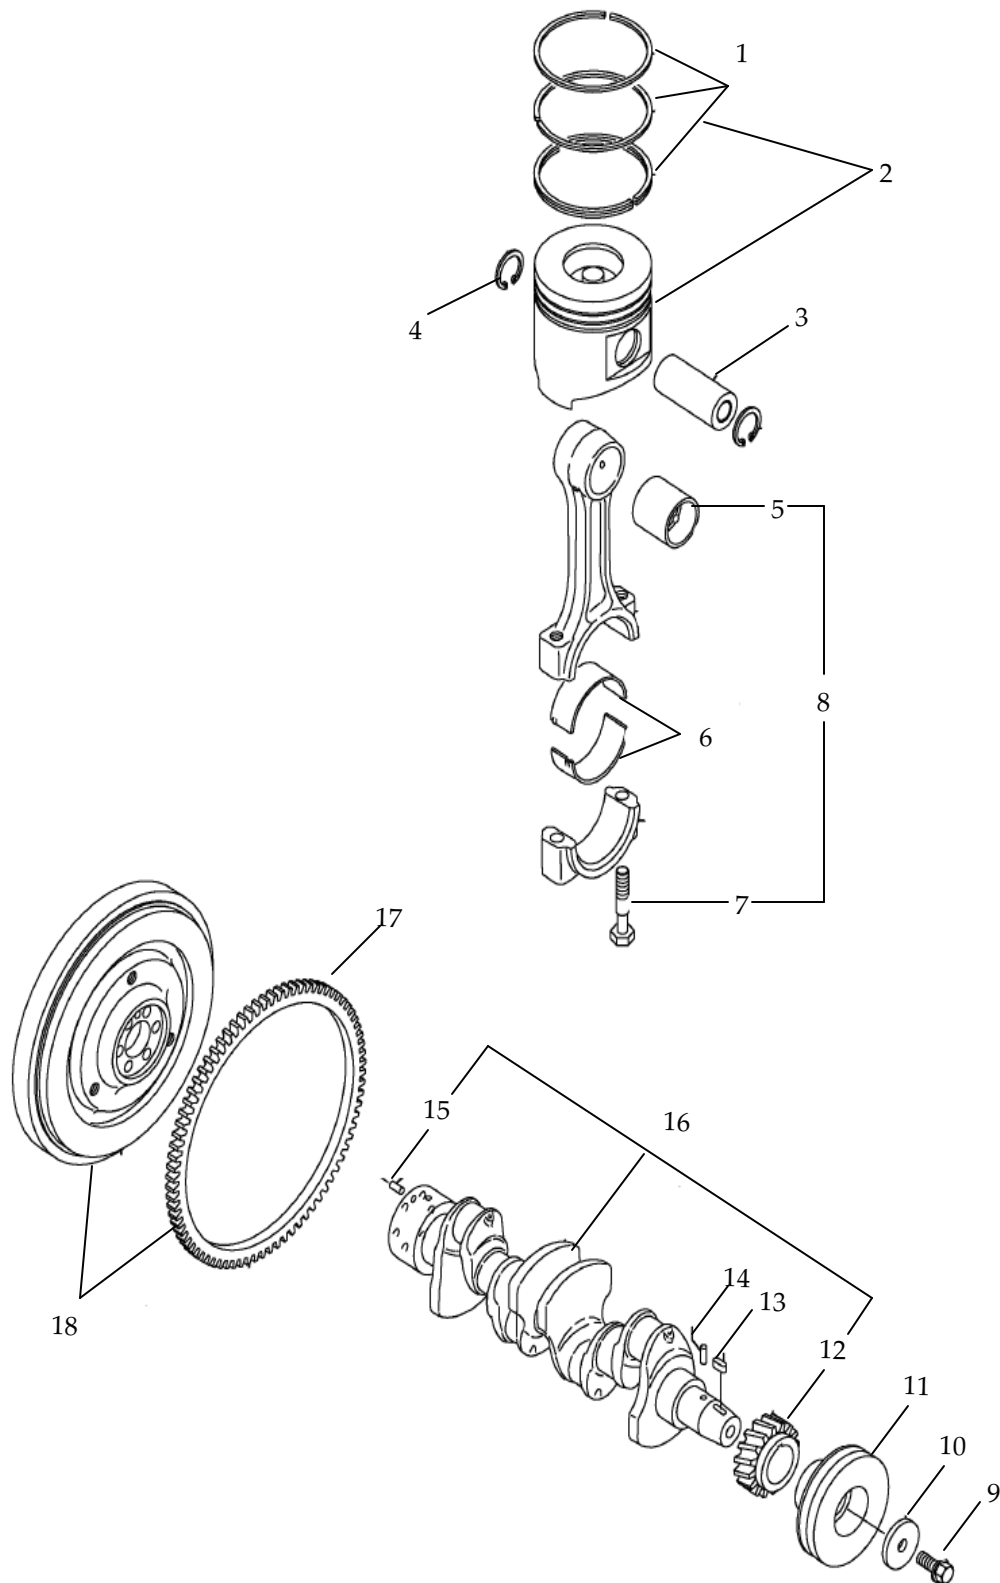


POWER TRAIN

CRANKSHAFT & PISTON – YANMAR TIER III DIESEL

Item	Part Number	Qty	Description
1	129927-22050	4	RING SET STANDARD
1	729927-22950	4	RING SET O/S=0.25
2	129907-22080	4	PISTON WITH RING STANDARD
2	129907-22900	4	PISTON WITH RING STANDARD O/S=0.25
3	120130-22301	4	PISTON PIN
4	22252-000300	8	CIRCLIP 30
5	129900-23911	4	BUSH, PISTON PIN
6	129900-23601	4	BEARING ASSY, CRANKCASE PIN STANDARD
6	129900-23611	4	BEARING PIN O/S=.025
7	129900-23200	8	BOLT, ROD
8	129900-23001	4	CONNECTING ROD ASSY
9	129916-21610	1	BOLT, V-PULLEY
10	129900-21640	1	WASHER
11	129907-21660	1	V-PULLEY, CRANKCASE
12	129900-21220	1	GEAR, CRANKSHAFT
13	22512-070140	1	KEY 7 X 14
14	121850-21290	1	PARALLEL PIN
15	121850-21920	1	PARALLEL PIN 10 X 22
16	129902-21050	1	CRANKSHAFT ASSY INCLUDED ITEMS 12-15
17	129900-21600	1	RING GEAR
18	129953-21570	1	FLYWHEEL WITH RING GEAR

POWER TRAIN

CAMSHAFT & DRIVING GEAR—YANMAR TIER II DIESEL

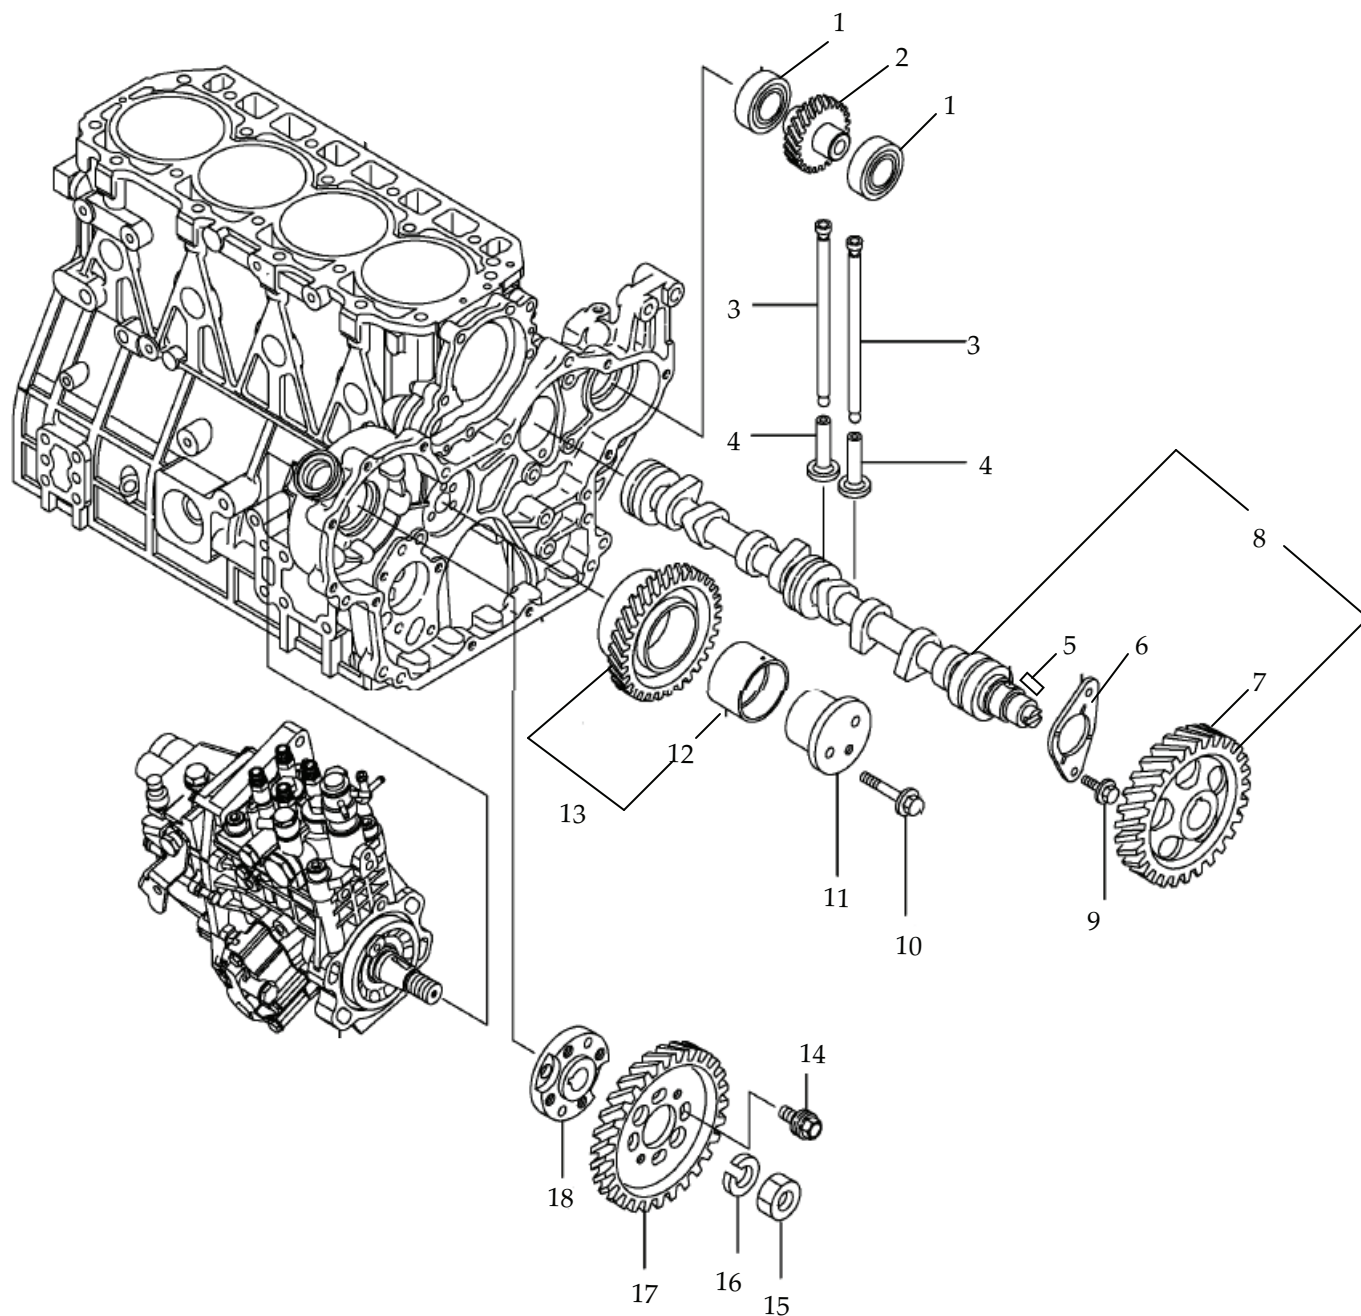


POWER TRAIN

CAMSHAFT & DRIVING GEAR—YANMAR TIER II DIESEL

Item	Part Number	Qty	Description
1	129900-26250	2	BALL BEARING
2	129980-26200	1	GEAR, HO PUMP
3	129907-14400	8	PUSH ROD
4	129150-14200	8	TAPPET
5	22512-070140	1	KEY 7 X 14
6	129150-02450	1	THRUST BEARING(CAM)
7	129900-14100	1	GEAR, CAMSHAFT
8	129907-14581	1	CAMSHAFT ASSEMBLY INCLUDES ITEMS 5-7
9	26106-080162	2	BOLT, M8 X 16 PLATED
10	26106-080552	3	BOLT, M8 X 55 PLATED
11	123900-25060	1	SHAFT(GEAR IDLE)
12	129150-25920	1	BUSH, IDLE GEAR
13	129900-25100	1	GEAR ASSEMBLY INCLUDES ITEM 12
14	129953-25300	4	BOLT
15	26776-180002	1	NUT, M18 LOCK
16	22217-180000	1	SPRING WASHER 18
17	123907-25909	1	GEAR, FUEL INJECTION PUMP
18	158563-51150	1	FLANGE

POWER TRAIN

CAMSHAFT & DRIVING GEAR—YANMAR TIER III DIESEL

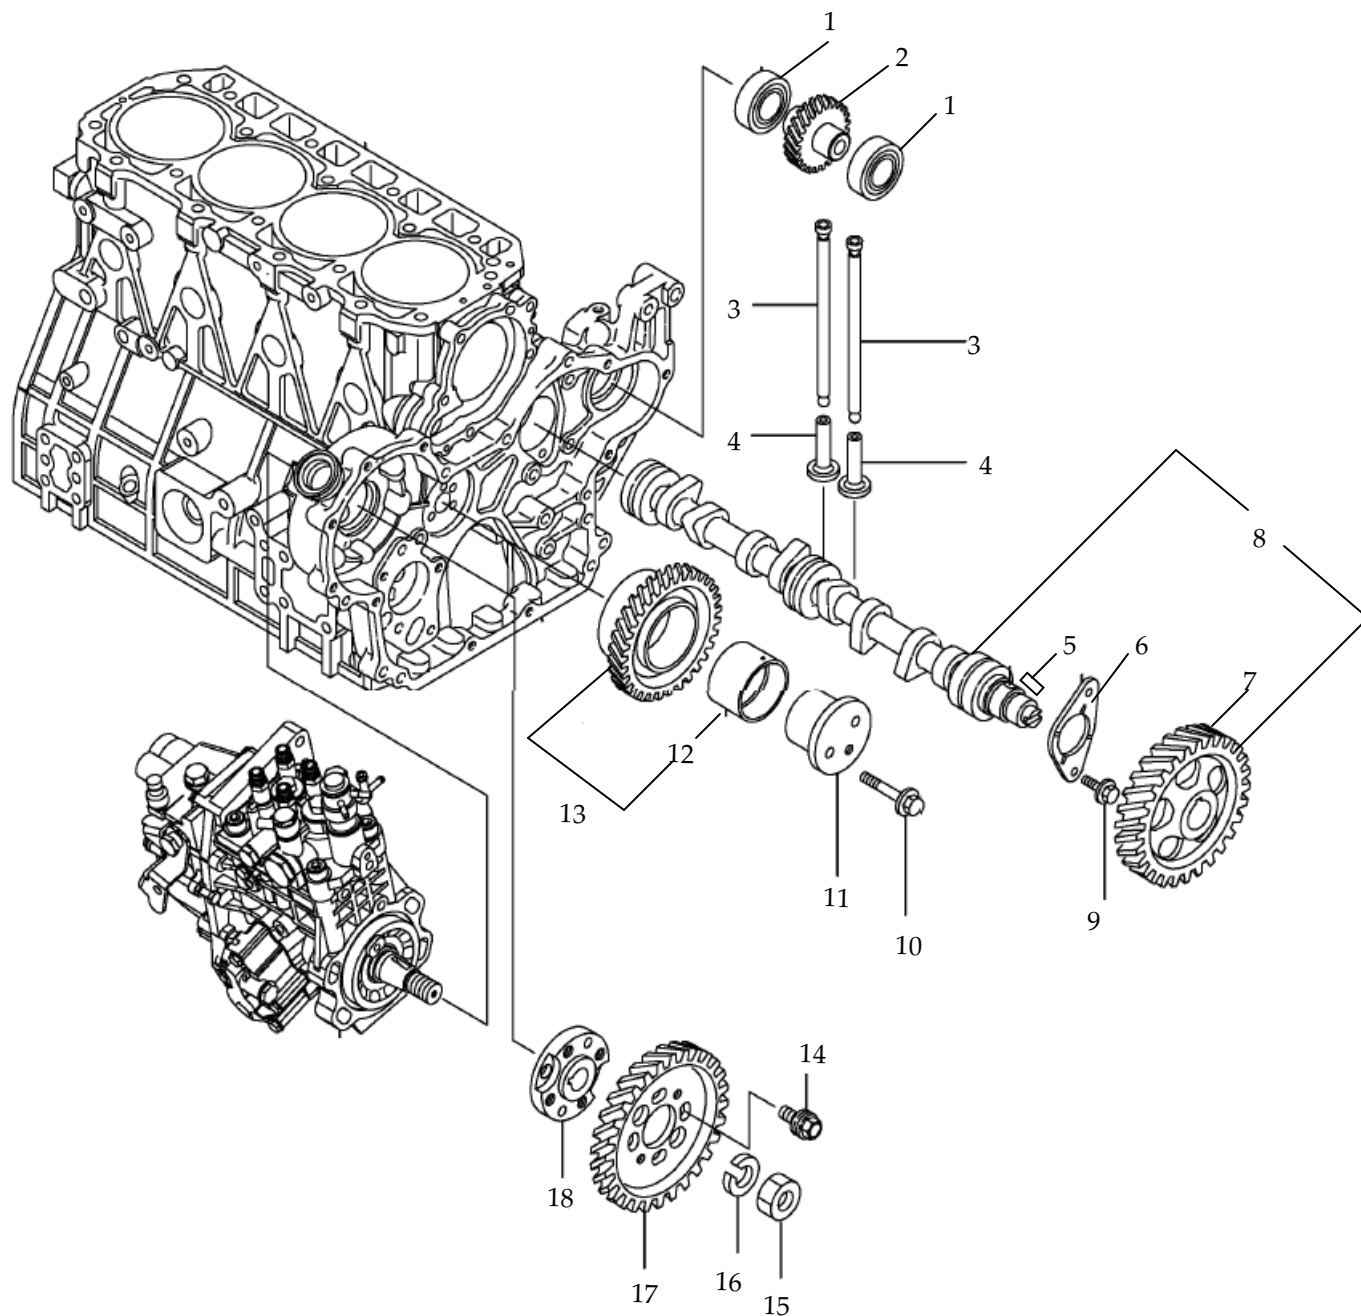


POWER TRAIN

CAMSHAFT & DRIVING GEAR—YANMAR TIER III DIESEL

Item	Part Number	Qty	Description
1	129900-26250	2	BALL BEARING
2	129980-26200	1	GEAR, HO PUMP
3	129907-14400	8	PUSH ROD
4	129150-14200	8	TAPPET
5	22512-070140	1	KEY 7 X 14
6	129150-02450	1	THRUST BEARING(CAM)
7	129900-14100	1	GEAR, CAMSHAFT
8	129907-14581	1	CAMSHAFT ASSEMBLY INCLUDES ITEMS 5-7
9	26106-080162	2	BOLT, M8 X 16 PLATED
10	26106-080552	3	BOLT, M8 X 55 PLATED
11	123900-25060	1	SHAFT(GEAR IDLE)
12	129150-25920	1	BUSH, IDLE GEAR
13	129900-25100	1	GEAR ASSEMBLY INCLUDES ITEM 12
14	129953-25300	4	BOLT
15	26776-180002	1	NUT, M18 LOCK
16	22217-180000	1	SPRING WASHER 18
17	123907-25909	1	GEAR, FUEL INJECTION PUMP
18	158563-51150	1	FLANGE

POWER TRAIN


GOVERNOR ASSEMBLY—YANMAR TIER III DIESEL (ONLY)

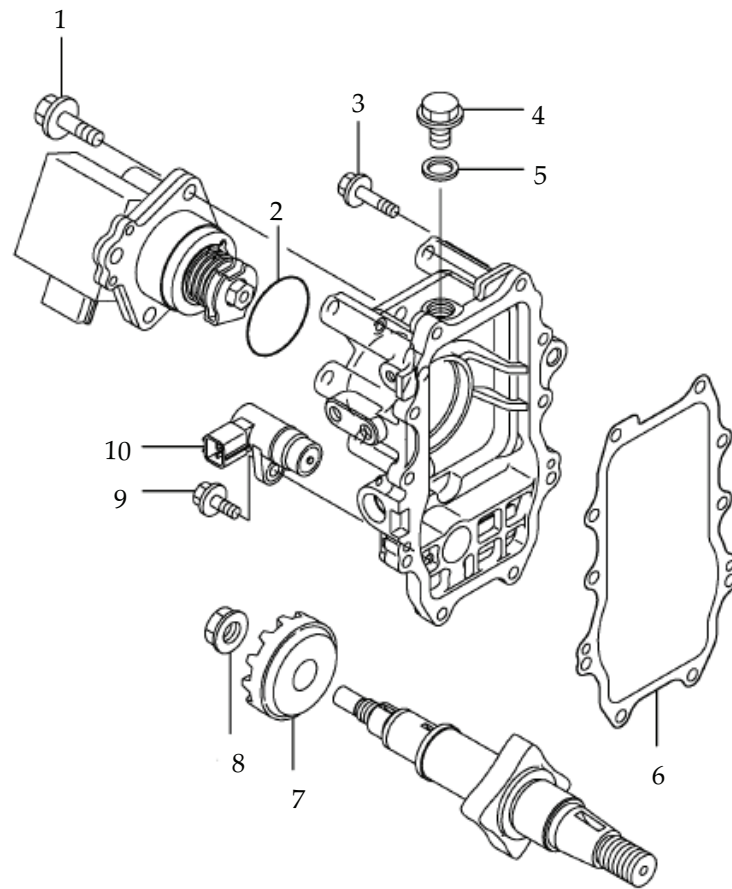

Item	Part Number	Qty	Description
1	26106-080252	3	BOLT, M8 X 25 PLATED
2	24341-000480	1	O-RING 1A S-48.0
3	26106-060252	10	BOLT, M6 X 25 PLATED
4	23887-120002	1	PLUG, M12 HEX
5	22190-120000	1	SEAL WASHER 12(BOLT)
6	158560-61050	1	GASKET
7	158553-61780	1	GEAR, SENSOR
8	129008-61301	1	NUT, GOVERNOR WEIGHT
9	26106-060162	1	BOLT, M6 X 16 PLATED
10	158557-61720	1	SENSOR

POWER TRAIN


OIL PAN ASSEMBLY

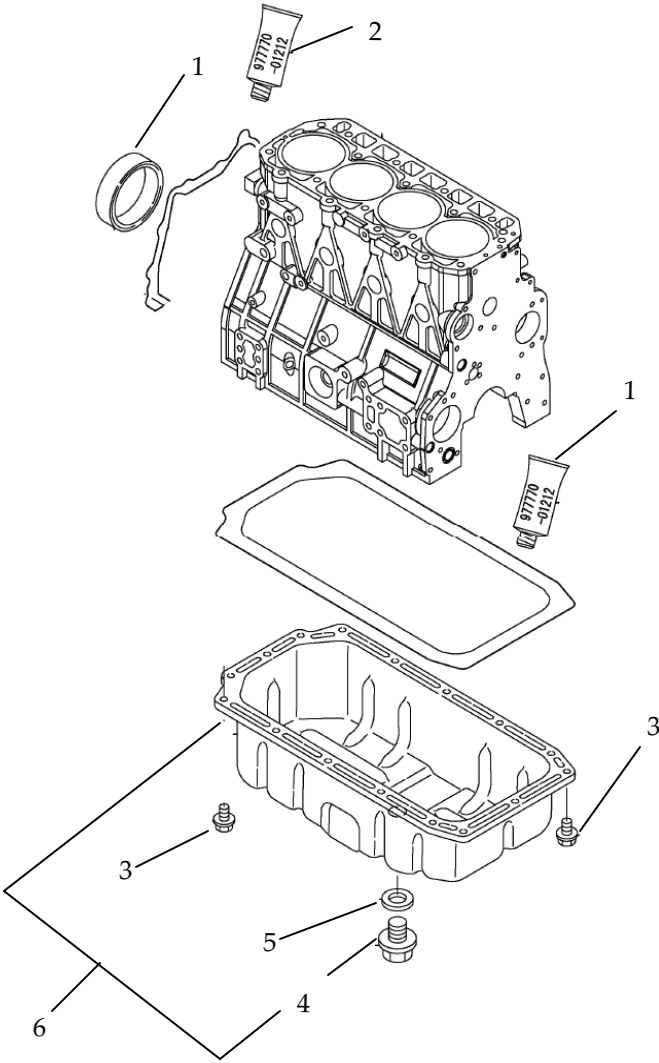

Item	Part Number	Qty	Description
1	122916-01790	1	SEAL
2	977770-01212	1	GASKET, LIQUID
3	26106-080122	16	BOLT M8 X 12 PLATED
4	119640-01640	1	DRAIN PLUG
5	22190-220002	1	SEAL WASHER 22S
6	129916-01710	1	OIL PAN ASSEMBLY INCLUDES ITEMS 4 & 5

POWER TRAIN

LUBE — OIL SYSTEM

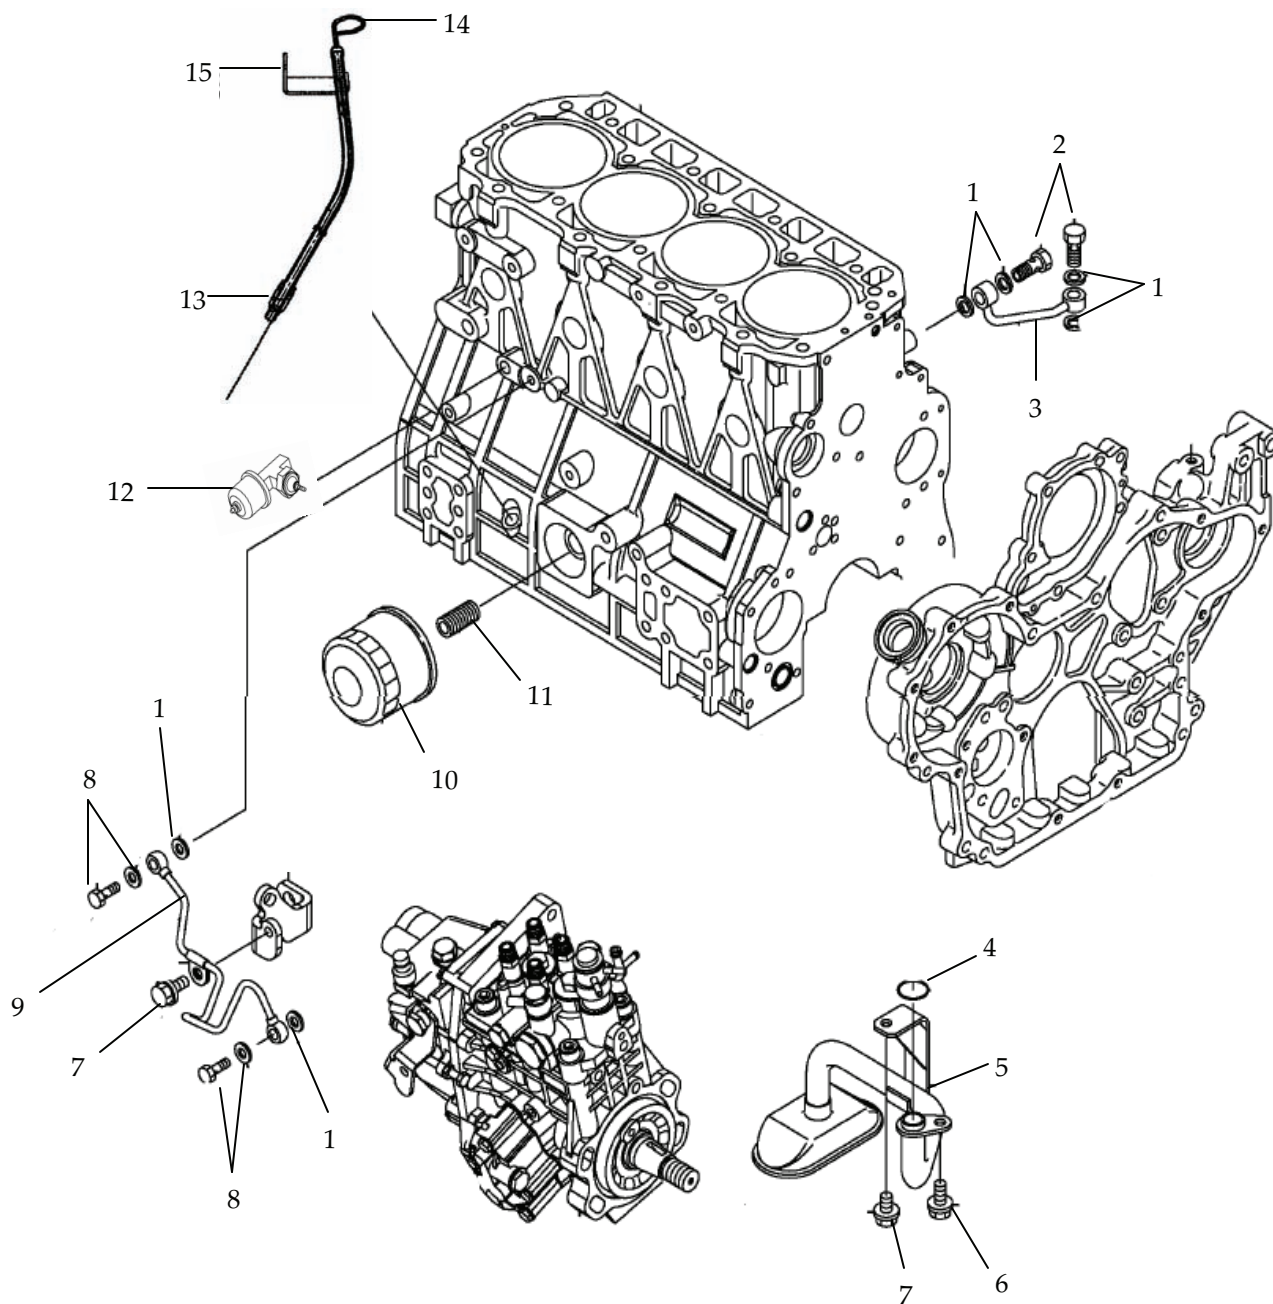


POWER TRAIN

LUBE — OIL SYSTEM

Item	Part Number	Qty	Description
1	22190-080002	6	SEAL WASHER 8S
2	105010-39140	2	BOLT, PIPE JOINT
3	129930-39050	1	PIPE
4	129900-32030	1	O-RING P20
5	129953-35000	1	PIPE ASSEMBLY OIL INLET
6	26106-080162	1	BOLT, M8 X 16 PLATED
7	26106-080122	2	BOLT M8 X 12 PLATED
8	129005-59830	2	BOLT ASSEMBLY, JOINT
9	129907-39061	1	PIPE ASSEMBLY LUBE OIL
10	129150-35153	1	OIL FILTER ELEMENT
11	119000-35140	1	STUD LUBE OIL FILTER
12	A-TT4-00651	1	OIL PRESSURE SENDING UNIT
13	119260-34810	1	GUIDE, DIPSTICK
14	129907-34811	1	DIPSTICK
15	129928-34850	1	TUBE, DIPSTICK
16	24311-240100	1	O-RING, DIPSTICK(NOT SHOWN)

POWER TRAIN

GEAR HOUSING

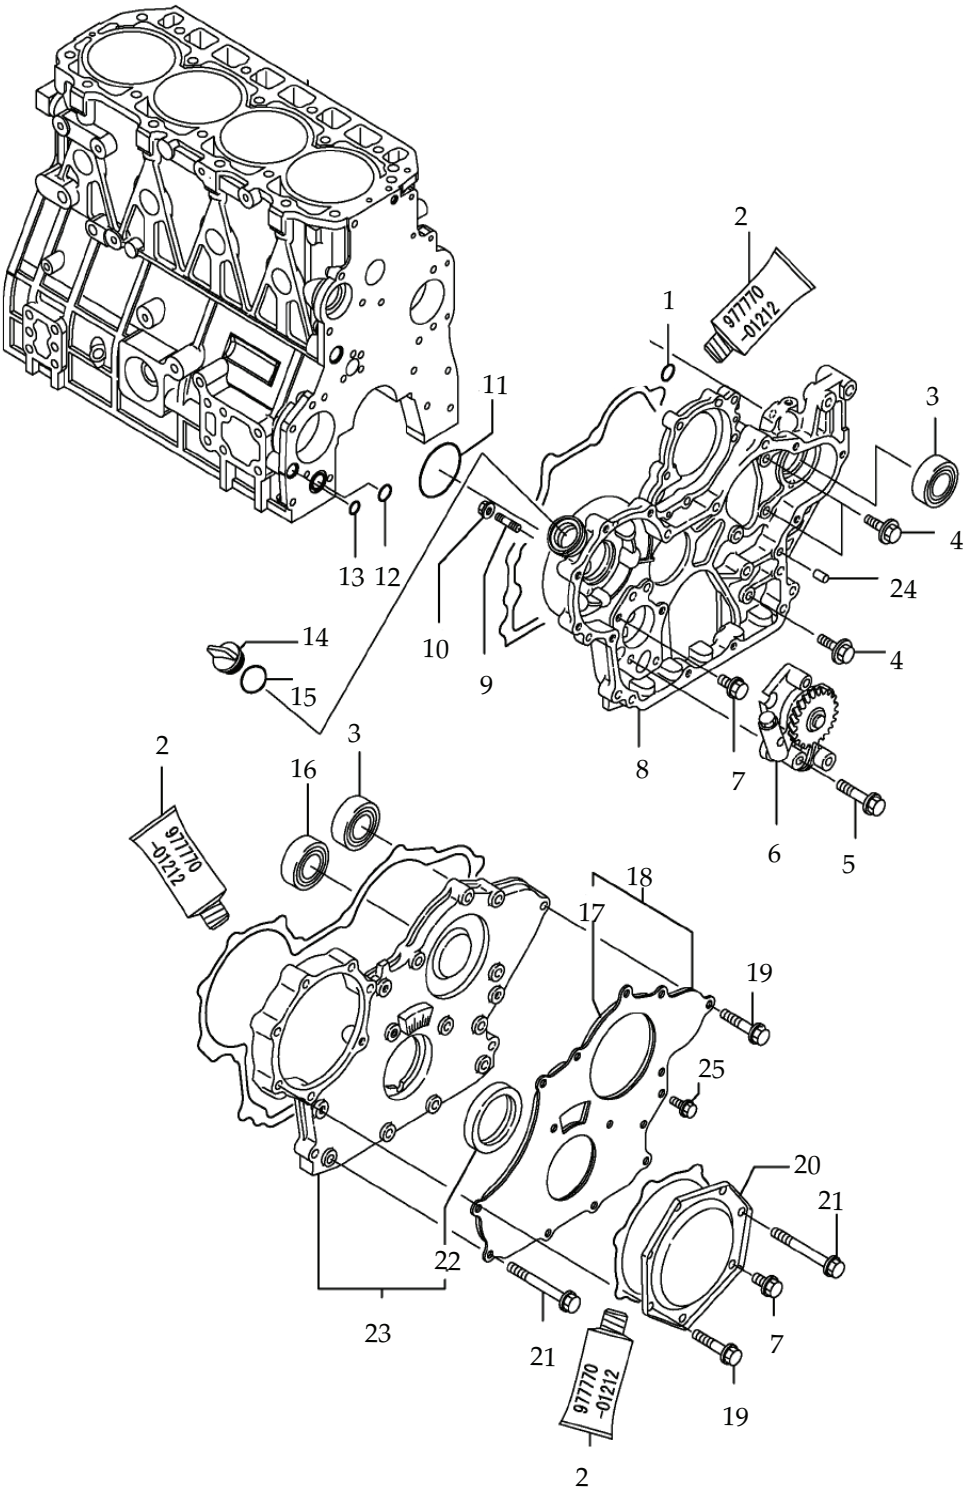



POWER TRAIN

GEAR HOUSING

Item	Part Number	Qty	Description
1	24311-000070	1	O-RING 1A P7.0
2	977770-01212	3	GASKET, LIQUID
3	129900-26250	2	BALL BEARING
4	26106-080202	3	BOLT, M8 X 20 PLATED
5	26106-080452	3	BOLT, M8 X 45 PLATED
6	129900-32001	1	OIL PUMP ASSEMBLY TIER II ONLY
6	129900-32060	1	OIL PUMP ASSEMBLY TIER III ONLY
7	26106-080162	3	BOLT, M8 X 16 PLATED
8	129962-01500	1	CASE, GEAR
9	26216-100302	4	STUD, BOLT
10	26306-100002	4	NUT
11	24351-030750	1	PACKING, 3075
12	129900-32030	1	O-RING P20
13	129900-32040	1	O-RING P14
14	124160-01751	1	OIL FILLER CAP
15	24311-000320	1	O-RING 1A P32.0
16	129900-14140	1	BEARING #6205
17	129900-01870	1	SPONGE
18	129900-01850	1	COVER ASSEMBLY INCLUDES ITEM 20
19	26106-080402	10	BOLT M8 X 40 PLATED
20	129900-01740	1	COVER, FI PUMP
21	129001-91810	7	BOLT, M8 X 70 PLATED
22	129900-01780	1	SEAL, OIL
23	729907-01550	1	HOUSING ASSY COVER INCLUDES ITEM 25
24	129100-01580	4	PARALLEL PIN 8 X 16
25	26106-080162	3	BOLT, M8 X 16 PLATED

POWER TRAIN

ENGINE GASKETS—YANMAR TIER II

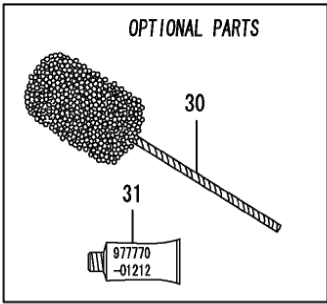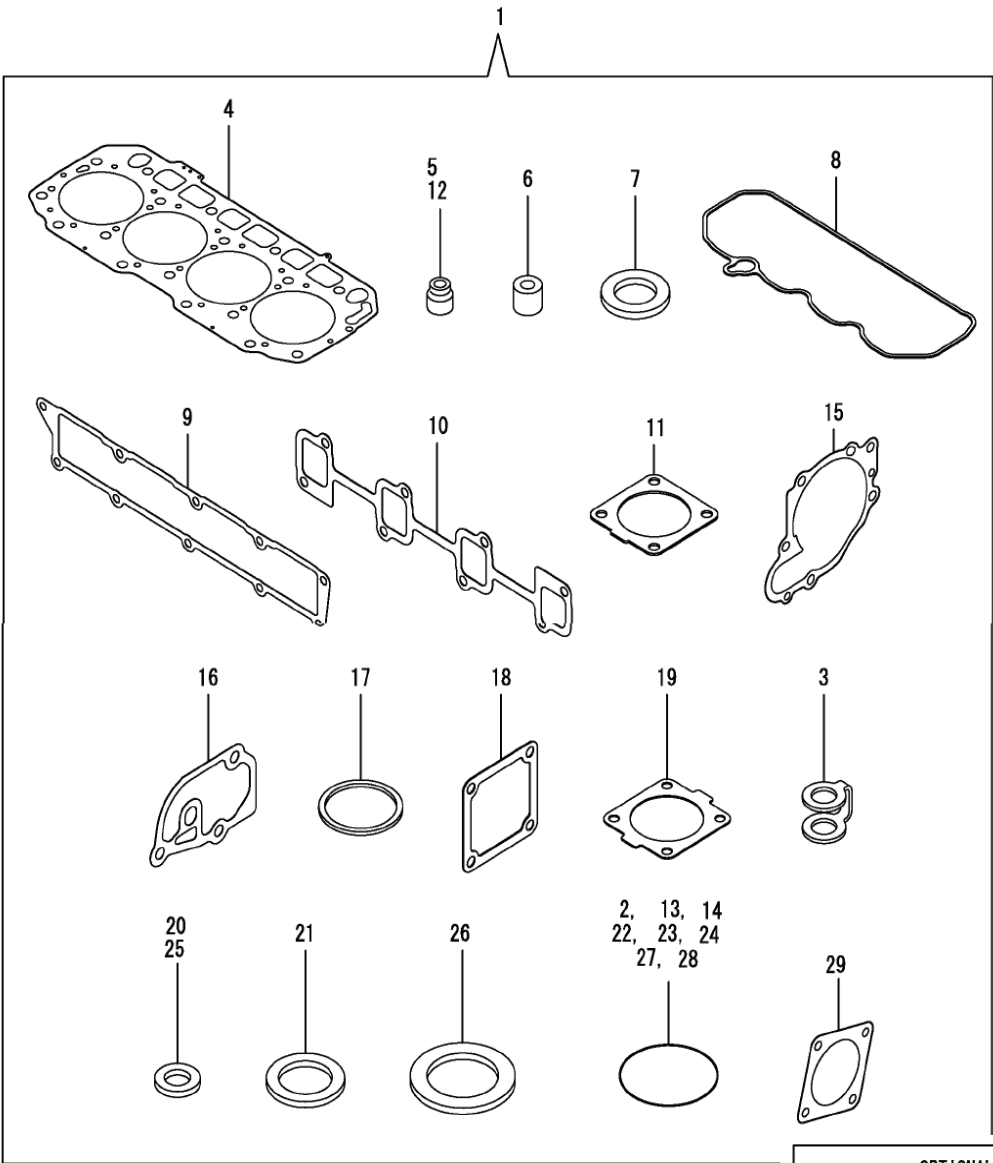



POWER TRAIN

ENGINE GASKETS—YANMAR TIER II

Item	Part Number	Qty	Description
1	729907-92760	1	GASKET SET
2	24341-000240	1	O-RING 1A S-24.0
3	123907-59550	5	PACKING, FUEL RETURN
4	129907-01331	1	CLYINDER HEAD GASKET
5	124160-11340	8	SEAL, VALVE STEM
6	119802-11870	4	PROTECTOR NOZZLE
7	119625-11880	4	SEAT, NOZZLE
8	129907-11310	1	HEAD COVER GASKET
9	129907-12110	1	INTAKE MANIFOLD GASKET
10	129900-13251	1	EXHAUST MANIFOLD GASKET
11	129930-13200	1	GASKET, SILENCER
12	124950-11340	8	SEAL, VALVE STEM
13	129900-32030	2	O-RING P20
14	129900-32040	1	O-RING P14
15	129900-42020	1	WATER PUMP GASKET
16	129900-49870	1	CASE GASKET
17	121850-49550	1	THERMOSTAT GASKET
18	121850-77021	1	GASKET
19	121850-49540	1	THERMOSTAT HOUSING GASKET
20	23414-080000	3	GASKET 8, ROUND
21	124465-44950	2	GASKET 16
22	24311-000070	1	O-RING 1A P7.0
23	14311-000120	8	O-RING 1A P12.0
24	24311-000320	2	O-RING 1A P32.0
25	22190-080002	7	SEAL WASHER 8S
26	22190-220002	1	SEAL WASHER 22S
27	24351-030750	1	PACKING 3075
28	24321-000850	1	O-RING 1A G85.0
29	124240-01883	1	GASKET
30	129400-92450	1	FLEX HONE
31	977770-01212	1	GASKET, LIQUID

POWER TRAIN

ENGINE GASKETS—YANMAR TIER III DIESEL

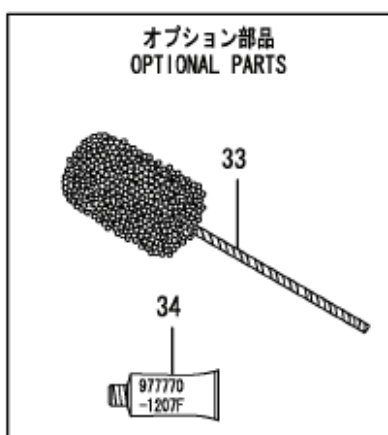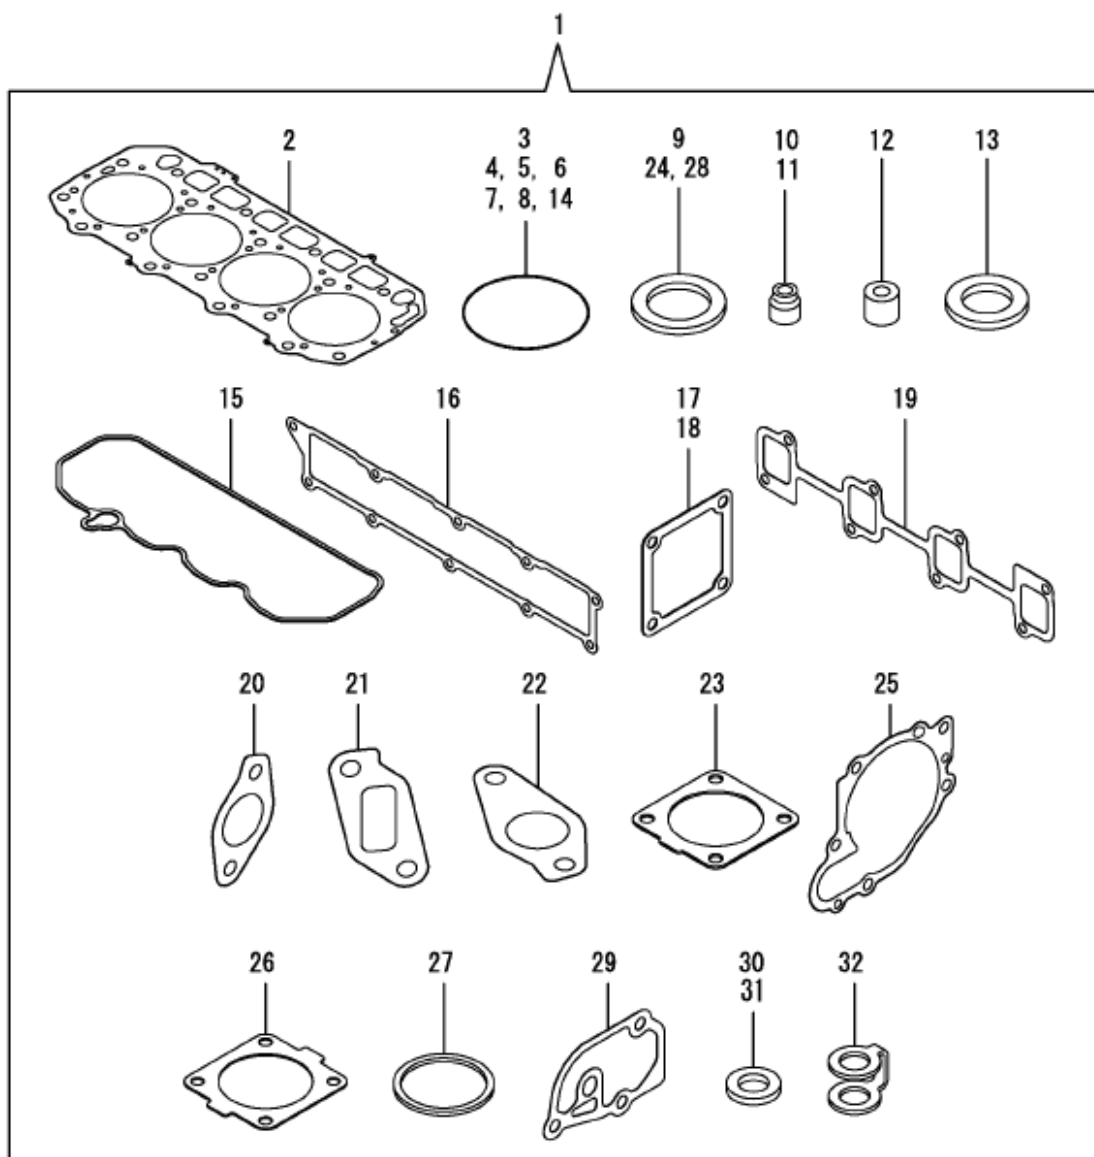


POWER TRAIN

ENGINE GASKETS—YANMAR TIER III DIESEL

Item	Part Number	Qty	Description
1	729927-92760	1	GASKET SET
2	129907-01331	1	CLYLINDER HEAD GASKET
3	129900-32030	2	O-RING P20
4	129900-32040	1	O-RING P14
5	24311-000070	1	O-RING 1A P7.0
6	24351-030750	1	PACKING 3075
7	24311-000320	2	O-RING 1A P32.0
8	24321-000850	1	O-RING 1A G85.0
9	22190-220002	1	SEAL WASHER 22S
10	119803-11340	8	SEAL, VALVE STEM
11	124160-11340	8	SEAL, VALVE STEM
12	119802-11870	4	PROTECOR NOZZLE
13	119625-11880	4	SEAT, NOZZLE
14	24311-000120	8	O-RING 1A P12.0
15	129933-11310	1	GASKET, HEAD COVER
16	129907-12110	1	GASKET, INTAKE MANIFOLD
17	119129-77020	1	GASKET
18	121850-77021	1	GASKET
19	129900-13251	1	GASKET, EXHAUST MANIFOLD
20	129927-13810	1	GASKET, EGR PIPE
21	129927-13910	1	GASKET, EGR-V IN
22	129927-13920	1	GASKET, EGR-V OUT
23	129930-13201	1	GASKET, SILENCER
24	22190-080002	9	SEAL WASHER 8S
25	129900-42020	1	GASKET, CW-P
26	121850-49540	1	GASKET, THERMOSTAT
27	121850-49550	1	GASKET, THERMOSTAT
28	22190-120002	1	SEAL WASHER 12
29	129900-49870	1	GASKET, CASE
30	23414-080000	1	GASKET 8 ROUND
31	124465-44950	2	GASKET 16
32	123907-59550	5	PACKING, FUEL RETURN
33	129400-92450	1	FLEX HONE
34	977770-1207F	1	GASKET, LIQUID

COOLING SYSTEM

ENGINE COOLING SYSTEM

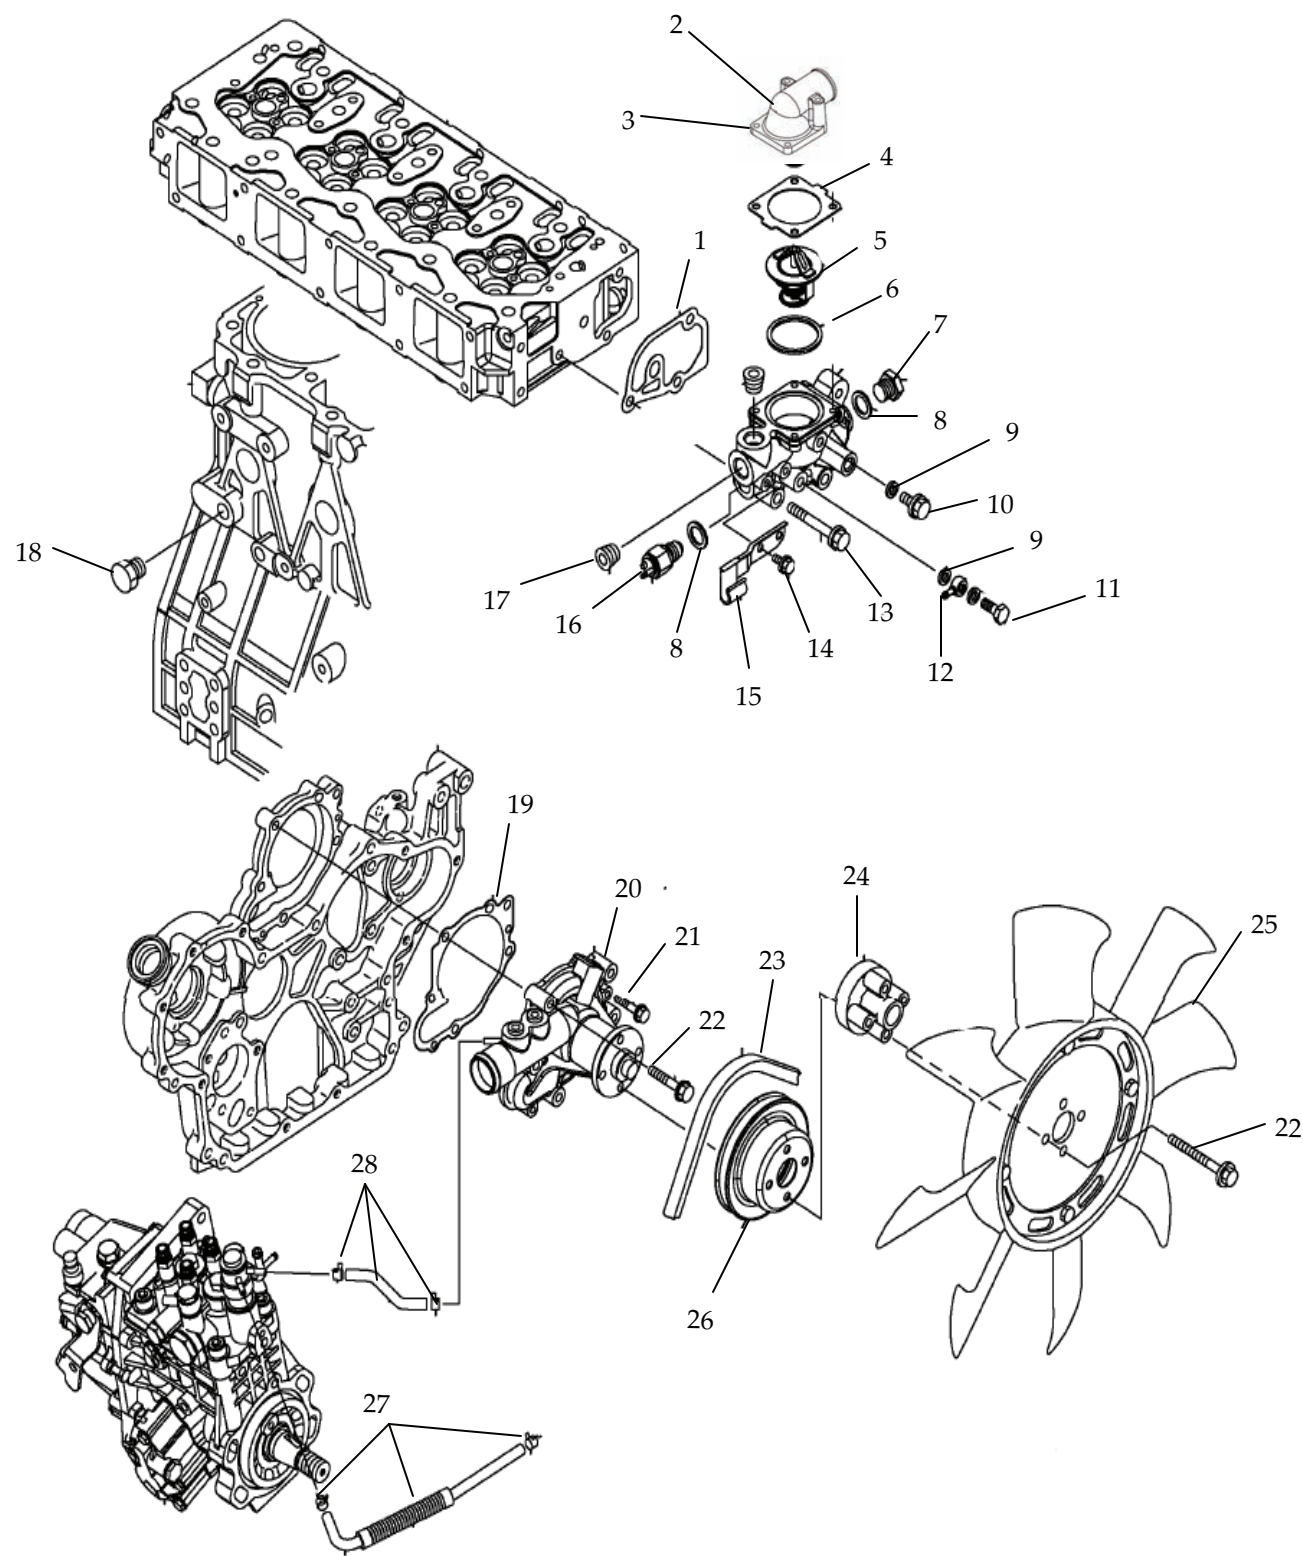


COOLING SYSTEM

ENGINE COOLING SYSTEM

Item	Part Number	Qty	Description
1	129900-49870	1	GASKET, CASE
2	129980-49530	1	THERMOSTAT HOUSING
3	26106-060202	4	BOLT, M6 X 20 PLATED
4	121850-49540	1	GASKET, THERMOSTAT HOUSING
5	121850-49810	1	THERMOSTAT
6	121850-49550	1	THERMOSTAT GASKET
7	121450-42450	1	PLUG M16
8	124465-44950	2	GASKET
9	23414-080000	3	GASKET
10	26106-080122	1	BOLT, M8 X 12 PLATED
11	105582-59150	1	BOLT, PIPE JOINT
12	23387-040800	1	JOINT
13	26106-080602	3	BOLT, M8 X 60 PLATED
14	26106-060122	2	BOLT, M6 X 12 PLATED
15	122907-49730	1	BRACKET
16	129004-55612	1	TEMPERATURE SENDING UNIT TIER II ONLY
16	129927-44900	1	TEMPERATURE SENDING UNIT TIER III ONLY
17	23875-030000	2	PLUG PT 3/8 STEEL
18	171056-49120	1	DRAIN PLUG
19	129900-42020	1	GASKET, WATER PUMP
20	129907-42000	1	WATER PUMP
21	26106-060302	2	BOLT, M6 X 30 PLATED
22	26106-080552	9	BOLT, M8 X 55 PLATED
23	25132-004200	1	V-BELT
24	A-TT8-00360	1	FAN SPACER
25	A-TT8-00312	1	FAN
26	129900-42450	1	PULLEY, WATER PUMP
27	129907-49710	1	PIPE A, COOLING WITH CLAMPS
28	129907-49620	1	HOSE B ASSEMBLY, WATER

COOLING SYSTEM

ENGINE COOLING SYSTEM

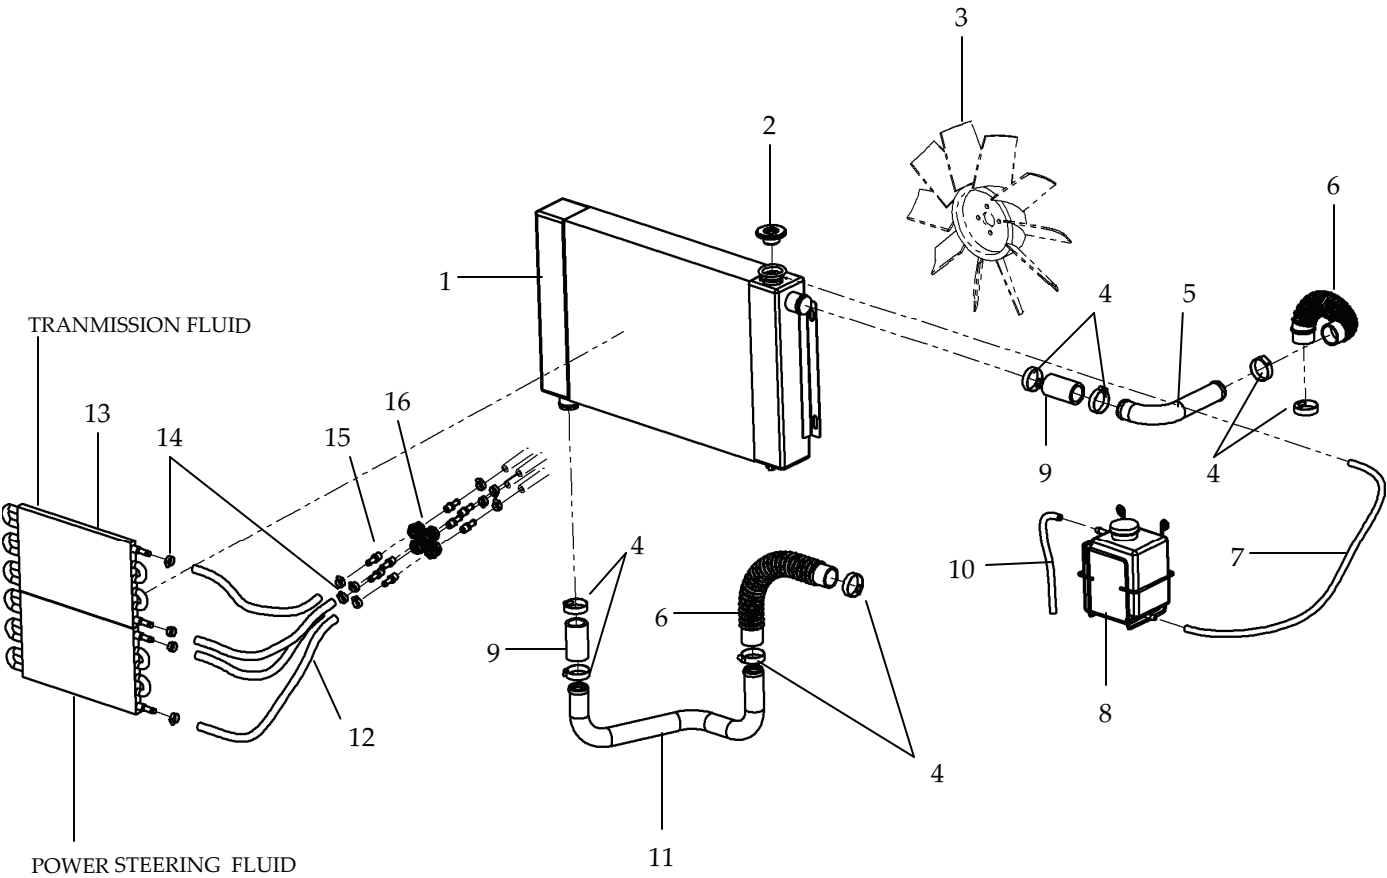


COOLING SYSTEM

ENGINE COOLING SYSTEM

Item	Part Number	Qty	Description
1	B-TT4-00313	1	RADIATOR
2	A-USAT5-00330	1	RADIATOR CAP
3	A-TT8-00312	1	FAN
4	NPN	8	# 24 HOSE CLAMP
5	A-TT8-00322	1	COOLANT ELBOW
6	A-TT10-00323-1	2	RADIATOR HOSE
7	H05705	1	5/16 HOSE SAE30R7 WK PR 75 "
8	A-TT10TD-00322	1	SURGE TANK
9	A-TT4-00331	2	COOLING HOSE 1.5 ID X 4 IN
10	NPN	1	CLEAR NYLON HOSE 36"
11	A-TT8-00320	1	COOLANT OUTLET PIPE
12	H05705	4	5/16 HOSE SAE30R7 WK PR 20 "
13	A-TT4-00221-1	2	TRANSMISSION COOLER
14	NPN	12	#4 HOSE CLAMP
15	05706B-104	8	FITTING, STRAIGHT 3/8 X 1/4
16	A-TT4-00280	4	BULK HEAD FITTING

DRIVELINE


DRIVE SHAFT ASSEMBLY-FRONT (ALL TT 4-8 MODELS)

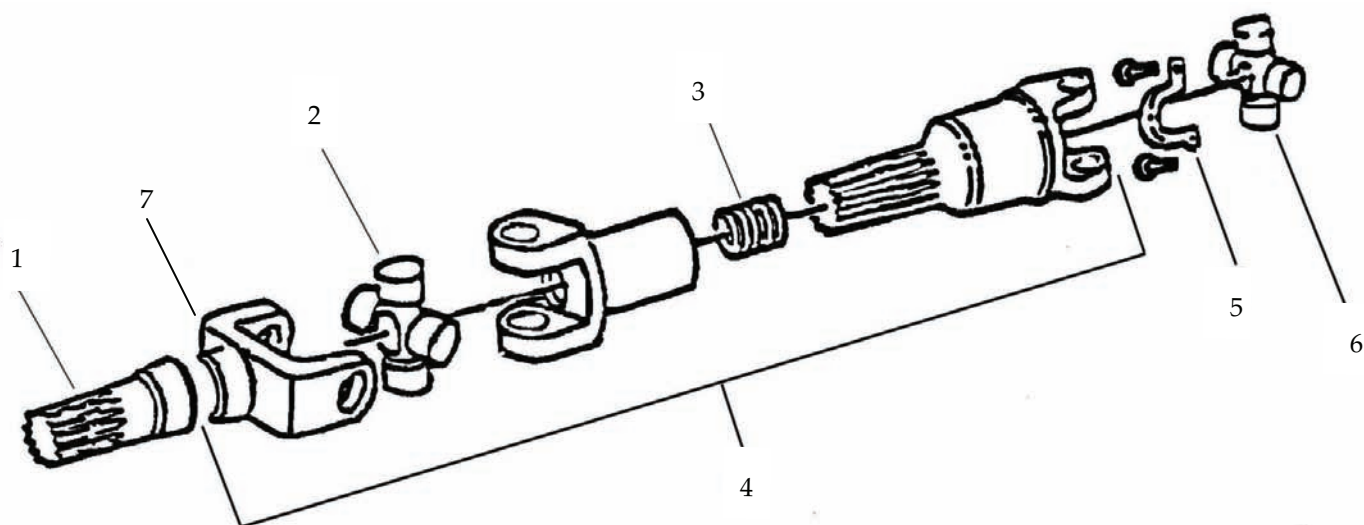

Item	Part Number	Qty.	Description
1	A-TT8-00201-1	1	TRANSMISSION OUTPUT YOKE SHAFT-FRONT
2	A-TT4-00132-1	1	CROSS BEARING FRONT D/S NEW STYLE
3	A-TT4-00134	1	DRIVE SHAFT SPRING
4	A-TT8-00202-4	1	DRIVE SHAFT
5	A-TT4-00130	2	END YOKE STRAP AND BOLT KIT
6	A-TT4-00137-1	1	CROSS BEARING FRONT D/S NEW STYLE
7	2-4-1921	1	END YOKE

DRIVELINE


DRIVESHAFT ASSEMBLY—REAR (ALL TT 4-8 MODELS)

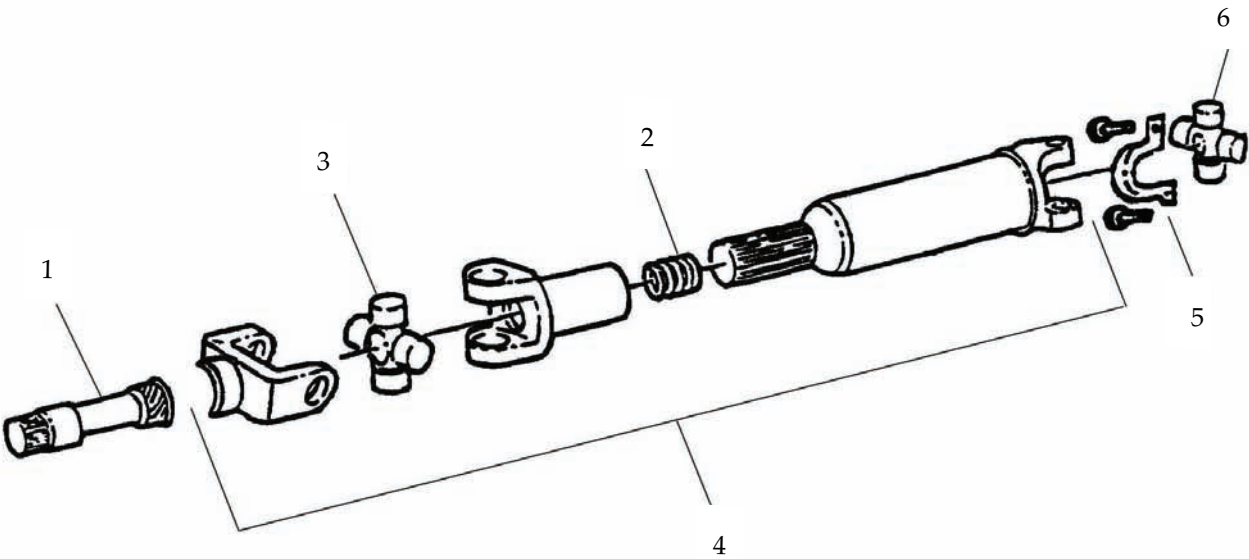

Item	Part Number	Qty.	Description
1	A-TT8-00201-2	1	TRANSMISSION OUTPUT YOE SHAFT-REAR
2	A-TT4-00134	1	DRIVE SHAFT SPRING
3	A-TT4-00132-1	1	CROSS BEARING FRONT D/S NEW STYLE
4	AB-TT4-00130-1	1	DRIVE SHAFT
5	A-TT4-00130	2	END YOE STRAP KIT
6	A-TT4-00137	1	CROSS BEARING REAR D/S NEW STYLE

TRANSMISSION

TRANSAXLE MOUNTING & MISC. PARTS (ALL TT 4-8 MODELS)

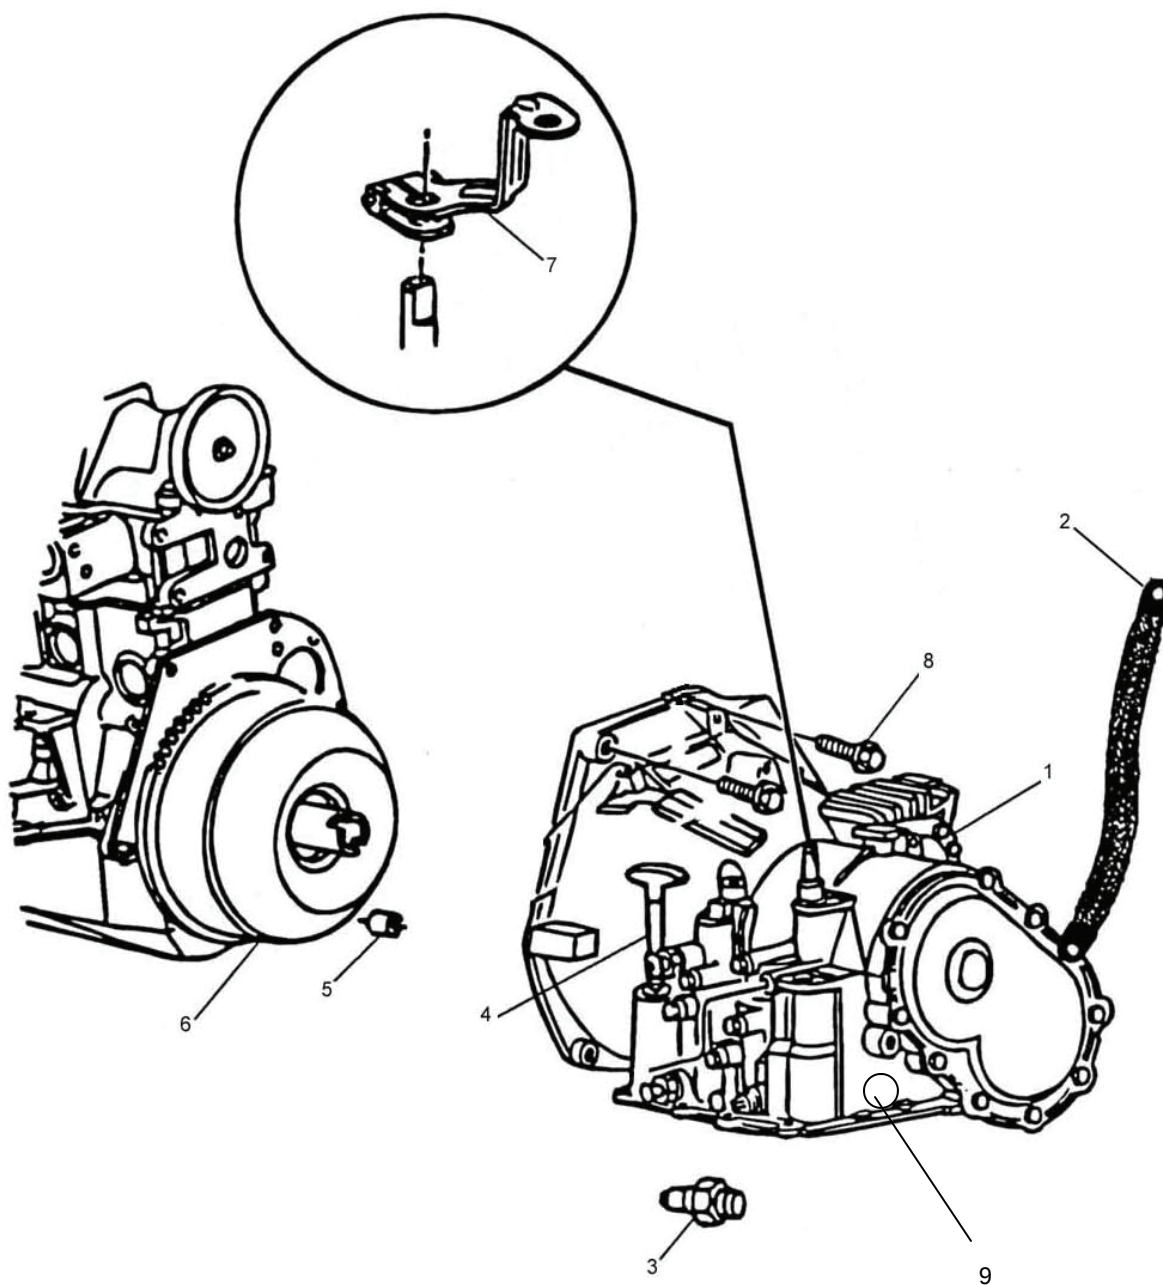


TRANSMISSION

TRANSAXLE MOUNTING & MISC. PARTS (ALL TT 4-8 MODELS)

Item	Part Number	Qty	Description
1	A-TT5D-0018-1	1	TRANSMISSION
2	A-TN4-00707	1	GROUND STRAP
3	3747361	1	SWITCH-NEUTRAL STARTER & BACK UP LIGHT
4	4856444	1	DIPSTICK-TRANMISSION FLUID
5	5240849	2	DOWEL PIN-TRANS TO ENGINE ALIGNMENT
6	4778718	1	TORQUE CONVERTER
7	A-TT4-00419	1	TRANSAXLE SHIFT LEVER-MANUAL CONTROL
8	6501741	2	SCREW-HEX CAP-WITH WASHER M12-1.75 X 30
9	85705	1	GASKET & FILTER MAINTENANCE PACKAGE
10	2926502	1	PLUG-TRANS NEUTRAL SWITCH(NOT SHOWN)

TRANSMISSION

TRANSAXLE CASE EXTENTION & RETAINER (ALL TT 4-8 MODELS)

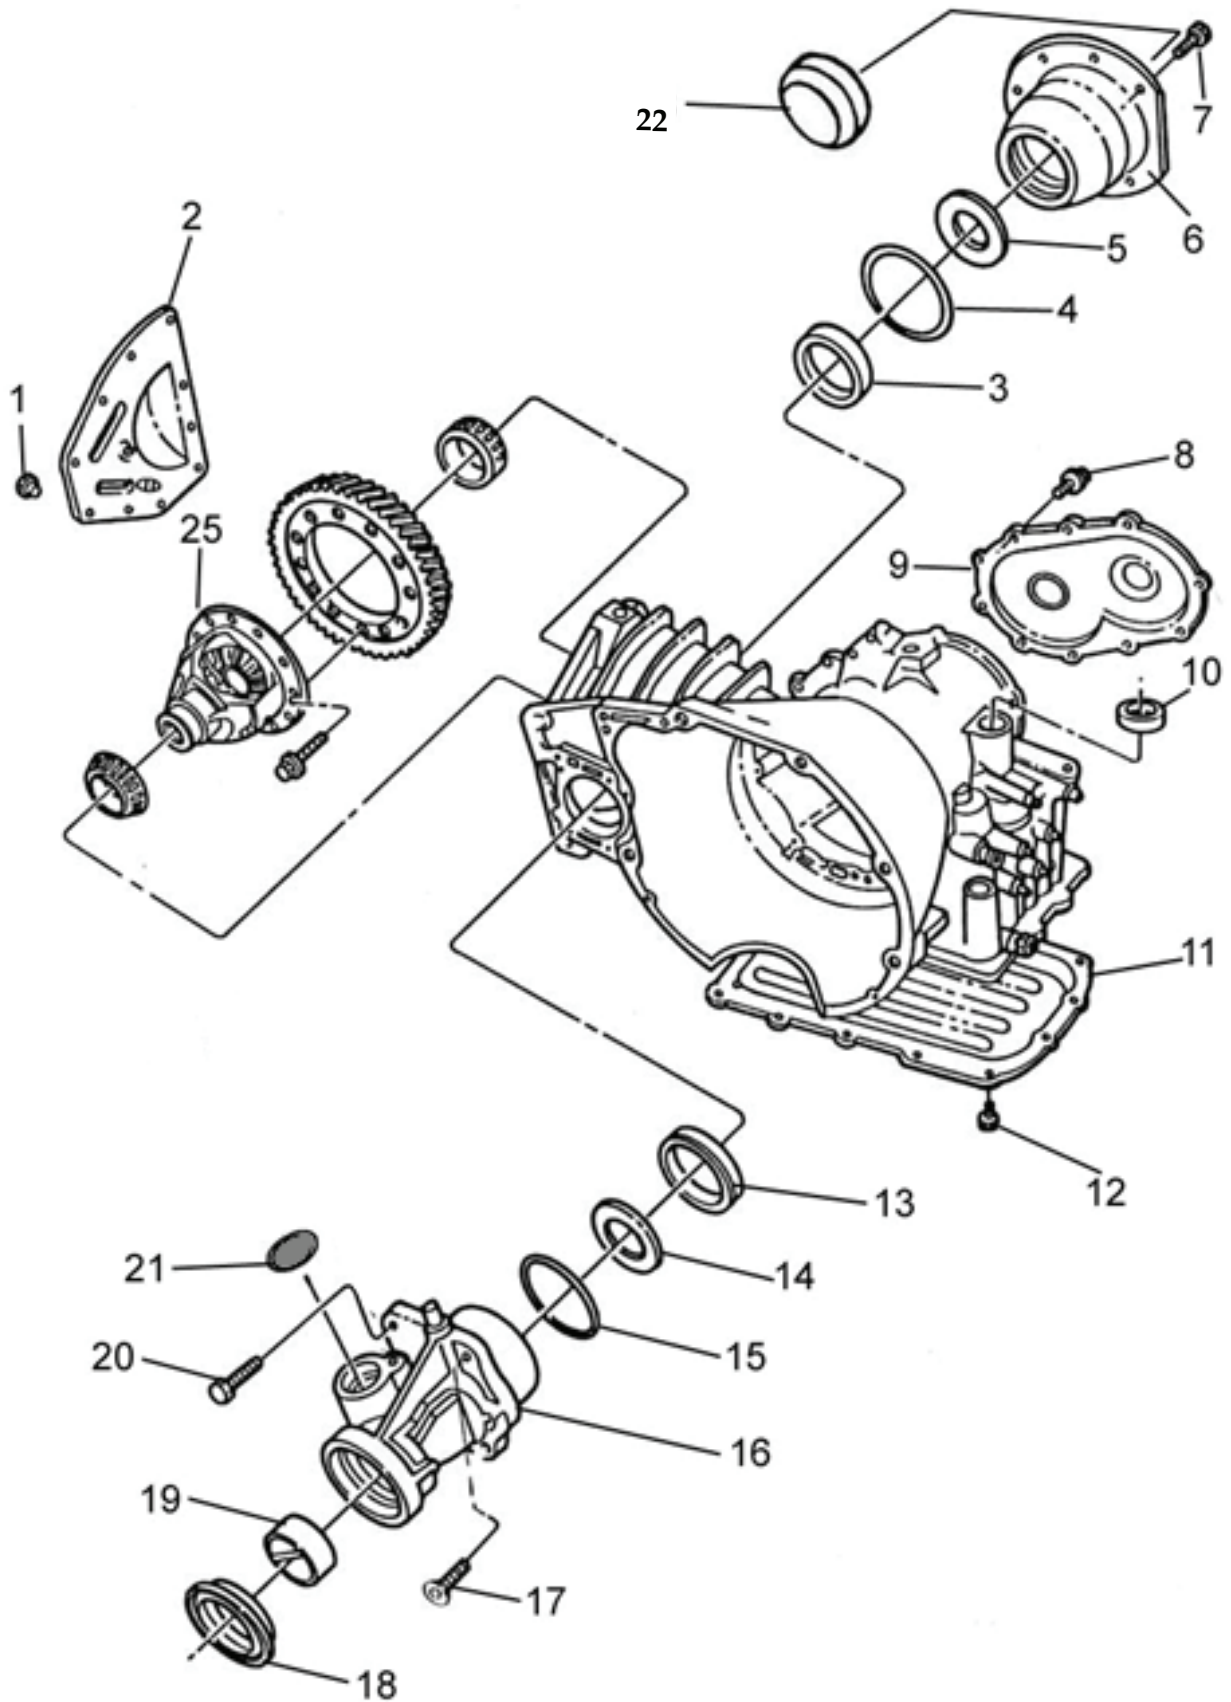

TRANSMISSION


TRANSAXLE CASE EXTENTION & RETAINER (ALL TT 4-8 MODELS)

Item	Part Number	Qty	Description
1	6501474	10	SCREW-HEX CAP-WASH M8-1.25 X 16
2	4471573	1	PAN
3	NPN	1	CUP(NOT SOLD SEPARATELY)
4	4504568	1	SPACER KIT
5	4269787	1	RETAINER, OIL
6	4567493	1	RETAINER, BEARING
	6500368	6	SCREW-HEX CAP-M8 X 1.25 X 23
7	NPN	6	SCREW-HEX CAP-WASH HEAD M8-1.25 X 2
8	NPN	10	SCREW-HEX CAP M8-1.25 X 15
9	4659342	1	COVER, TRANS. END
	82180	1	RTV SEALANT
	6501474	10	SCREW-HEX CAP WASH M8-1.25 X 16
10	3878447	1	SEAL, MANUAL VALVE SHAFT
11	4471573	1	PAN, TRANSAXLE OIL
12	6501474	12	SCREW-HEX CAP WASH M8-1.25 X 16
	6101285	1	SCREW-HEX CAP-WASH M6-1 X 16
13	4567022	1	CUP
14	4567494	1	RETAINER
15	6500111	1	O-RING
16	A-TT5D-00011-MOD	1	*TRANSMISSION CONE
	6500511	4	SCREW-HEX CAP-WASH M8-1.25 X 33
17	NPN	2	M8 HEX HEAD SCREW
18	4412522	1	SEAL
19	NPN	1	BUSHING (SERVICED IN EXT.)
20	NPN	4	SCREW-HEX CAP WASH HEAD M8-1.25 X 30
21	A-TT4-00658	1	TRANS EXP PLUG
22	A-TT4-00657	1	TRANSMISSION PLUG (2WD ONLY)

*PLEASE HAVE TUG MODEL AND SERIAL NUMBER AVAILABLE WHEN ORDERING THIS PART

AXLES

AXLE ASSEMBLY – FRONT NON-DRIVE TT4-TT6 2WD ONLY

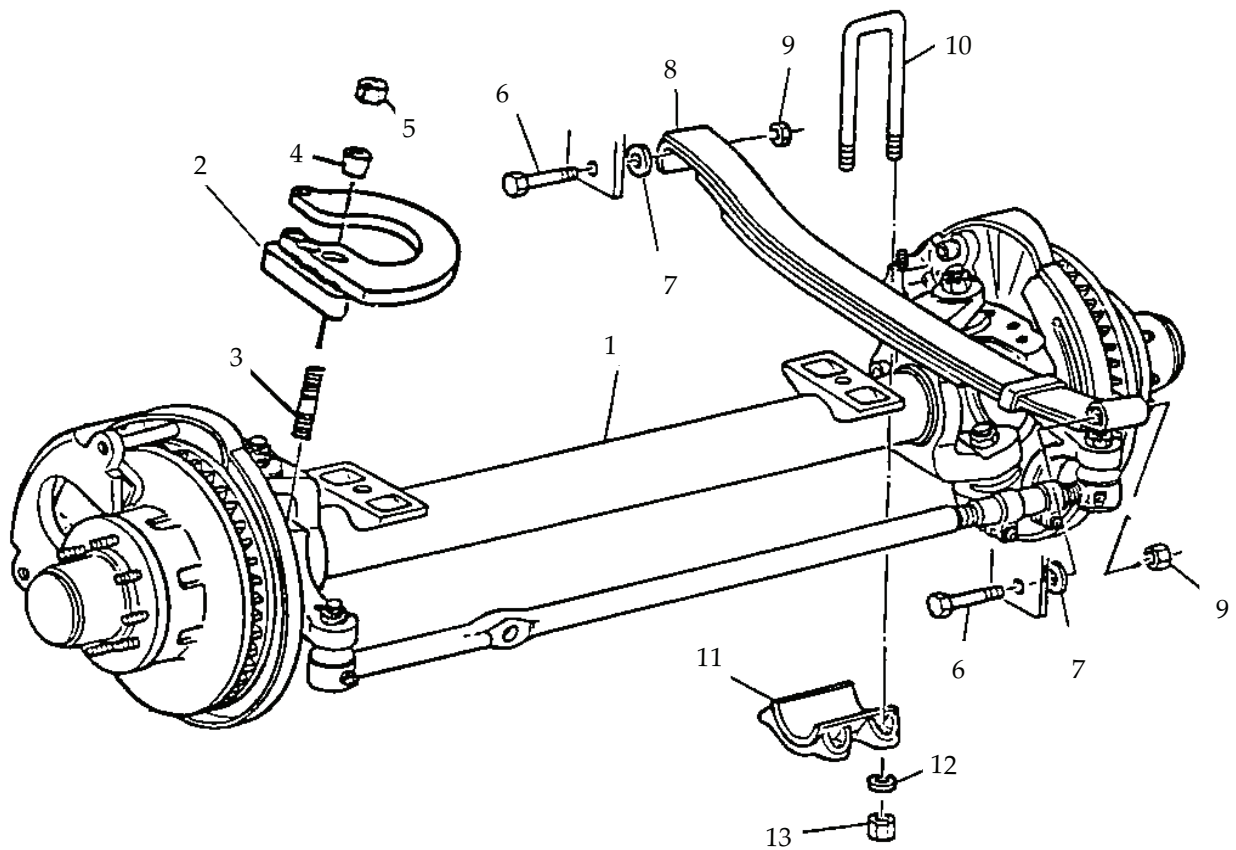


Item	Part Number	Qty	Description
1	A-TT4-00111	1	AXLE ASSY-FRONT NON-DRIVE
2	C-TT4-00113-1-MACH	1	STEERING ARM - TT4-6 2WD
3	A-TT8-00115	3	STUD-STEERING ARM
4	3965138	3	BUSHING
5	NPN	3	9/16-18 GR8 HEX NUT
6	NPN	4	SCREW-HEX CAP 3/8-16X3.5
7	A-TT4-00119	12	NYLON WASHER
8	A-TT4-00116	2	LEAF SPRING
9	NPN	8	3/8-16 LOCK NUT
10	A-TT4-00362-1	4	U-BOLT KIT
11	A-TT4-00363*	2	AXLE CLAMP PLATE*
12	A-TT4-00366**	8	WASHER, U-BOLT

**INCLUDED IN U-BOLT KIT

AXLES

AXLE ASSEMBLY – FRONT DRIVE (ALL WHEEL DRIVE)

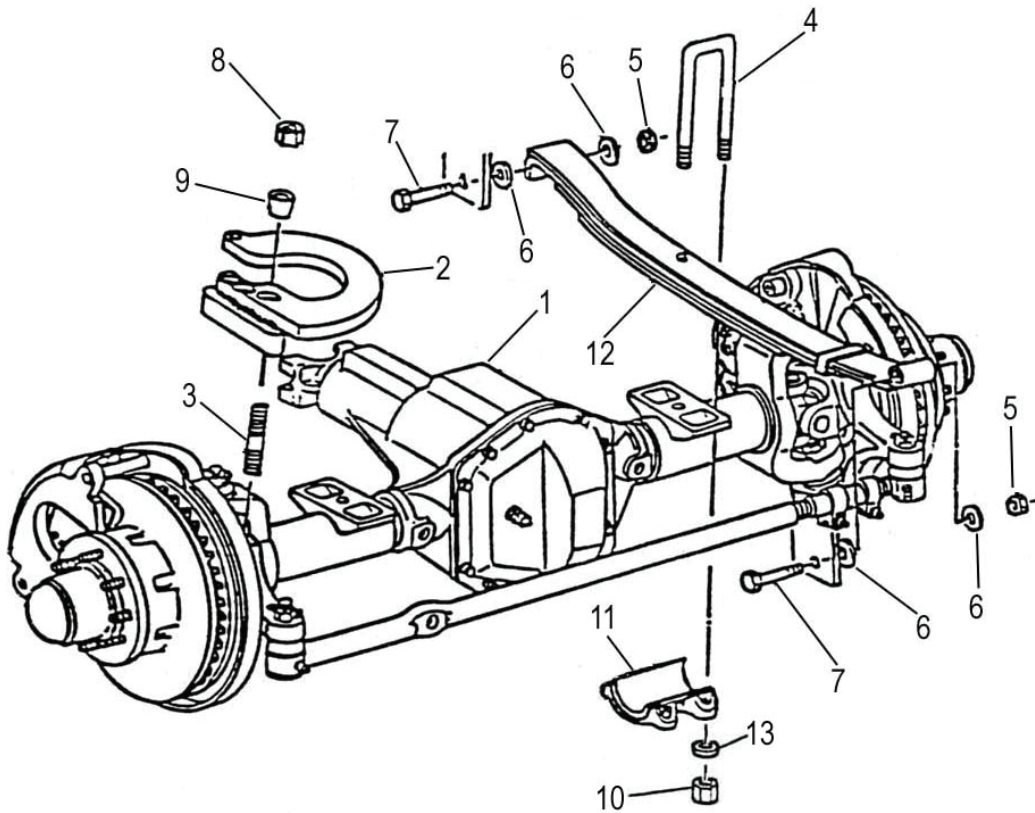


Item	Part Number	Qty.	Description
1	A-TT8-00371	1	FRONT DRIVE AXLE ASSEMBLY
2	C-TT4-00113-2-MACH	1	STEERING ARM - TT4-TT8/2 AWD
3	A-TT8-00115	3	STUD - STEERING ARM
4	A-TT4-00362-1	4	KIT
5	NPN	4	3/8X16 LOCK NUT
6	A-TT4-00119	8	NYLON WASHER
7	NPN	4	SCREW-HEX CAP 3/8-16X3.5
8	NPN	3	NUT 9/16-18 GR8
9	3965138	3	BUSHING
10	A-TT4-00365*	8	NUT, U-BOLT
11	A-TT4-00118-3	2	MACHINED AXLE CLAMP PLATE
12	A-TT4-00116	2	LEAF SPRING
13	A-TT4-00366*	8	WASHER, U-BOLT

**INCLUDED IN U-BOLT KIT

AXLES

AXLE ASSEMBLY— REAR (ALL TT 4-8 MODELS)

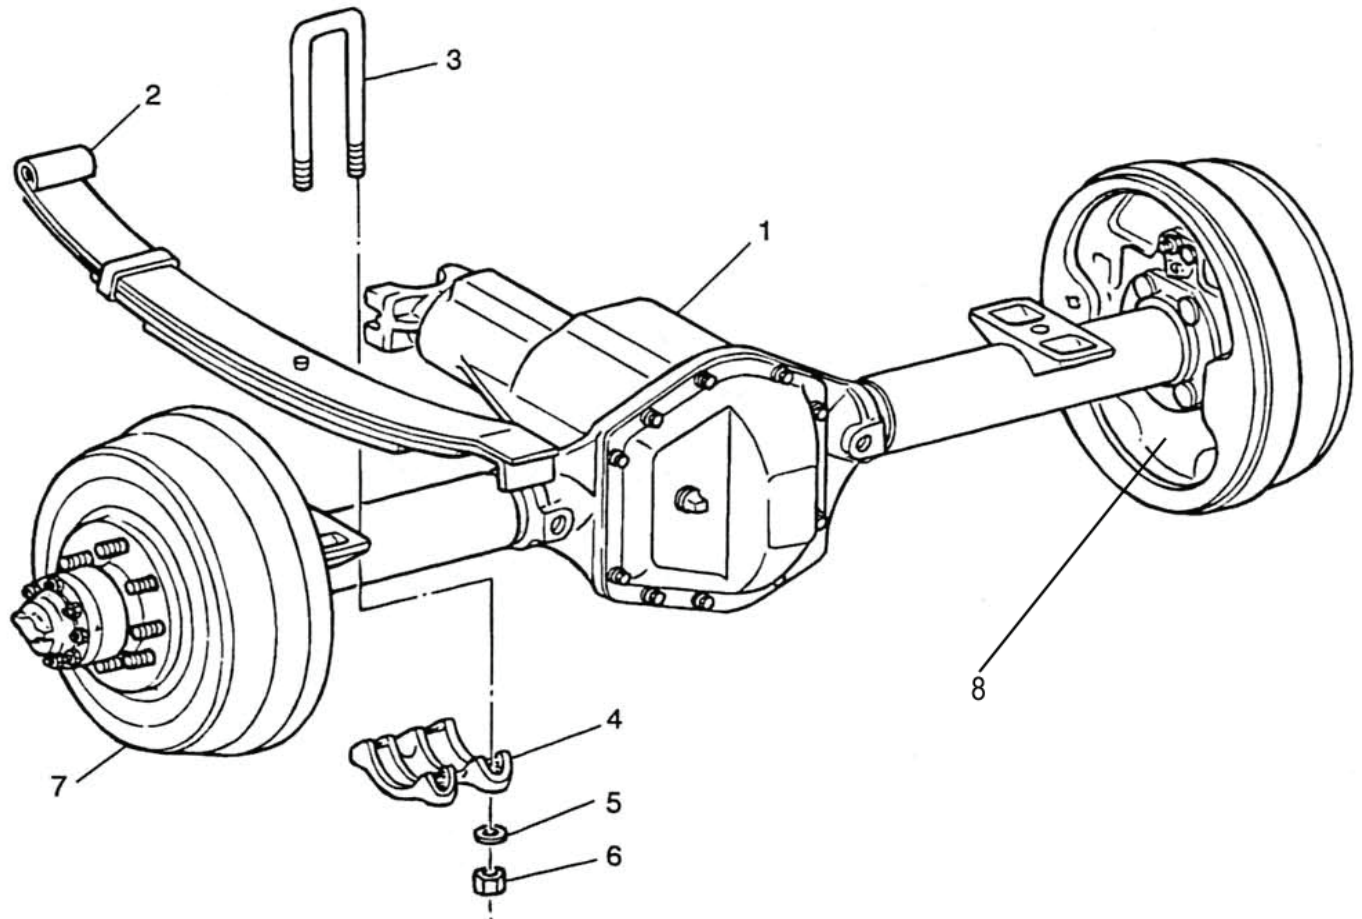

Item	Part Number	Qty	Description
1	A-TT4-00361**	1	REAR AXLE ASSEMBLY
2	A-TT4-00116	2	LEAF SPRING
3	A-TT4-00362-1	4	U-BOLT KIT
4	A-TT4-00363	2	AXLE CLAMP PLATE
5	A-TT4-00366*	8	WASHER
6	A-TT4-00365*	8	NUT
7	4313905	1	LEFT HAND BACKING PLATE
8	4313904	1	RIGHT HAND BACKING PLATE

*INCLUDED IN U-BOLT KIT

**CALL EAGLE TUGS FOR INFORMATION IF YOUR TUG IS EQUIPPED WITH LIMITED SLIP

AXLES

RECOMMENDED TORQUE SPECIFICATIONS FOR DANA 44 AXLE (FRONT)

POSITION	THREAD	WRENCH TORQUE (LBS.-FT)
Drive Pinion Nut	3/4 - 16	175-225
Differential Bearing Cup Cap Screws	1/2 - 13	70-90
Ring Gear Cap Screws	3/8 - 24	45-65
Cover Screws	5/16 - 18	28-33 (Note A)
Axle Shaft Bearing & Brake Retainer Nuts	3/8 - 24	40-50
Spindle Mounting Nuts	3/8 - 24	20-30
Spindle Mounting Nuts	3/8 - 24	65-75 (Note A)
Spindle Mounting Nuts	7/16 - 20	50-60
Tie Rod Stud Nut	1/2 - 20	35 Min (Note B)
Tie Rod Stud Nut	9/16 - 18	35 Min (Note B)
Tie Rod Clamp Nuts	3/8 - 24	15-25
Tie Rod Clamp Nuts	7/16 - 20	25-40
Steering Arm Nuts	9/16 / 18	80-100
Steering Bolt Stop Screw & Jam Nut	3/8 - 24	10-20

RECOMMENDED TORQUE SPECIFICATIONS FOR DANA 60 AXLE (REAR)


POSITION	THREAD	WRENCH TORQUE (LBS.-FT)
Drive Pinion Nut	7/8 - 14	240-300
Differential Bearing Cup Cap Screws	1/2 - 13	70-90
Ring Gear Cap Screws	1/2 - 20	100-120
Ring Gear Cap Screws	1/2 - 20	120-14 (Note A)
Cover Screws	3/8 - 16	30-40
Brake Retainer Nuts	7/16 - 20	64-70
Axle Shaft Flange Nuts	7/16 - 20	64-70
Upper Kingpin	1 1/8 - 12	500-600
Kingpin Cap Cap Screws	1/2 - 20	70-90
Spindle Mounting Nuts	1/2 - 20	60-80
Tie Rod Stud Nut	5/8 - 18	70 Min (Note B)
Tie Rod Clamp Nuts	1/2 - 20	35-45
Steering Arm Nuts	1/2 - 20	70-90
Steering Bolt Stop Screw & Jam Nut	1/2 - 20	10-20

A. For Grade 9 fastener with locking serrations on underside of cap screw head or nut.

B. If cotter pin cannot be installed after minimum torque is attained, the nut must be advanced until cotter pin can be installed.

AXLES

AXLE ASSEMBLY BREAKDOWN — FRONT NON-DRIVE (2WD)

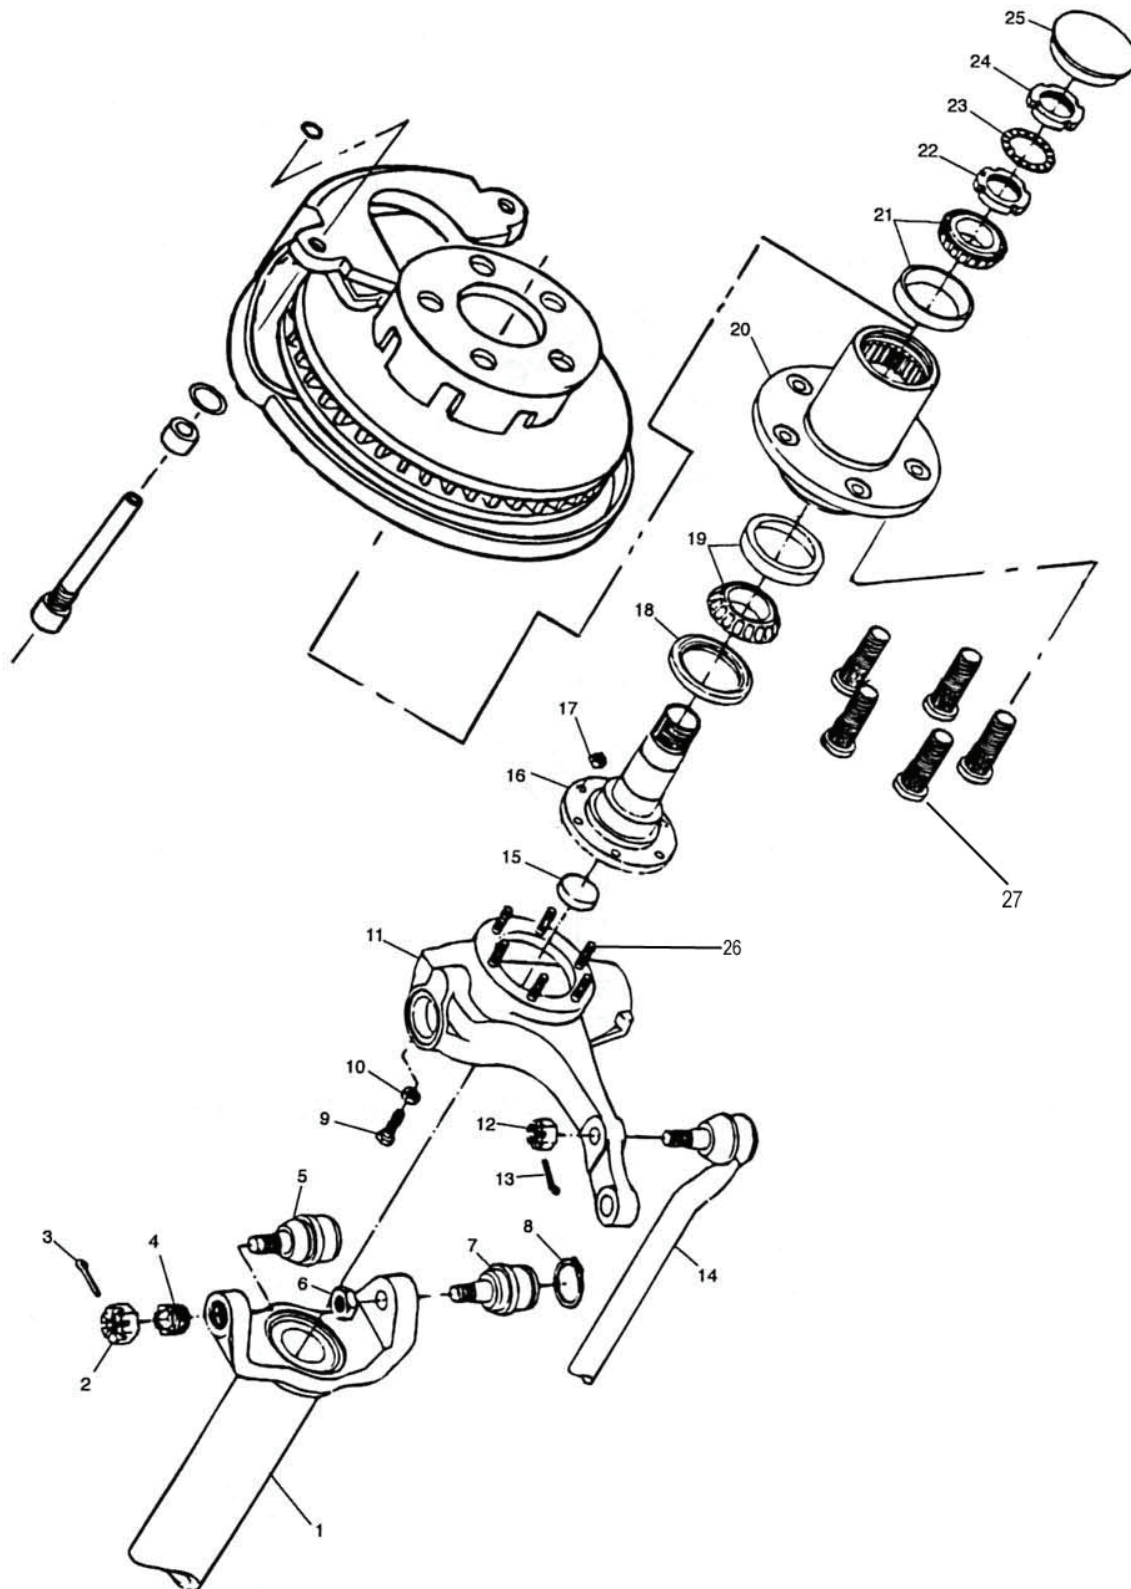

AXLES

AXLE ASSEMBLY BREAKDOWN –FRONT NON-DRIVE (2WD)

Item	Part Number	Qty	Description
1	29775-29X	1	TUBE ASSEMBLY
2	44101	2	NUT-SLOTTED
3	500024-8	2	PIN-COTTER
4	35417	2	RING-ADJUSTING
5	40112	1	SOCKET ASSEMBLY UPPER
6	35566	2	NUT-LOCK
7	40113	1	SOCKET ASSEMBLY LOWER
8	35928	1	RING-SNAP
9	31026-1	2	BOLT-STOP
10	500381-3	2	NUT-JAM
11	706652X	KIT	STEERING KNUCKLE R/H INCLUDES ITEMS 33-39 & 42
11	706653X	KIT	STEERING KNUCKLE L/H INCLUDES ITEMS 33-39 & 42
12	44101	2	NUT-SLOTTED
13	500024-6	2	PIN-COTTER
14	044TR115-16X	1	TIE ROD ASSEMBLY
15	36544	2	PLUG-CAP
16	38428	2	SPINDLE-WHEEL BEARING
17	35704	12	NUT-LOCK
18	36361	2	SEAL-LOCK
19	706690-X	KIT	INNER WHEEL BEARING
20	044HU103	2	HUB & ROTOR ASSEMBLY
21	706111-X	KIT	OUTER WHEEL BEARING
22	21588X	2	SPINDLE NUT
23	36569	2	LK WASHER-WHEEL BRG NUT
24	31139	2	NUT-SPINDLE
25	31552	2	CAP-HUB
26	36326-2	6	STUD STEERING KNUCKLE
N/S	044WC101-2	1	CALIPER ASSEMBLY R/H
N/S	044WC101-1	1	CALIPER ASSEMBLY L/H
N/S	044WB101-1	1	BRACKET ASSEMBLY-CALIPER L/H
N/S	044WB101-2	1	BRACKER ASSEMBLY-CALIPER R/H
27	610286	8	WHEEL STUDS

Recommended tools:


OTC 7157 To remove Front Axle Spindle Nut (Dana 44)

OTC 7080 To remove Front Axle Top Ball Joint (Dana 44)

OTC 1902 To remove Front & Rear Axle Spindle Nut (Dana 70)

AXLES

AXLE ASSEMBLY BREAKDOWN—FRONT DRIVE (ALL WHEEL DRIVE)

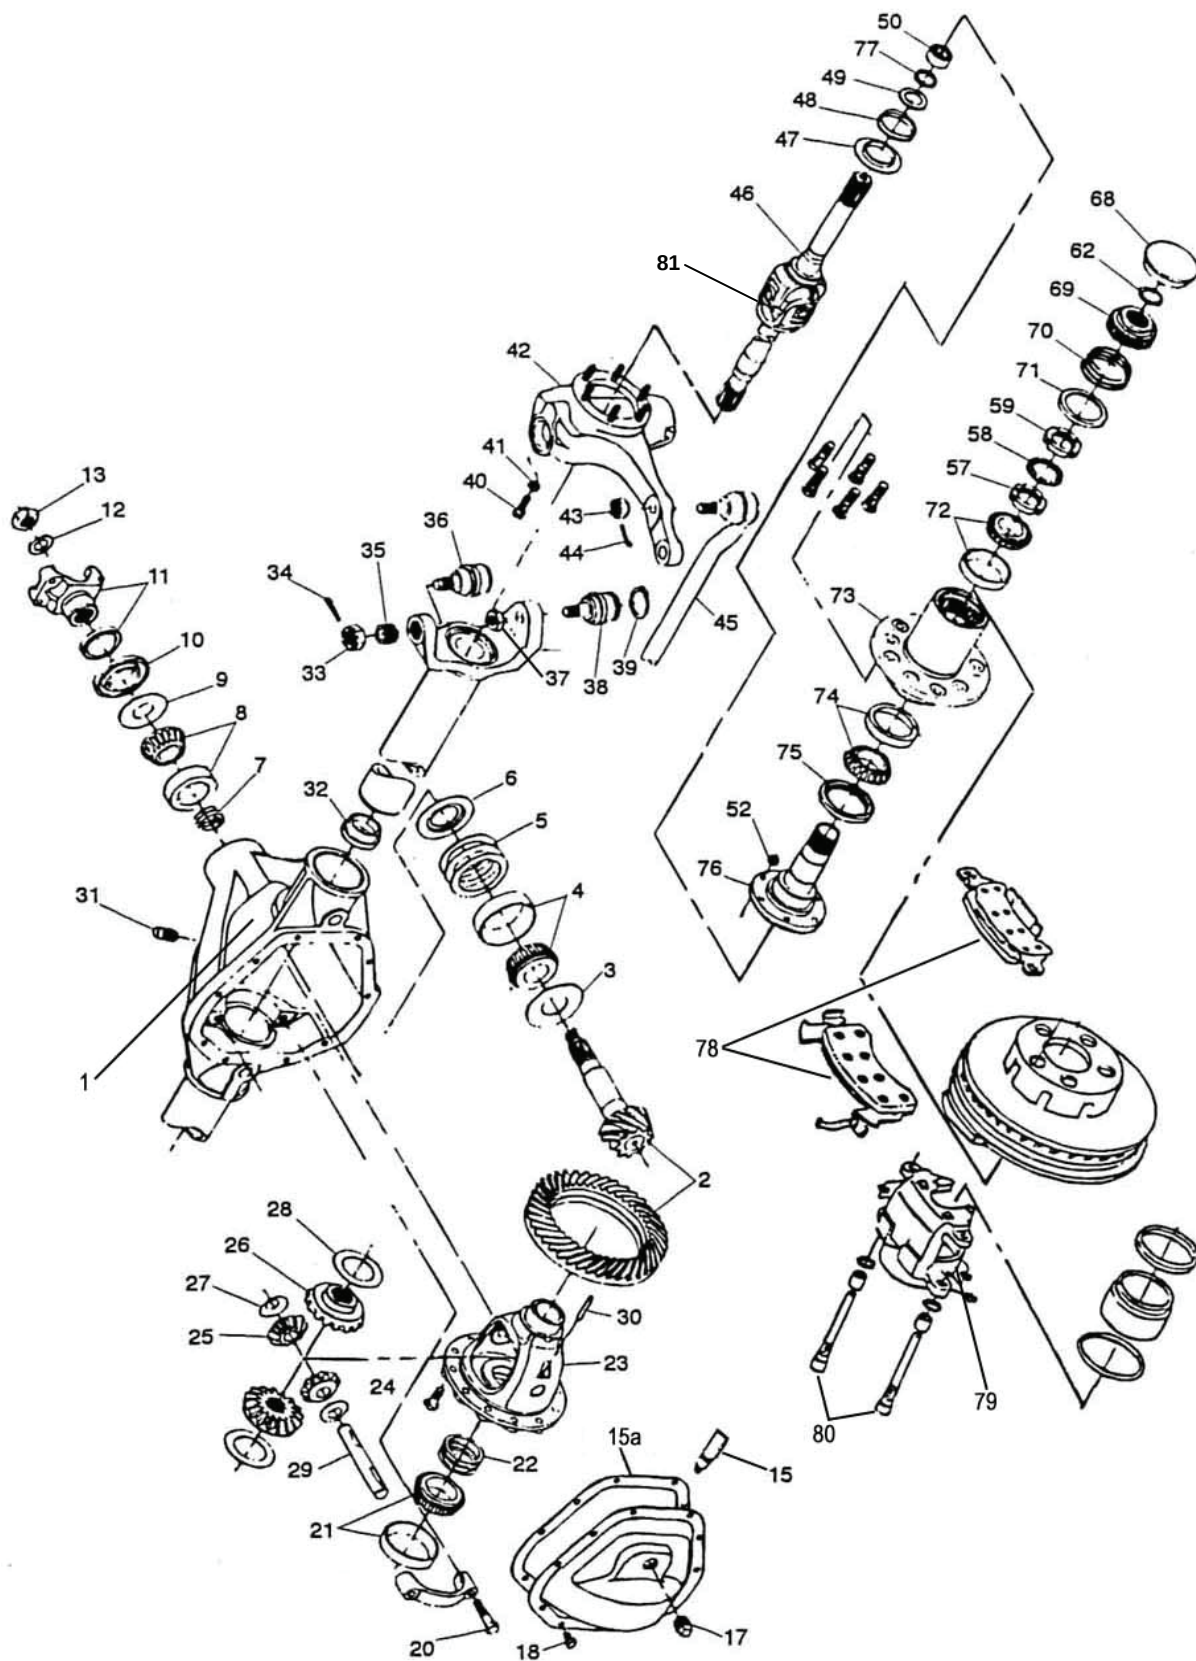


AXLES

AXLE ASSEMBLY BREAKDOWN—FRONT DRIVE (ALL WHEEL DRIVE)

Item	Part Number	Qty	Description
1	A-TT8-00371	1	COMPLETE AXLE ASSEMBLY
2	22404X	1	GEAR & PINION ASSEMBLY
3	30764	1	SLINGER-PINION OIL INNER
4	706031X	KIT	INNER PINION BEARING
5	706617X	KIT	SHIM-PINION ADJ INC ITEMS 5,7,12,13,15,15A
6	30765	1	BAFFLE-PINION OIL
7	706617X	KIT	SEE ITEM 5
8	706030	KIT	OUTER PINION BEARING & RACE
9	13575	1	SLINGER-PINION OIL OUTER
10	39118	1	SEAL-OIL
11	345761X	1	END YOKE ASSEMBLY
12	30186	1	WASHER-PINION NUT
13	30185	1	NUT-PINION
15	82180	AR	RTV SEALANT
15a	34685	1	GASKET
17	36472	1	PLUG-COVER PLATE
18	34279	10	SCREW-FLANGE HD
19	N/A	2	CAP DIFFERENTIAL BEARING
20	48632-1	2	1/2-13 X 2.25 GRD8 HEX BOLT
21	706032X	KIT	DIFFERENTIAL BEARING & RACE
22	706618X	KIT	DIFFERENTIAL SHIM INCLUDES ITEM 22,15
23	25806X	1	CASE-DIFFERENTIAL ASSY
	32684	1	CASE-DIFFERENTIAL
24	41221	10	BOLT-DRIVE GEAR
25	17717	2	PINION-DIFFERENTIAL
26	706027X	2	GEAR-DIFF KIT INC ITEMS 15A & 24-29
27	13338-3	2	THRUST WASHER DIFFERENTIAL PINION
28	32121	2	THRUST WASHER DIFFERENTIAL GEAR
29	39194	1	SHAFT-DIFFERENTIAL
30	13449	1	PIN-ROLL
31	16979	1	VENT
32	36352	2	SEAL & GUIDE-SHAFT
33	44101	2	NUT-SLOTTED
34	500024-8	2	PIN-COTTER
35	35417	2	RING-ADJUSTING
36	40112	1	SOCKET ASSEMBLY-UPPER
37	35566	2	NUT-LOCK
38	40113	1	SOCKET ASSEMBLY-LOWER
39	35928	1	RING-SNAP
40	310026-2	2	BOLT-STOP
41	500381-3	2	NUT-LOCK

AXLES

AXLE ASSEMBLY BREAKDOWN—FRONT DRIVE (ALL WHEEL DRIVE)

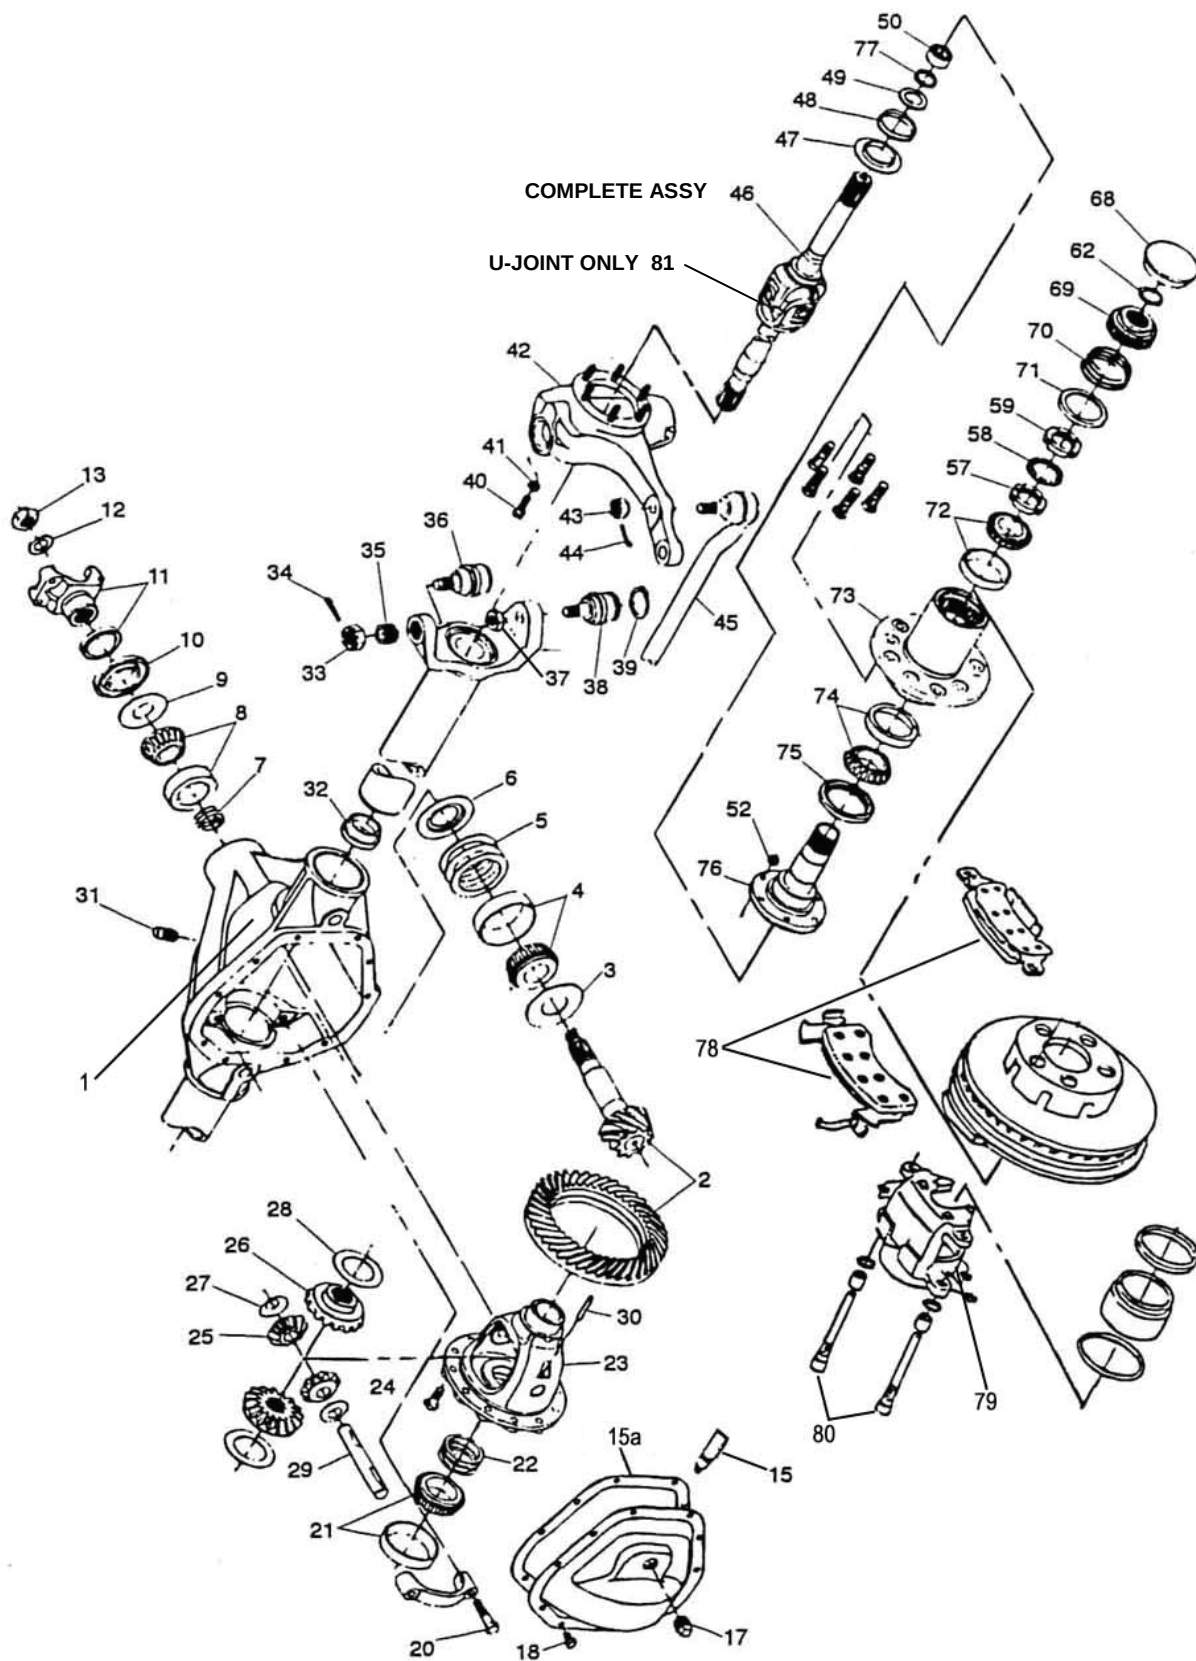


AXLES

AXLE ASSEMBLY BREAKDOWN—FRONT DRIVE (ALL WHEEL DRIVE)

Item	Part Number	Qty	Description
42	706653X	KIT	STEERING KNUCKLE L/H INCLUDES ITEMS 33-39 & 42
42	706652X	KIT	STEERING KNUCKLE R/H INCLUDES ITEMS 33-39 & 42
43	44101	2	NUT-SLOTTED
44	500024-4	2	PIN-COTTER
45	044TR115-16X	1	TIE ROD ASSEMBLY
46	660091-18	2	SHAFT & JOINT ASSY INC ITEM 47
47	36364	1	SLINGER
48	38128	2	SEAL-OIL
49	38106	2	SPACER
50	550759	2	BEARING-NEEDLE
52	35704	12	NUT-LOCK
57	21588X	2	SPINDLE NUT
58	36569	2	LOCK-RETAINING NUT
59	31139	2	NUT-SPINDLE
62	31624	2	RING-SNAP
68	31552	2	CAP-HUB
69	42667	2	GEAR-AXLE DRIVE
70	35218	2	SPRING PRESSURE
71	32589	2	PLATE-SPRING RETAINING
72	706111X	KIT	OUTER WHEEL BEARING & RACE
73	044HU103	2	HUB & ROTOR ASSEMBLY
74	706690-X	KIT	INNER WHEEL BEARING & RACE
75	36366	2	AXLE SEAL
76	706570	KIT	SPINDLE ASSEMBLY INCLUDES ITEMS 48,49,5,77 & 76
	7065227X	KIT	SPINDLE SEAL & BEARING INCLUDES ITEMS 50,77,48 & 49
77	36361	1	SEAL-OIL
78	RD52	1 SET	BRAKE PAD SET
79	18009659	1	CALIPER WITHOUT PADS -R/H
79	18009658	1	CALIPER WITHOUT PADS-L/H
79	044WC101-1	1	CALIPER ASSY WITH PADS L/H
79	044WC101-2	1	CALIPER ASSY WITH PADS R/H

AXLES

AXLE ASSEMBLY BREAKDOWN—REAR DRIVE

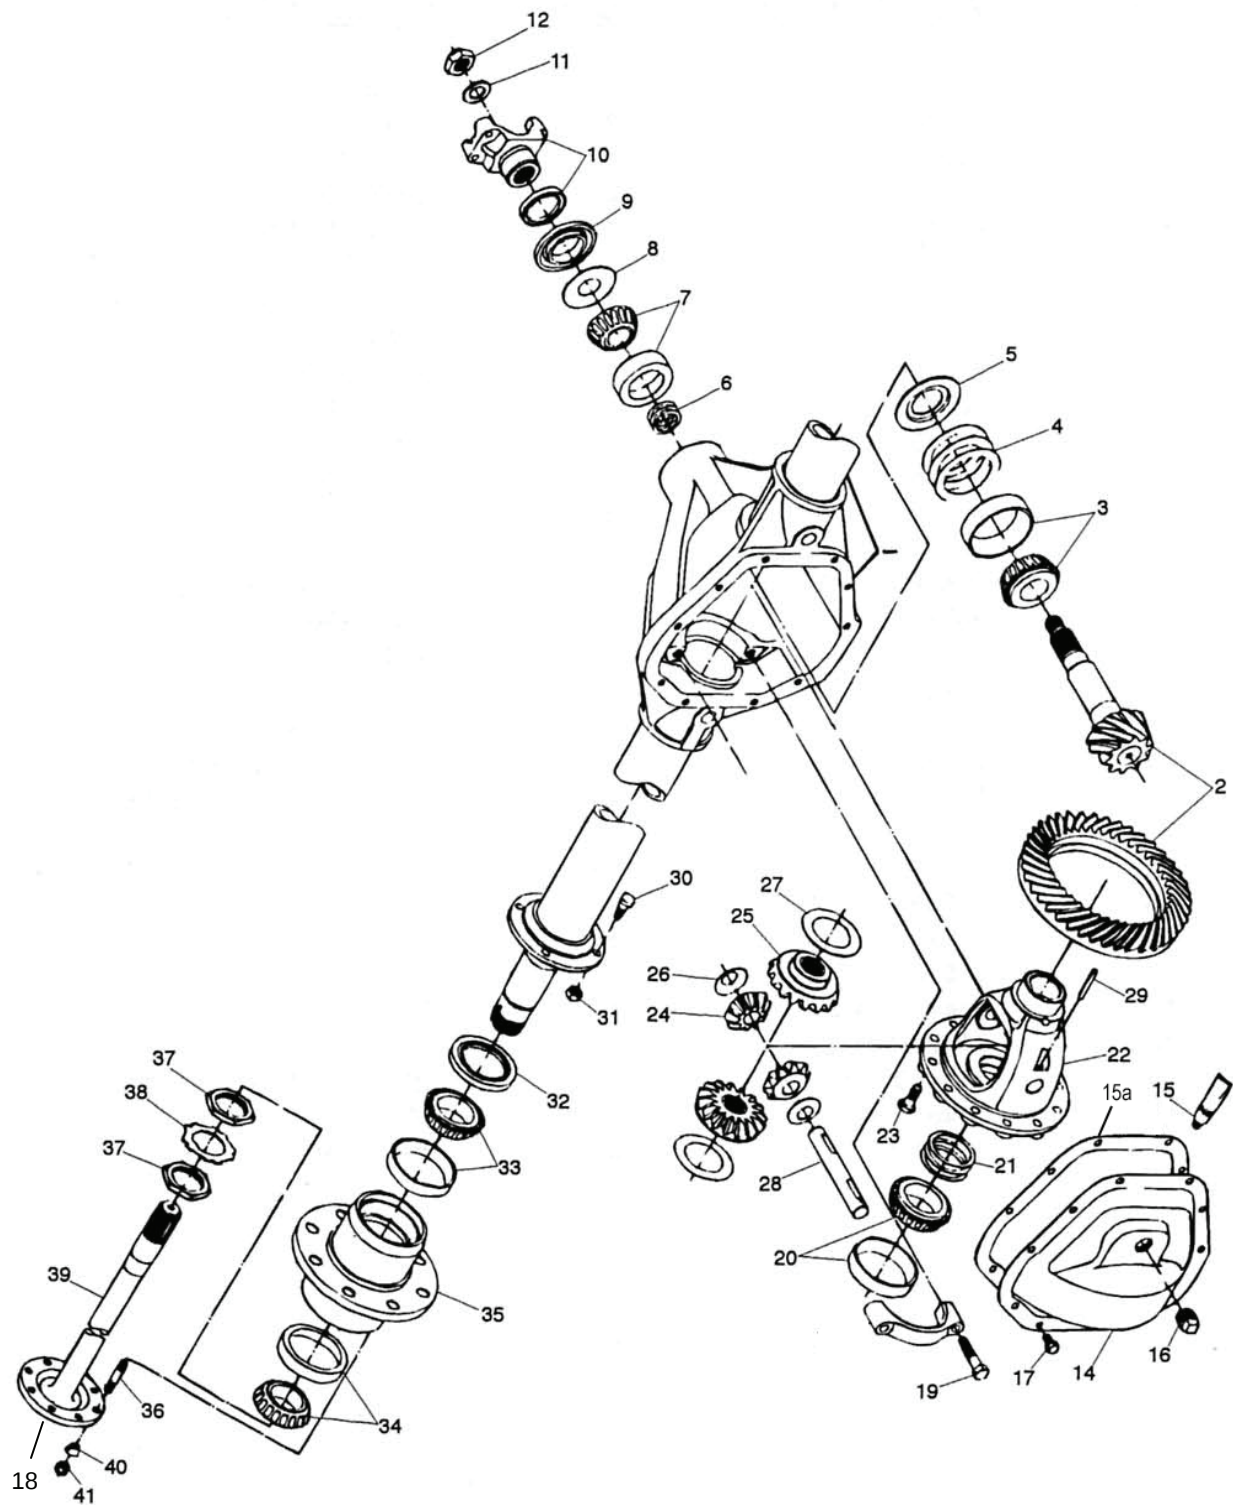


AXLES

AXLE ASSEMBLY BREAKDOWN – REAR DRIVE

Item	Part Number	Qty	Description
	A-TT4-00361	1	COMPLETE AXLE ASSEMBLY
2	706033-10X	KIT	DRIVE GEAR & PINION
3	706046X	KIT	INNER PINION BEARING & RACE
4	706672X	KIT	SHIM-DRIVE PINION ADJUSTING
5	30765	1	BAFFLE-PINION BEARING
6	706672X	KIT	SHIM-PINION BEARING ADJUSTING
7	706045X	KIT	OUTER PINION BEARING & RACE
8	30273	1	SLINGER-PINION BEARING
9	38427	1	SEAL-PINION
10	345731X	1	END YOKE ASSEMBLY
11	30275	1	WASHER-PINION NUT
12	30271	1	NUT-PINION
14	73597	1	COVER ASSEMBLY
15	82180		RTV SEALANT
15a	39697	1	COVER GASKET
16	98785	1	PLUG-PIPE SLOTTED
17	34822	10	SCREW-FLANGE HD
18	39697	1	AXLE SHAFT GASKET
19	48632-1	2	1/2-13 x 2.25 GRD8 BOLT BEARING CAP
20	706047X	KIT	BEARING & RACE
21	706673X	KIT	SHIM-DIFFERENTIAL BEARING
22	706669X	KIT	CASE-DIFFERENTIAL
23	30266	10	BOLT-DRIVE GEAR
24	SEE KIT	KIT	PINION-DIFFERENTIAL
25	SEE KIT	KIT	GEAR-DIFFERENTIAL
26	SEE KIT	KIT	THRUST WASHER-PINION
27	SEE KIT	KIT	THRUST WASHER-GEAR
28	SEE KIT	KIT	SHAFT-DIFFERENTIAL
29	500598-21	1	LOCK-DIFFERENTIAL
30	36253	8	BOLT-BRAKE MANUFACTURING
31	36805	8	NUT-BRAKE MANUFACTURING
32	36240	2	SEAL-OIL
33	706071X	KIT	INNER WHEEL BEARING
34	706072X	KIT	OUTER WHEEL BEARING
35	36241	2	HUB & DRUM ASSEMBLY
36	36847	8	STUD-HUB

AXLES

AXLE ASSEMBLY BREAKDOWN—REAR DRIVE

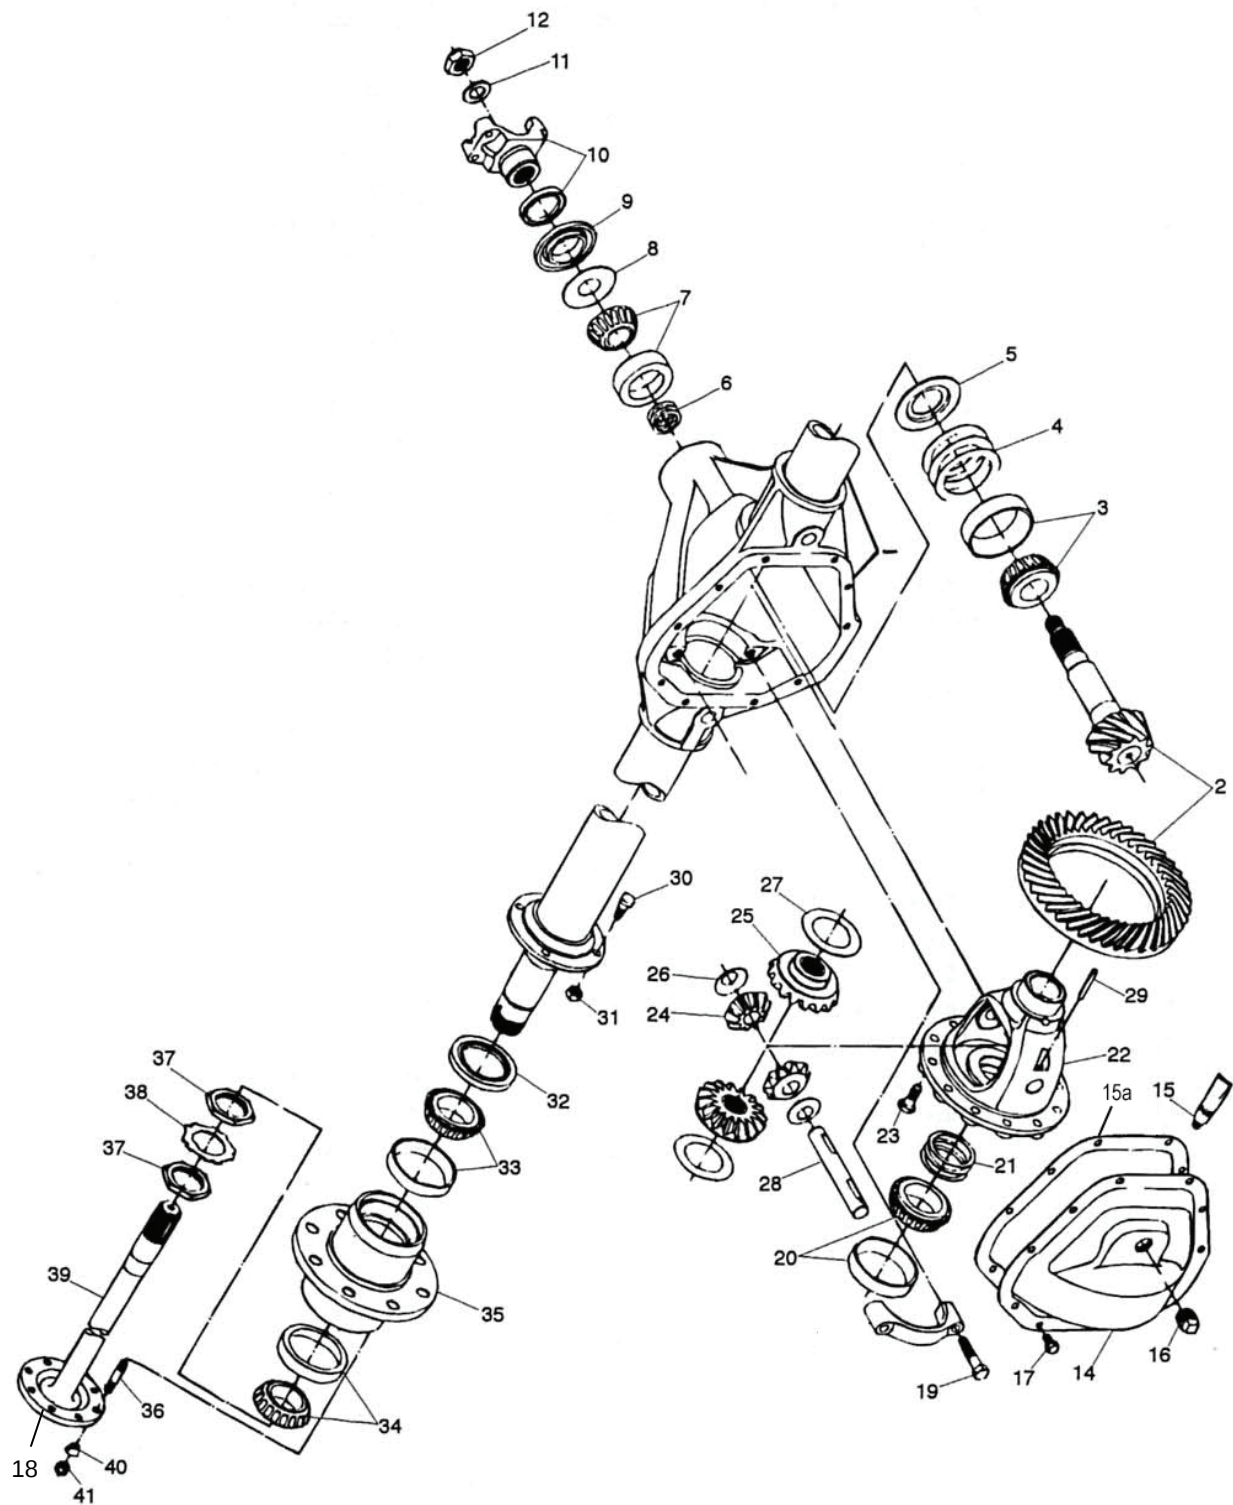


AXLES

AXLE ASSEMBLY BREAKDOWN—REAR DRIVE CONT

Item	Part Number	Qty	Description
37	30636	4	NUT-SPINDLE
38	30637	2	LOCK WASHER WHEEL BEARING
39	34887-7	1	SHAFT-AXLE FLANGE LONG
	34887-10	1	SHAFT-AXLE FLANGE SHORT
40	31534	16	ADAPTER-STUD
41	36805	24	NUT-LOCK
	16979	1	VENT
KIT	706671X	1	DIFF PARTS (STD) INC 15, 21-23, 29
KIT	707084X	1	DIFF PARTS (LTD SLIP) INC 15, 21, 23, 24, 26, 28, 29, 43-48

BRAKES

PARKING BRAKE ACTUATOR ASSEMBLY

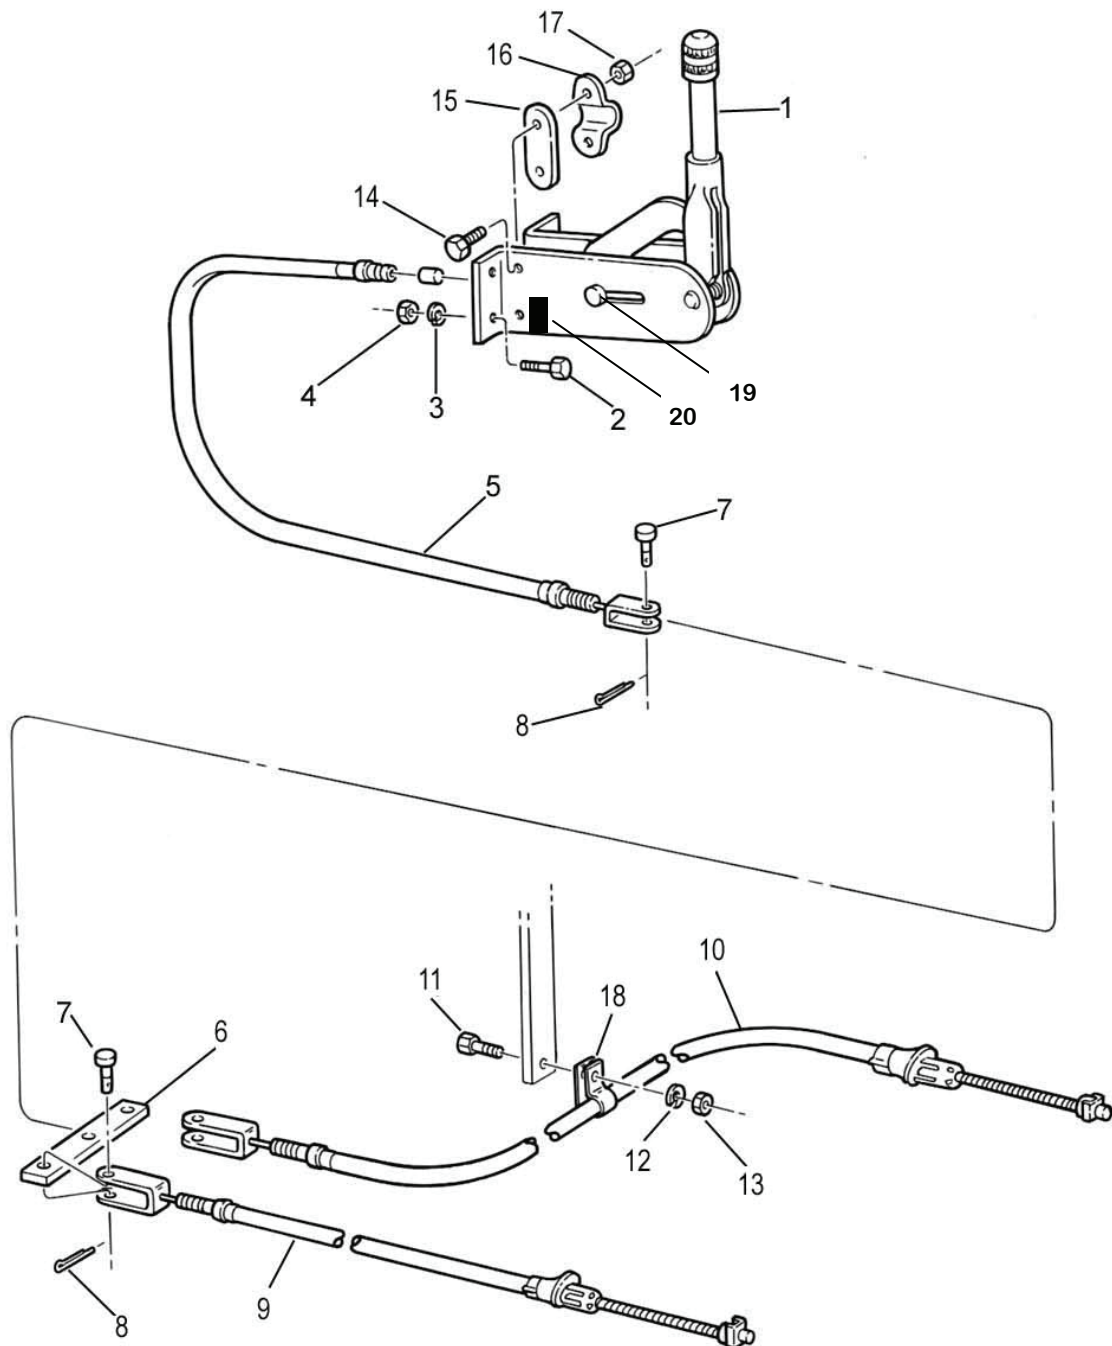


BRAKES

PARKING BRAKE ACTUATOR ASSEMBLY

Item	Part Number	Qty	Description
1	A-TT4-00141	1	HANDBRAKE
2	NPN	4	SCREW-HEX CAP-5/16-18 X 1
3	NPN	4	WASHER-FLAT-5/16
4	NPN	4	NUT-LOCK-5/16-18
5	B-TT4-00145	1	CABLE PRIMARY
6	A-TT4-00146	1	BAR EQUALIZER
7	A-TT4-00193	3	CLEVIS PIN
8	NPN	3	COTTER PIN
9	A-TT4-00151	1	PARKING BRAKE CABLE LEFT REAR
10	A-TT4-00150	1	PARKING BRAKE CABLE RIGHT REAR
11	NPN	1	SCREW-HEX CAP-14-20 X 1
12	NPN	1	WASHER-FLAT-1/4
13	NPN	1	NUT-LOCK-1/4-20
14	NPN	1	SCREW-HEX CAP-1/4-28 X 1
15	NPN	1	CABLE CLAMP PLATE
16	NPN	1	CABLE CLAMP HANDLE
17	NPN	2	NUT-LOCK-1/4-28
18	NPN	2	CABLE CLAMP
19	81008429	1	CONTACT PIN
20	82050000	1	PROXIMITY SENSOR
21	82066700	1	MOUNTING SCREW (NOT SHOWN)
22	AE-OPT-0069	1	HANDBRAKE "ON" WARNING (OPTIONAL)

BRAKES

DRUM BRAKE ASSEMBLY—REAR

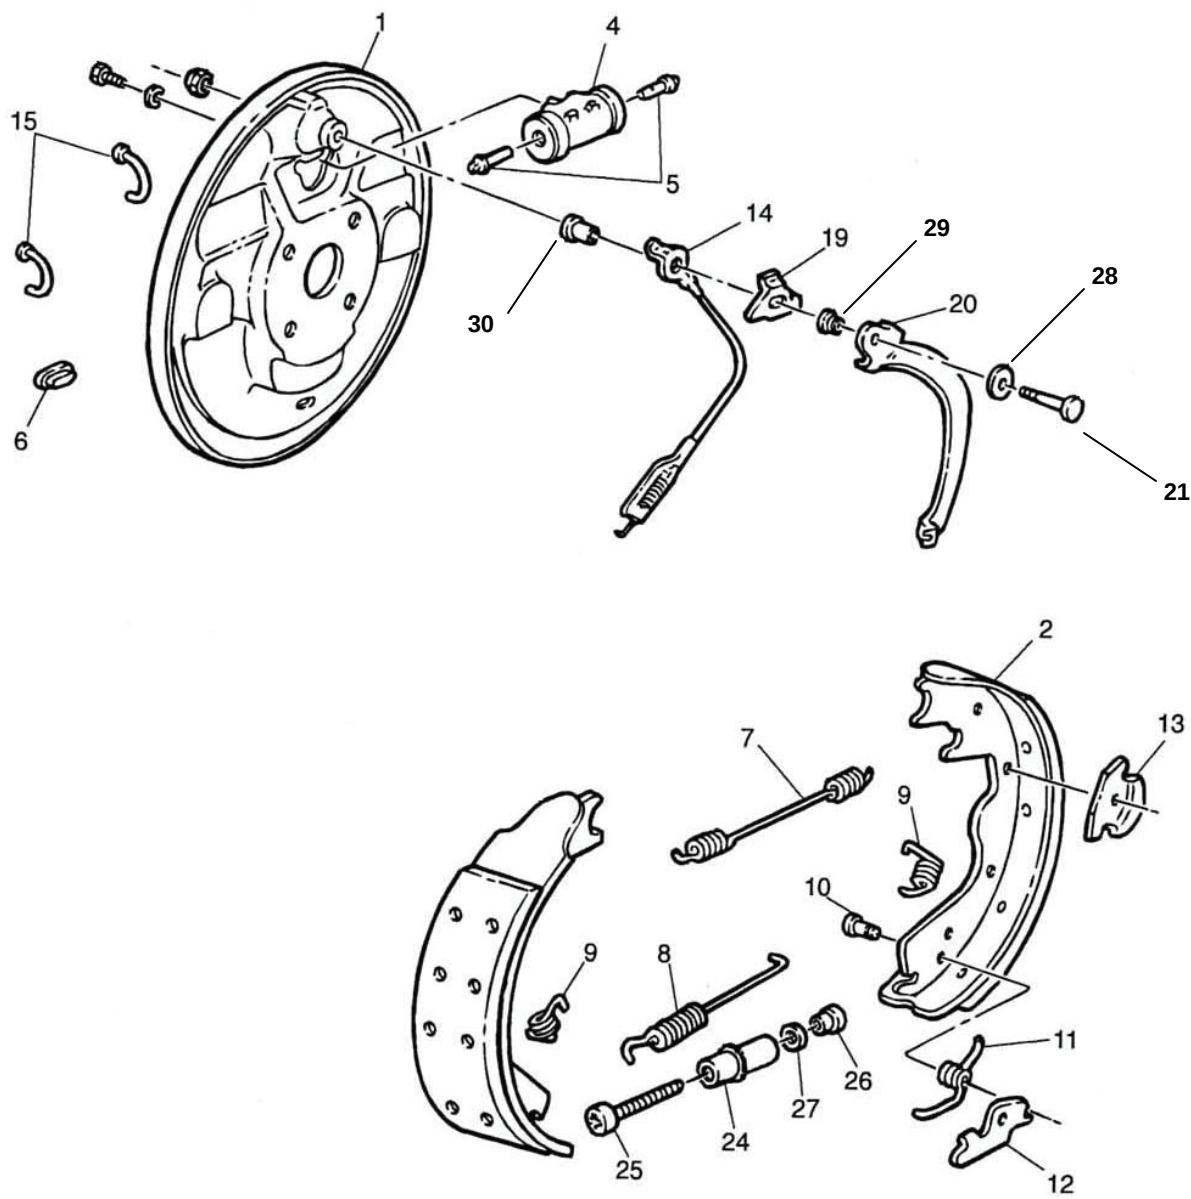

BRAKES


DRUM BRAKE ASSEMBLY—REAR

Item	Part Number	Qty	Description
	060WD101	1	BRAKE ASSEMBLY L/H
	060WD100	1	BRAKE ASSEMBLY R/H
1	4313905	1	BACKING PLATE L/H
1	4313904	1	BACKING PLATE R/H
2	FR357	1 SET	SHOE & LINING SET
4	2235585	1	CYLINDER ASSEMBLY L/H
4	2235586	1	CYLINDER ASSEMBLY R/H
5	315834	2	WHEEL CYLINDERS CONNECTING LINK
6	*SEE KIT BELOW	1	COVER
7	*SEE KIT BELOW	1	SPRING-UPPER
8	*SEE KIT BELOW	1	SPRING-LOWER
9	*SEE KIT BELOW	2	SPRING-HOLD DOWN
10	*SEE KIT BELOW	1	PIN
11	*SEE KIT BELOW	1	SPRING TENSION
12	*SEE KIT BELOW	1	BRAKE ADJUSTING LINK
13	*SEE KIT BELOW	1	CABLE GUIDE
14	*SEE KIT BELOW	1	CABLE ASSEMBLY
15	*SEE KIT BELOW	2	SPRING-HOLD DOWN
19	4383299	1	PARKING BRAKE CAM L/H
19	4383298	1	PARKING BRAKE CAM R/H
20	4383264	1	PARKING BRAKE LEVER (LEFT)
20	4383265	1	PARKING BRAKE LEVER (RIGHT)
21	4419698	1	BRAKE ANCHOR BOLT
24	*SEE KIT BELOW	1	BRAKE ADJUSTING SOCKET L/H
25	*SEE KIT BELOW	1	BRAKE ADJUSTING SCREW L/H
26	*SEE KIT BELOW	1	BRAKE ADJUSTING SOCKET
27	*SEE KIT BELOW	1	WASHER FLAT
28	3492670	1	WASHER
29	3492656	1	SPRING
30	4383600	1	SPACER
KIT	H2588	LEFT	BRAKE ADJUSTING KIT INCLUDES ITEMS 6,10-14,20,24-27
KIT	H2589	RIGHT	BRAKE ADJUSTING KIT INCLUDES ITEMS 6,10-14,20,24-27
KIT	H7146	LEFT OR RIGHT	BRAKE SPRING KIT INCLUDES ITEMS 7-9 & 15

**KIT PARTS NOT SOLD SEPERATELY

BRAKES

BRAKE ACTUATOR ASSEMBLY

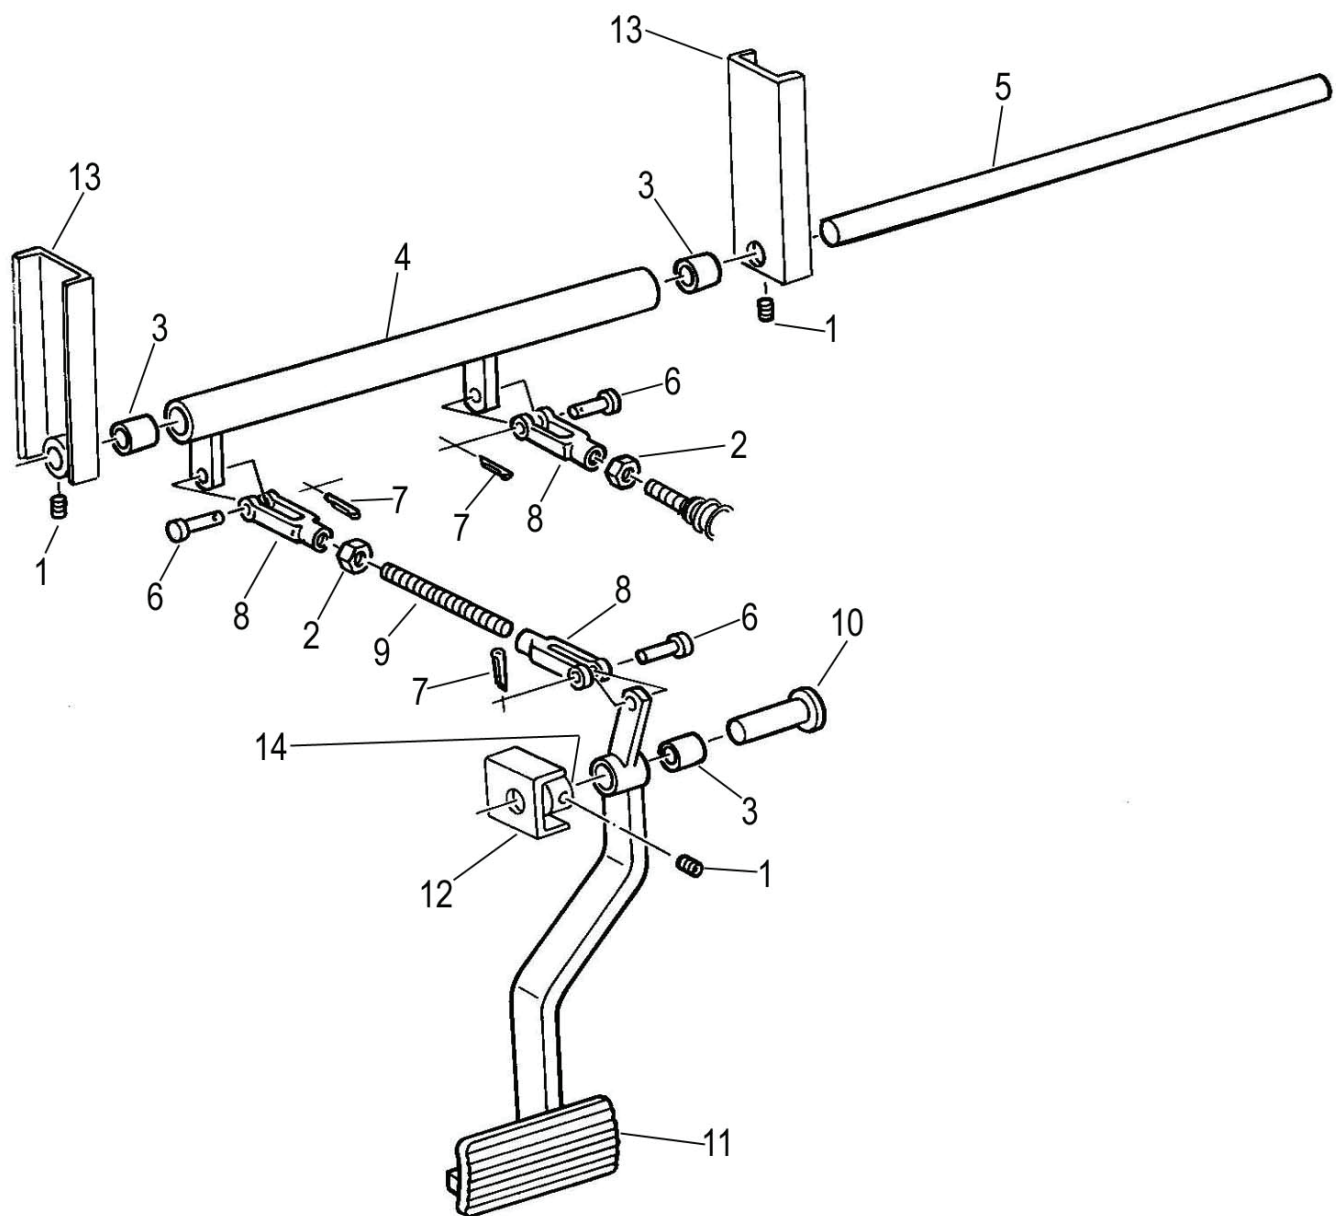

BRAKES


BRAKE ACTUATOR ASSEMBLY

Item	Part Number	Qty	Description
1	NPN	4	¼-20 SET SCREW
2	NPN	2	½-20 NUT
3	C-TT4-10188	3	THOMSON NYLINER BEARING
4	C-TT4-10186	1	BELL CRANK
5	C-TT4-10187	1	BELL CRANK PIVOT SHAFT
6	A-TT4-00193	3	CLEVIS PIN
7	NPN	3	COTTER PIN
8	A-TT4-10192	3	CLEVIS
9	NPN	1	½-20 X 12 ADJUSTING ROD
10	C-TT4-10182	1	BRAKE PEDAL PIVOT SHAFT
11	C-TT4-10181	1	BRAKE PEDAL
12	NPN	1	BRAKE PEDAL PIVOT
13	NPN	2	BELL CRANK STANDOFF
14	A-TT2-0057*	2	SHAFT COLLAR 3/4

* Welded to truck

BRAKES

BRAKE SYSTEM—HYDRAULIC

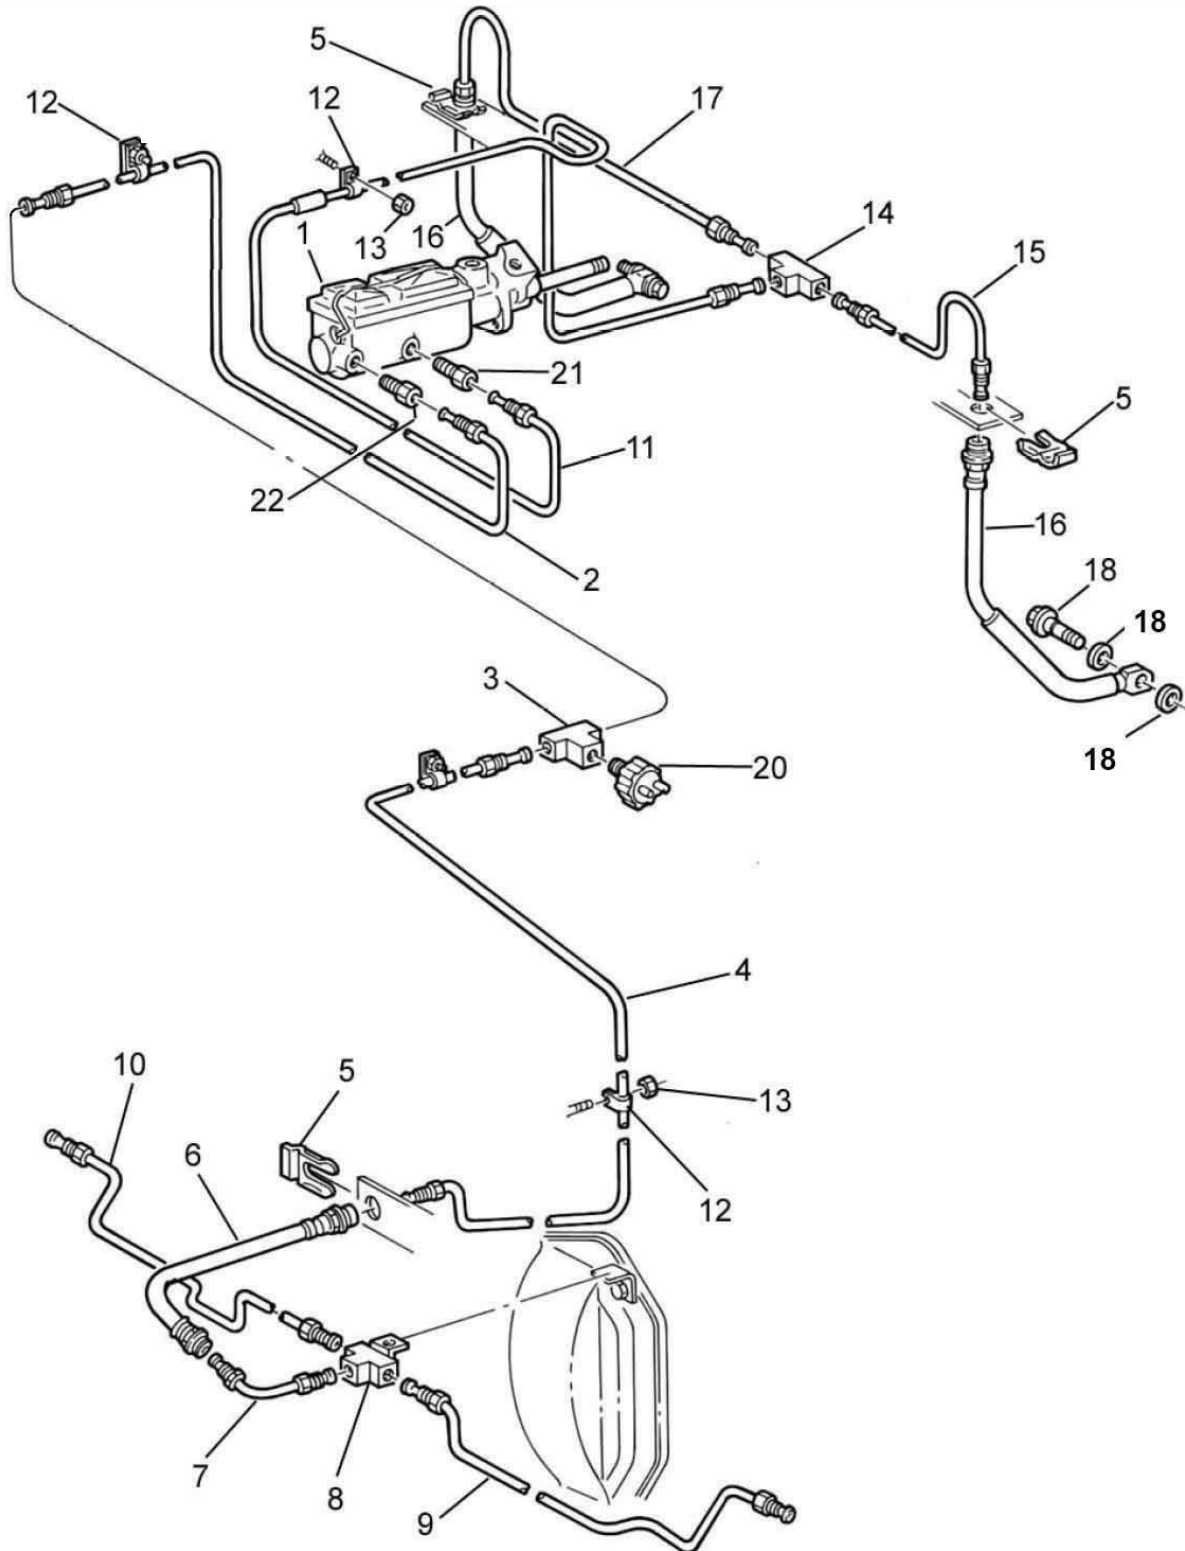


BRAKES

BRAKE SYSYEM – HYDRAULIC

Item	Part Number	Qty	Description
1	A-TT4-00161-1	1	MASTER CYLINDER
2	A-TT4-00162	1	BRAKE LINE MASTER CYLINDER
3	A-TT4-00163	1	BRAKE LIGHT SWITCH TEE
4	A-TT4Y-00164	1	BRAKE LINE REAR
5	A-TT4-00165	3	BRAKE HOSE CLAMP
6	A-TT4-00166	1	BRAKE HOSE REAR
7	A-TT4-00167	1	BRAKE LINE
8	A-TT4-00168	1	CROSS TEE
9	A-TT4-00169	1	BRAKE LINE REAR RT
10	A-TT4-00170	1	BRAKE LINE LEFT REAR LT
11	A-TT4-00171	1	BRAKE LINE REAR
12	NPN	4	LINE CLAMP
13	NPN	4	NUT-10-32
14	A-TT4-00174	1	CROSS TEE
15	A-TT4-00175	1	BRAKE LINE FRONT RIGHT
16	A-TT4-00176-1	2	CALIPER BRAKE LINE
17	A-TT4-00177	1	BRAKE LINE FRONT LEFT
18	A-TT4-00178	2	BANJO BOLT & WASHER KIT
20	A-TT4-00173	1	BRAKE LIGHT SWITCH
21	A-TT5-00180	1	FITTING-MASTER CYLINDER ADAPTER
22	A-TT5-00181	1	FITTING-MASTER CYLINDER ADAPTER

HYDRAULIC ASSIST

HYDRAULIC ASSIST SYSTEM

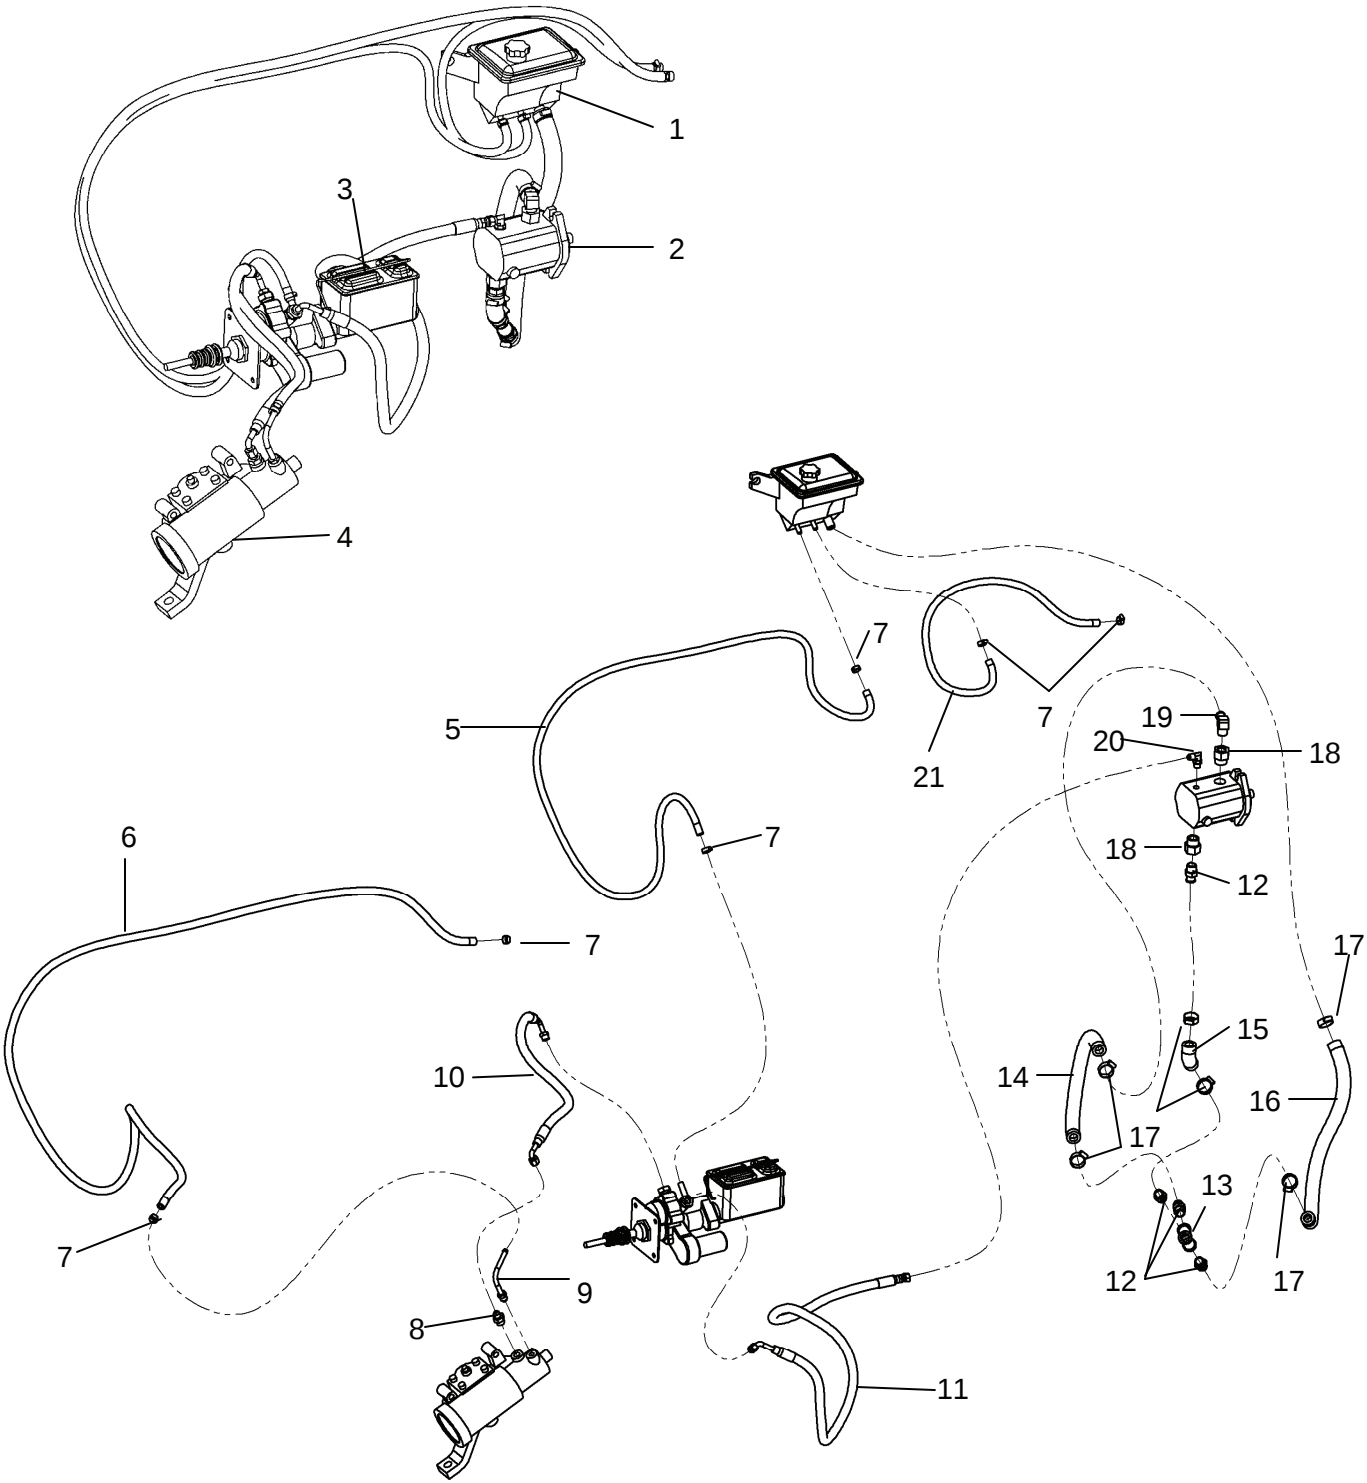

HYDRAULIC ASSIST


HYDRAULIC ASSIST SYSTEM

Item	Part Number	Qty	Description
1	F81Z3A697BB	1	RESERVOIR POWER STEERING FLUID
2	SP20PB11L145H9L	1	PRINCE PUMP
3	A-TT4-00161-1	1	MASTER CYLINDER
4	A-TT4-00381	1	STEERING GEAR BOX
5	H10106	1	3/8 HYDRAULIC HOSE WK PSI 350 100"
6	H10106	1	3/8 HYDRAULIC HOSE WK PSI 350 114"
7	NPN	6	# 4 HOSE CLAMP
8	A-TT4-00213	1	METRIC PORT ADAPTER
9	A-TT4-00204	1	RETURN LINE EXTENDER
10	06U-666-23-06U-B67	1	HYDRAULIC HOSE
11	06U-B67-56-06U-606	1	HYDRAULIC HOSE
12	A-TT4-00606-1A	4	FITTING MALE COUPLING
13	A-TT4-00606-1	1	Y FITTING BLACK IRON
14	12GMV MEGA VAC	1	3/4 SUCTION HOSE 19"
15	12GMV MEGA VAC	1	3/4 SUCTION HOSE 3"
16	12GMV MEGA VAC	1	3/4 SUCTION HOSE 21"
17	NPN	6	#12 HOSE CLAMPS
18	C3269X12X8	2	FEMALE PIPE ADAPTER
19	269HB-12-8	1	ELBOW 3/4 X 1/2
20	C5515X6	1	FITTING, ELBOW 3/8 X 3/8
21	H10106	1	3/8 HYDRAULIC HOSE WK PSI 350 46"

This page was intentionally left blank


HYDRAULIC ASSIST

HYDRAULIC ASSIST SYSTEM SCHEMATIC

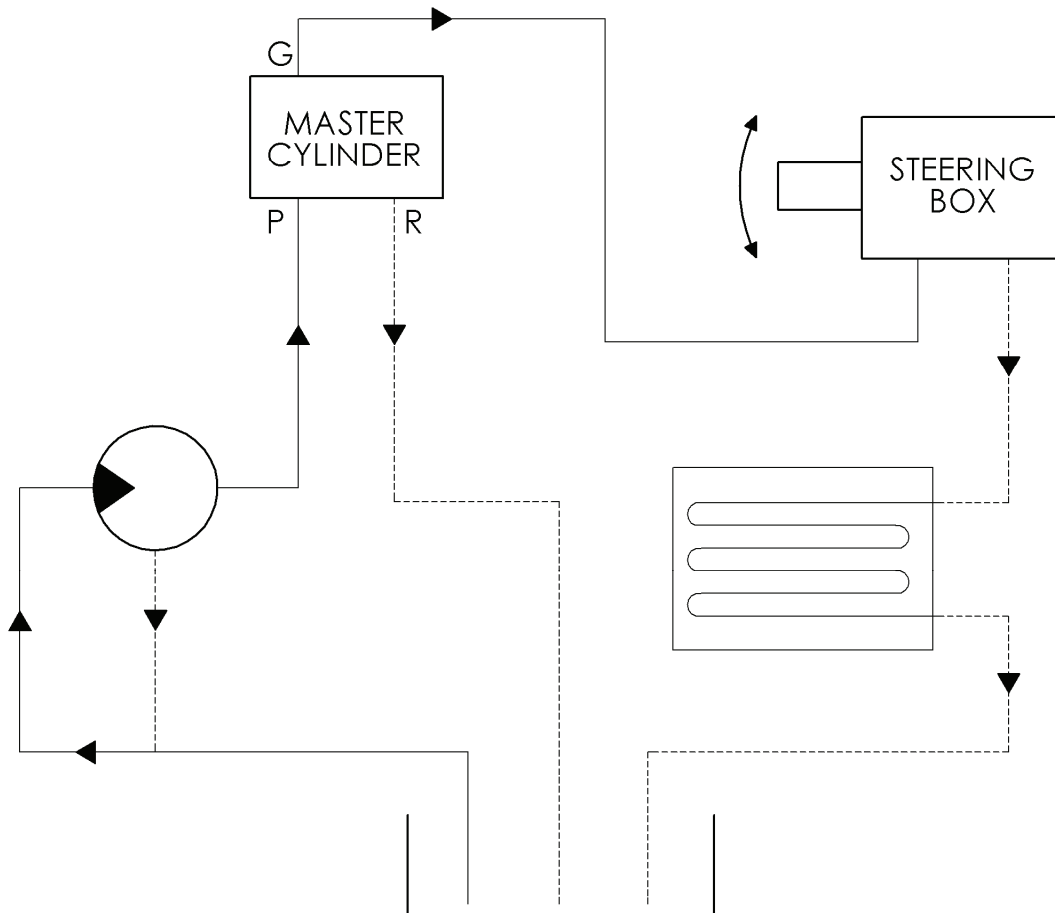

STEERING SYSTEM

STEERING SYSTEM BREAKDOWN

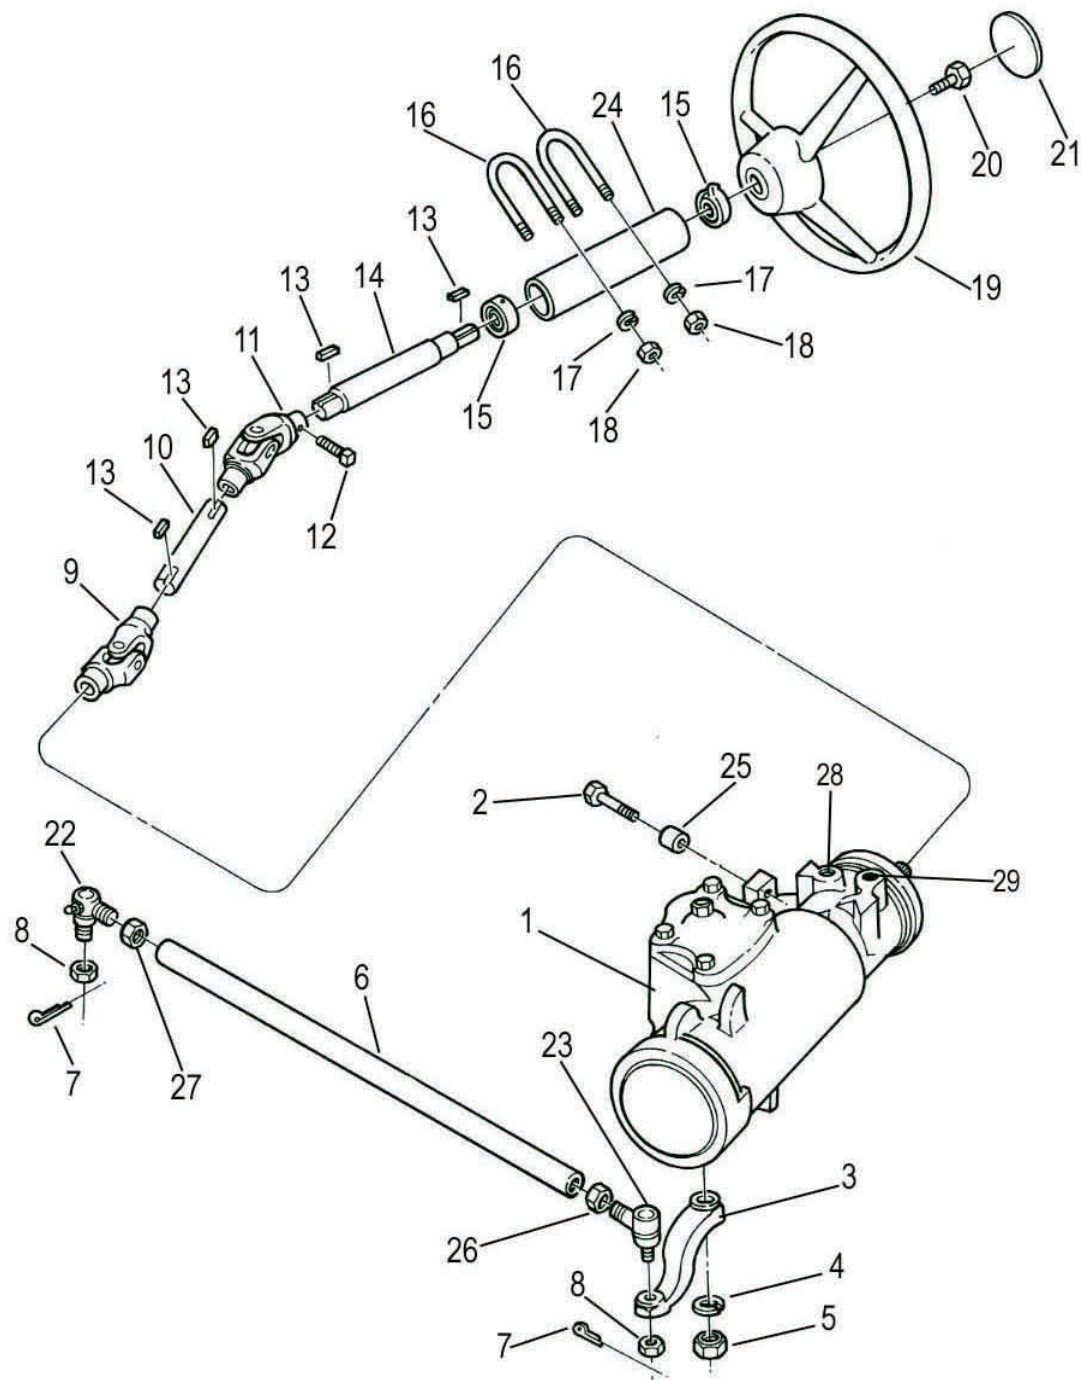

STEERING SYSTEM

STEERING SYSTEM BREAKDOWN

Item	Part Number	Qty	Description
1	A-TT4-00381	1	STEERING BOX
2	NPN	4	SCREW-HEX CAP-7/16-14 X 2 GR8
3	A-TT4-00382	1	PITTMAN ARM
4	NPN	1	WASHER-LOCK-3/4
5	NPN	1	NUT-LOW-3/4-10
6	A-TT4-00386	1	DRAG LINK
7	NPN*	2	COTTER PIN 1/8 X 1 ½
8	NPN*	2	NUT-TIE ROD ½-20
9	A-TT4-00389	1	UNIVERSAL COUPLER
10	A-TT4-00390	1	SHAFT COUPLING
11	A-TT4-00391	1	UNIVERSAL JOINT
12	NPN	2	LOCKING BOLT-DOG POINT 3/8-16
13	A-TT4-00393	4	GIBB KEY
14	A-TT4-00394-1	1	STEERING SHAFT
15	A-TT4-00395	2	BEARING
16	A-TT4-00396	2	2 1/8 U-BOLT 3/8HD
17	NPN**	4	WASHER-FLAT-5/16
18	NPN**	4	NUT-LOCK-5/16-18
19	A-TT4-00399-1	1	STEERING WHEEL
20	N/A	1	SCREW-HEX CAP-3/8-24 X 1
21	A-TT4-00401-1	1	COVER PLATE
22	A-TT4-00402	1	TIE ROD END L/H
23	A-TT4-00403	1	TIE ROD END R/H
24	A-TT4-00404	1	STEERING TUBE
25	A-TT4-00405	4	SPACERS
26	A-TT4-00406	1	3/4-16 NUT-JAM-L/H
27	A-TT4-00407	1	3/4-16 NUT-JAM-R/H
28	A-TT4-00212	1	HIGH PRESSURE EXTENDER
29	A-TT4-00204	1	RETURN LINE EXTENDER


*ITEMS 7 & 8 NOT SOLD SEPERATELY. THESE PARTS ARE INCLUDED IN ITEMS 22 & 23

**ITEM 17 & 18 ARE INCLUDED IN ITEM 16

FUEL SYSTEM

FUEL SYSTEM

OPTION FOR TIER II ONLY

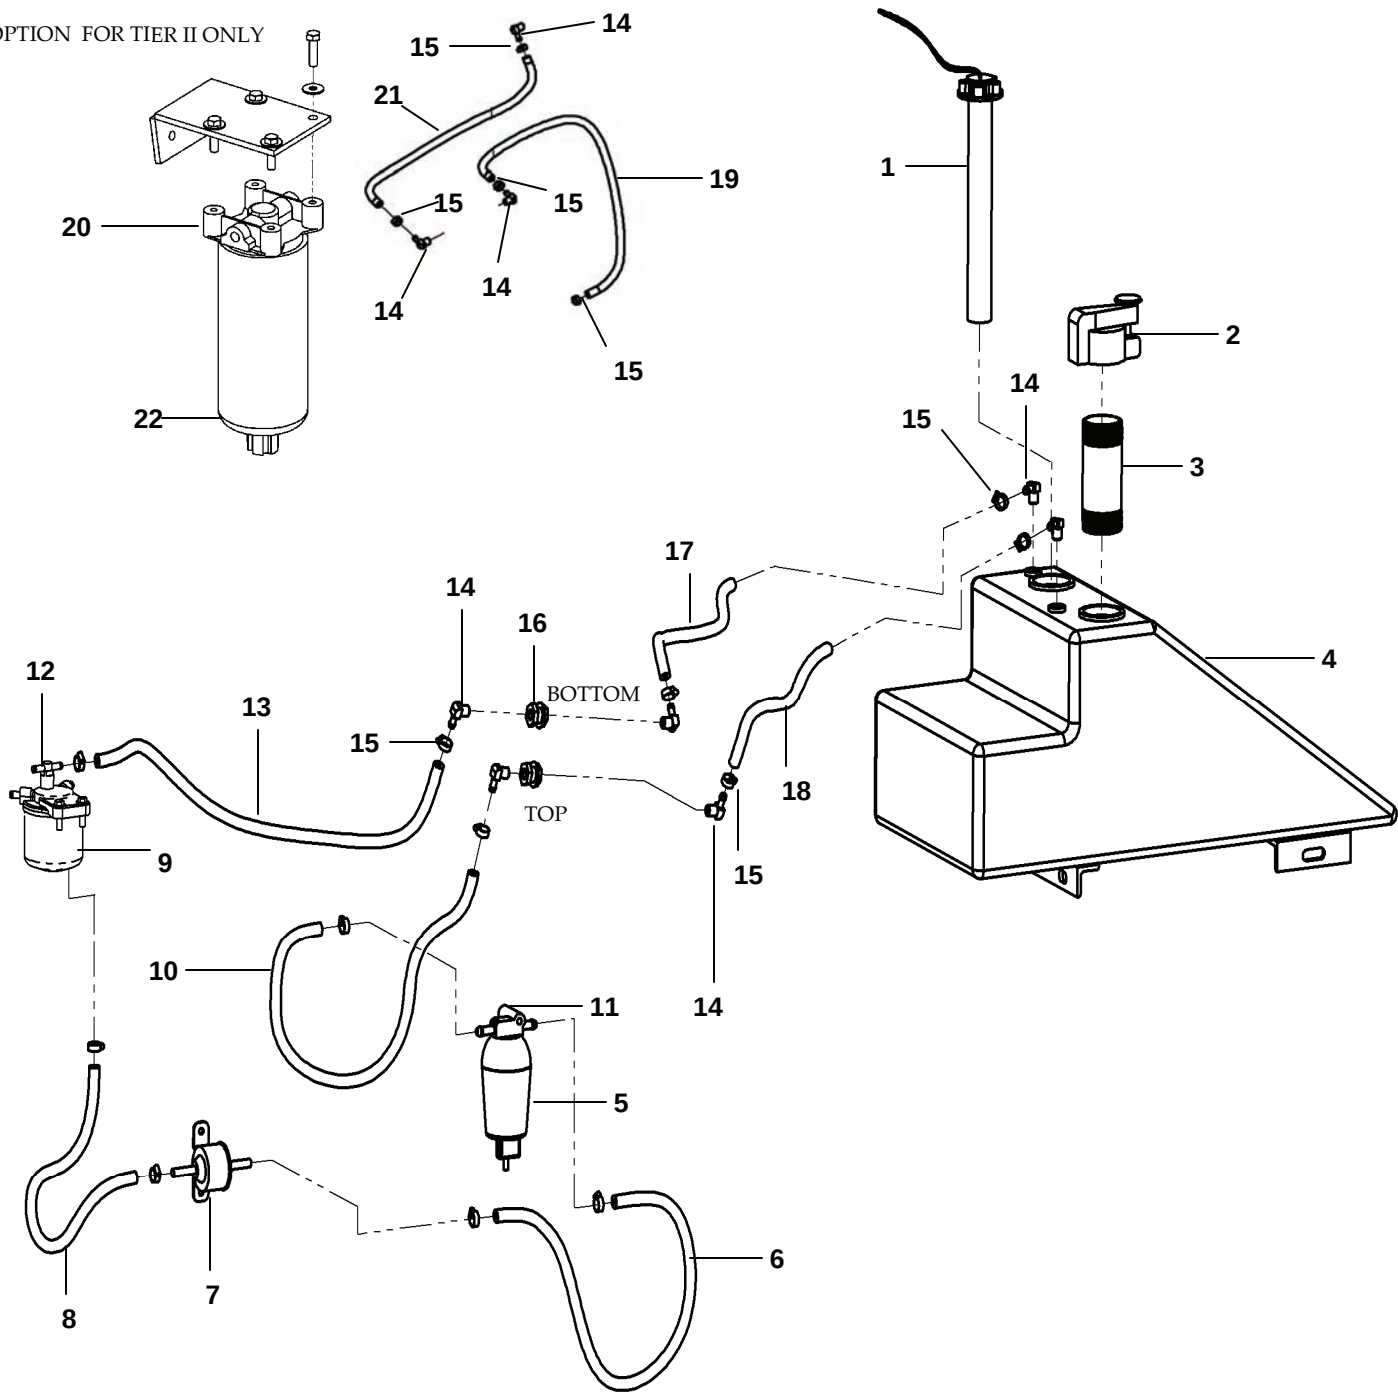


FUEL SYSTEM

FUEL SYSTEM

Item	Part Number	Qty	Description
1	A-TT4-00276-1	1	FUEL SENDING UNIT TIER 3
2	A-TT4-00271-1	1	FUEL CAP DIESEL
3	A-TT4-00272	1	NIPPLE 5 1/2 "
4	A-TT4-00273-1	1	FUEL TANK
5	129242-55730	1	FUEL WATER SEPERATOR ELEMENT
6	H05705	1	5/16 HOSE SAE30R7 WKPK 15"
7	119225-52102	1	FUEL TRANSFER PUMP
8	H05705	1	5/16 HOSE SAE30R7 WKPK 17 "
9	119802-55801	1	FUEL FILTER ELEMENT
10	H05705	1	5/16 HOSE SAE30R7 WKPK 21.5"
11	129424-55700	1	FUEL WATER SEPERATOR COMPLETE ASSY
12	129004-55610	1	BRACKET, FUEL FILTER
13	H05705	1	5/16 HOSE SAE30R7 WKPK 44 "
14	A-TT4-00274	6	90 DEGREE ELBOW FITTING
15	NPN	12	#4 HOSE CLAMP
16	A-TT4-00280	2	BULK HEAD FITTING
17	H05705	1	5/16 HOSE SAE30R7 WKPK 17"
18	H05705	1	5/16 HOSE SAE30R7 WKPK 14"
19	AE-OPT-0091	1	LUBRICITY FILTER ASSY COMP (OPTION)
20	H05705	1	5/16 HOSE SAE30R7 WKPK " (OPTION)
21	H05705	1	5/16 HOSE SAE30R7 WKPK " (OPTION)
22	FS20000	1	LUBRICITY FILTER ELEMENT

FUEL SYSTEM


FUEL INJECTION PUMP—YANMAR TIER II DIESEL

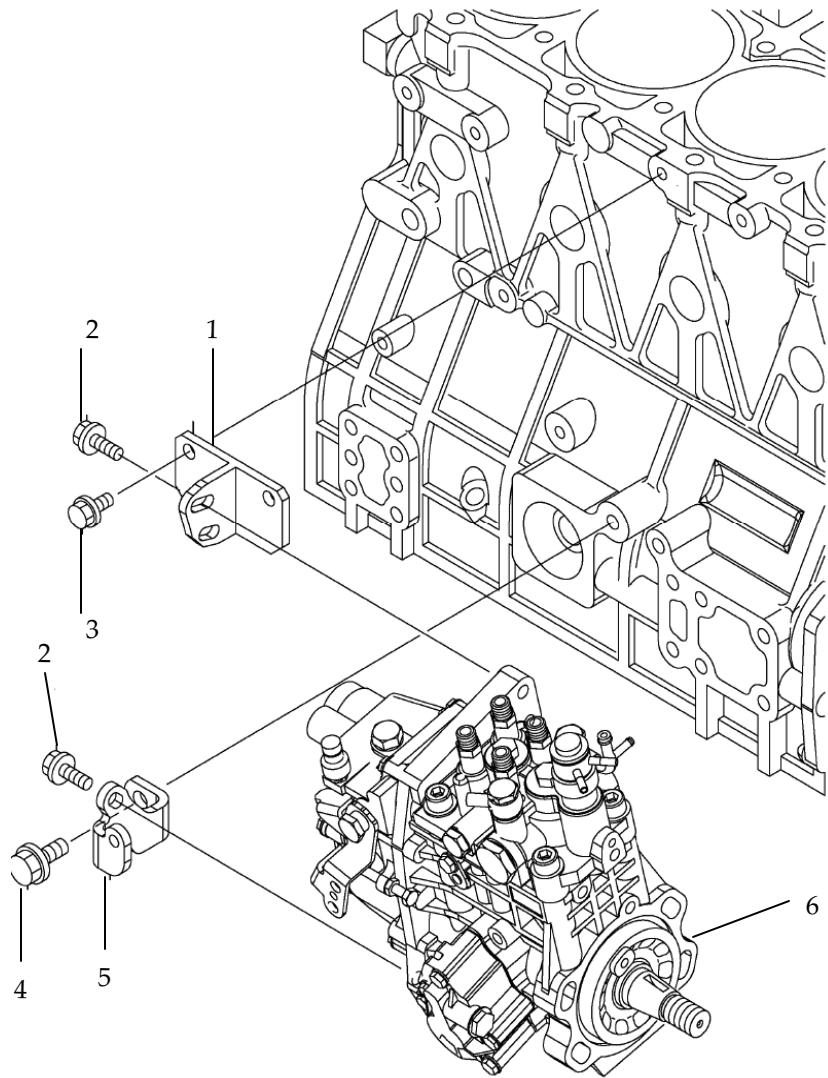

Item	Part Number	Qty	Description
1	129907-01950	1	MOUNTING BRACKET
2	26106-080222	3	BOLT, M8 X 22 PLATED
3	26106-080162	2	BOLT, M8 X 16 PLATED
4	26106-100202	1	BOLT, M10 X 20 PLATED
5	129907-01960	1	MOUNTING BRACKET
6	729907-51320	1	FUEL INJECTION PUMP

FUEL SYSTEM


FUEL INJECTION LINES AND NOZZLE—YANMAR TIER II DIESEL

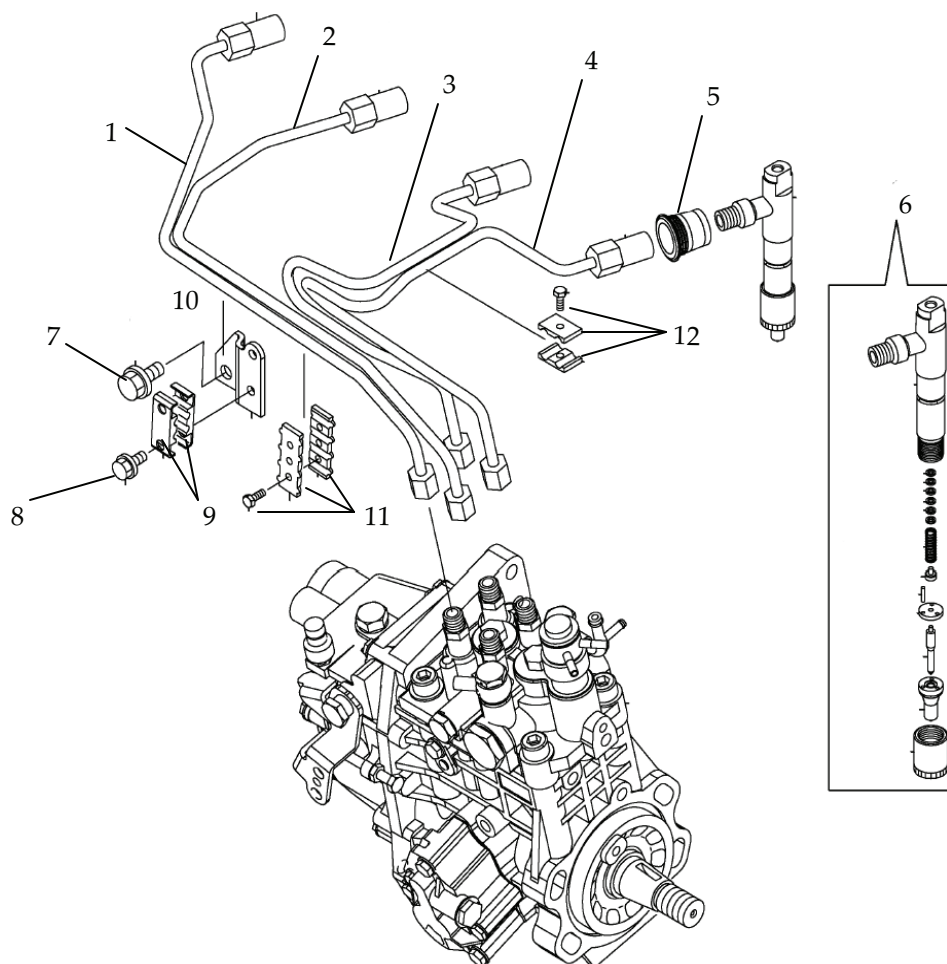

Item	Part Number	Qty	Description
1	129907-59810	1	PIPE ASSEMBLY FUEL INJECTION
2	129907-59820	1	PIPE ASSEMBLY FUEL INJECTION
3	122907-59830	1	PIPE ASSEMBLY FUEL INJECTION
4	129907-59840	1	PIPE ASSEMBLY FUEL INJECTION
5	123907-11601	4	PIPE SEAL
6	129937-53000	4	FUEL INJECTOR
7	26106-080182	1	BOLT, M8 X 18 PLATED
8	26106-060162	1	BOLT, M6 X 16 PLATED
9	122780-59100	2	RETAINER
10	129907-59710	1	BRACKET
11	129550-59120	1	RETAINER
12	119305-59120	1	RETAINER

FUEL SYSTEM


FUEL INJECTION PUMP—YANMAR TIER III DIESEL

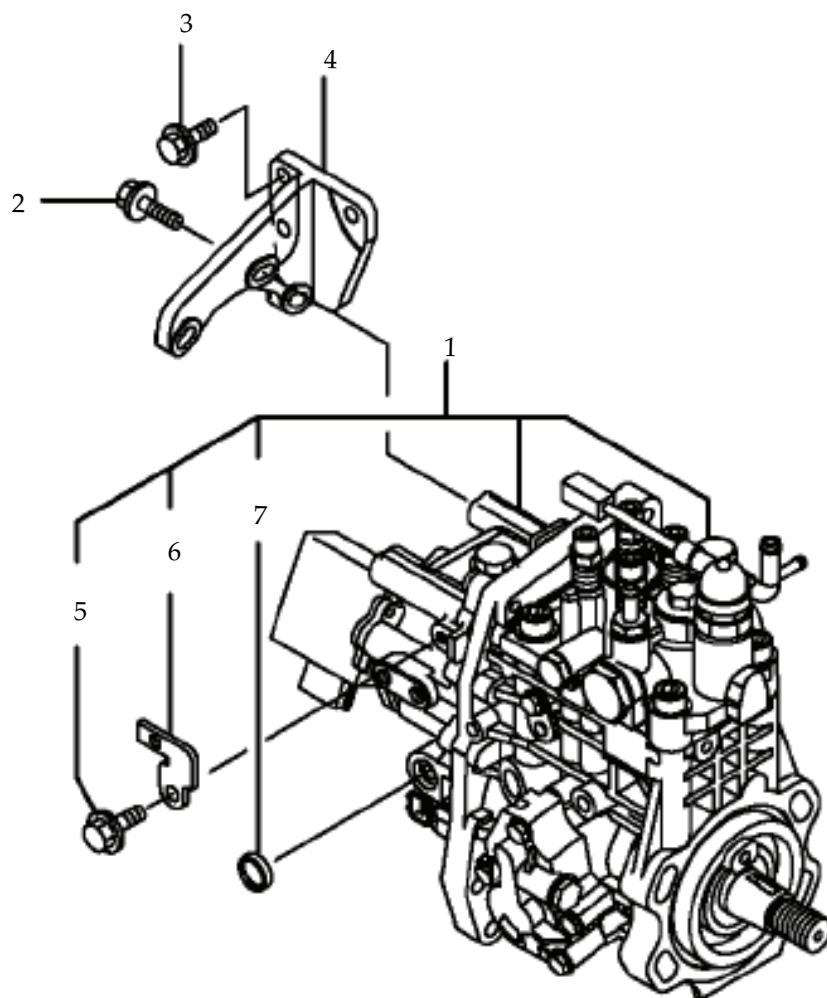

Item	Part Number	Qty	Description
1	729939-51390	1	FUEL INJECTION PUMP
2	26106-080302	3	BOLT, M8 X 30 PLATED
3	26106-080202	3	BOLT, M8 X 20 PLATED
4	129927-51250	1	RETAINER
5	26106-060122	1	BOLT, M6 X 12 PLATED
6	129927-58170	1	LEVER
7	27241-160000	1	PLUG 16

FUEL SYSTEM


FUEL INJECTION LINES AND NOZZLE – YANMAR TIER III DIESEL

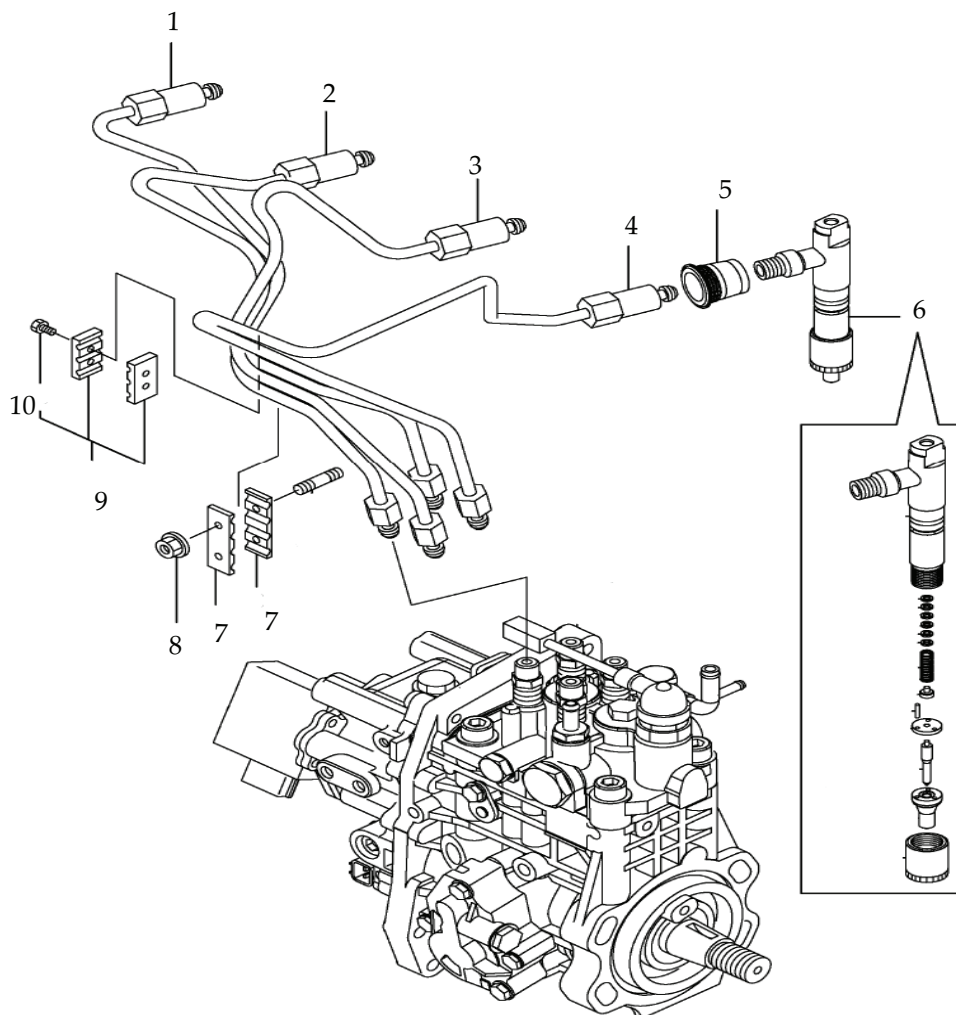

Item	Part Number	Qty	Description
1	129927-59810	1	PIPE ASSEMBLY FUEL INJECTION
2	129927-59820	1	PIPE ASSEMBLY FUEL INJECTION
3	122927-59830	1	PIPE ASSEMBLY FUEL INJECTION
4	129927-59840	1	PIPE ASSEMBLY FUEL INJECTION
5	123907-11601	4	PIPE SEAL
6	729927-53100	4	FUEL INJECTOR
7	123472-59120	2	BRACKET
8	26366-060002	2	NUT M6
9	129150-59120	1	RETAINER
10	129150-59131	2	BOLT, M4 X 14 HEX SCKT

FUEL SYSTEM

ENGINE FUEL LINE — YANMAR TIER II

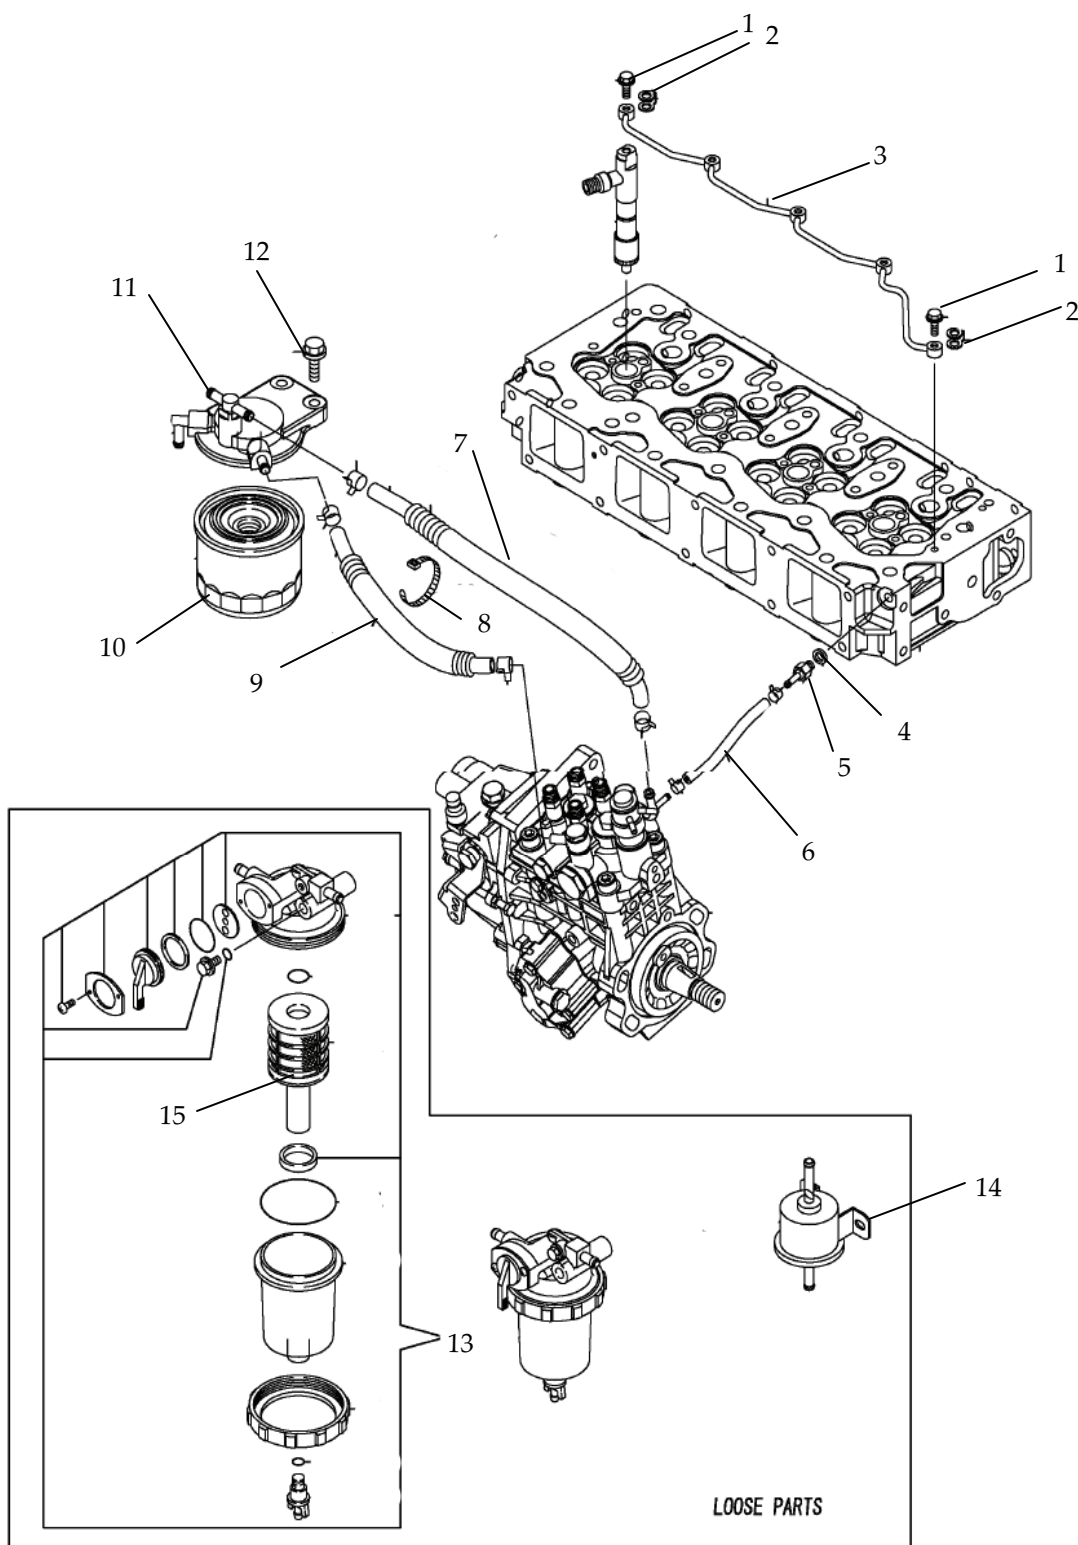

FUEL SYSTEM

ENGINE FUEL LINE—YANMAR TIER II

Item	Part Number	Qty	Description
1	123907-59540	5	JOINT BOLT, M6
2	123907-59550	5	PACKING, FUEL RETURN
3	129907-59140	1	PIPE ASSEMBLY F.O. RETURN
4	22190-080002	1	SEAL WASHER
5	123907-59560	1	HOSE JOINT
6	129486-59551	1	PIPE ASSY FUEL RETURN WITH CLAMPS
7	129457-59010	1	PIPE ASSY FUEL WITH CLAMPS
8	121750-59890	1	CLAMP #40
9	129981-59010	1	PIPE ASSY FUEL WITH CLAMPS
10	119802-55801	1	FUEL FILTER ELEMENT
11	129004-55610	1	BRACKET FUEL FILTER
12	26106-080302	2	BOLT, M8 X 30 PLATED
13	129242-55700	1	FUEL WATER SEPERATOR COMPLETE ASSY
14	119225-52102	1	PUMP ASSEMBLY, FUEL FEED
15	129242-55730	1	FUEL WATER SEPERATOR ELEMENT

Note: The fuel system needs to be primed under certain conditions.

*Before starting the engine for the first time

*After running out of fuel and fuel has been added to the fuel tank


*After fuel system maintenance such as changing the fuel filter and draining the fuel/water separator, or replacing a fuel system component

To prime the fuel system:

1. Turn the key to the ON position for 10 to 15 seconds. This will allow the electric fuel pump to prime the fuel system.
2. NEVER use the starter motor to crank the engine in order to prime the fuel system. This may cause the starter motor to overheat and damage the coils, pinion and / or ring gear.

FUEL SYSTEM

ENGINE FUEL LINE —YANMAR TIER III DIESEL

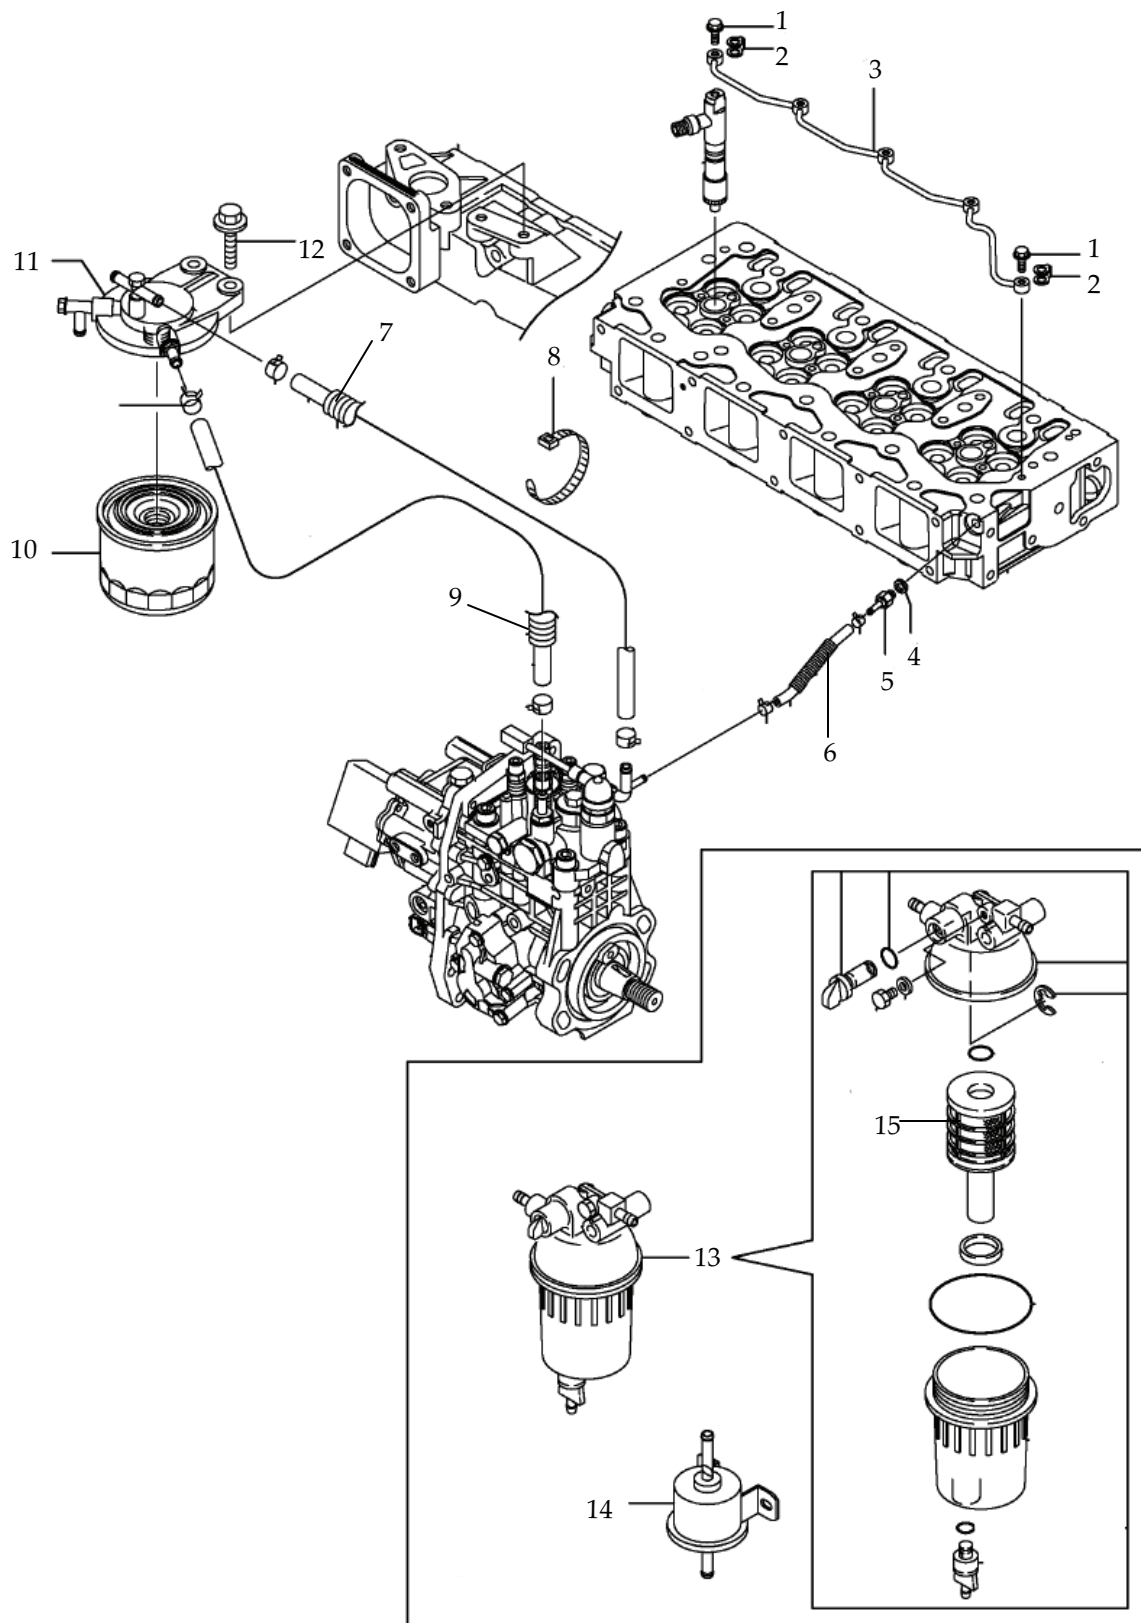

FUEL SYSTEM

ENGINE FUEL LINE—YANMAR TIER III DIESEL

Item	Part Number	Qty	Description
1	123907-59540	5	JOINT BOLT, M6
2	123907-59550	5	PACKING, FUEL RETURN
3	129907-59140	1	PIPE ASSEMBLY F.O. RETURN
4	22190-080002	1	SEAL WASHER
5	123907-59560	1	HOSE JOINT
6	129486-59550	1	PIPE ASSY FUEL RETURN WITH CLAMPS
7	129457-59010	1	PIPE ASSY FUEL WITH CLAMPS
8	121750-59890	1	CLAMP #40
9	129961-59310	1	PIPE ASSY FUEL WITH CLAMPS
10	119802-55801	1	FUEL FILTER ELEMENT
11	129004-55612	1	BRACKET FUEL FILTER
12	26106-080302	2	BOLT, M8 X 30 PLATED
13	129242-55700	1	FUEL WATER SEPERATOR COMPLETE ASSY
14	119225-52102	1	PUMP ASSEMBLY, FUEL FEED
15	129242-55730	1	FUEL WATER SEPERATOR ELEMENT

Note: The fuel system needs to be primed under certain conditions.

*Before starting the engine for the first time

*After running out of fuel and fuel has been added to the fuel tank


*After fuel system maintenance such as changing the fuel filter and draining the fuel/water separator, or replacing a fuel system component

To prime the fuel system:

1. Turn the key to the ON position for 10 to 15 seconds. This will allow the electric fuel pump to prime the fuel system.
2. NEVER use the starter motor to crank the engine in order to prime the fuel system. This may cause the starter motor to overheat and damage the coils, pinion and / or ring gear.

AIR CLEANER


AIR CLEANER ASSEMBLY

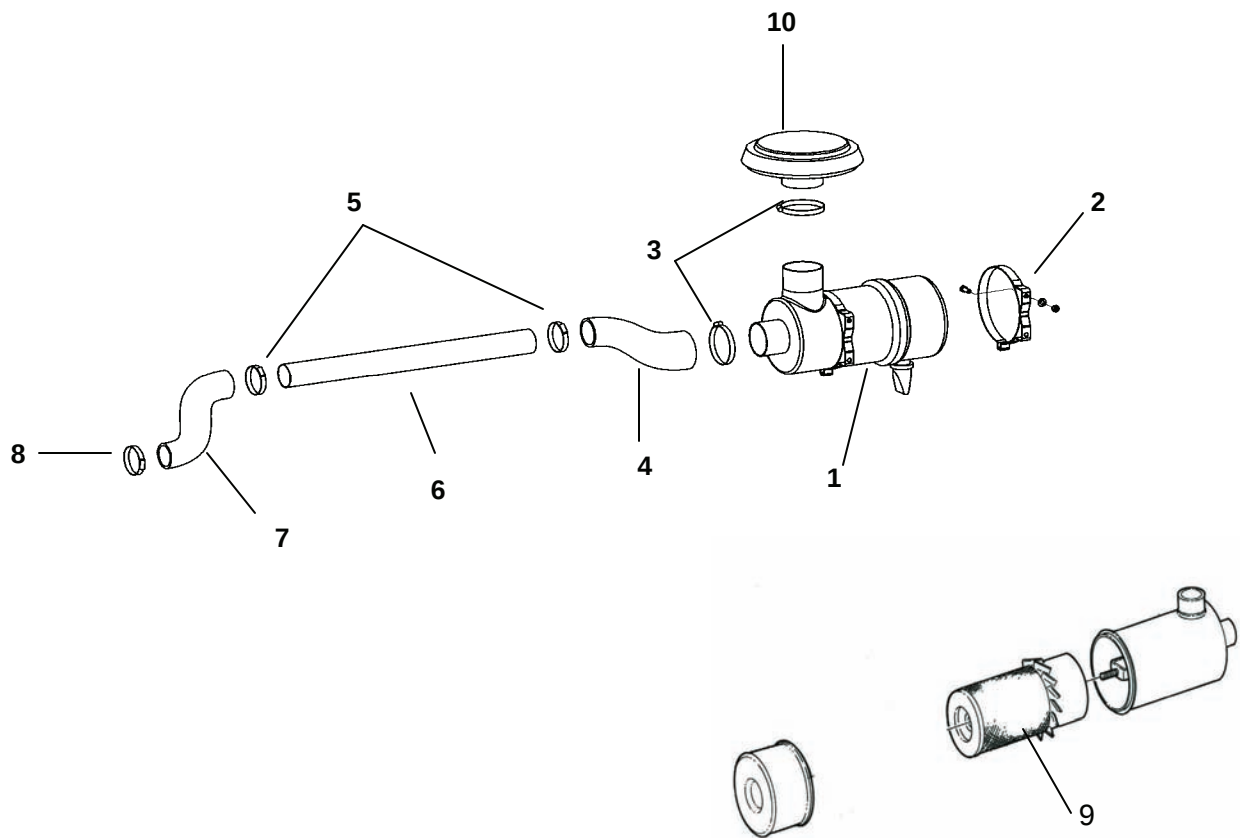

Item	Part Number	Qty	Description
1	A-TT4-00091-2	1	AIR CLEANER
2	A-TT4-00092-1	2	AIR CLEANER BRACKET
3	NPN	2	#60 HOSE CLAMP
4	A-TT4-00099	1	INTAKE TUBE REDUCER
5	NPN	2	#40 HOSE CLAMP
6	NPN	1	AIR CLEANER TUBE 2 1/2 OD X 26.5
7	A-TT4-00093	1	AIR CLEANER ADAPTER
8	NPN	1	#36 HOSE CLAMP
9	P601437	1	AIR CLEANER ELEMENT
10	A-TT4-00098-2	1	RAIN CAP

EXHAUST & INTAKE SYSTEM


EXHAUST SYSTEM

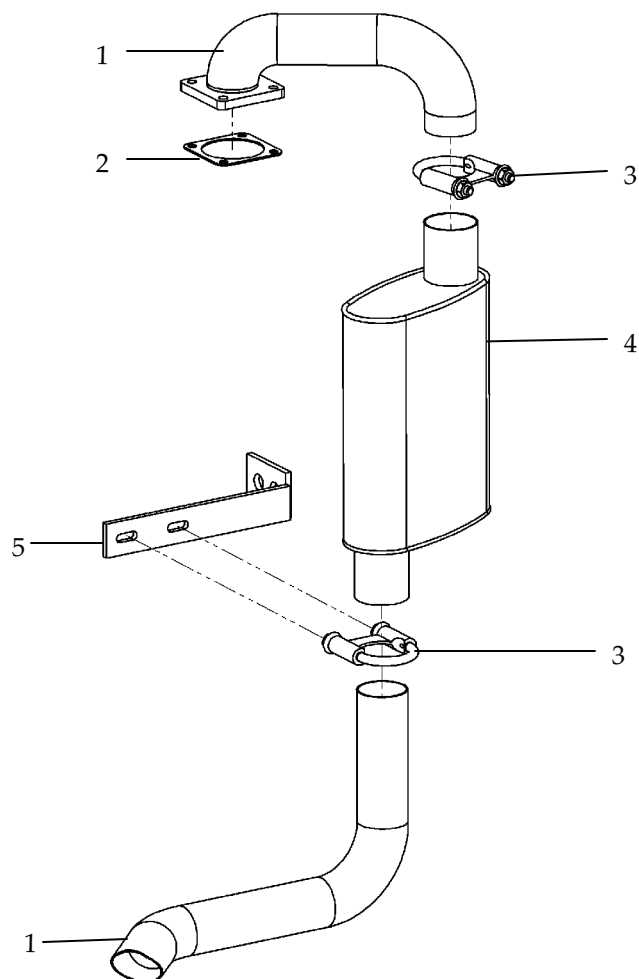

Item	Part Number	Qty	Description
1	A-TT4D-00253-3	1	2PC EXHAUST/TAIL PIPE
2	129930-13200	1	EXHAUST GASKET
3	A-TT4-00254	2	EXHAUST CLAMP 2"HD 3/8 THREAD
4	A-TT4-00258-2	1	MUFFLER
5	NPN	1	EXHAUST BRACKET YANMAR TT4-8 NAT T2

EXHAUST & INTAKE SYSTEM


EXHAUST MANIFOLD—YANMAR TIER II DIESEL

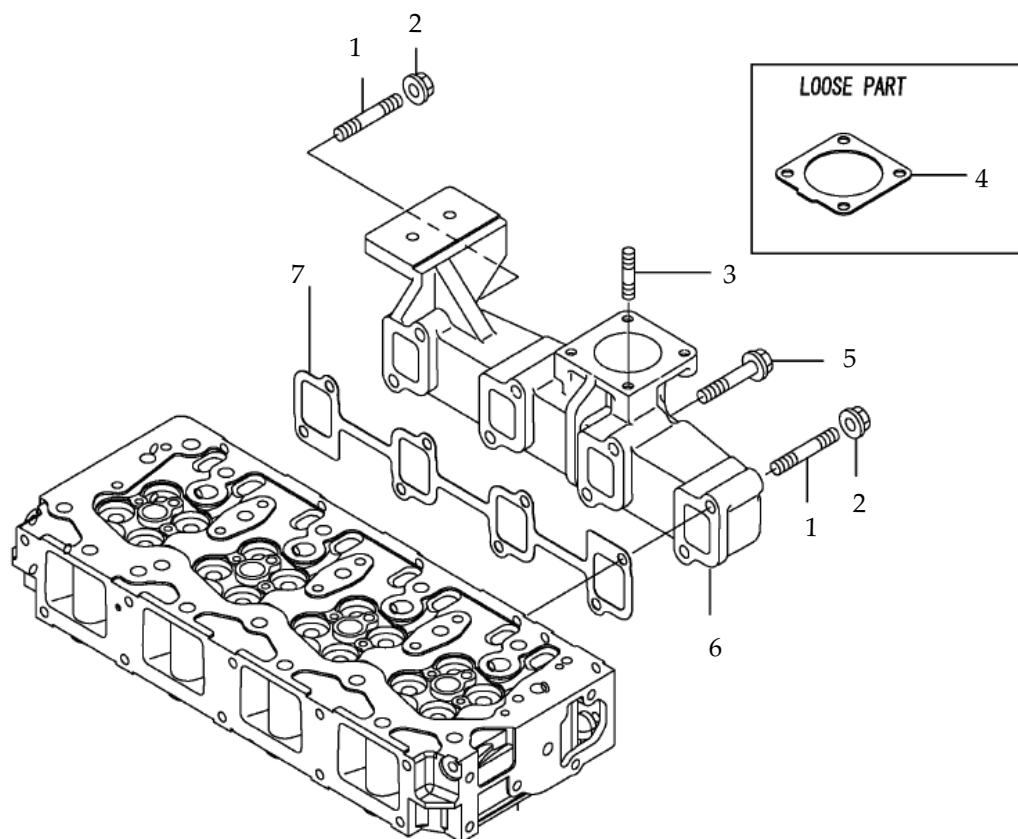

Item	Part Number	Qty	Description
1	123900-13610	2	STUD, M8 X 80
2	26306-080002	2	NUT
3	119131-18320	4	BOLT, M8 X 22
4	129930-13200	1	GASKET, SILENCER
5	123900-13630	6	BOLT, M8 X 80
6	129907-13200	1	EXHAUST MANIFOLD
7	129900-13251	1	GASKET, EXHAUST MANIFOLD

EXHAUST & INTAKE SYSTEM


INTAKE MANIFOLD—YANMAR TIER II DIESEL

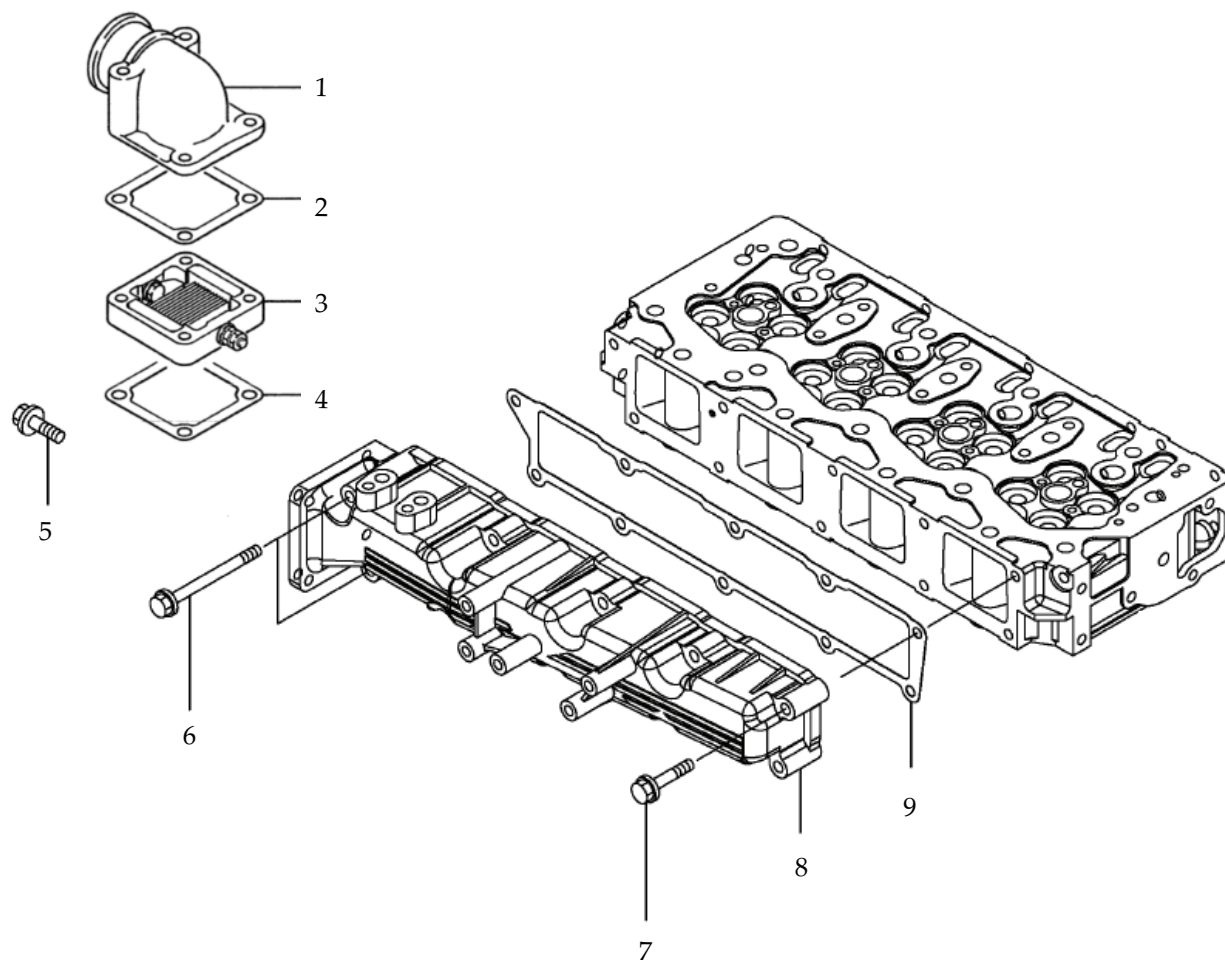

Item	Part Number	Qty	Description
1	119129-77520	1	INTAKE ELBOW
2	119129-77020	1	GASKET, AIR HEATER
3	119005-77050	1	AIR HEATER
4	121850-77021	1	GASKET, AIR HEATER
5	26106-080352	4	BOLT, M8 X 35 PLATED
6	26106-080802	2	BOLT, M8 X 80 PLATED
7	26106-080452	8	BOLT, M8 X 45 PLATED
8	129944-12110	1	INTAKE MANIFOLD
9	129907-12110	1	GASKET, INTAKE MANIFOLD

EXHAUST & INTAKE SYSTEM

EXHAUST MANIFOLD—YANMAR TIER III DIESEL

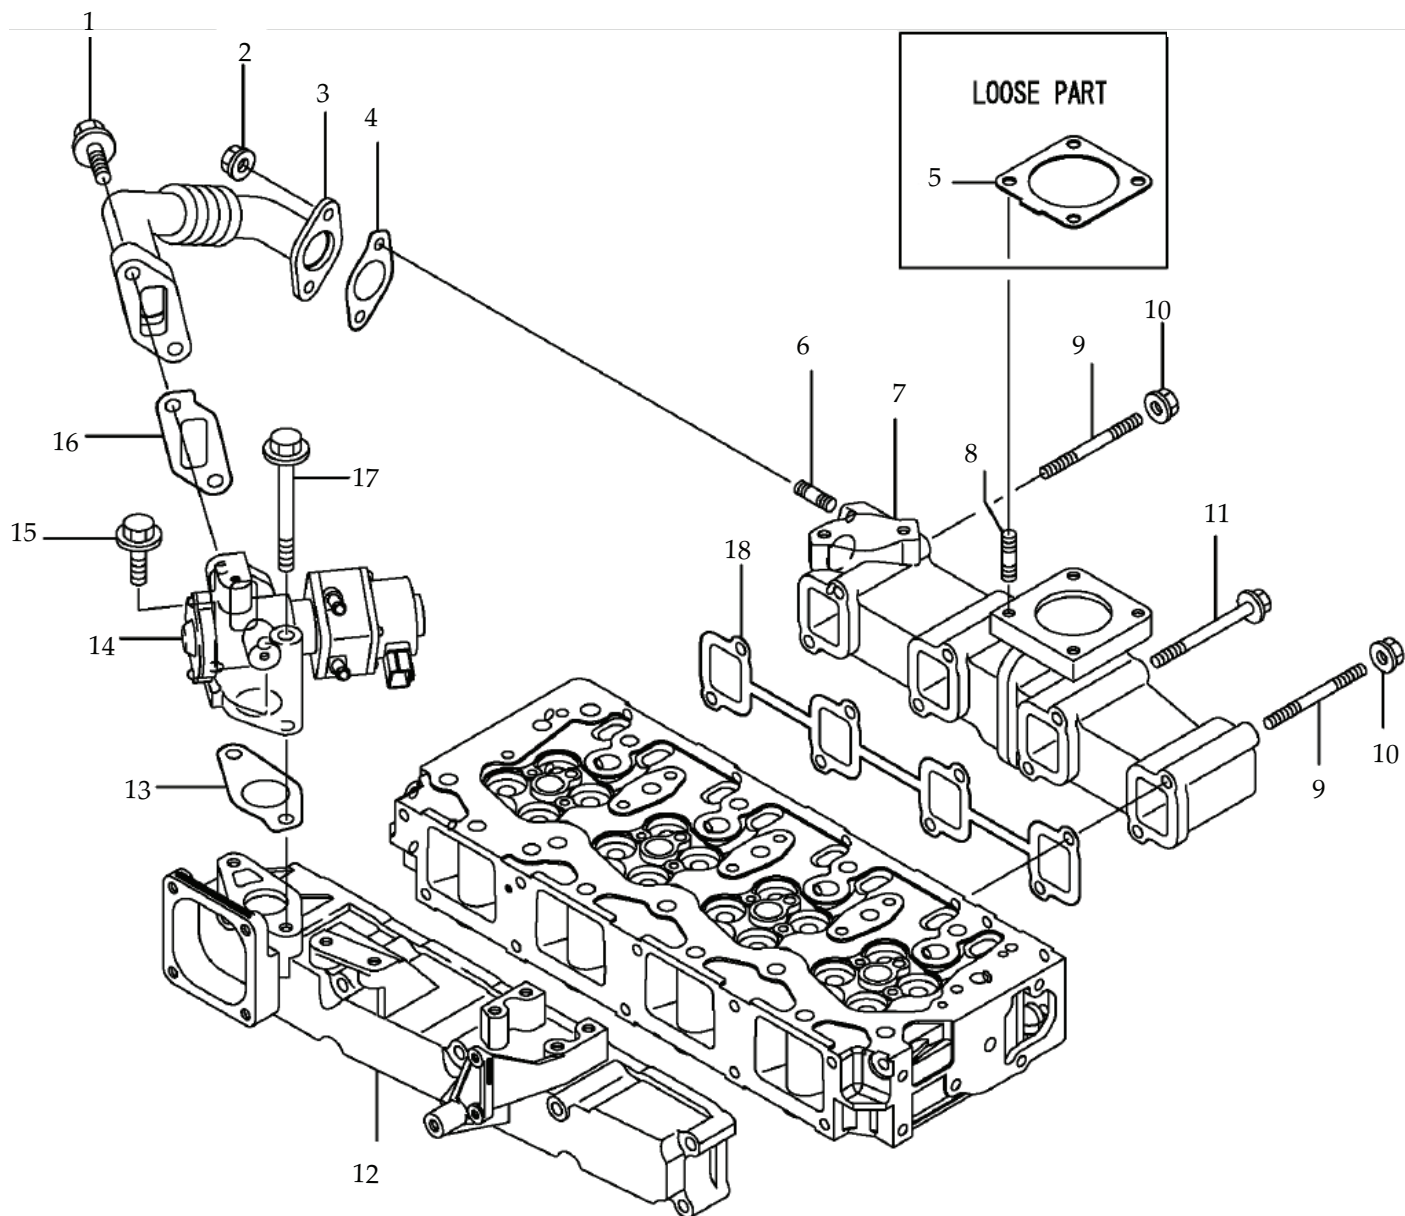


EXHAUST & INTAKE SYSTEM

EXHAUST MANIFOLD – YANMAR TIER III DIESEL

Item	Part Number	Qty	Description
1	26106-100302	2	BOLT, M10 X 30 PLATED
2	26306-080002	2	NUT
3	129927-13800	1	PIPE, EGR
4	129927-13810	1	GASKET, EGR
5	129930-13201	1	GASKET, SILENCER
6	129418-18320	2	STUD BOLT M8 X 20
7	129927-13100	1	EXHAUST MANIFOLD
8	119131-18320	4	BOLT, M8 X 22
9	129263-13210	2	STUD
10	26306-080002	2	NUT
11	119802-13680	6	BOLT, M8 X 90
12	129927-12100	1	INTAKE MANIFOLD
13	129927-13920	1	GASKET, EGR V-OUT
14	129927-13900	1	EGR VALVE
15	26106-100302	1	BOLT, M10 X 30 PLATED
16	129927-13910	1	GASKET, EGR V-IN
17	26106-100952	1	BOLT, M10 X 95 PLATED
18	129900-13251	1	GASKET

EXHAUST & INTAKE SYSTEM

INTAKE MANIFOLD—YANMAR TIER III DIESEL

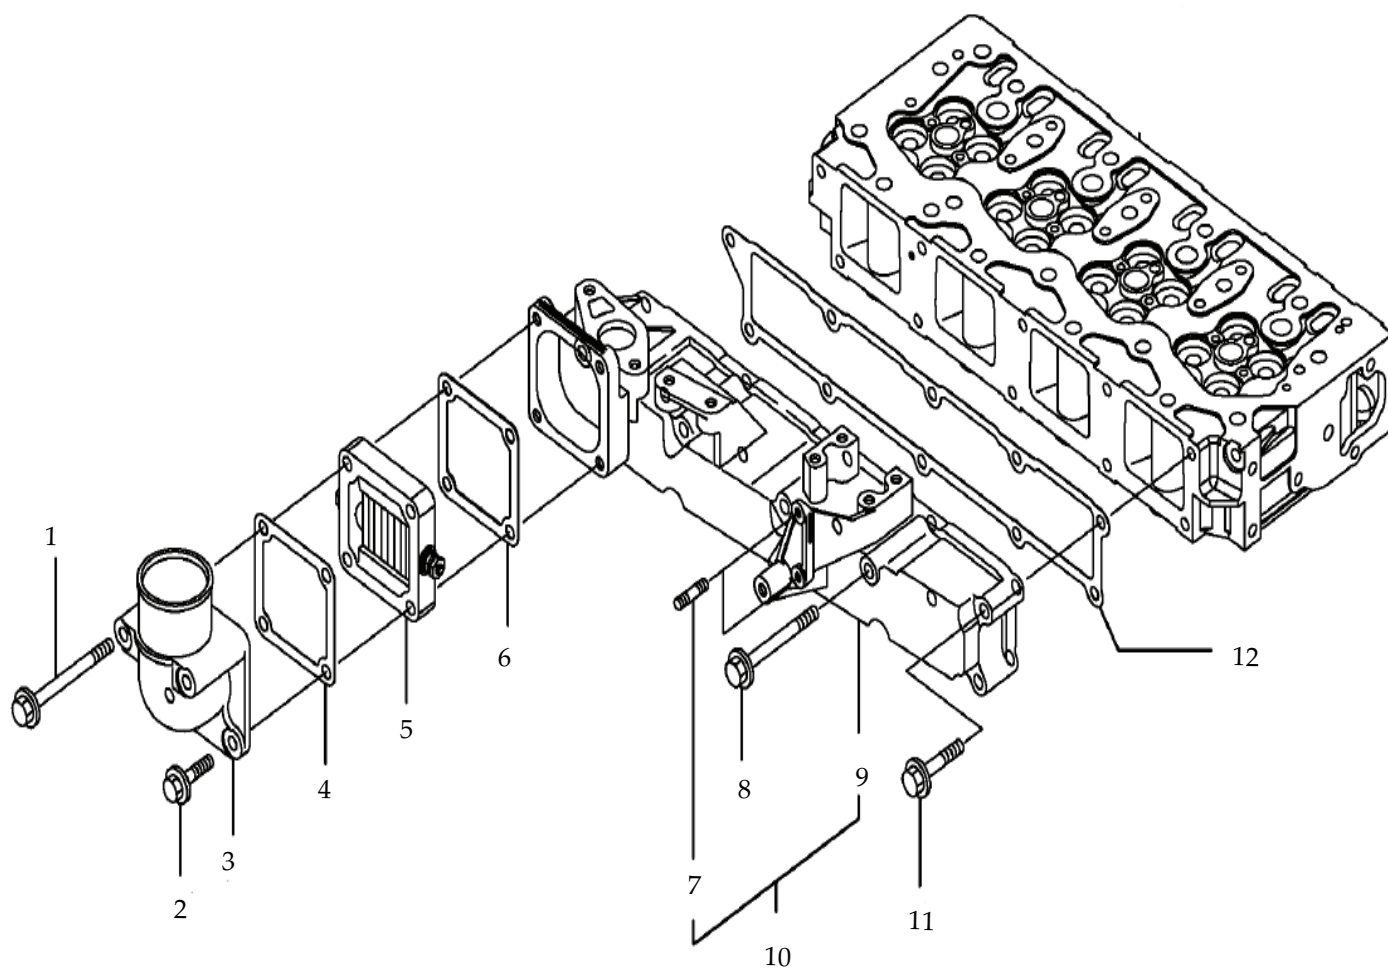


EXHAUST & INTAKE SYSTEM

INTAKE MANIFOLD—YANMAR TIER III DIESEL

Item	Part Number	Qty	Description
1	26106-080902	2	BOLT, M8 X 90 PLATED
2	26106-080402	2	BOLT, M8 X 40 PLATED
3	119129-77520	1	BEND
4	119129-77020	1	GASKET
5	119005-77051	1	AIR HEATER
6	121850-77021	1	GASKET, AIR HEATER
7	26216-060202	2	STUD, M6 X 20 PLATED
8	26106-080802	4	BOLT, M8 X 80 PLATED
9	129927-12100	2	INTAKE MANIFOLD
10	129927-12150	1	MANIFOLD CMP, INTAKE
11	26106-080452	6	BOLT, M8 X 45 PLATED
12	129907-12110	1	GASKET, INTAKE MANIFOLD

OPERATOR COMPARTMENT

ACCELERATOR PEDAL ASSEMBLY —YANMAR TIER III DIESEL

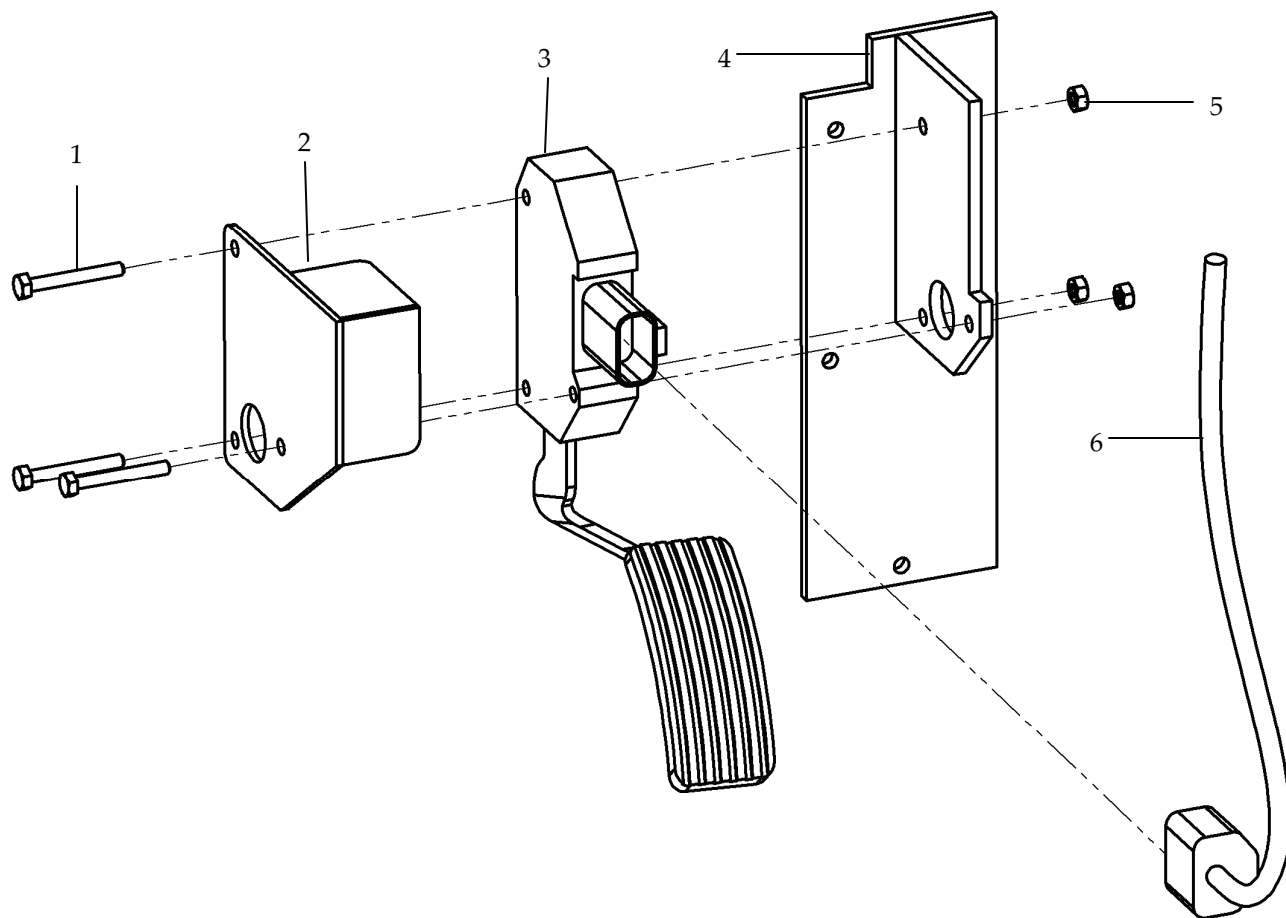


Item	Part Number	Qty	Description
1	NPN	3	BOLT, 1/4-20 X 2 1/2 GR5 HCS
2	F5TZ9F836A-COVER	1	ACCELERATOR PEDAL COVER
3	1C3Z9F836BA	1	FOOT PEDAL
4	F5TZ9F836A-BRACKET	1	ACCELERATOR PEDAL BRACKET
5	NPN	3	LOCK NUT, 1/4-20
6	2U1L12B476AA*	1	WIRE HARNESS, FOOT PEDAL

*ITEM 6 REQUIRES TUG MODEL AND SERIAL NUMBER FOR REPLACEMENT

OPERATOR COMPARTMENT

ACCELERATOR PEDAL ASSEMBLY – YANMAR TIER II DIESEL

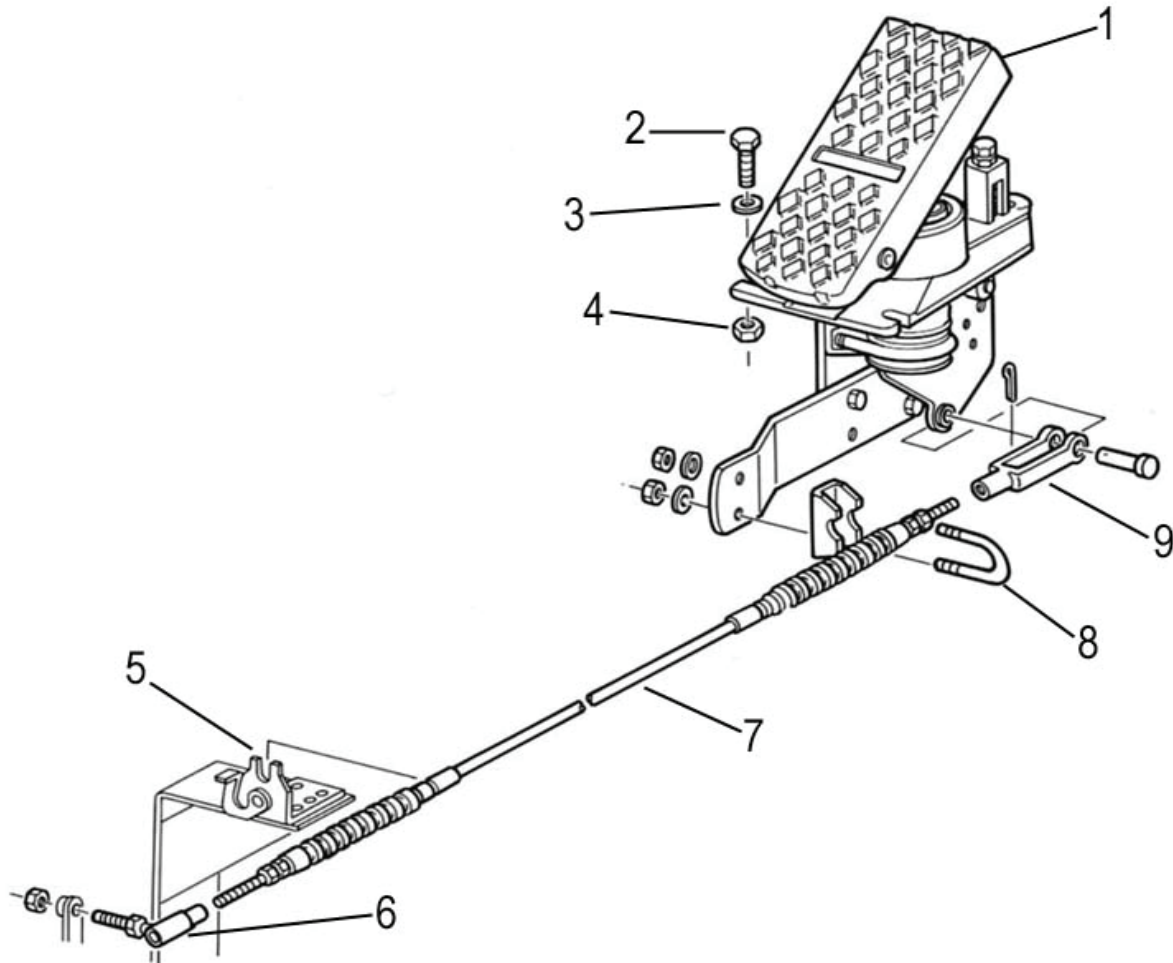


Item	Part Number	Qty	Description
1	A-TT4-00281-1	1	FOOT PEDAL ASSEMBLY
2	NPN	3	SCREW-HEX CAP-1/4-20 X 1.00 G8
3	NPN	3	WASHER-FLAT-1/4
4	NPN	3	NUT-LOCK-1/4-20
5	A-TT4-00285*	1	ACCEL CABLE BRACKET
6	A-TT4-00287	1	BALL JOINT KIT - NUT INCLUDED
7	A-TT4-00282-1	1	ACCELERATOR CABLE ASSEMBLY
8	A-TT4-00247	1	ACCELERATOR U-BOLT KIT
9	A-TT4-00283-1	1	ACCELERATOR CLEVIS-PIN KIT

*TUG MODEL AND SERIAL NUMBER REQUIRED TO ORDER THIS PART

OPERATOR COMPARTMENT

INSTRUMENT PANEL

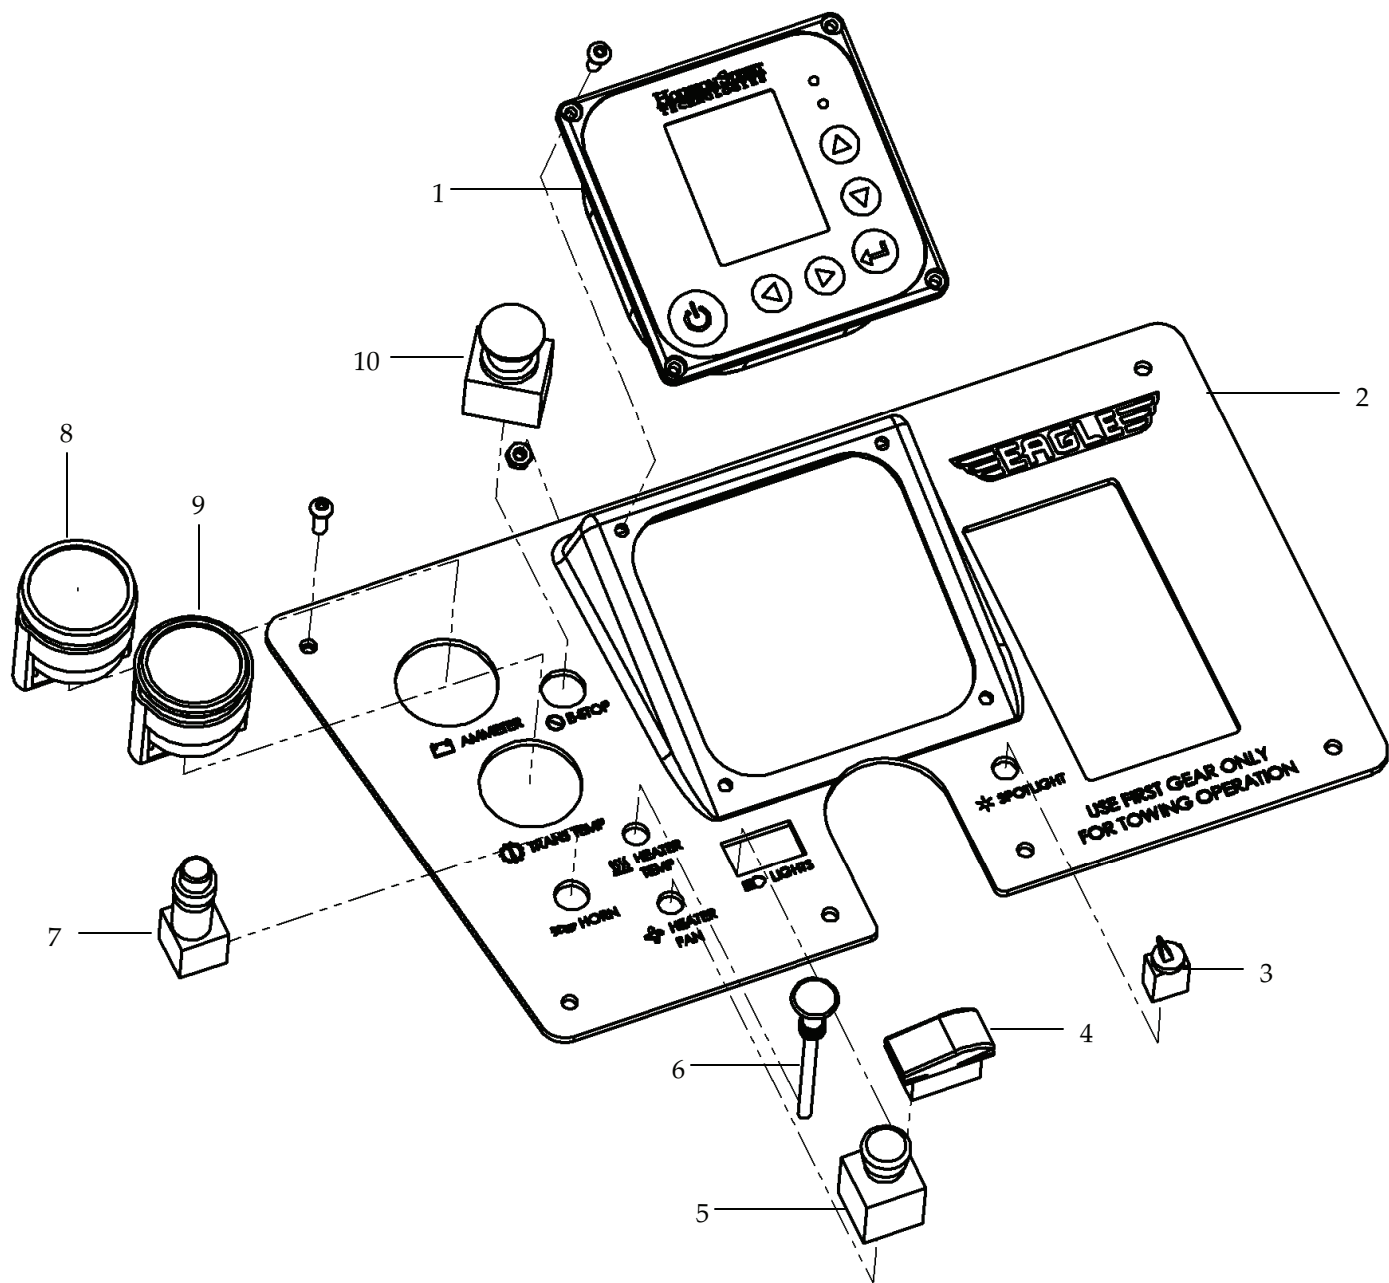

OPERATOR COMPARTMENT

INSTRUMENT PANEL

Item	Part Number	Qty	Description
1	A-TT8-00415	1	ELECTRONIC CONTROLLER DISPLAY
2	C-TT4-00411-1	1	DASH PANEL (NO INSTRUMENTS)
3	A-TT4-00433-1	1	SPOTLIGHT TOGGLE SWITCH(OPTIONAL)
4	A-TT4-00423-2	1	HEADLIGHT SWITCH
5	A-TT4-00609	1	HEATER FAN SWITCH(OPTIONAL)
6	A-TT4-00608	1	HEATER CONTROL CABLE(OPTIONAL)
7	A-TT4-00428	1	HORN BUTTON
8	AE-OPT-0084	1	AMMETER GUAGE (OPTIONAL)
9	AE-OPT-0152	1	TRANS TEMP GAUGE (OPTIONAL)
10	AE-OPT-0066	1	E-STOP (OPTIONAL)

Eagle Tugs TT-series Quick Start Guide

Powering up the H30 Display Panel:

Pressing the **POWER** button will turn on the H30 control panel

*On key ignition equipped units, turn the key to the on position
And then press the **POWER** button.

Starting the Engine:


Once the H30 panel has booted up, it will prompt you to hold the **ENTER** key to crank the engine. Hold the **ENTER** key until the unit starts.

*For cold weather operation, the display will prompt you to wait for the engine warm-up before prompting you to crank the engine.

Turning off the Engine:

To turn off the engine, press the **POWER** button.

*On key ignition equipped units, turn the key to the off position after the display panel has turned off.

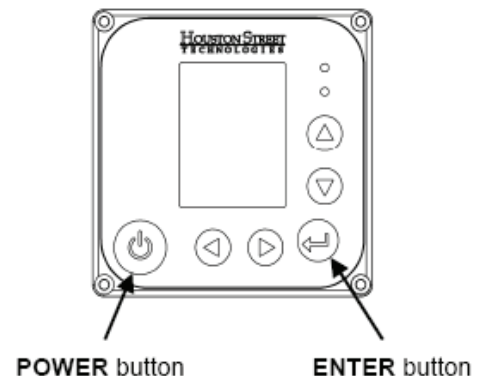


POWER button

ENTER button

OPERATOR COMPARTMENT


TRANSMISSION CONTROL

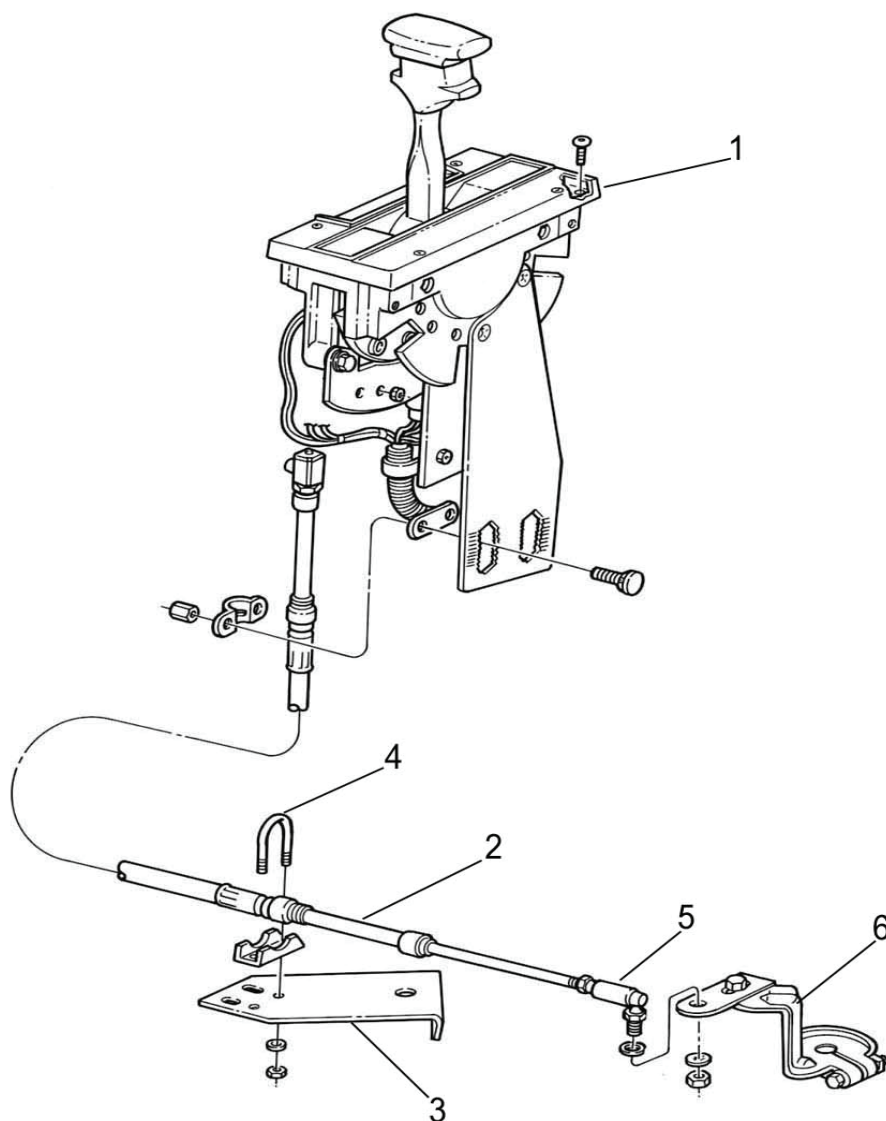

Item	Part Number	Qty	Description
1	A-TT4-00245	1	TRANSMISSION SHIFT CONTROL
2	A-TT4-00246	1	TRANSMISSION SHIFT CABLE 120'
3	A-TT4-00248	1	TRANSMISSION CABLE BRACKET ASSEMBLY
4	A-TT4-00247	1	U-BOLT KIT
5	A-TT4-00249	1	BALL JOINT KIT
6	A-TT4-00419	1	TRANSMISSION LEVER
7	302008	1	INDICATOR STRIP REPAIR KIT(NS)
8	302348	1	HANDLE REPAIR KIT(NS)

ELECTRICAL SCHEMATICS


DASH WIRING HARNESS

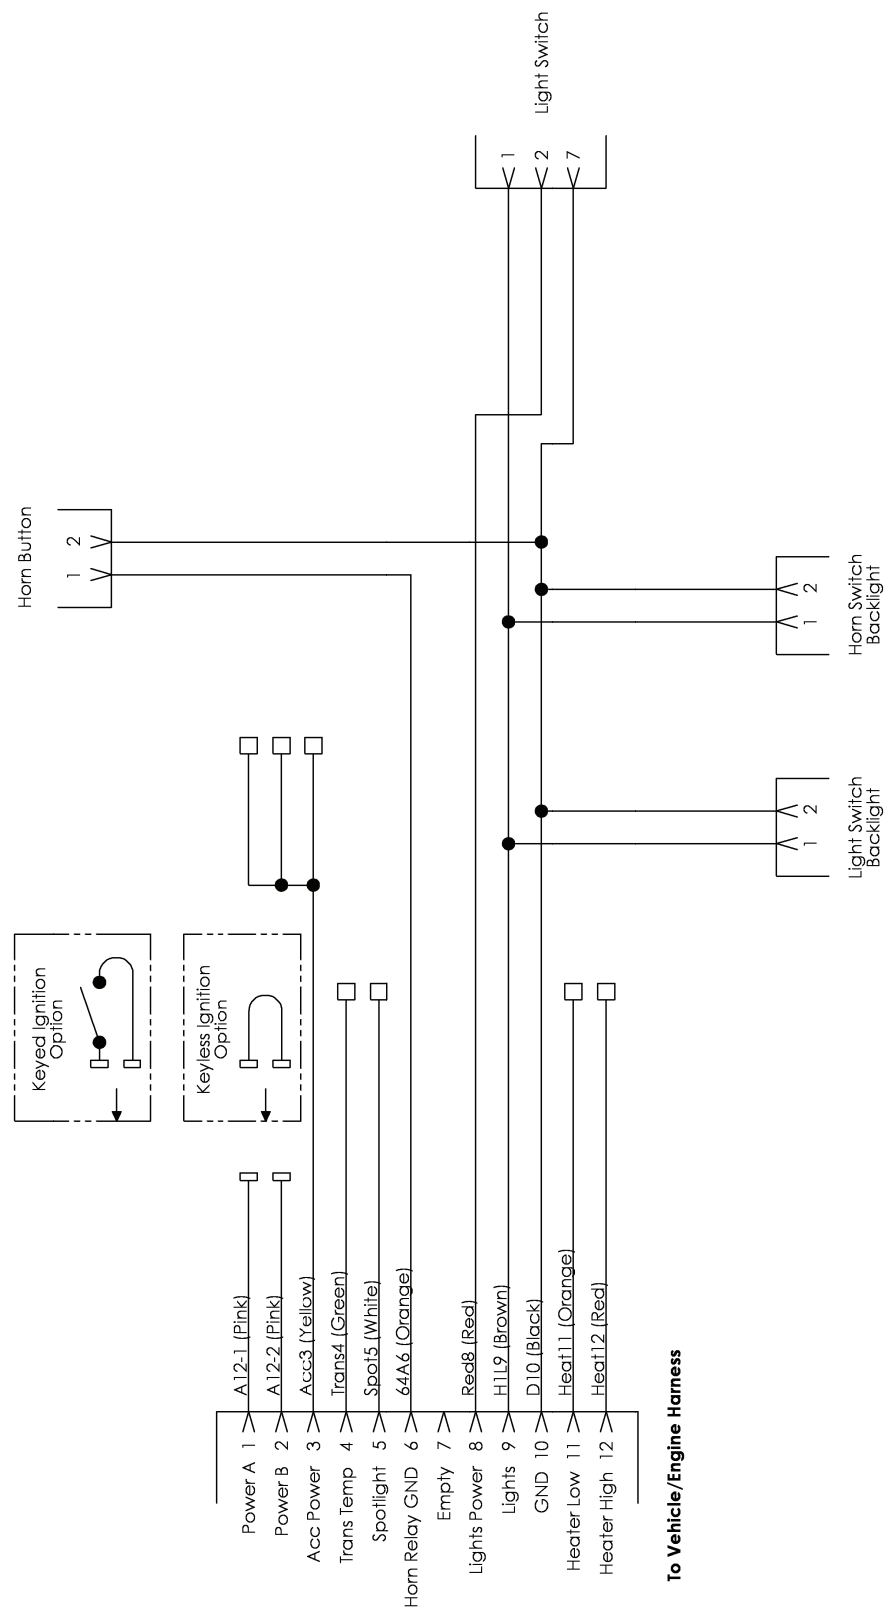

DASH WIRING DIAGRAM, 4TNV98

ELECTRICAL SCHEMATICS


YANMAR ENGINE WIRING HARNESS — YANMAR TIER II DIESEL

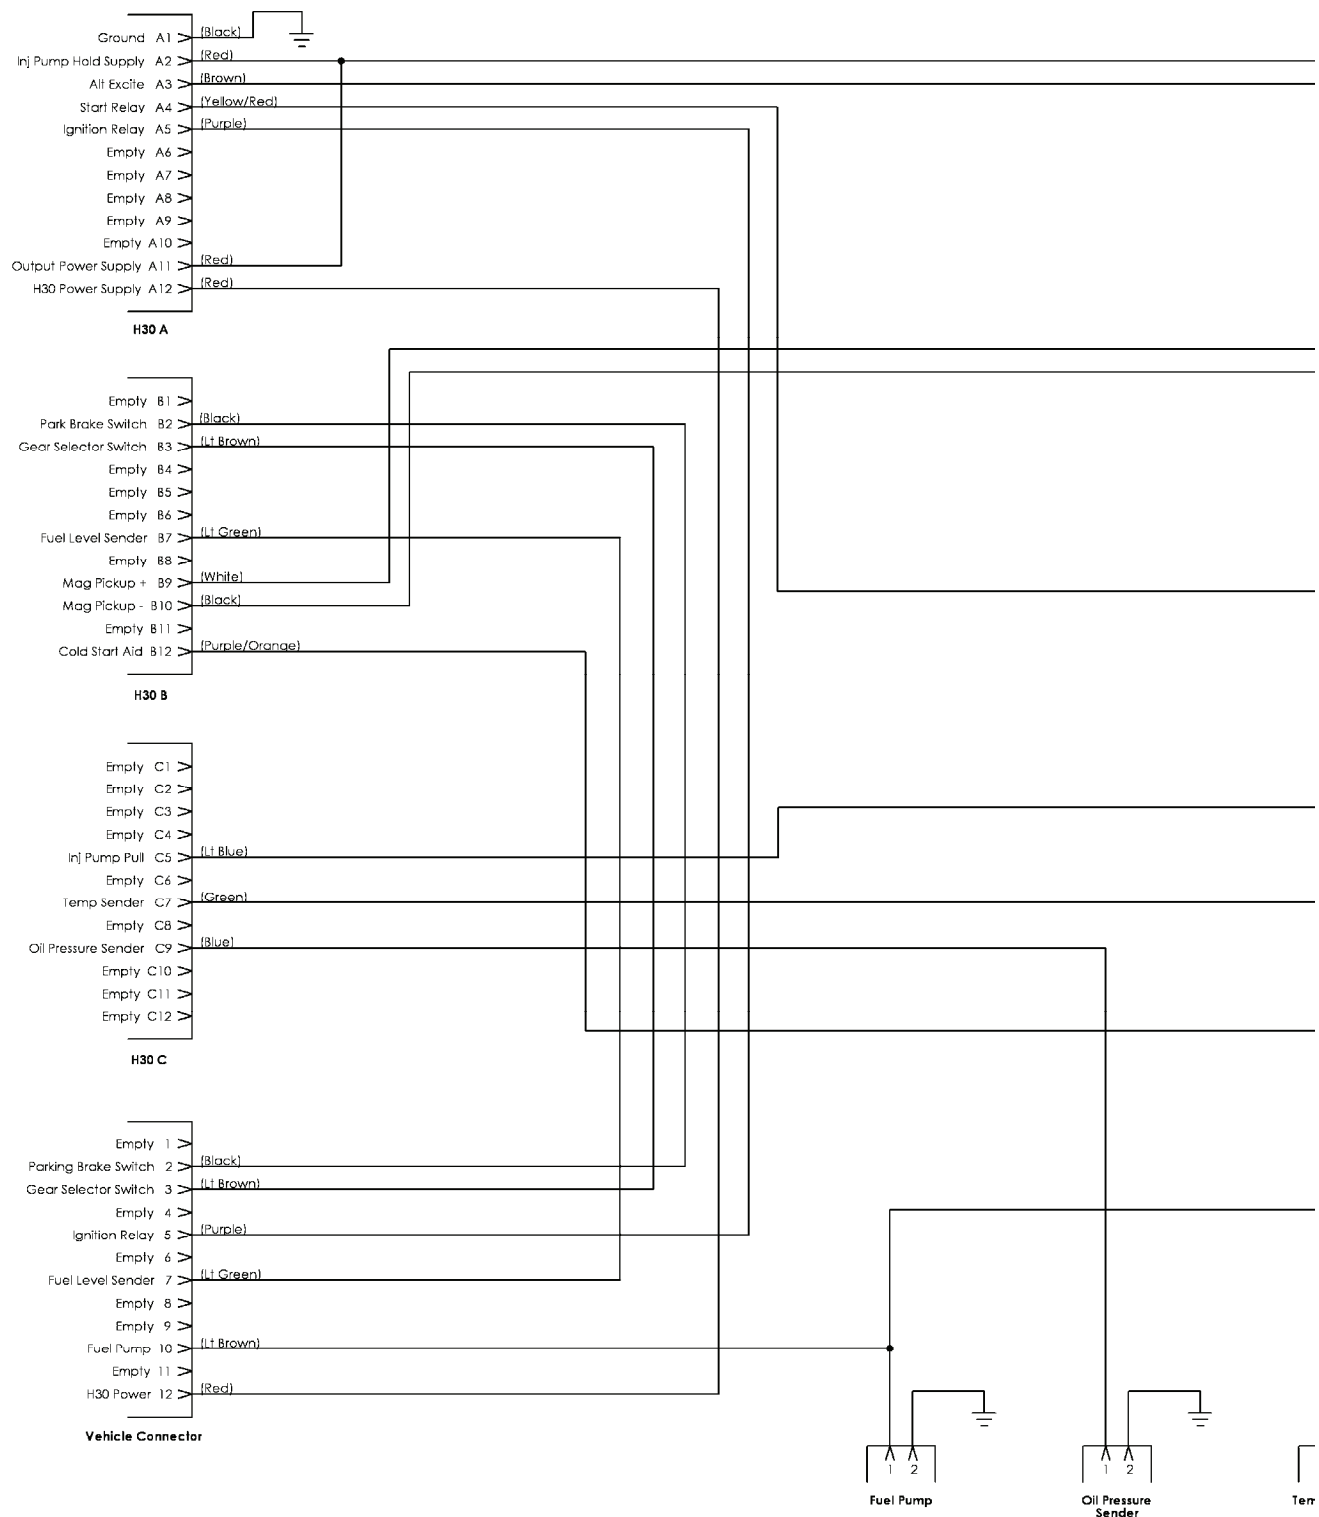

Engine Wiring Harness,
Tier 2, 41NV98


ELECTRICAL SCHEMATICS

YANMAR ENGINE WIRING HARNESS — YANMAR TIER II DIESEL

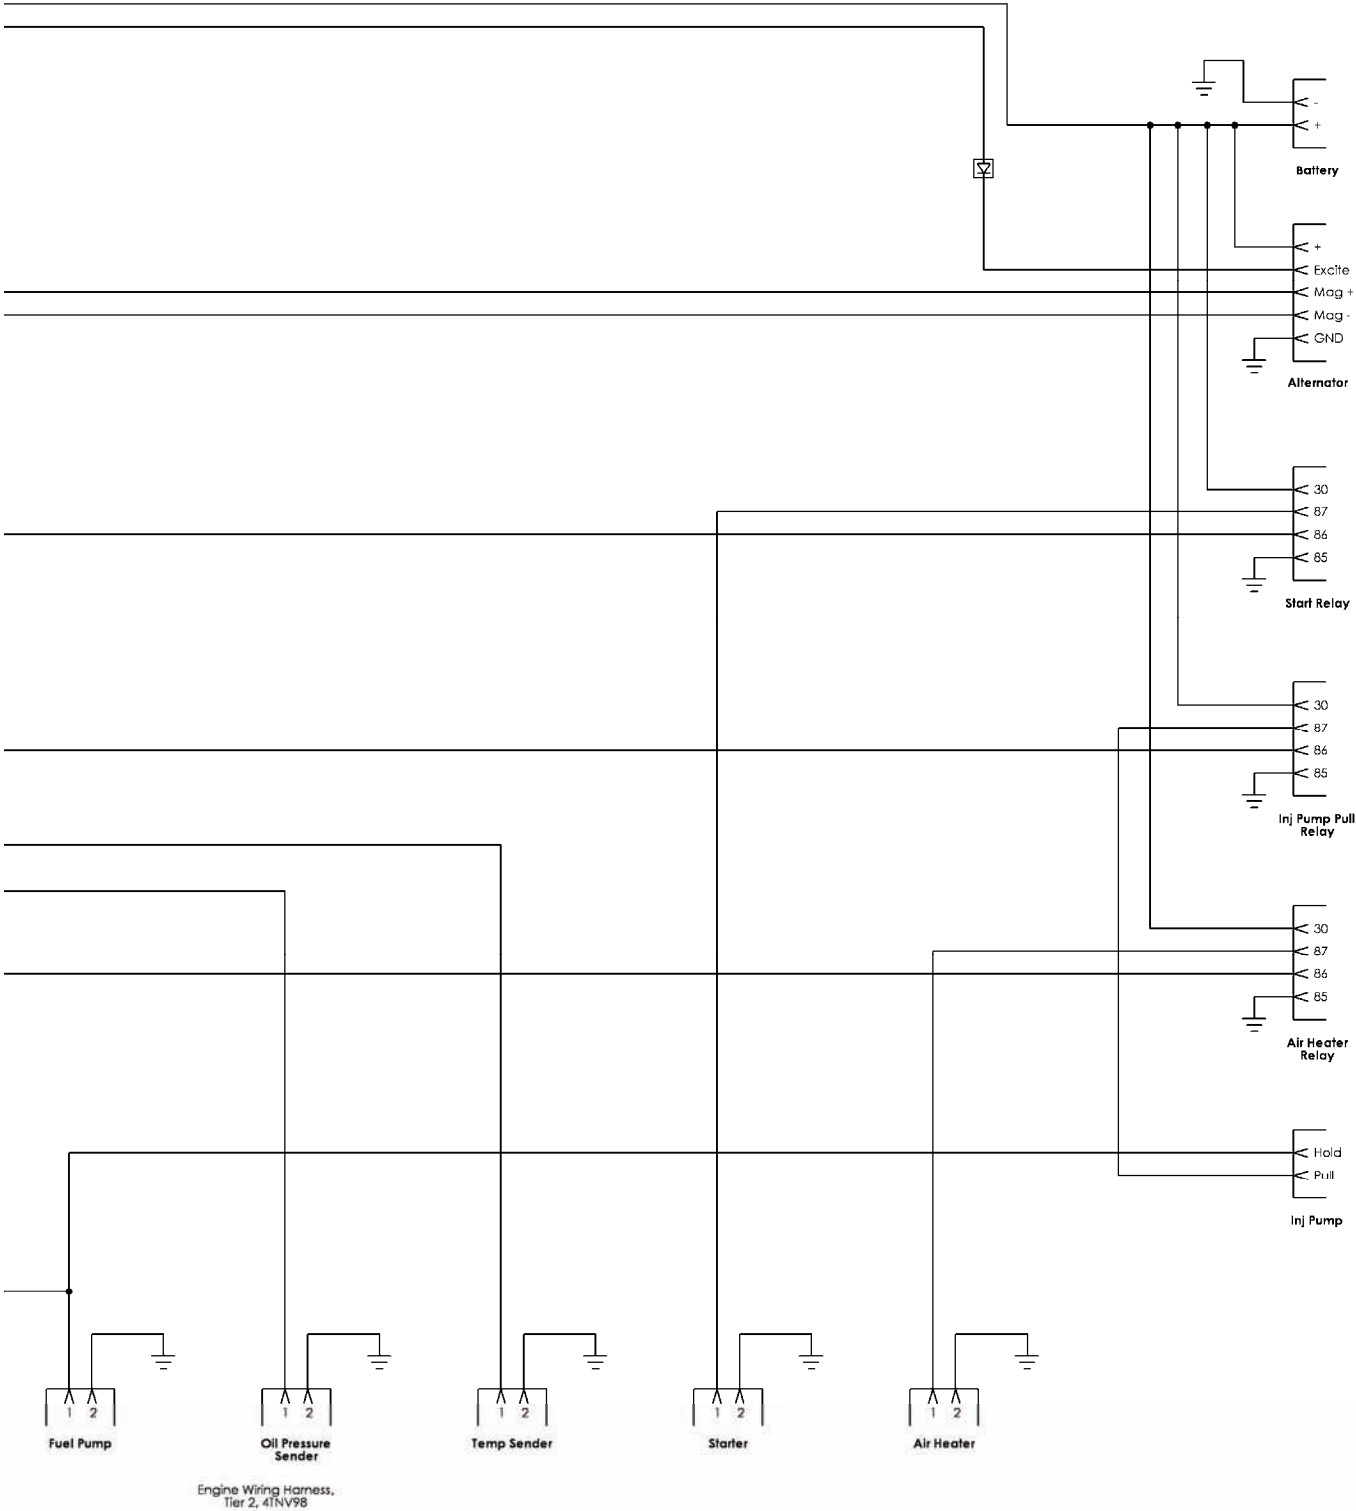


ELECTRICAL SCHEMATICS

YANMAR ENGINE WIRING HARNESS – YANMAR TIER III DIESEL

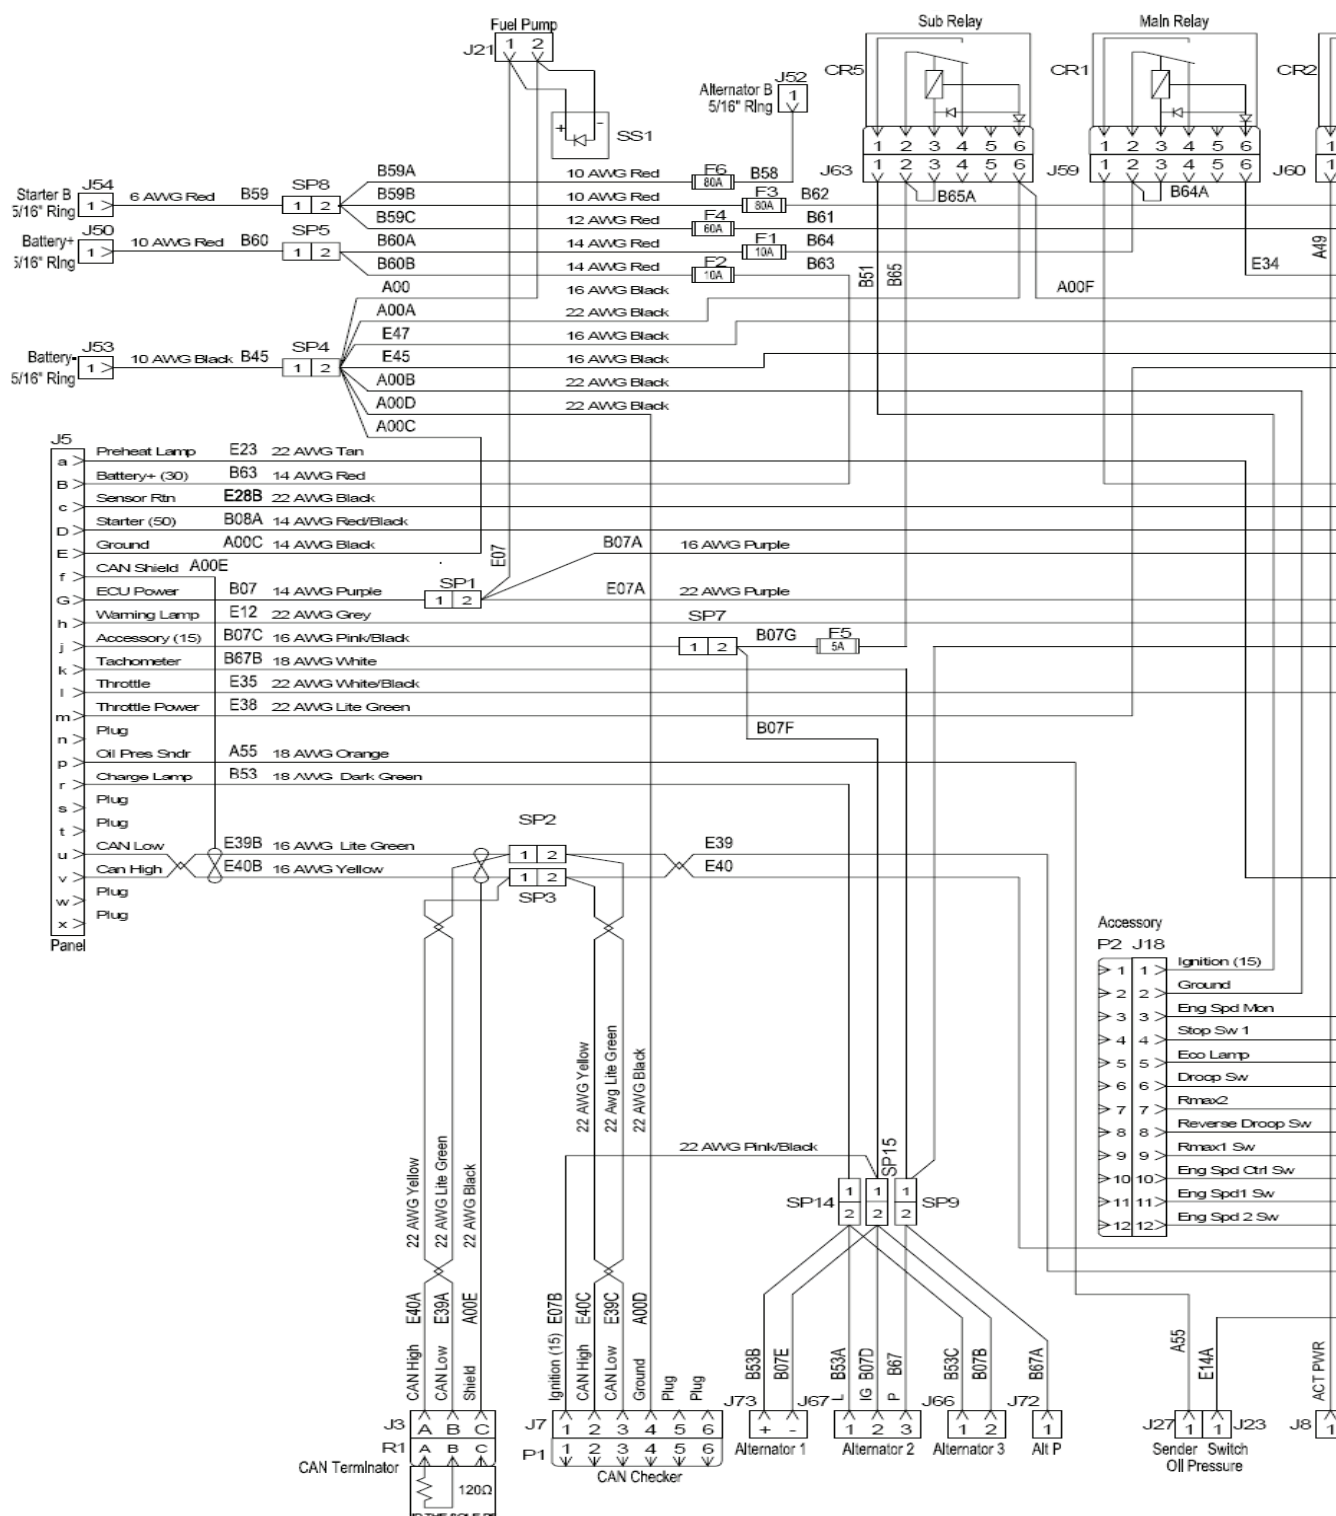


ELECTRICAL SCHEMATICS

YANMAR ENGINE WIRING HARNESS — YANMAR TIER III DIESEL

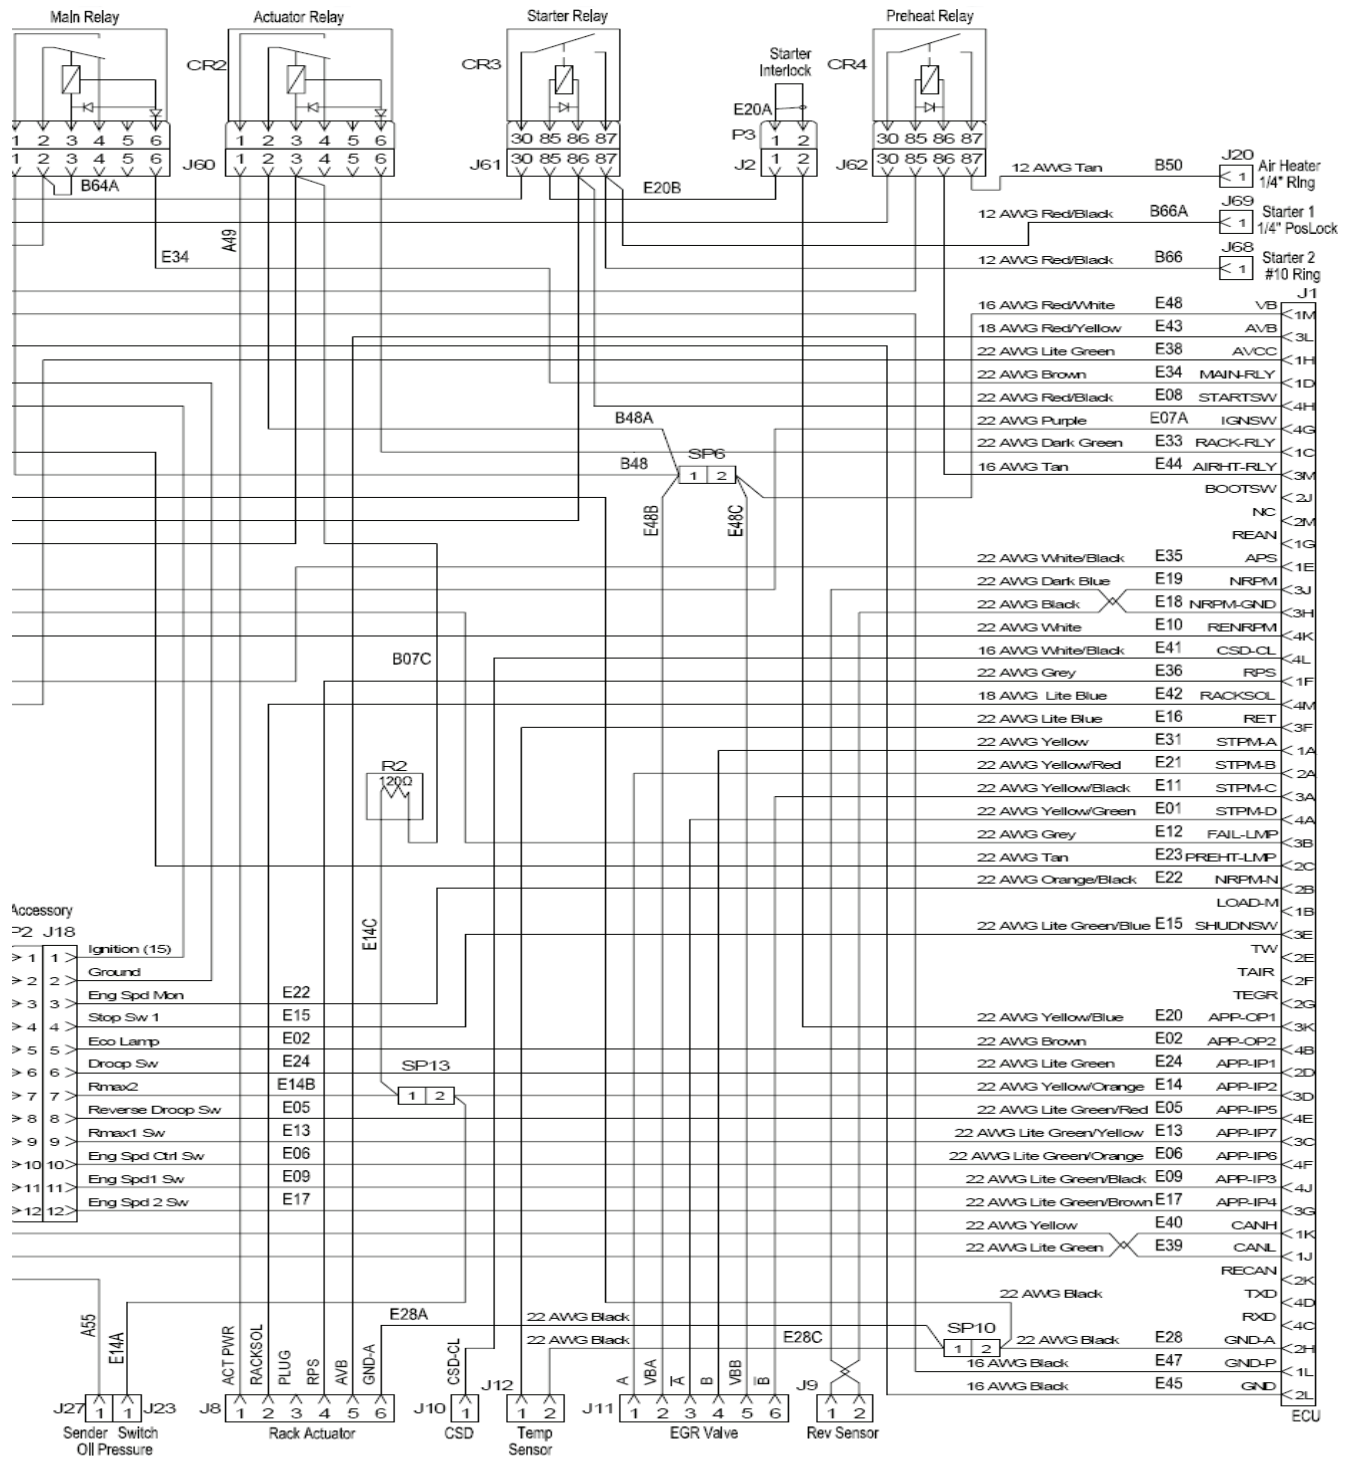

ELECTRICAL SCHEMATICS


VEHICLE WIRING HARNESS—YANMAR TIER II DIESEL

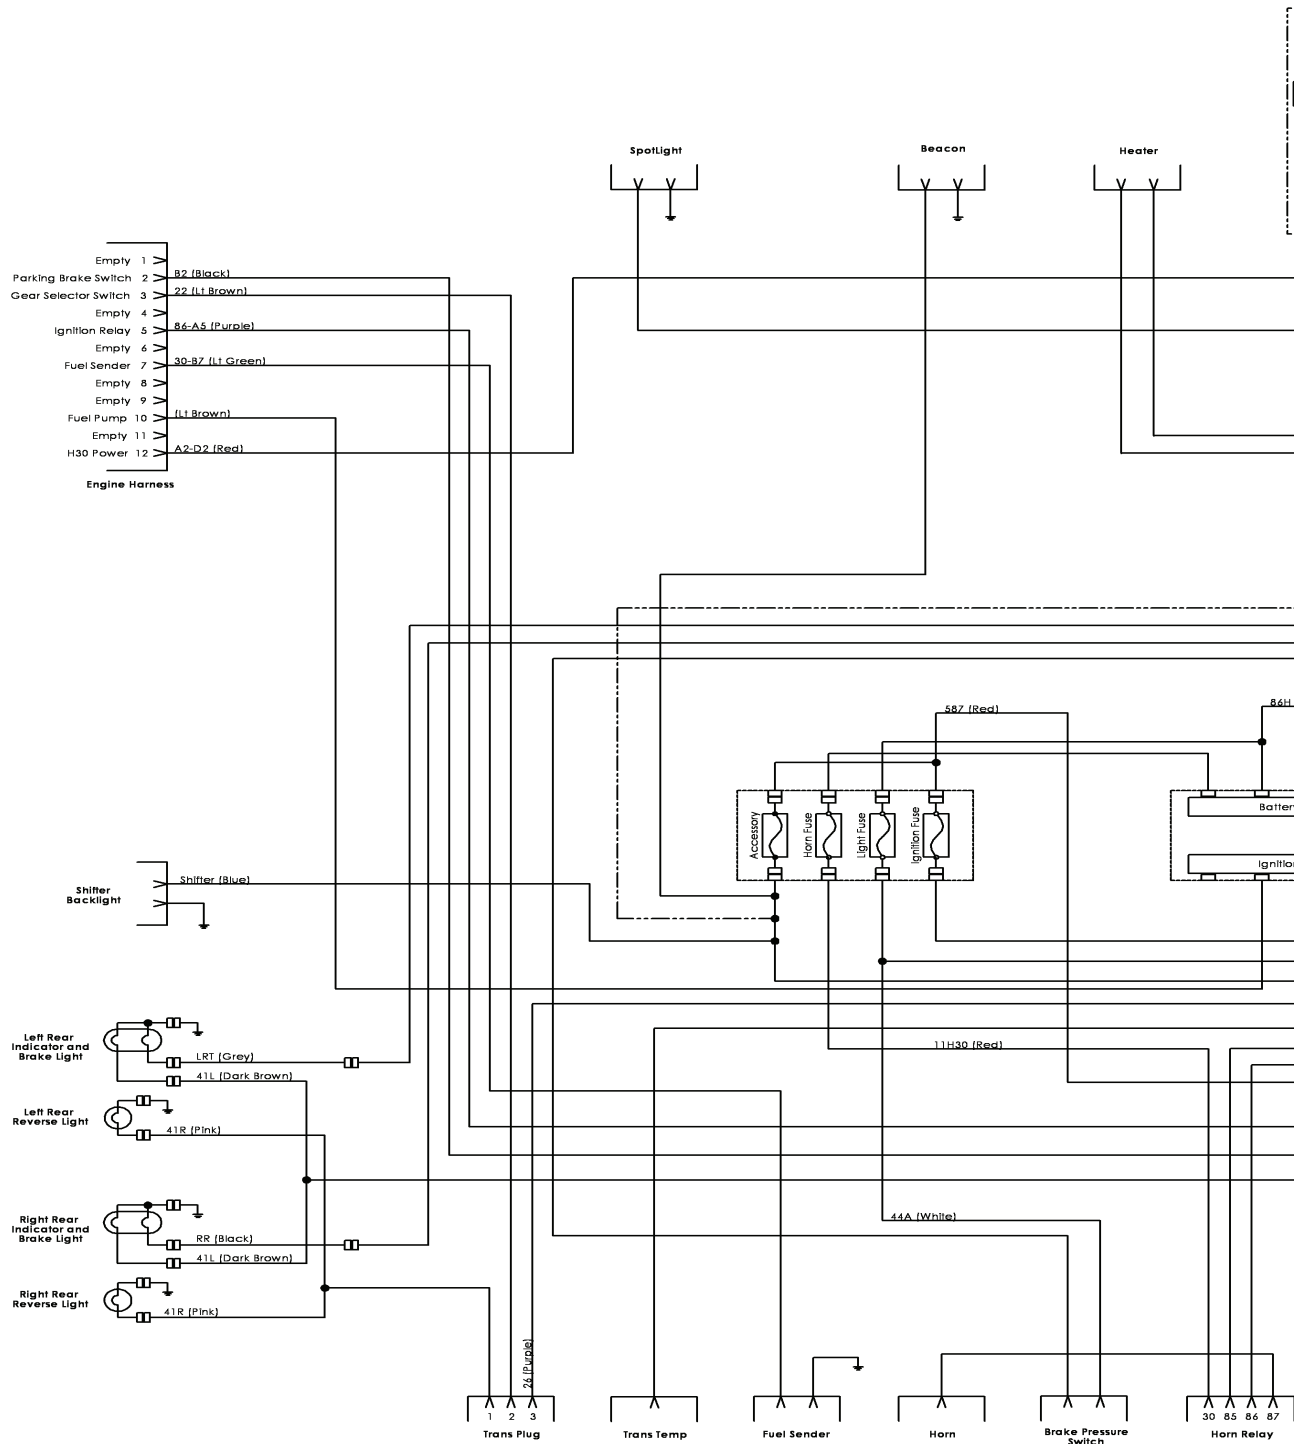

Vehicle Harness, Tier2 4TNV98

ELECTRICAL SCHEMATICS


VEHICLE WIRING HARNESS— YANMAR TIER II DIESEL

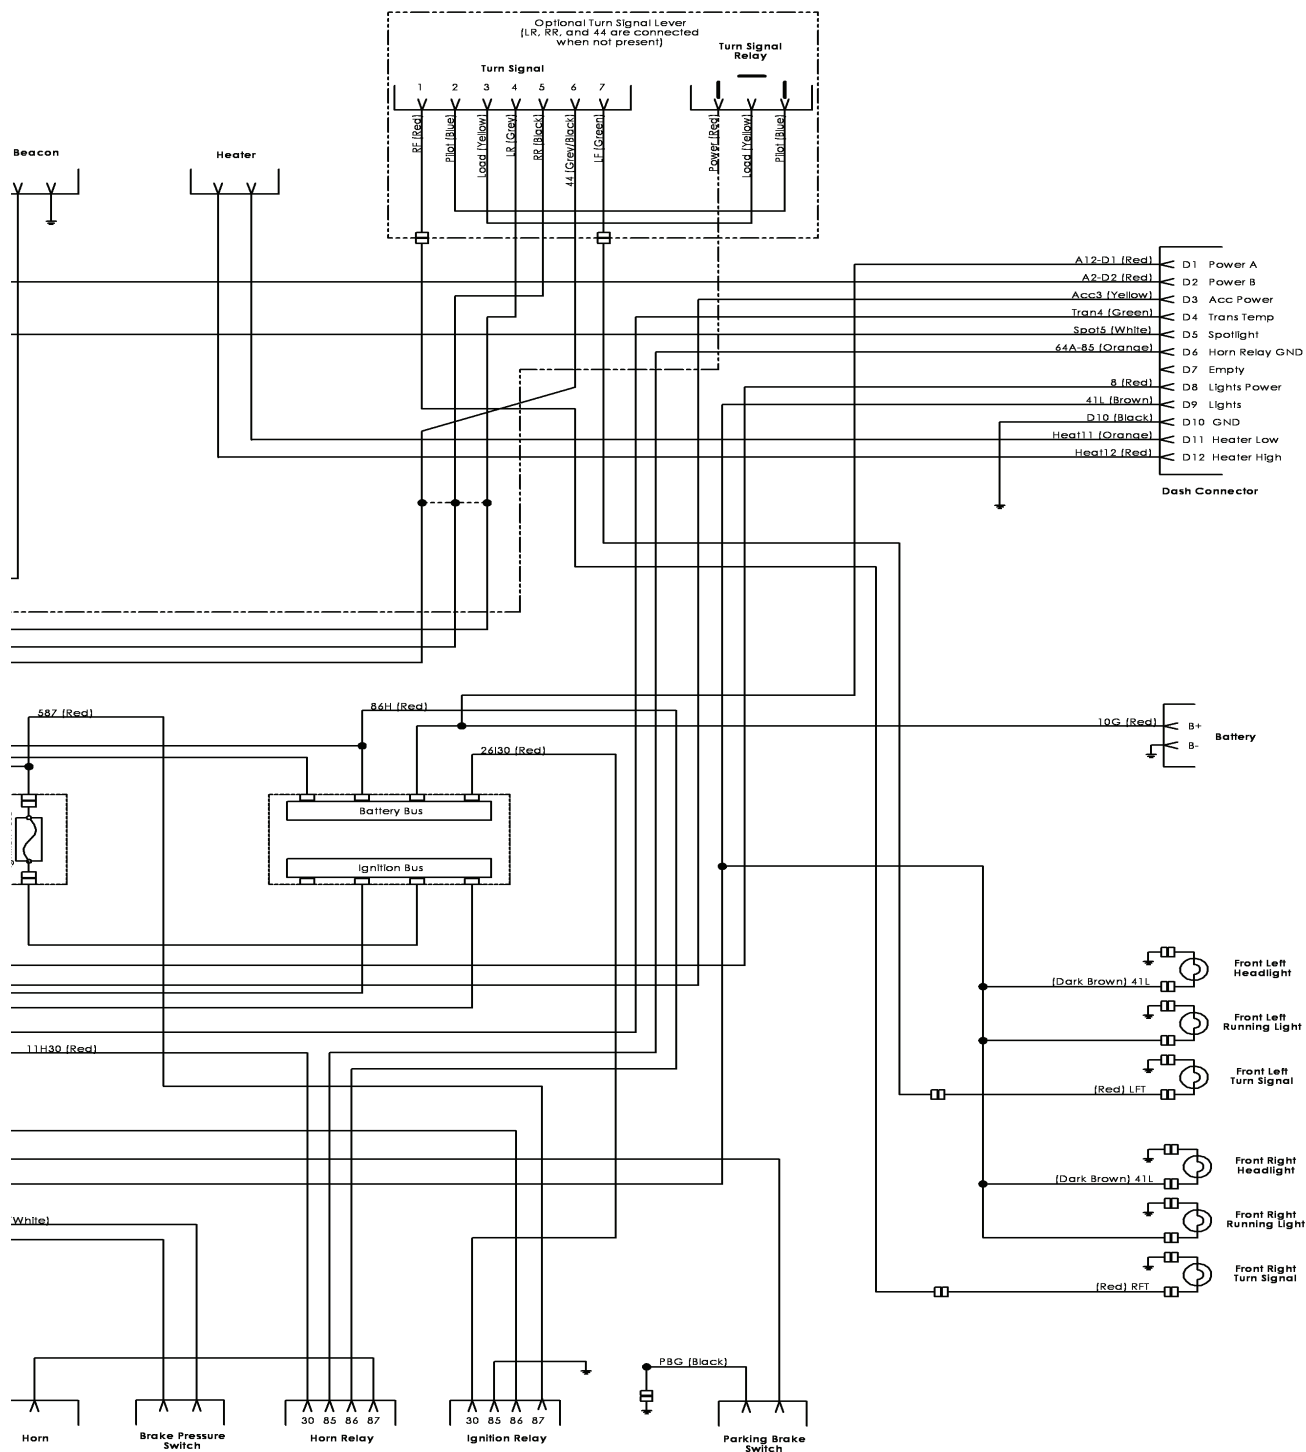

Vehicle Harness, Tier2 4TNV98

ELECTRICAL SCHEMATICS


VEHICLE WIRING HARNESS – YANMAR TIER III DIESEL

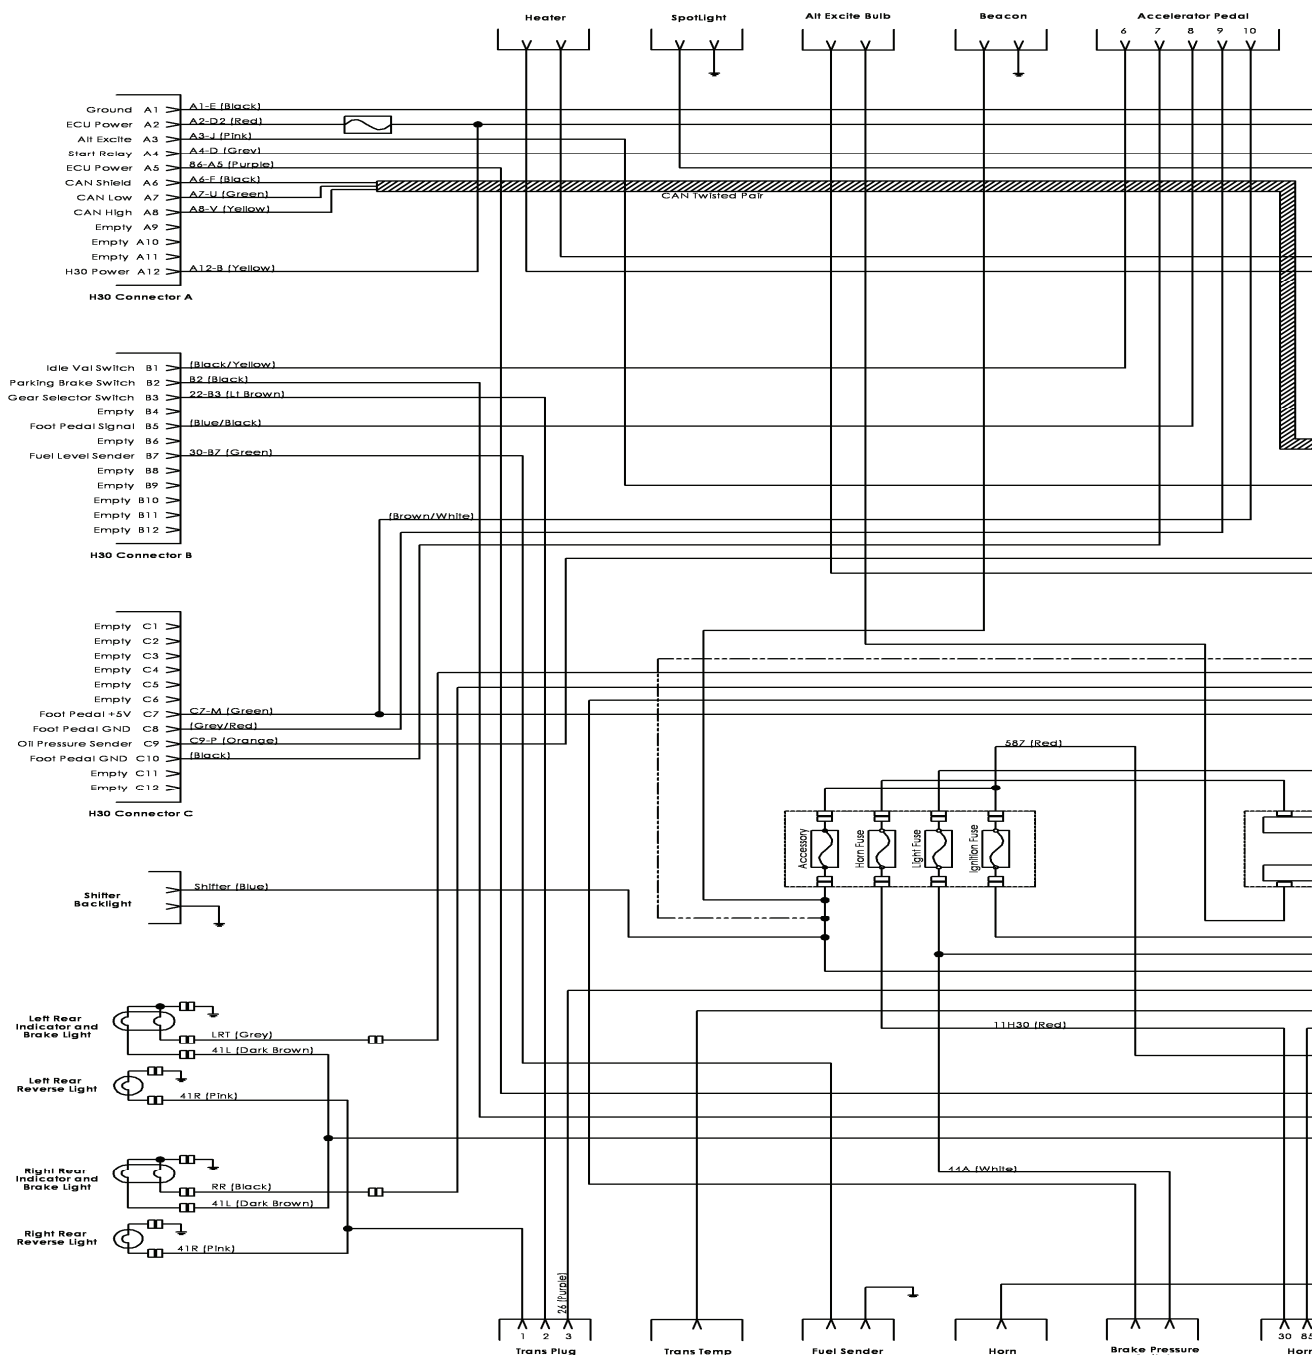

Vehicle Harness, Tier3 4TNV

ELECTRICAL SCHEMATICS


VEHICLE WIRING HARNESS— YANMAR TIER III DIESEL

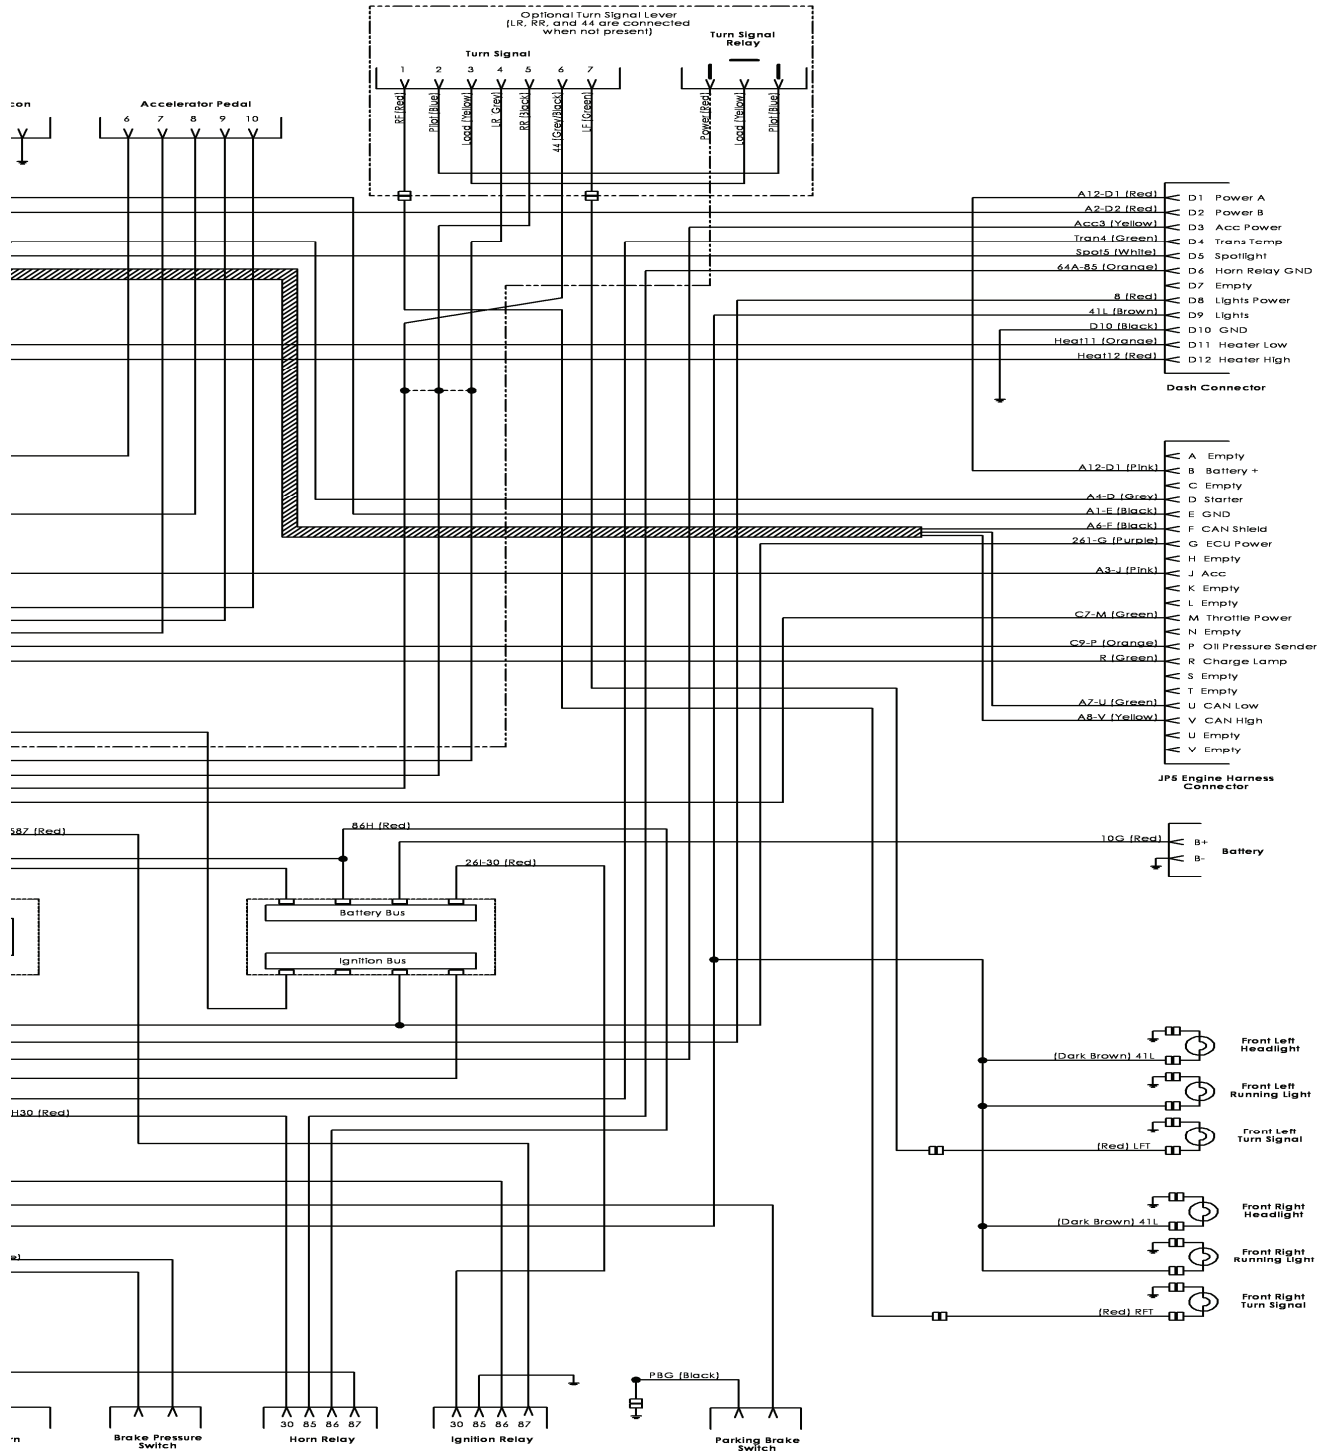

Vehicle Harness, Tier3 4TNV98


ELECTRICAL SCHEMATICS

CE OPTION –OPERATOR PRESENCE CIRCUIT WIRING DIAGRAM

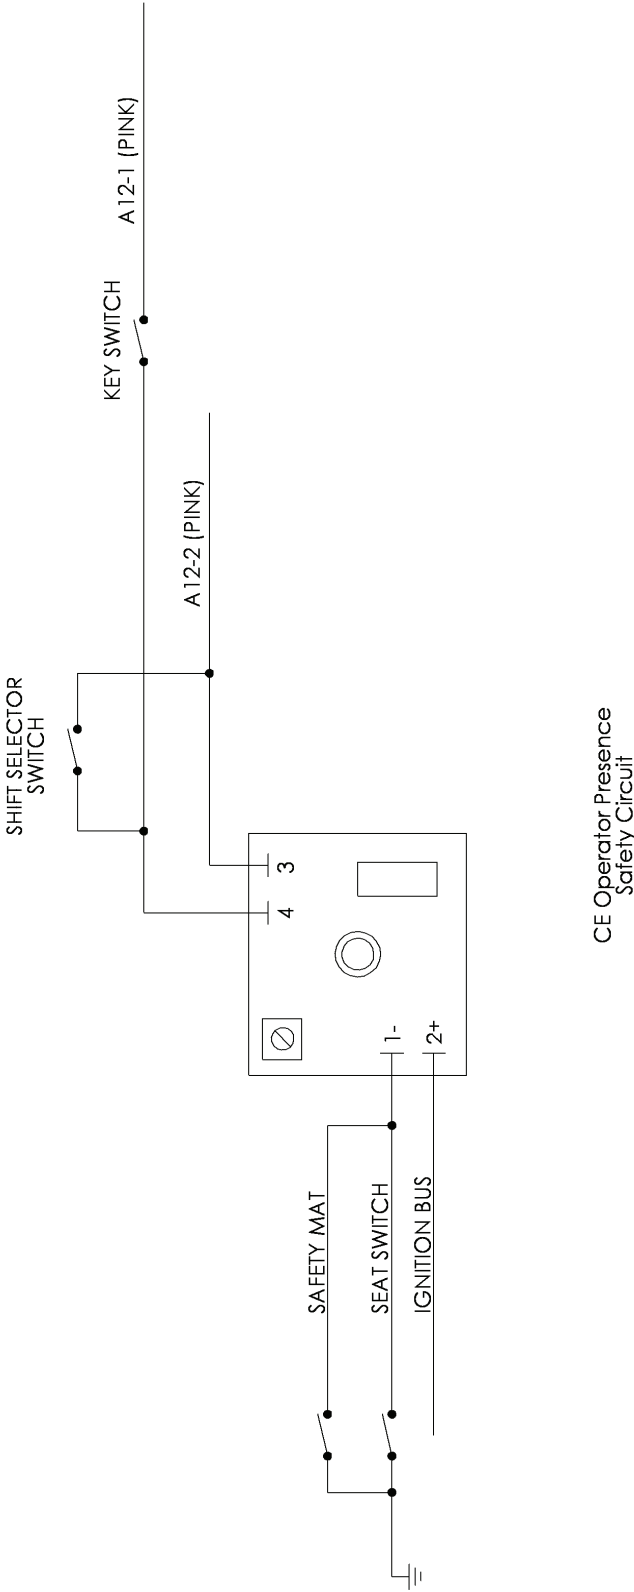




ELECTRICAL SCHEMATICS

CAB OPTION WIRING DIAGRAM

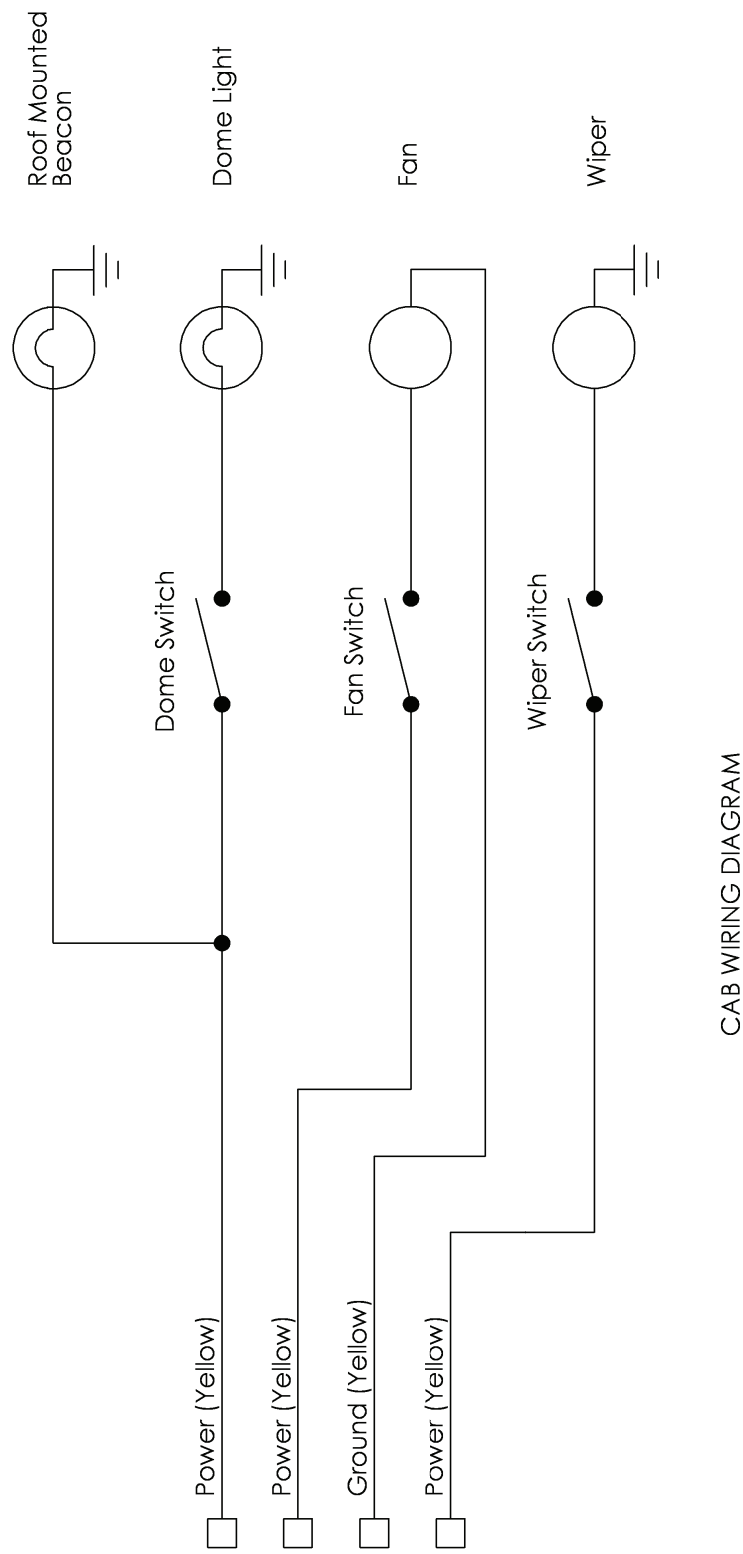

LIGHTS & ELECTRICAL

HEADLIGHT, TAILLIGHT & SPOTLIGHT ASSEMBLY

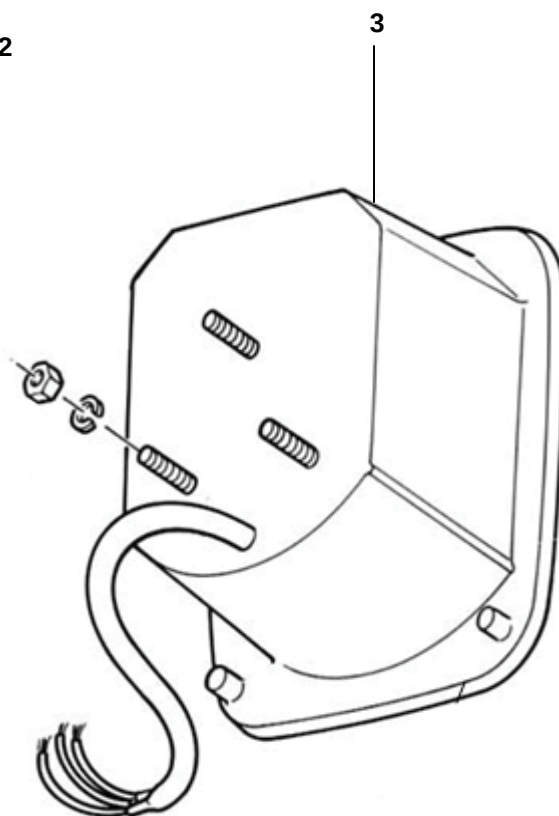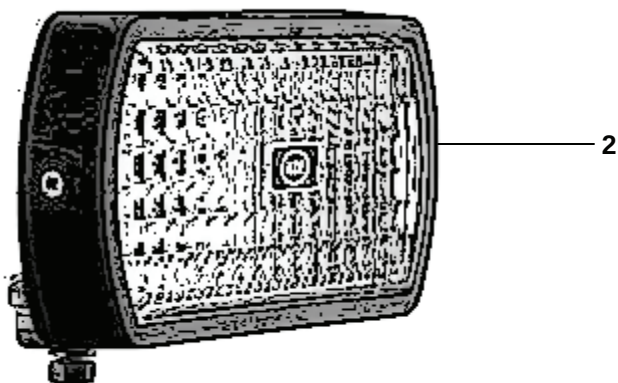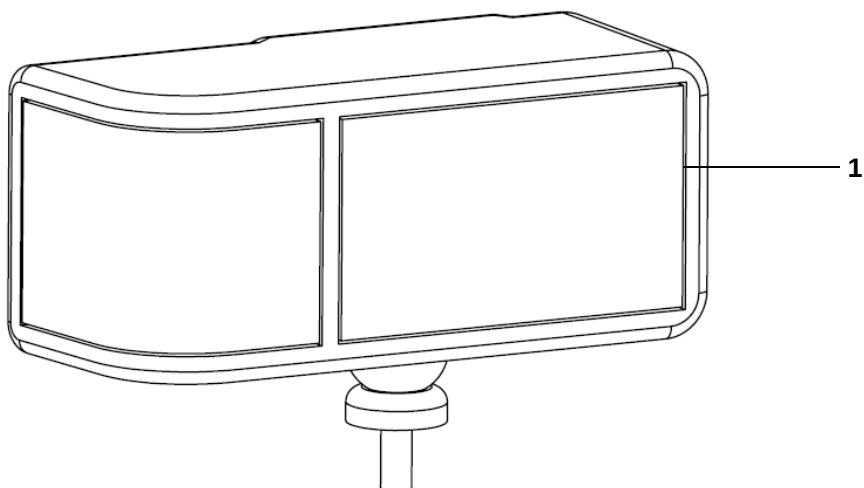

LIGHTS & ELECTRICAL

HEADLIGHT, TAILLIGHT, SPOT LIGHT ASSEMBLY

Item	Part Number	Qty	Description
1	A-TT4-00291-6	2	HEADLIGHT W/ (OPTIONAL)TURN SIGNAL
2	A-TT4-00291-5	1	REAR FACING SPOT LIGHT (OPTION)
3	A-TT4-00292	2	TAILLIGHT

TAILLIGHT ASSEMBLY

Item	Part Number	Qty	Description
4	73-1912	2	TAIL LENS COVER
5	1157	2	REPLACEMENT BRAKE LIGHT BULB
6	1156	2	REPLACEMENT REVERSE LIGHT BULB

HEADLIGHT & SPOTLIGHT

Item	Part Number	Qty	Description
7	H6545	2	REPLACEMENT HEADLIGHT SEALED BEAM
8	1157	2	REPLACEMENT TURN SIGNAL BULB
9	H3	1	REPLACEMENT BULB, SPOTLIGHT

OPTIONS NOT SHOWN


Item	Part Number	Qty	Description
10	AE-OPT-0076	2	ROOF MOUNTED TURN SIGNAL LAMP
11	AE-OPT-0099A	1	MASTER BATTERY DISCONNECT SWITCH PLOCKOUT LEVER KIT (OPTION)

BATTERY DISCONNECT & FUSES

Item	Part Number	Qty	Description
11	AE-OPT-0099	1	MASTER BATTERY DISCONNECT SWITCH
12	NPN	4	25 AMP ACG GLASS ROUND FUSE

OTHER ASSEMBLY


BODY ASSEMBLY

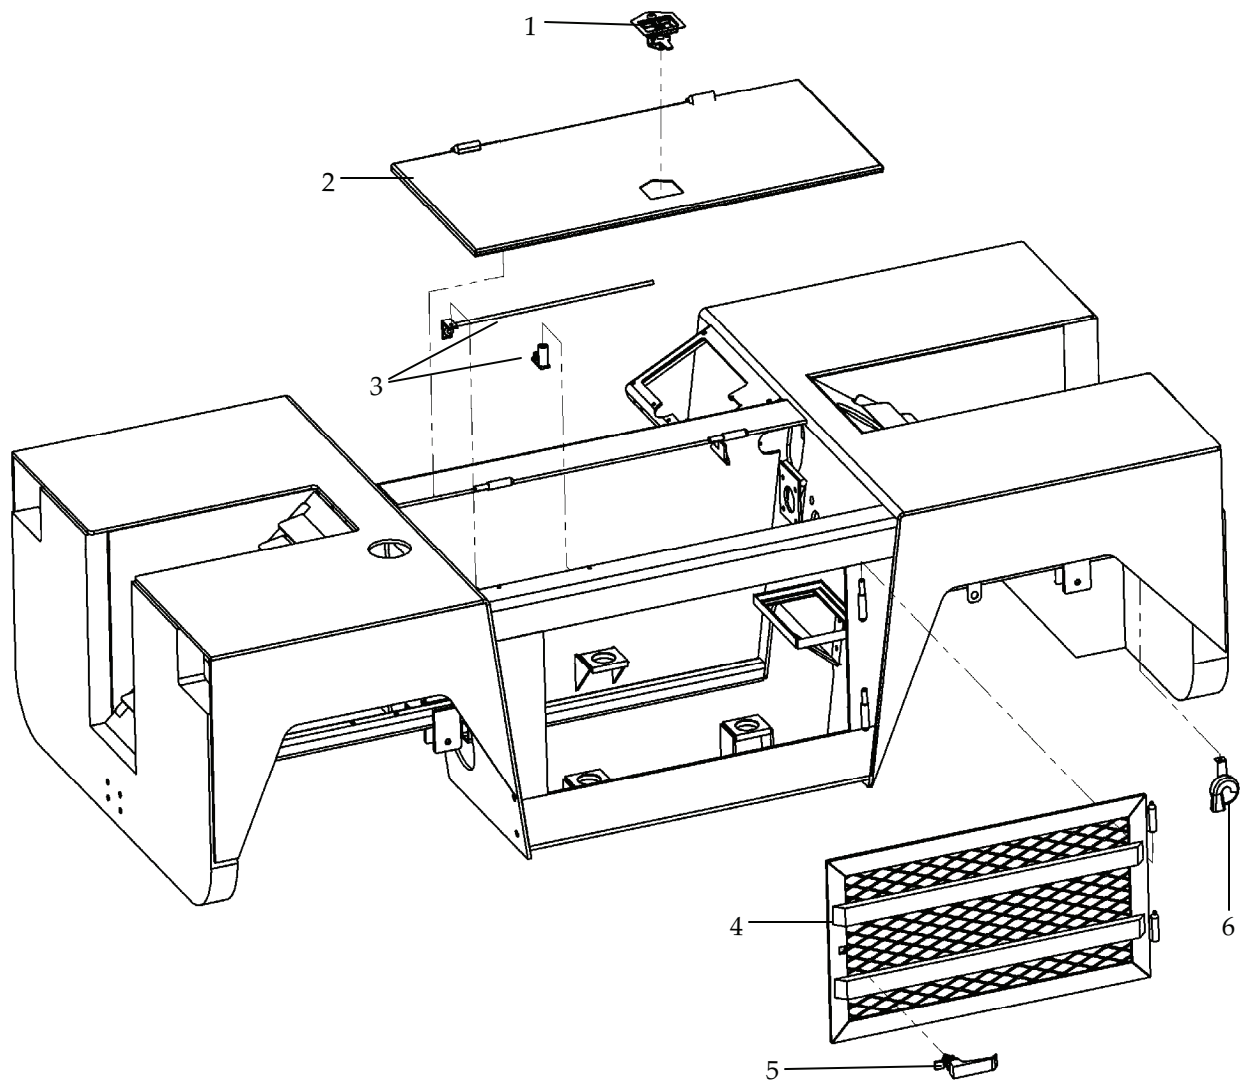

Item	Part Number	Qty	Description
1	C-TT4-0012-3	1	LOCKING T-HANDLE LATCH
2	C-TT4-0012	1	HOOD
3	NPN	1	HOOD PROP ASSEMBLY
4	D-TT4-0009-1	1	GRILL GUARD/ACCESS DOOR
5	62-10-603-20	1	LATCH FOR ACCESS DOOR
6	A-TT4-0052	1	HORN ASSEMBLY

OTHER ASSEMBLY


SEAT AND SEAT OPTIONS

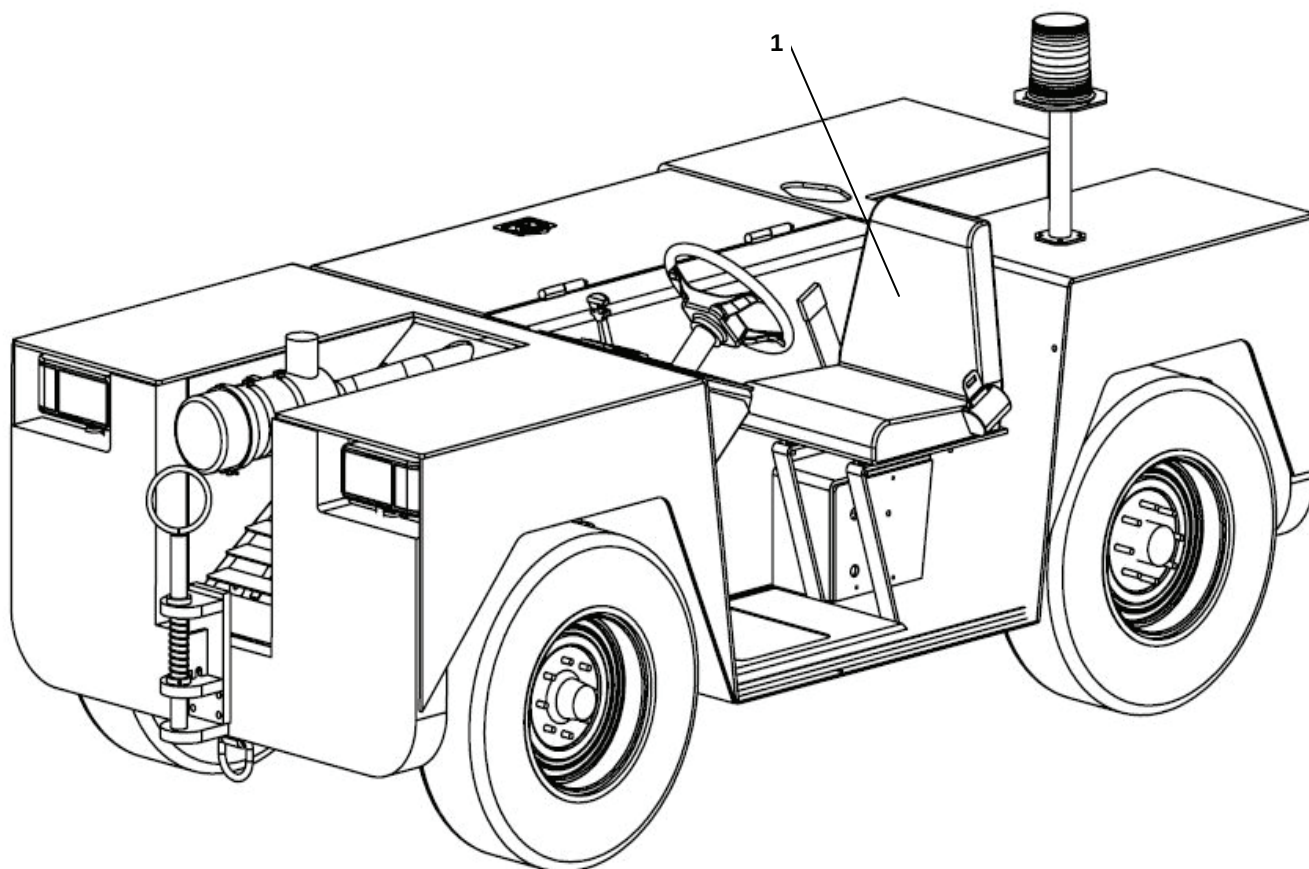

Item	Part Number	Qty	Description
1	A-TT4-0048-1	1	STANDARD SEAT
2	AE-OPT-0055-A	1	STANDARD SEAT BOTTOM CUSHION
3	AE-OPT-0090	1	STANDARD SEAT W/ KILL SWITCH(OPTION)
3	A-TT10-00048	1	BENCH SEAT (DUAL REAR WHEEL MODELS)
4	AE-OPT-0055-B	1	BENCH SEAT BACK CUSHION
5	AE-OPT-0055-C	1	BENCH SEAT BOTTOM CUSHION
6	AE-OPT-0183	1	BENCH SEAT W/ KILL SWITCH (OPTION)
7	E10000	1	SEAT BELT

WHEELS & TIRES


WHEEL & TIRE ASSEMBLY

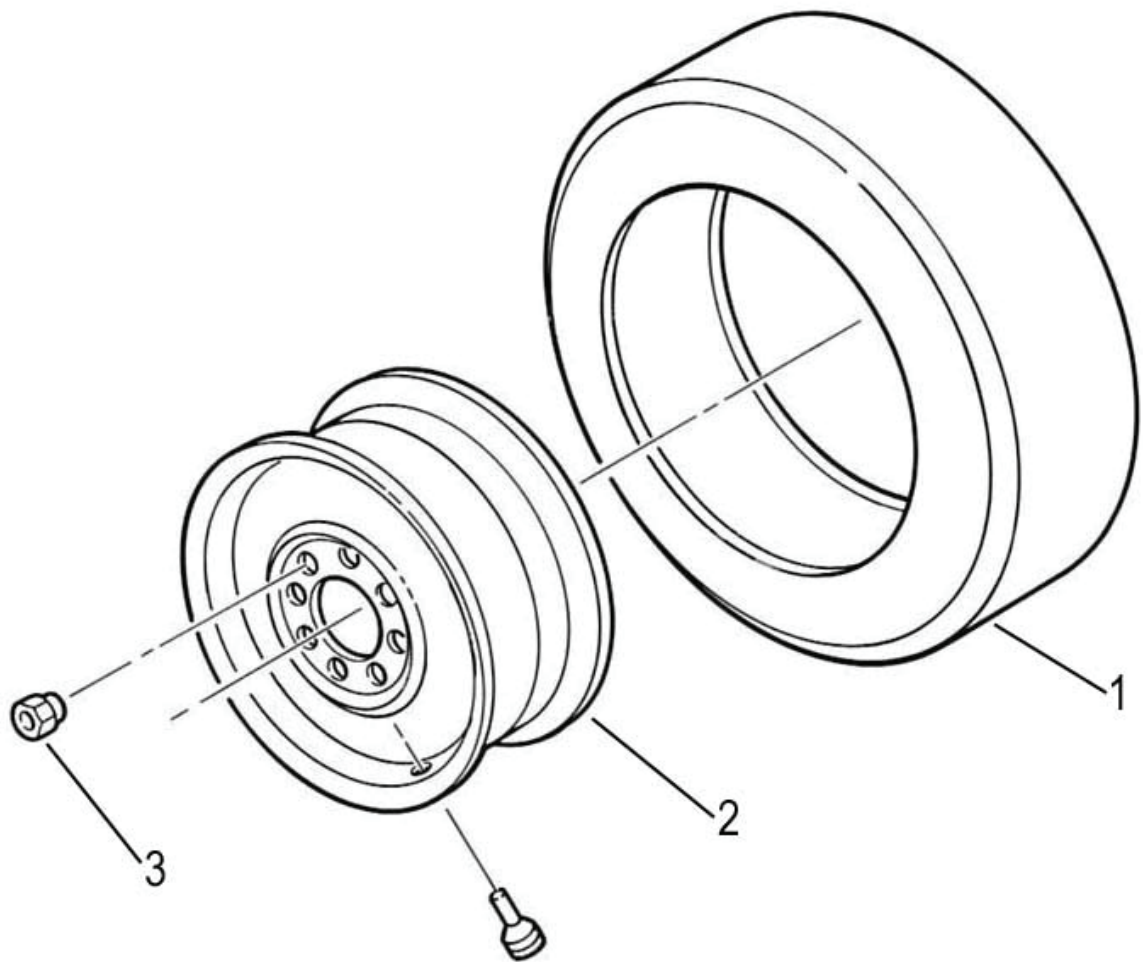

Item	Part Number	Qty	Description
1	A-TT4-00121	4	STANDARD TIRE 16.5"
2	A-TT4-00122	4	STANDARD RIM
3	A-TT4-00123	32	LUG NUT
4	A-TT8-00121	4	MUD & SNOW TIRE 16" (OPTION)
5	A-TT4-00122-1	4	RIM, MUD & SNOW TIRE 16" (OPTION)

WHEELS & TIRES


WHEEL & TIRE ASSEMBLY—DUAL REAR WHEEL MODELS

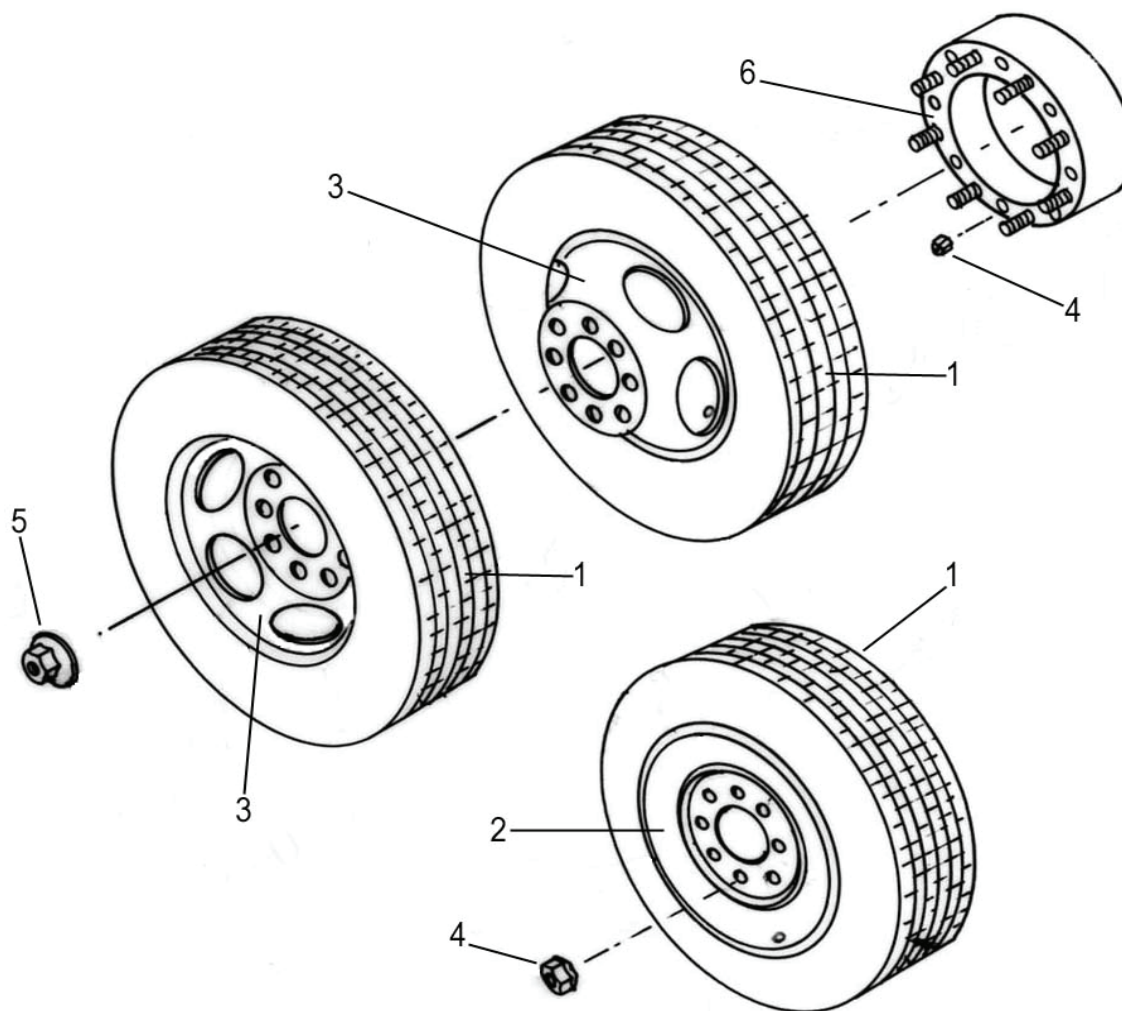

Item	Part Number	Qty	Description
1	A-TT8/2-00121-1	6	STANDARD TIRE 16"
2	A-TT4-00122-1	2	RIM 16"-FRONT
3	A-TT8/2-00126	4	RIM 16"-REAR
4	A-TT4-00123	32	LUG NUT
5	A-TT8/2-00129	16	WHEEL ADAPTER LUG NUT
6	A-TT8/2-00127	2	WHEEL ADAPTER

OPTIONS

HITCH OPTIONS

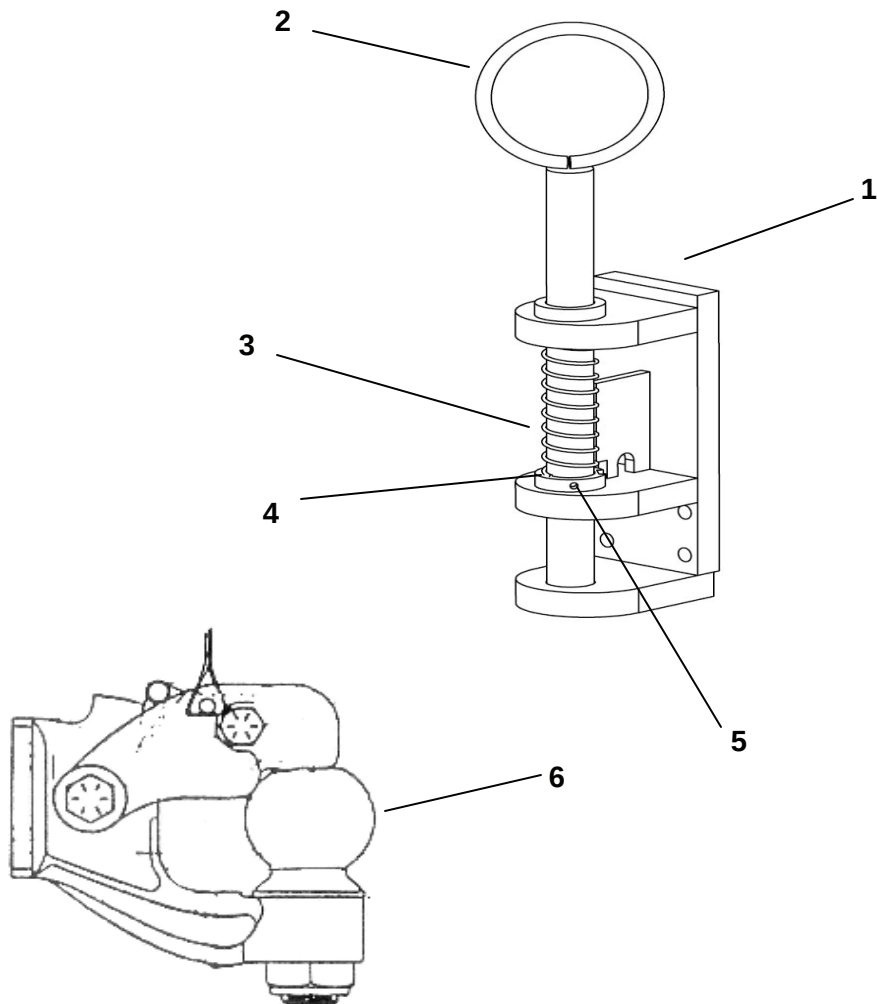


Item	Part Number	Qty	Description
1	AE-OPT-0033	1	E-HITCH 1 1/2 " PIN-COMplete ASSEMBLY
2	B-TT3-0008 DET2	1	E-HITCH GUIDE 1 1/2" GUIDE PIN WITH RING
3	B-TT3-0008A	1	E-HITCH SPRING
4	B-TT3-0008 DET5	1	LOCKING COLLAR
5	B-TT3-0008B	1	ROLL PIN
6	AE-OPT-0028	1	PINTLE HOOK
7	AE-OPT-0026	1	AIRLINE HITCH 3" PIN WITH CABLE (NOT SHOWN)
8	AE-OPT-0093	1	AIRLINE HITCH 2 3/8" PIN (NOT SHOWN)

* The above are standard hitch options. Please call for special hitch options information

OPTIONS


STROBE, BEACON & FLOOR MAT OPTIONS

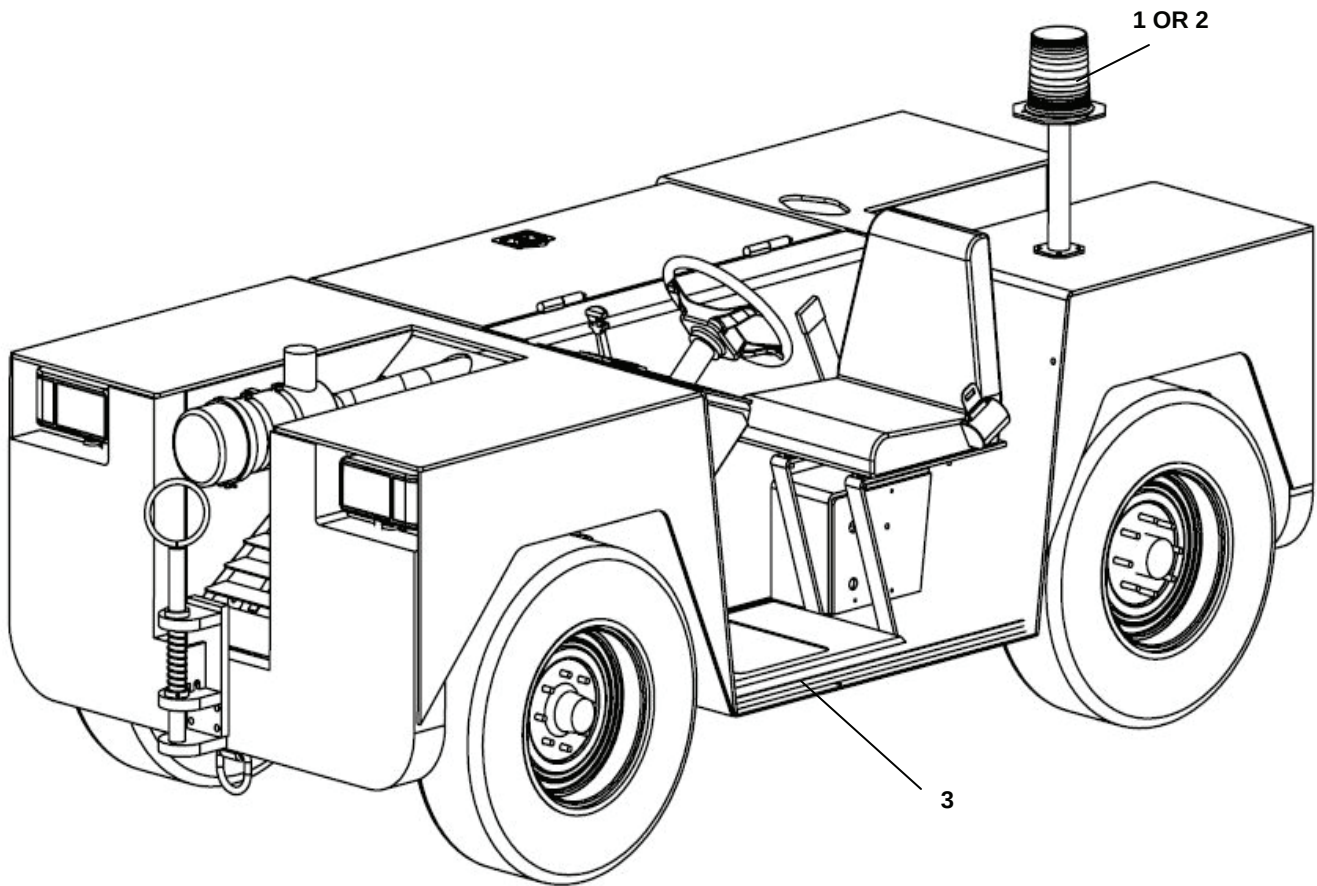

Item	Part Number	Qty	Description
1	AE-OPT-0002	1	AMBER ROTATING BEACON
1A	R5024BH	1	REPLACEMENT BULB 24VDC
1B	R5012BH	1	REPLACEMENT BULB 12VDC
2	AE-OPT-0007	1	STROBE
2A	129	1	REPLACEMENT BULB FOR STROBE
2B	AE-OPT-0009	1	1/2 COVER FOR STROBE
3	A-TT4-00450	1	BASIC FLOOR MAT(NO SENSOR)
3A	A-TT4-00450-1	1	OPERATOR SWITCHMAT (WITH SENSOR)
3B	A-TT10-00451	1	SWITCHMAT DELAY TIMER

OPTIONS

CAB OPTION

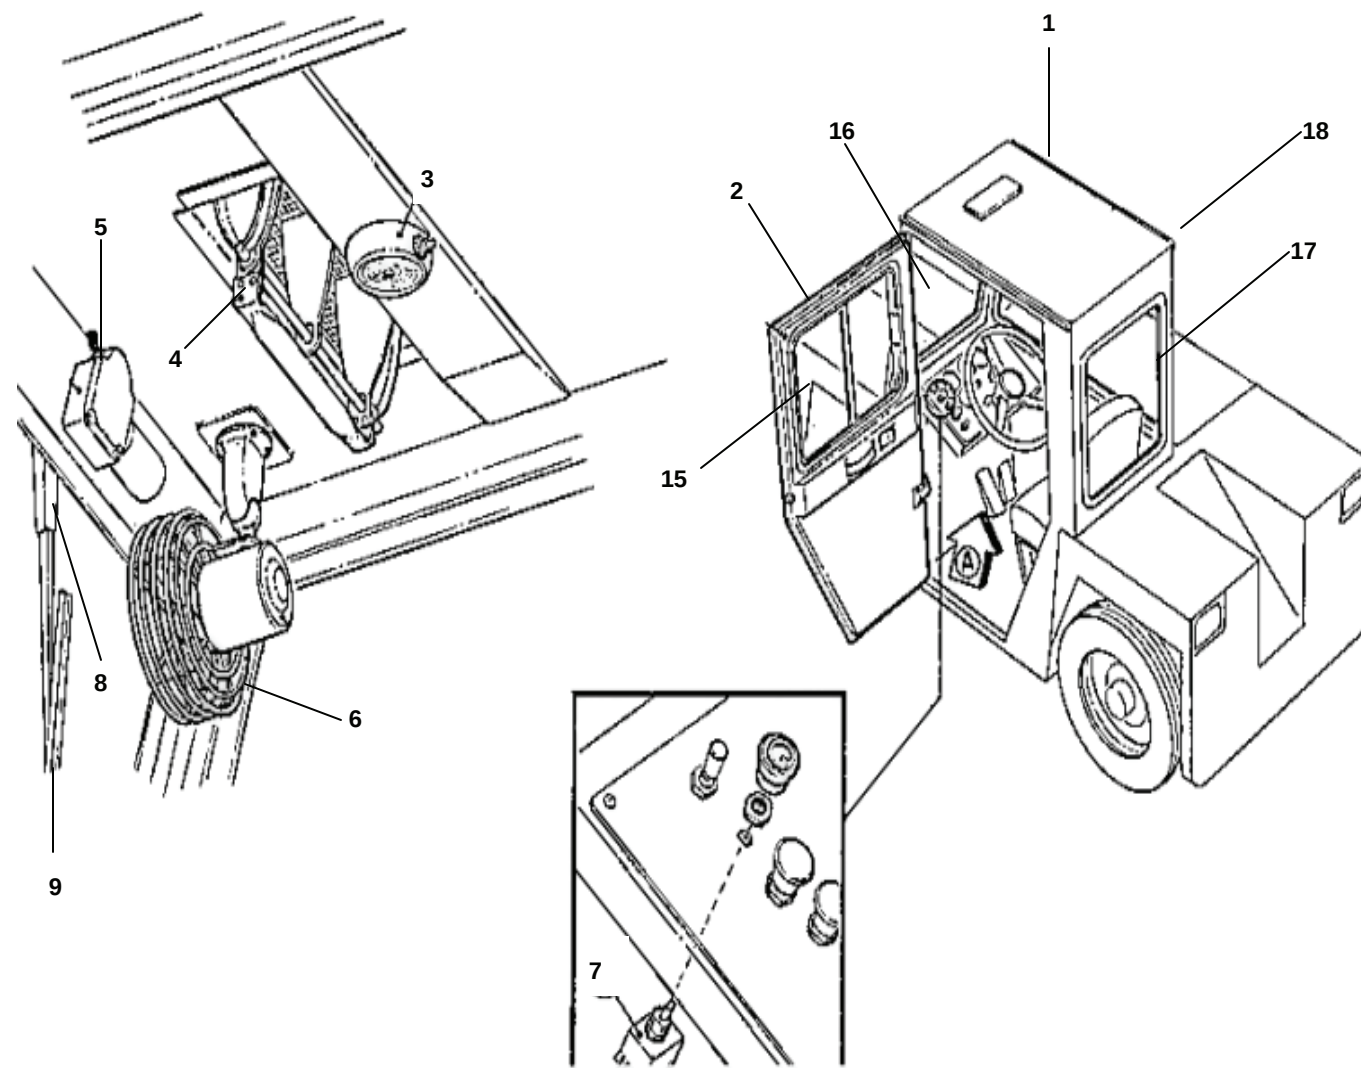


OPTIONS

CAB OPTION

Item	Part Number	Qty	Description
1	AE-OPT-0004	1	CAB ASSEMBLY COMPLETE
1	AE-OPT-0003	1	CAB ASSEMBLY COMPLETE (DUAL REAR WHEEL MODEL)
2	40502	1	DOOR ASSEMBLY COMPLETE
3	A-TT4-00553	1	DOMELITE
4	A-TT4-00554	1	ROOF VENT
5	A-TT4-00555	1	WIPER MOTOR
6	A-TT4-00556	1	DEFROST FAN
7	A-TT4-00609	1	HEATER FAN SWITCH
8	991013	1	WIPER ARM
9	990994	1	WIPER BLADE
10	40516	3	DOOR HINGE(NS)
11	40515	1	STRIKER PLATE(NS)
12	48717	1	OUTSIDE DOOR HANDLE(NS)
13	990237	1	INSIDE DOOR HANDLE(NS)
14	991529	2	DOOR STRAP(NS)
15	992518	1	DOOR WINDOW
16	992424	1	WINDSHIELD
16	992520	1	WINDSHIELD (DUAL REAR WHEEL MODEL)
17	991867	1	REAR WINDOW
17	992521	1	REAR WINDOW (DUAL REAR WHEEL
18	991809	1	SLIDING WINDOW
19	992519	1	FRONT QUARTER WINDOW

OPTIONS

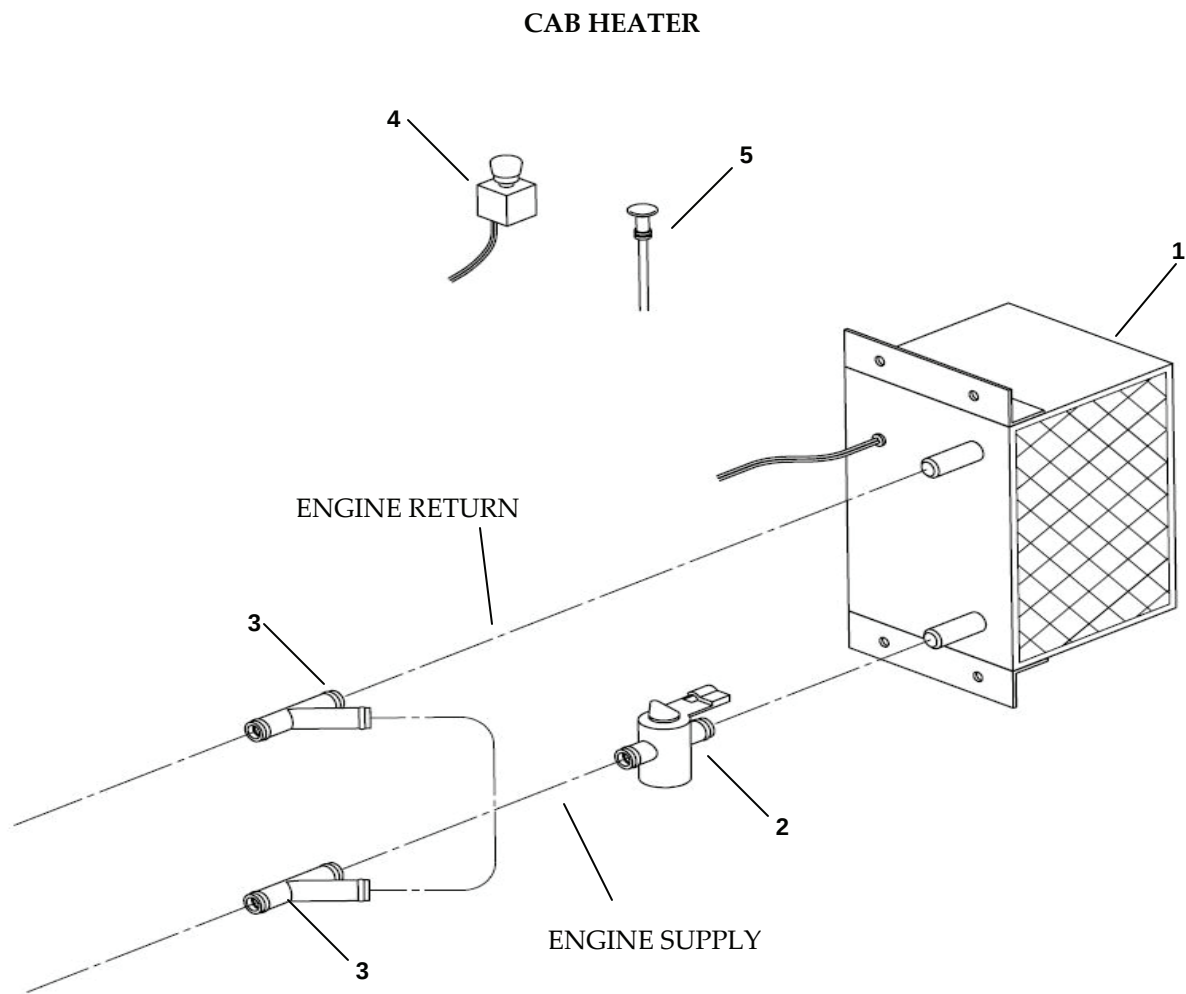

Item	Part Number	Qty	Description
1	A-TT4-00601	1	HEATER ASSEMBLY
2	A-TT4-00607D	1	CONTROL VALVE
3	02220200A	2	Y CONNECTOR
4	A-TT4-00609	1	HEATER FAN SWITCH
5	A-TT4-00608	1	TEMPERATURE CONTROL CABLE
6	NPN	2	5/8 HEATER HOSE (NOT SHOWN)

OPTIONS

OTHER OPTIONS LISTED NOT SHOWN

Item	Part Number	Qty	Description
1	AE-OPT-0001	1	BACK UP ALARM
2	AE-OPT-0086	1	INTERCOM JACK
3	AE-OPT-0094	1	12V ACCESSORY OUTLET

MAINTENANCE

DAILY OPERATOR RESPONSIBILITIES

Proper Fluid Checks

Engine Oil

Check engine oil with the unit on a level surface, the key in the "OFF" position, the shifter position in "PARK" and parking brake applied. Open side access door. Remove dipstick from crankcase, wipe it with a cloth. Insert it fully and take out it gently again. Check the oil level by the marks on the dipstick. The oil level must be between the "Max" level and the "Min" level. DO NOT OVERFILL!

Coolant

DO NOT remove recovery tank cap or check coolant level while engine is hot! With engine cool, the key in the "OFF" position, the shifter position in "PARK" and the parking brake applied, open hood, set hood prop and look at left side of recovery tank. The reservoir tank is translucent, so the fluid is readily visible without removing the cap. Fluid level should be at the "Cold fill level".

Transmission Fluid

With unit in park and parking brake set in the "ON" position, start engine. Open side access door. Remove dipstick from transmission case, wipe it with a cloth. Insert it fully and take it out gently again. Check the fluid level by the marks on the dipstick. The transmission fluid level must be between the "Max" level and the "Min" level on the dipstick. DO NOT OVERFILL.

Brake Fluid

Check brake fluid with the unit on a level surface, the key in the "OFF" position, the shifter position in "PARK" and parking brake applied. Open hood, set hood prop and locate master cylinder reservoir. Remove spring clips and take off lid. Brake fluid level should be at the top of reservoir.

Power Steering Fluid


Check power steering fluid with key in "OFF" position, the shifter position in "PARK" and the parking brake applied. Open hood, set hood prop remove cap from power steering reservoir. Fluid level should be between the arrows on the indicator stick. DO NOT OVERFILL.

Recommended Filters:

Engine oil	129150-35153	Fuel Filter	119802-55801
Air Cleaner	Donaldson P601437	Fuel/Water Separator Filter	129242-55730
Transmission Filter	Wix 58705	Lubricity Filter (Tier II only)	Fleetgard FS20000

MAINTENANCE

LUBRICATION CHART

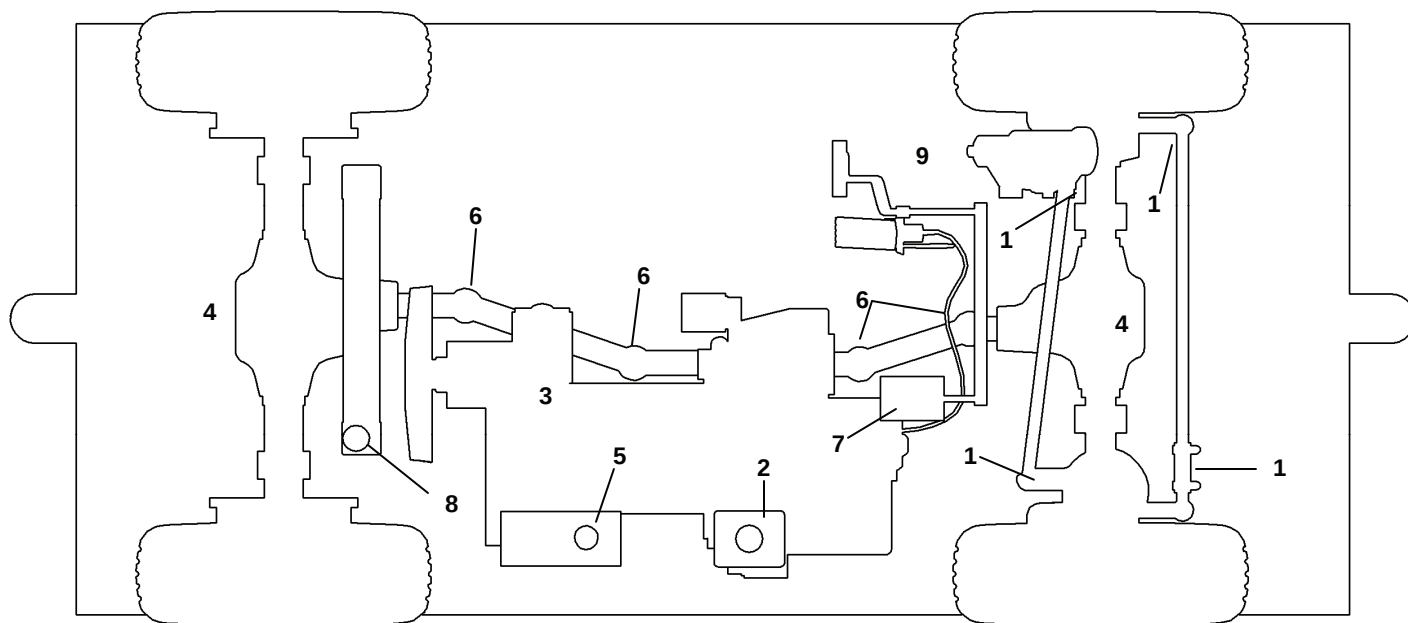

Item	Identification	Service	Lubricant
1	STEERING LINKAGE	LUBE	EP MULTIPURPOSE GREASE
2	TRANSMISSION OIL	CHECK	DEXTRON III TYPE TRANSMISSION FLUID
3	ENGINE OIL	CHANGE	15W40 CD OE/HDO (MIL-L-2104)
4	DRIVE AXLES	CHECK	80-90 GEAR OIL (MIL-L-2105)
5	POWER STEERING PUMP	CHECK	AUTOMOTIVE POWER STEERING FLUID
6	DRIVE SHAFT	LUBE	EP MULTIPURPOSE GREASE
7	BRAKE MASTER CYLINDER	CHECK	DOT 3 BRAKE FLUID
8	ENGINE COOLANT	CHECK	ETHYLENE GLYCOL/ WATER (50/50 MIX) MIL-A-46153
9	ACCELERATOR CABLE	LUBE	**SUMMER MONTHS WD40 PENETRATING OIL WINTER MONTHS ANTI FREEZE

*CHECK WHEN ENGINE IS AT OPERATING TEMPERATURE

**IT IS RECOMMENDED BY MANUFACTURER TO PROLONG THE LIFE OF YOUR ACCELERATOR CABLE THAT THE ABOVE LUBRICATION BE FOLLOWED

MAINTENANCE

PREVENTATIVE MAINTENANCE SCHEDULE

	Description of Check/Service	Operational Hours							
System	X -Check * Requires Service ** Contact your local Yanmar distributor or dealer	Daily	50	250	500	750	1000	1250	1500
Engine Oil	Engine Oil and filter *first 50 and every 250 hours thereafter	X	*	*	*	*	*	*	*
Transmission	Transmission Fluid	X							
Steering	Power Steering Fluid	X							
	Steering Linkage				X		X		X
Cooling System	Coolant Level Check X Flush *	X					*		
	Check & Clean Radiator Fins *every 50 hours		*						
	Coolant Hoses		X	X	X	X	X	X	X
	Belts		X	X	X	X	X	X	X
Fuel System	Fuel System Leak Check		X	X	X	X	X	X	X
	Fuel Filter *every 500 hours				*		*		*
	Drain Water/Fuel Separator *every 50 hours	X	*						
	Clean Water/Fuel Filter *every 250 hours			*	*	*	*	*	*
	Lubricity Filter *every 250 hours			*	*	*	*	*	*
Air Cleaner	Air Cleaner Element *every 500 hours				*		*		*
Engine Compartment	Engine Rubber Mounts		X	X	X	X	X	X	X
	Lap Intake/Exhaust Valve Seats						**		
	Adjust Intake/Exhaust Valve Clearance						**		
	Check & Adjust Governor Lever & Engine Speed Control *every 250 hours	X		X	X	X	X	X	X
	Inspect Crankcase Breather System Valve Cleaning								**
	Inspect,Clean &Check Injection Nozzles								**
Electrical	Electrical Wires and Connections		X	X	X	X	X	X	X
	Battery Cables	X							
Throttle	Throttle Controls		X	X	X	X	X	X	X
Brake System	Brake Fluid	X							
	Brake Pads (Front)				X		X		X
	Drum Brake Lining (Rear)				X		X		X
	Brake Lines and Hoses				X		X		X

MAINTENANCE

PREVENTATIVE MAINTENANCE SCHEDULE

	Description of Check/Service	Operational Hours								
System	X -Check * Requires Service ** Contact your local Yanmar distributor or dealer	Daily	50	250	500	750	1000	1250	1500	2000
Suspension	Suspension U-Bolts 110-120 FT LBS		*							
	Drive Axles				*		*		*	*
	Axle Shaft U-joint				*		*		*	*
	Driveshaft			*	*	*	*	*	*	*
Tires	Rotate Tires *every 500 hours				*		*		*	*

This section below has been added to for your record keeping convenience

Date Service Performed	
Tug Serial Number	
Tug Hours	
Technician	

MAINTENANCE

TT4-8 DIESEL SPECIFICATIONS & CAPACITIES

MODEL #	YANMAR 4TNV98		
DESCRIPTION:	Vertical In-line diesel, 3.3 Liter, four cylinder, direct injection engine		
# OF CYLINDERS	4 IN-LINE		
BORE & STROKE INCHES (mm)	3.858 X 4.331 in (98 X 112 mm)		
DISPLACEMENT, CUBIC INCHES (L)	202, 502 cu in (3.319L)		
COMPRESSION RATIO	17:1 (2.8)		
FUEL	No 2 DIESEL		
ALTERNATOR	55 AMP, 12 VOLT, NEG GROUND		
ENGINE WEIGHT FULLY DRESSED LB (KG) (PROX)	557 (253)		

BATTERY

Group 65 , 860 Cold Cranking Amps automotive battery

ENGINE CRANKCASE CAPACITIES

ENGINE	U.S. QUARTS	IMPERIAL QUARTS	LITRES
3.3 L (DIESEL ***	11.1	9.24	10.5
OIL TYPE SAE 15W40CD *ONLY USE OIL THAT IS RATED FOR A DIESEL ENGINE			

FUEL TANK REFILL CAPACITIES

U.S. GALLONS	IMPERIAL GALLONS	LITERS
24.0	19.98	90.8
USA -SAE (SOCIETY OF AUTOMOTIVE ENGINEERS) NO. 2-D, NO. 1-D, ASTM.D975-94 JAPAN- JIS K2204 GRADE NO 2 EUROPEAN UNION- EN590:96 INTERNATIONAL ISO 8217 DMX UNITED KINGDOM- BS 2869-AL OR A2 KOREA- KSM-2610 CHINA- GB252 *Please refer to Yanmar Engine Instruction Manual for further information		

MAINTENANCE

TT4-8 DIESEL SPECIFICATIONS & CAPACITIES

TRANSMISSION REFILL CAPACITIES

ENGINE	U.S. PINTS	IMPERIAL PINTS	LITRES
3.3 L DIESEL	8.00	6.60	3.80
* USE DEXTRON III TYPE TRANSMISSION FLUID OR EQUIVALENT			
**ADD 9 PINTS, 7.5 IMPERIAL PINTS OR 4.25 LITERS IF TORQUE CONVERTOR HAS BEEN DRAINED			

ENGINE COOLING SYSTEM REFILL CAPACITIES

ENGINE	U.S. QUARTS	IMPERIAL QUARTS	LITRES
3.3 L DIESEL	16.00	13.30	15.10
* A 50/50 MIXTURE OF GLYCOL AND CLEAN WATER			

BRAKE SYSTEM

The brake system is power assisted hydraulic, front disc type and rear drum type. USE DOT 5 BRAKE FLUID.

STEERING SYSTEM

The steering system is power assisted hydrostatic type. EQUIVALENT SPEC FOR GM 9985010, CHRYSLER MS-5931 OR FORD ESW-M2C128-C AND D

AXLE REFILL CAPACITIES

AXLE	U.S. PINTS	IMPERIAL PINTS	LITRES
FRONT STEER – NON DRIVE	N/A	N/A	N/A
FRONT DRIVE AXLE	5.20	4.37	2.48
REAR DRIVE AXLE	8.50	7.00	3.75
* SERVICE REFILL CAPACITIES ARE DETERMINED BY FILLING TO THE BOTTOM OF THE FILLER HOLE			
**USE 80W90 HYPOID GEAR LUBRICANT			

MAINTENANCE

YANMAR ENGINE TROUBLE SHOOTING		
SYMPTOM	PROBABLE CAUSE	ACTION
Indicator Turns On-Engine Running		
Engine Coolant Indicator	Low engine Coolant	Add engine coolant
	Dirty radiator fins	Clean the radiator fins
	Engine coolant leaking	See authorized Yanmar industrial engine dealer or distributor
	V-belt loose or damaged	Adjust V-belt or replace
	Contaminated engine coolant	See authorized Yanmar industrial engine dealer or distributor
	Faulty engine coolant pump	
Battery Indicator	V-belt loose or damaged	Adjust V-belt or replace
	Battery failure	Check battery condition
	Faulty alternator	See authorized Yanmar industrial engine dealer or distributor
Indicator Does Not Turn ON-Key Switch is Turned to ON(OFF-ON) Engine Not Running		
	Faulty electrical wiring or faulty indicator	See authorized Yanmar industrial engine dealer or distributor
Indicator Stays On-Key Switch is Turned from Start to On(START-ON)-Engine Not Running		
Battery Indicator stays ON	Faulty alternator	See authorized Yanmar industrial engine dealer or distributor
Engine oil pressure indicator stays ON	Faulty engine oil pressure switch	see authorized Yanmar industrial engine dealer
	No or low level of engine oil	Check and adjust oil level as necessary
	Clogged engine oil filler	Replace engine oil filter

MAINTENANCE

YANMAR ENGINE TROUBLE SHOOTING		
SYMPTOM	PROBABLE CAUSE	ACTION
Engine Does Not Start		
Starter motor operates but engine does not start	No diesel fuel	Refuel and prime fuel system
	Air in fuel system	Prime fuel system
	Improper diesel fuel	Replace with recommended diesel fuel
	Clogged fuel filter	Replace fuel filter
	Poor fuel injection	See authorized Yanmar industrial engine dealer or distributor
	Compressed air leakage from intake/exhaust valves	
	Faulty engine stop solenoid	
	Starter motor does not operate or rotates too slowly(engine can be turned manually)	Battery needs charging
Faulty starter switch		Clean terminals, retighten
Faulty starter motor		See authorized Yanmar industrial engine dealer or distributor
Engine cannot be manually turned		
White or Black Exhaust Smoke		
Black exhaust smoke	Engine overload	Reduce load
	Clogged air cleaner element	Clean element or replace
	Improper diesel fuel	Replace with recommended diesel fuel
	Faulty spraying of fuel injection	See authorized Yanmar industrial engine dealer or distributor
	Excessive intake/exhaust valve clearance	
White exhaust smoke	Improper diesel fuel	Replace with recommended diesel fuel
	Faulty spray pattern of fuel injection	See authorized Yanmar industrial engine dealer or distributor
	Fuel injection timing delay	
	Engine burning oil	

MAINTENANCE

TIPS FOR INCREASED ALL WEATHER TRACTION DURING AIRCRAFT PUSHBACK

- 1.Reduce air pressure in pneumatic tires from 60 PSI to as low as 25 PSI. (**restore air pressure to 60 psi as soon as weather emergency ends).
 - 2.When pushing with All Wheel Drive tractors, make sure the tow bar is level or slightly downhill toward tractor.
 - 3.When towing with Rear Wheel Drive-raise hitch height.
 - 4.When pushing with Rear Wheel Drive-lower hitch height.
- Note: These strategies(2, 3 and 4) maximize all weather traction.
- 5.When pushing aircraft on ice or icy snow with All Wheel Drive, a wheel may loose traction (wheel spin). To stop front wheel spin, apply some service brake gradually with left foot until wheel spin stops and hold, while continuing the pushback. Coordinate the left foot service brake pressure and the right foot accelerator, to maintain a smooth pushback. To stop rear wheel spin, apply parking brake with lever until it stops while continuing the pushback.
 - 6.On ice or snow use chains or cables. If the use of chains is prohibited, there are traction cables that serve the same function as chains but are much easier to mount and are very kind in terms of abrasion to all surfaces.
 - 7.Keep fuel tank full, as much as possible.
 - 8.Consult with Eagle Tugs factory for additional assistance.

MAINTENANCE

FRONT END ALIGNMENT PROCEDURE

Find center line of tire front and back

Check with tape measure to see difference

The front should be $\frac{1}{16}$ inch more than the rear

$\frac{1}{16}$ inch toe out, if less or greater loosen the two bolts on the tie rod clamp

Turn clamp in or out to achieve desired setting— $\frac{1}{16}$ in toe out

Retighten two bolts on the tie rod clamp

