

**NOTE:**

On-Board Programming for use in most GM vehicles for model years 2006-2010. Some vehicles may require a dealer or aftermarket programming tool. Most GM vehicles for model years 2011-2012 require a dealer or aftermarket programming tool.

USE THIS PROCEDURE FOR VEHICLES WITH DRIVER INFORMATION CENTER BUTTONS:**RELEARN REMOTE:**

This display allows you to match Remote Keyless Entry (RKE) transmitters to your vehicle. This procedure will erase all previously learned transmitters. Therefore, they must be relearned as additional transmitters.

1. Press the vehicle information button until PRESS V TO RELEARN REMOTE displays.
2. Press the set/reset button until REMOTE LEARNING ACTIVE is displayed.
3. Press and hold the lock and unlock buttons on the first transmitter at the same time for about 15 seconds. On vehicles with memory recall seats, the first transmitter learned will match driver 1 and the second will match driver 2. A chime will sound indicating that the transmitter is matched.
4. To match additional transmitters at this time, repeat Step 3. Each vehicle can have a maximum of eight transmitters matched to it.
5. To exit the programming mode, you must cycle the key to LOCK/OFF.

USE THIS PROCEDURE FOR VEHICLES WITHOUT DRIVER INFORMATION CENTER BUTTONS:**RELEARN REMOTE:**

To access this display, the vehicle must be in P (Park). This display allows you to match Remote Keyless Entry (RKE) transmitters to your vehicle. This procedure will erase all previously learned transmitters. Therefore, they must be relearned as additional transmitters. To access this display, the vehicle must be in Park (P) with key in the on position (as far as you can go without cranking engine)

1. Press the trip odometer reset stem until RELEARN REMOTE KEY displays.
2. Press and hold the trip odometer reset stem for three seconds. The message REMOTE KEY LEARNING ACTIVE will display.
3. Press and hold the lock and unlock buttons on the keyless remote at the same time for approximately 15 seconds. A chime will sound indicating that the remote is programmed.
4. To program additional remotes at this time repeat step 3. This vehicle can have a maximum of eight remotes programmed.
5. To exit programming mode turn key off and remove key. Test remote(s).