

## **2002-2010 TOYOTA, LEXUS**



Keys can be programmed using the Code-Seeker on most 32 bit systems. The 2003 and 2004 Sequoia requires flashing.

## TO DELETE ALL BUT ONE KEY FROM THE UNIT:

- 1. Simultaneously depress and release brake and accelerator pedals 1 time.
- 2. Insert an existing master key into the ignition cylinder. Do not turn the key from the OFF (LOCK) position.
- 3. Within fifteen seconds of inserting the key, depress and release the accelerator pedal six times.
- 4. Within twenty seconds of completing the above step, depress and release the brake seven times.
- 5. The security light will flash, indicating all keys other than the one being used have been deleted.
- 6. Remove the key from the ignition cylinder within ten seconds. It will be the only key still programmed to work.

## ADD DUPLICATE KEY:

Requires one working Toyota/Lexus Master key.

- 1. Make sure all doors and windows are closed.
- 2. Insert Master key into the ignition cylinder.
- 3. Cycle the ignition cylinder from ON to OFF five times.
- 4. Open and close the driver side door six times.
- 5. Remove the Master key and insert the new duplicate key.
- 6. TURN THE IGNITION CYLINDER ON.
- 7. The new key will be registered after 60 seconds. The THEFT light on the dashboard will go out, indicating that the programming has been completed.