



ADD KEY (Must have two working integrated keys):

1. Insert first working integrated key into the ignition switch and turn the ignition switch to the ON position for at least 3 seconds, but no longer than 15 seconds. Turn the ignition switch to the LOCK position and remove the first key.
2. Insert the second working integrated key and turn the ignition switch to the ON position within 15 seconds. After 10 seconds, a chime will sound and the Vehicle Security Alarm Indicator Light will begin to flash. Turn the ignition switch to the LOCK position and remove the second key.
3. Insert a blank integrated key into the ignition switch and turn the ignition switch to the ON position within 60 seconds. After 10 seconds, a single chime will sound and the Vehicle Security Alarm Indicator Light will stop flashing. Turn on again for 3 seconds and then turn off.

The new integrated key is programmed. The Remote Keyless Entry (RKE) transmitter will also be programmed during this procedure.

Repeat this procedure to program up to 8 keys.