



**Instructions:**  
Include Transformer for 480V systems only.

**Instructions:**  
Select Pump 1 Panel Interior Layout from Sheets DS-19.1.1, DS-19.1.2, DS-19.1.3, based on Motor Starter Type.

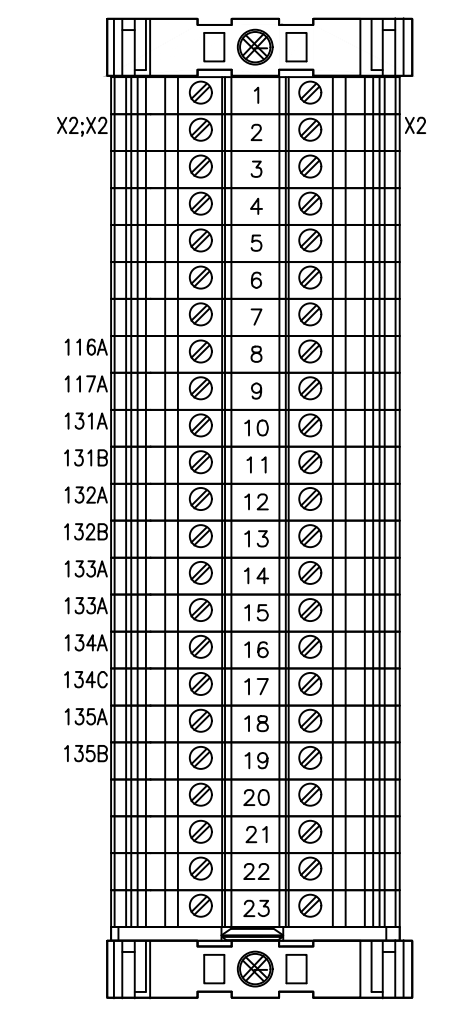

UT4 3044102 - 23  
D-UT2.5/10 3047028 - 1

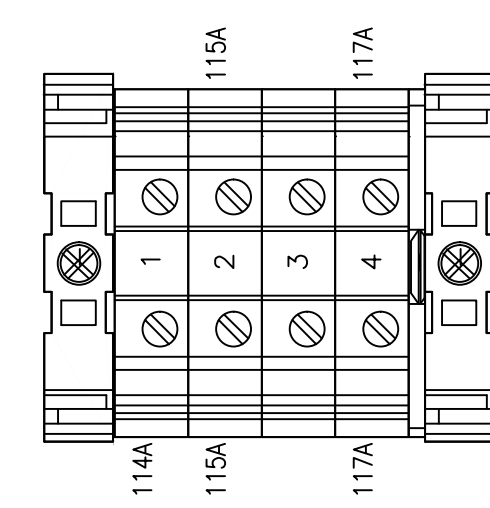

UT10 3044160 - 4  
D-UT2.5/10 3047028 - 1

# Pump 1 Panel - Interior Layout - FVNR.dwg



SHEET NO.  
DS-19.1.1

DATE: 9/01/2016

SEE NOTE #10 ON SHEET DS-0.1