





1. From the Sidebar menu launch **Drying**.
2. Select **Psychrometrics**.

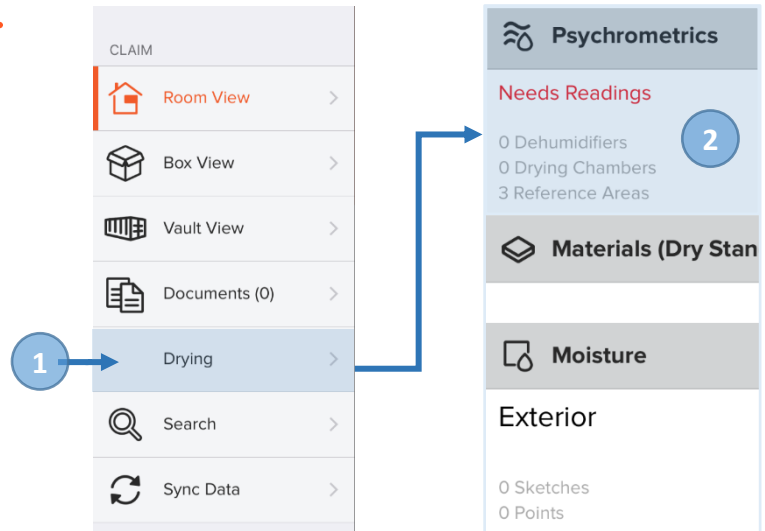

Reference Areas

Three reference areas are created by default; you can create additional reference areas by pressing on +.

3. Press on a specific reference area **+** to enter readings.
4. Enter temperature and relative humidity or specific humidity and press **Save**.
5. Press **Back** **<** and repeat the process above to continue adding reference area readings.




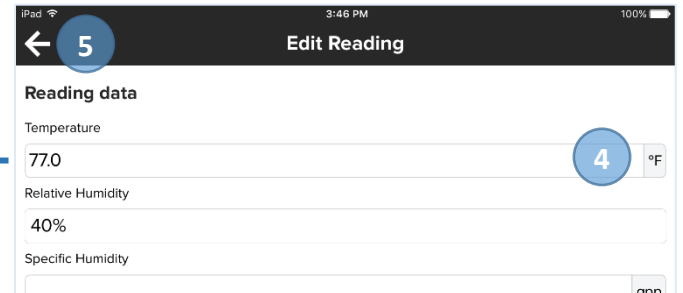
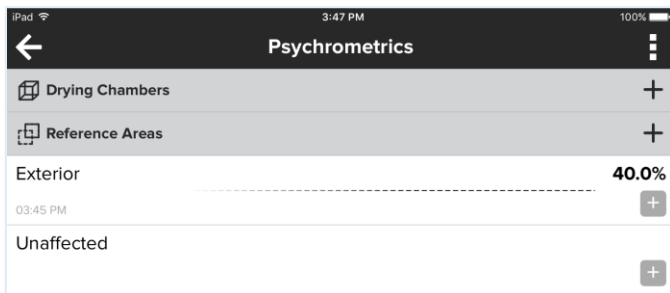
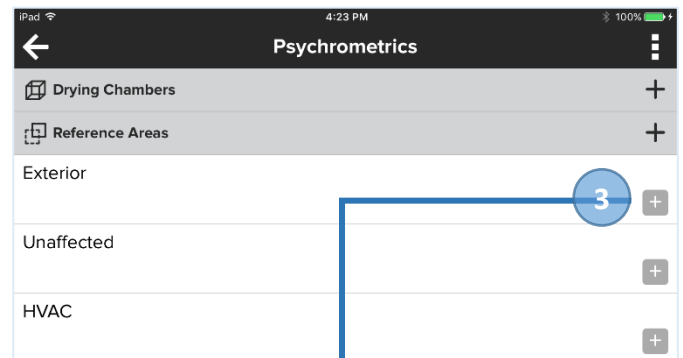


Drying Chambers

Create a chamber and baseline reading.







Goto the main page for **Psychrometrics**.

1. Press **+** **Drying Chambers**.
2. Enter the room or chamber name; press **Done**.
3. Press **+** under Readings and to add the readings. (The badge indicates a reading is required).
4. Enter temperature and relative humidity or specific humidity and press **Save**.
5. You will see the log file. Press **Back** twice to return to main psychrometrics page.

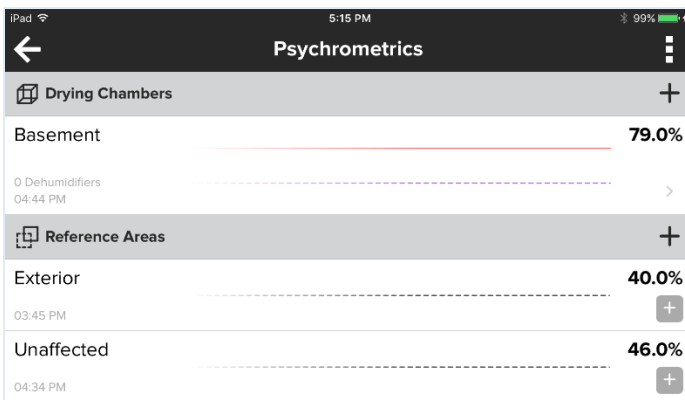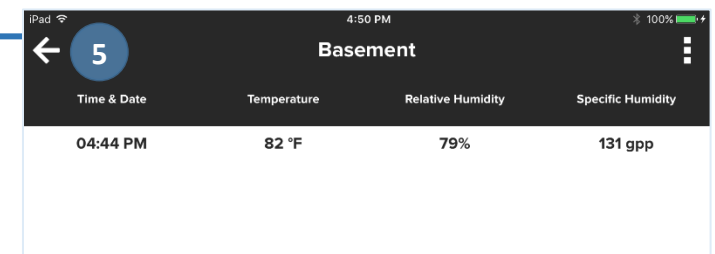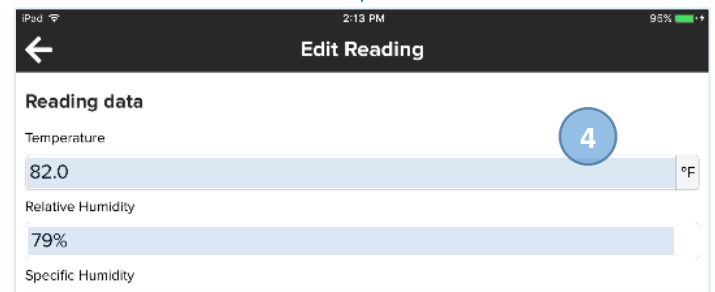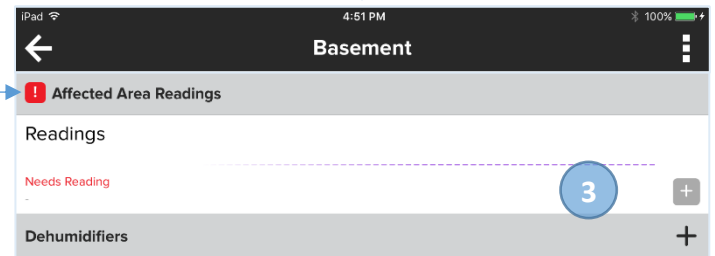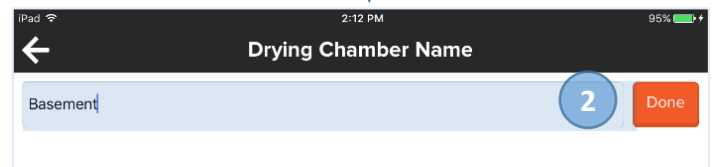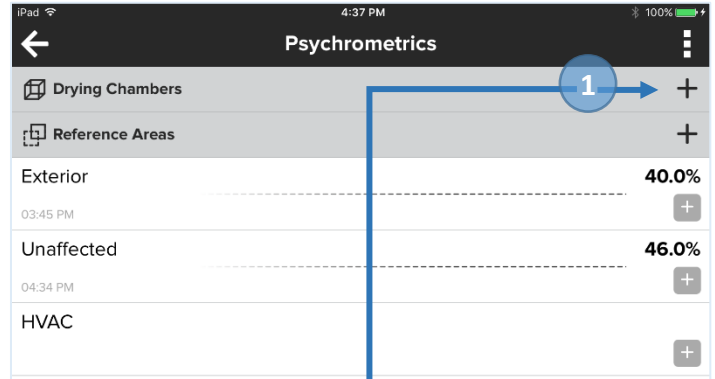

Add Dehumidifiers

1. From Psychrometrics select a Chamber
2. Press **+** **Dehumidifiers**.
3. Enter a name and press **Done**.
4. Press **+** to enter initial readings.
5. Enter temperature and relative humidity or specific humidity and press done and then press **Save**.
6. Press **Back**. Note the resulting data value will be green if the dehumidifier is functioning correctly – otherwise it will be red.

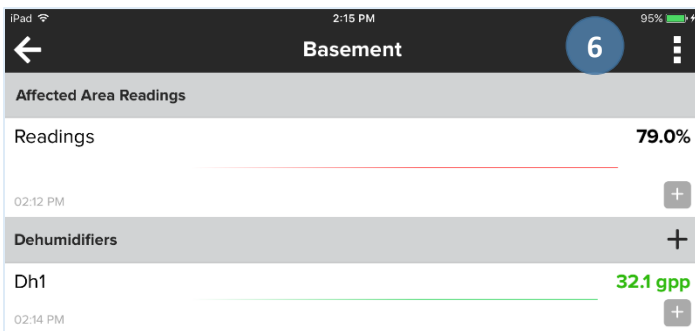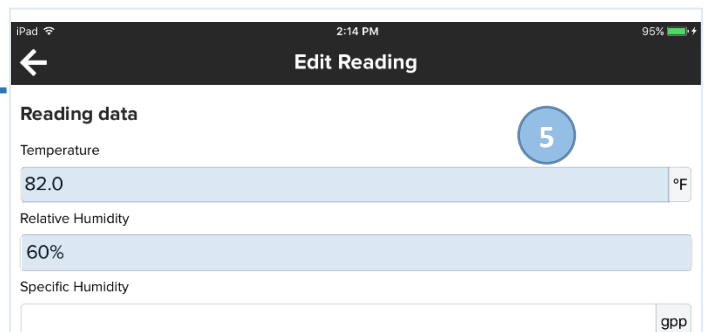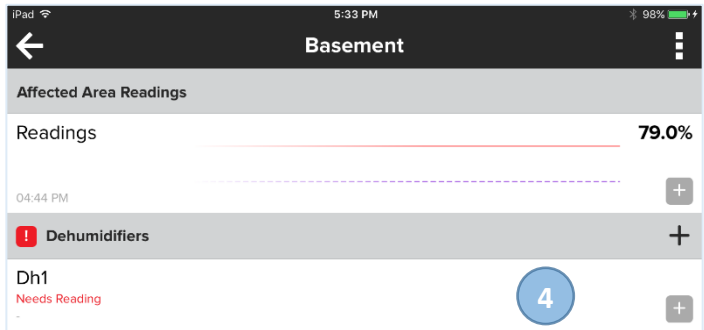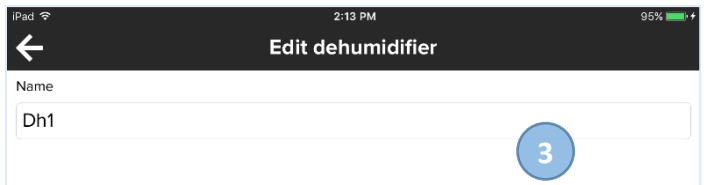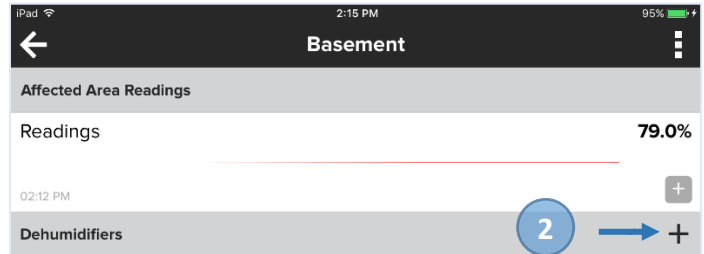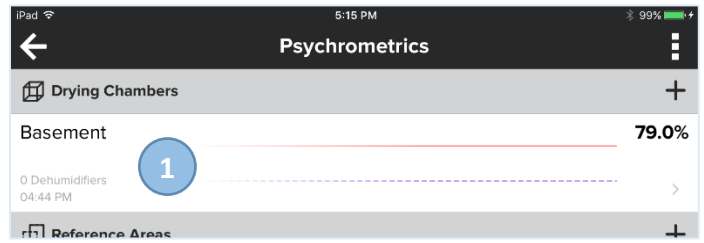

Logging Readings

1. Select **Drying** from the sidebar menu and select **Psychrometrics**.
2. For each chamber and dehumidifier press on the **+** to view logged readings and press on **Add Reading** to log another reading.

