

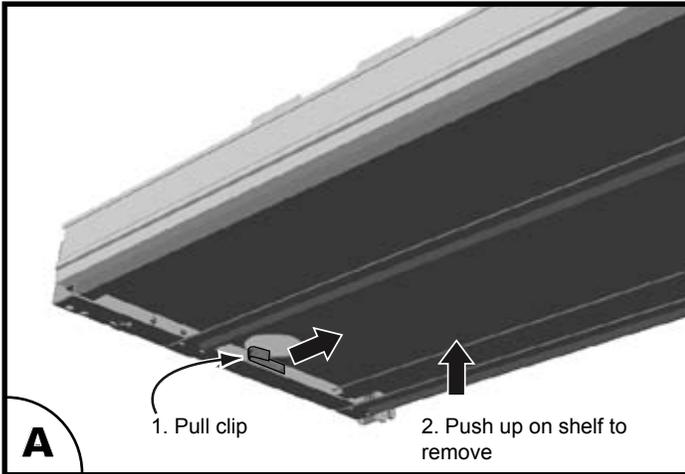


Contents:

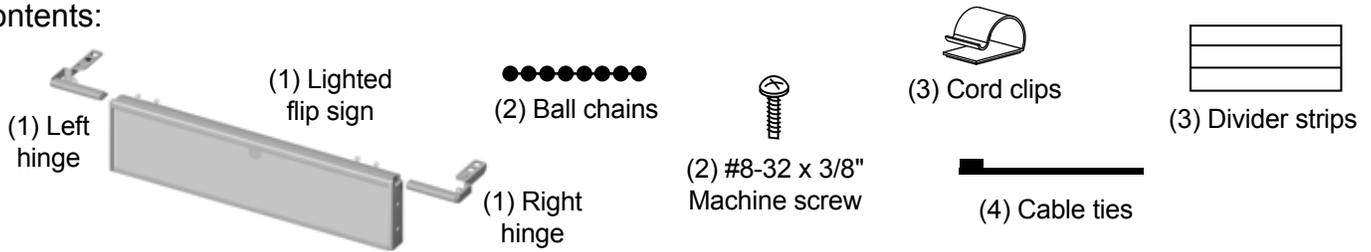

Warning: Unplug and turn off power before installing or servicing.

Warning: Do not overtighten cable ties. This will damage power cord insulation.


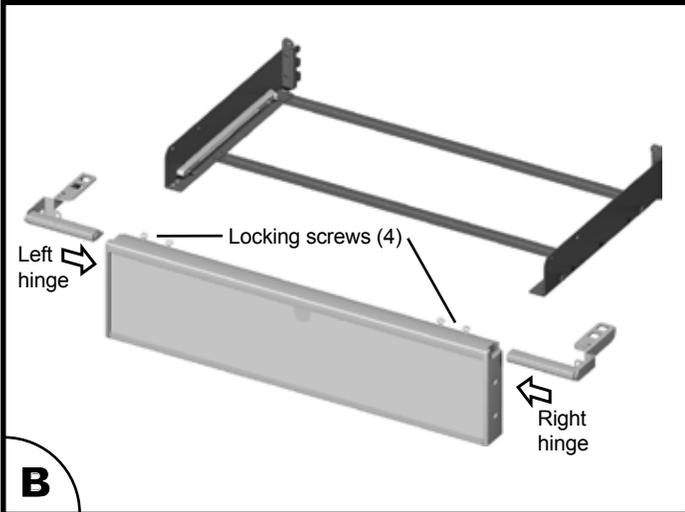



1. Before flip sign can be attached to the shelf frame, the shelf needs to be removed from the shelf frame. Reach under shelf frame and pull the spring clips back slightly, Push up on the shelf and remove. Set shelf aside during flip sign installation (Fig. A).

2. Slide left and right hinge into channel in top of the flip sign. Locking screws may need to be loosened (Fig. B). **For 1' flip sign, see note below.**


3. Position flip sign hinges to the correct width so as to engage the support tabs located on the underside of the shelf frame (Fig. C).

4. Engage the support tabs in the rear square opening on the hinges. Push the hinges all the way in. Use the securing screws to lock the hinges in place (Fig. C).

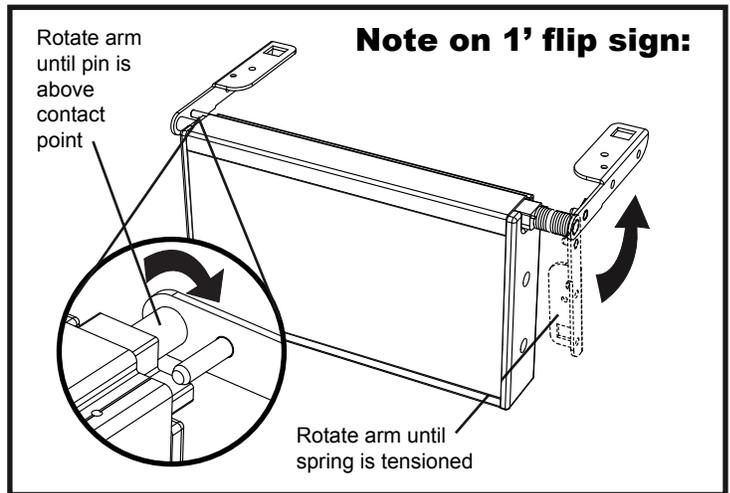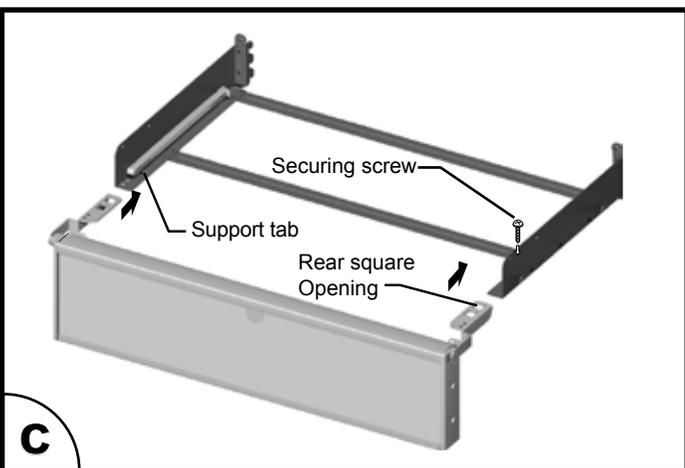


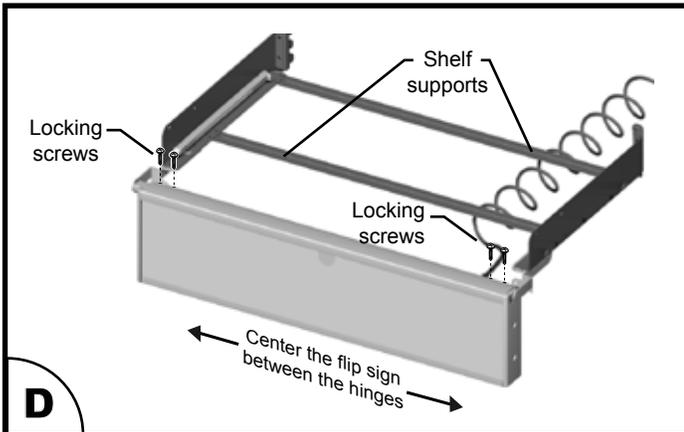


5. Center the flip sign between the hinges. Tighten (4) locking screws through the top of the flip sign and into each hinge (Fig. D).
6. Pull coiled power cord slightly, applying light pressure on the cord. Secure to both the middle and rear shelf support straps with ball chains. Route remainder of cord. Use cable ties and cord clips to secure as needed. See installation sheet "Power Cord Routing" (Fig. E).
7. If shelf has been removed from the shelf frame, reinstall the shelf onto the shelf frame. Pull out on the spring clips, position shelf and release spring clips.

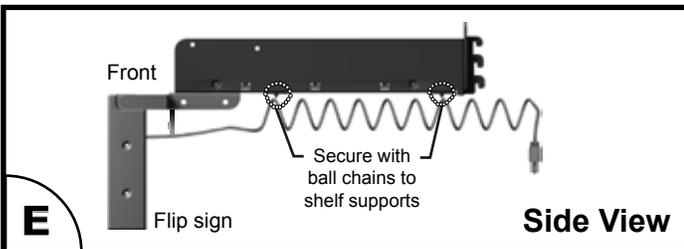

8. To insert or change the graphic transparency, pull the clear cover down and out of the top slot. Insert transparency and reinstall the clear cover (Fig. F).

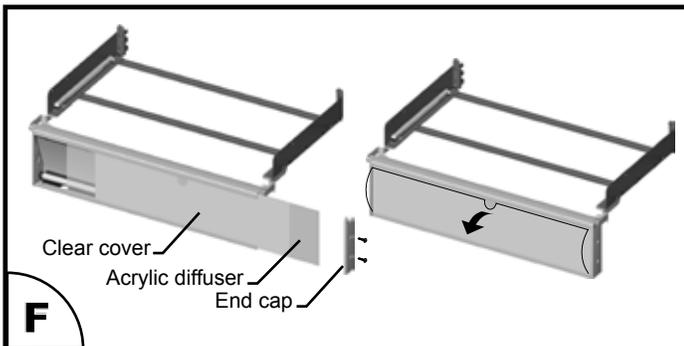

9. To change lamp, remove screws securing one of the end caps. Slide the clear cover, graphic transparency and acrylic diffuser out. Replace with identical lamp (see label on fixture). Reassemble fixture (Fig. F).

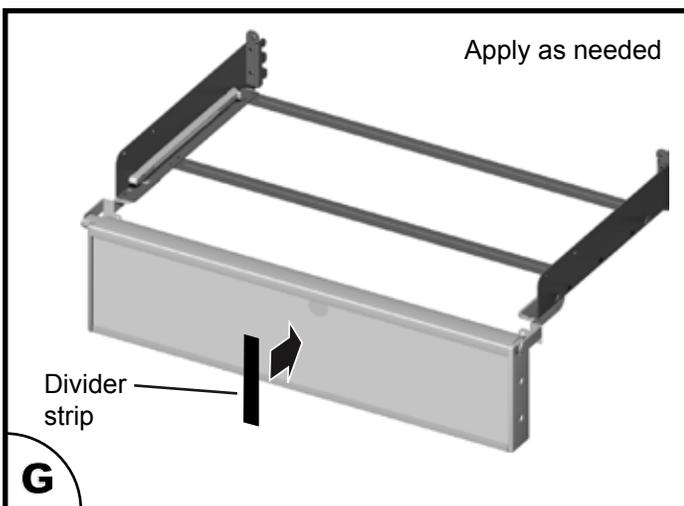

10. Apply the divider strips as needed to the acrylic diffuser (or the clear cover). Strips can be used to separate multiple transparencies used on the same sign (Fig. G).