



Slide tabs on décor panels into slots on metal fixture. Push panels down to engage tabs.

