

Materials

Parts:

- Lock removal key




Tools:


- None required

To Remove

Insert removal key into lock plug.
Note: Unit must be in unlocked position to remove plug.

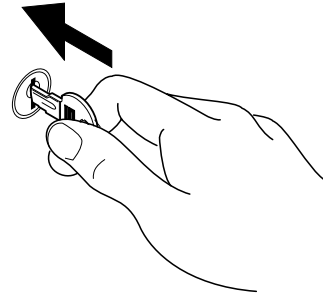


Withdraw removal key and lock plug.

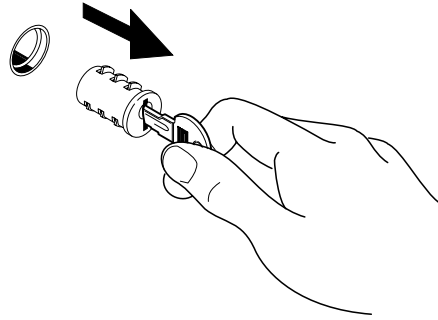

To Install

Insert removal key and lock plug into lock barrel.

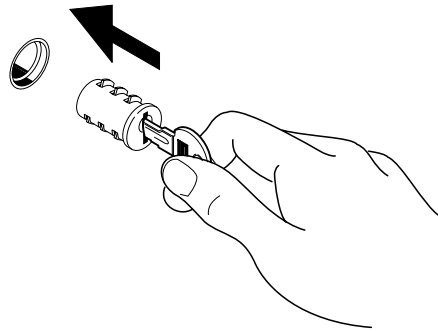

While holding lock plug in place, withdraw removal key.

