



INSTALLATION INSTRUCTIONS

 
Accessory
CROSSBARS
P/N 08L04-T0A-100

Application
2012 CR-V


Publications No.
All 12069
Issue Date
DEC 2011

PARTS LIST


Front crossbar (Long)

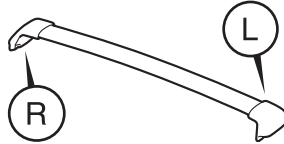

Rear crossbar (Short)

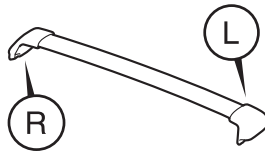 

8 Bolts

 


TOOLS AND SUPPLIES REQUIRED

T-30 Torx bit

Torque wrench

 Illustration of the Crossbars Installed on the Vehicle

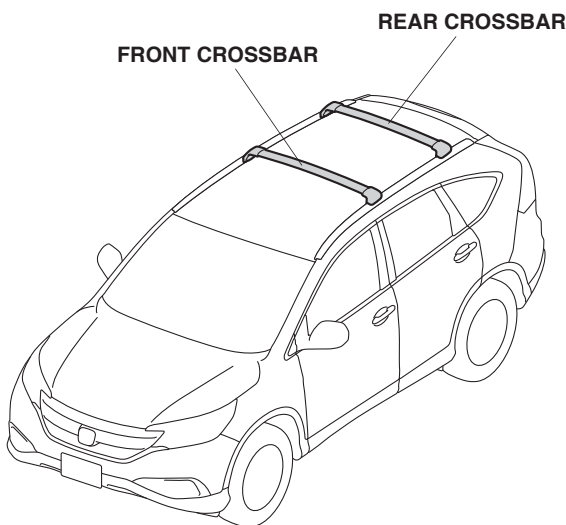

INSTALLATION

 
Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:


- The weight of the cargo must not exceed the maximum weight capacity of 75 kg (165 lbs).
- Be careful not to damage the roof and other finished surfaces of the body when installing the crossbars.

Installing the Crossbars


1. On each roof rack rail, remove the four covers.

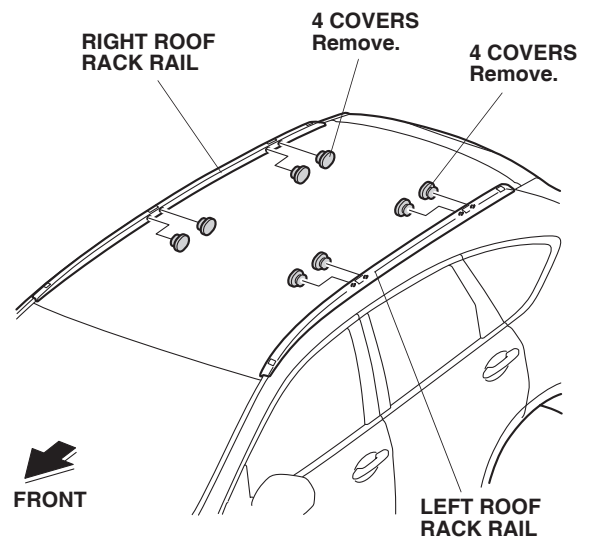

 
- Position the front crossbar onto the left and right roof rack rail, and adjust the right stay in or out until it fits securely into position.

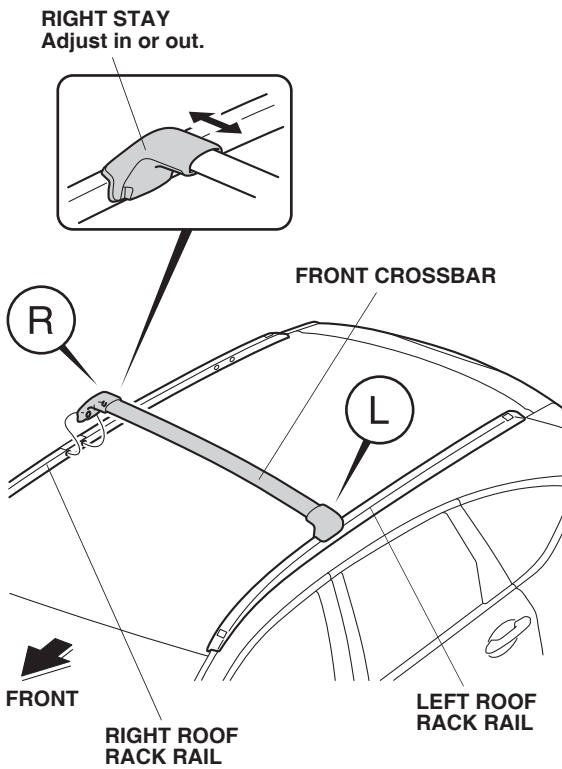

 
- Position the rear crossbar onto the left and right roof rack rail, and install the rear crossbar the same way.

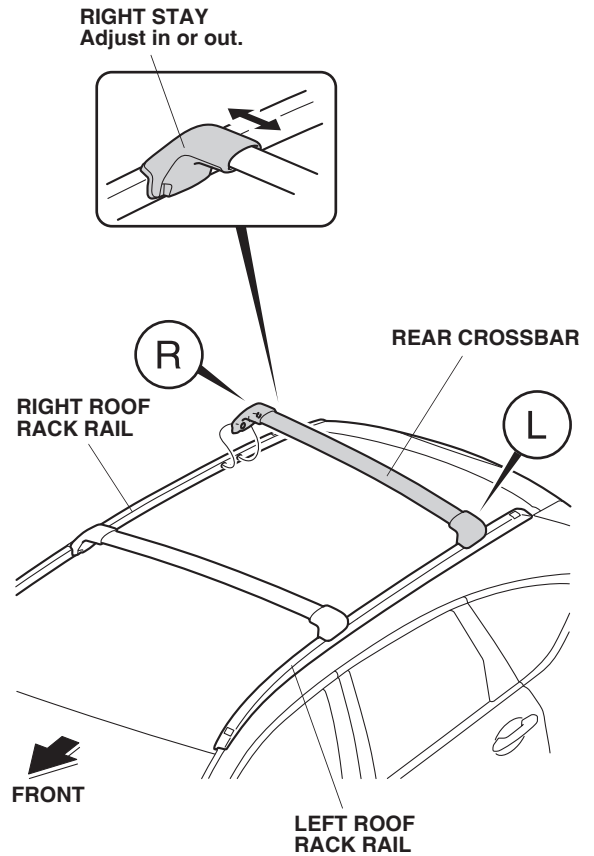

 - Secure the front crossbar to the roof rack rails using four bolts. Torque the bolts to 10 N·m (7.3 lbf·ft).

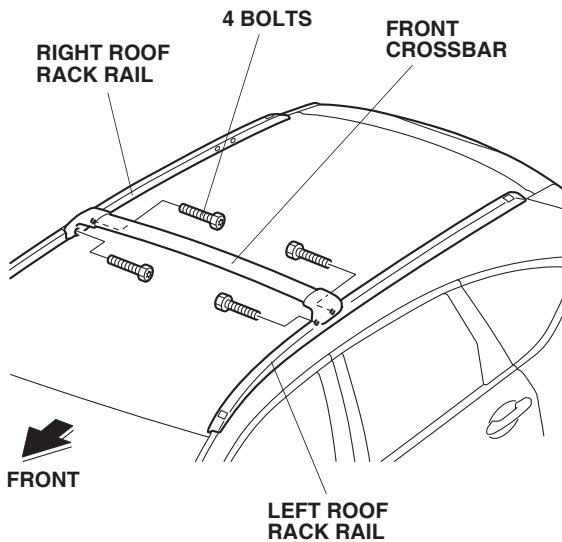

 - Secure the rear crossbar to the roof rack rails using four bolts. Torque the bolts to 10 N·m (7.3 lbf·ft).

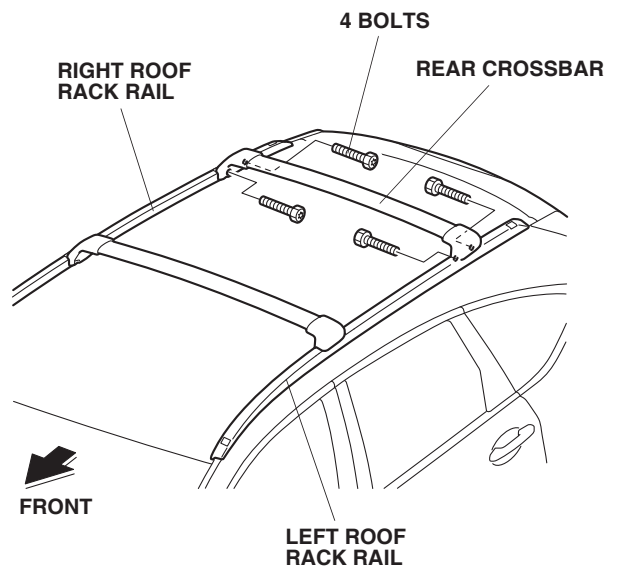

USE AND CARE

- Check the crossbar mounting bolts frequently, and re-tighten if necessary.
- Distribute the weight of the cargo evenly, and do not exceed the maximum weight capacity of 75 kg (165 lbs).

HONDA INSTALLATION INSTRUCTIONS

 
Accessory
CROSSBARS
P/N 08L04-T0A-100

Application
2013 CR-V


Publications No.
All 13134
Issue Date
AUG 2012

PARTS LIST


Front crossbar (Long)

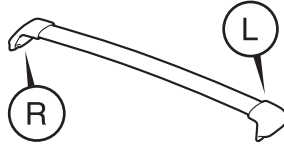

Rear crossbar (Short)

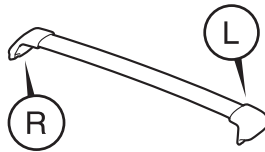 


8 Bolts

 

TOOLS AND SUPPLIES REQUIRED

T-30 Torx bit
Torque wrench

 Illustration of the Crossbars on the Vehicle

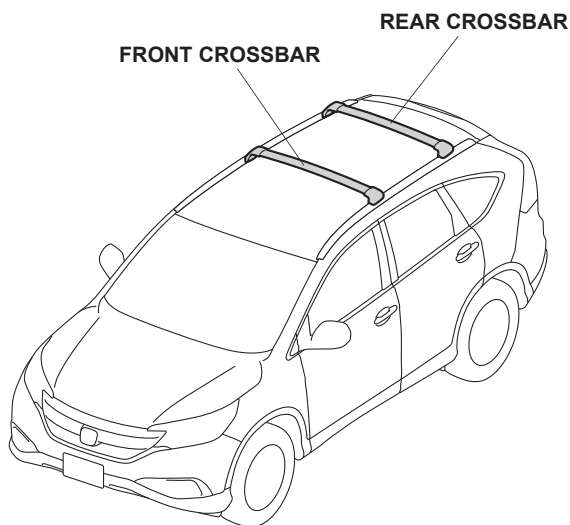

INSTALLATION

 
Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:


- The weight of the cargo must not exceed the maximum weight capacity of 75 kg (165 lbs).
- Be careful not to damage the roof and other finished surfaces of the body when installing the crossbars.

Installing the Crossbars


1. On each roof rack rail, remove the four covers.

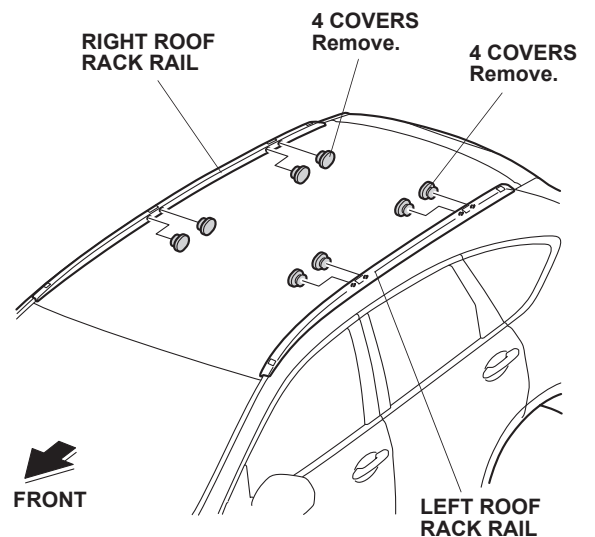

 
- Position the front crossbar onto the left and right roof rack rail, and adjust the right stay in or out until it fits securely into position.

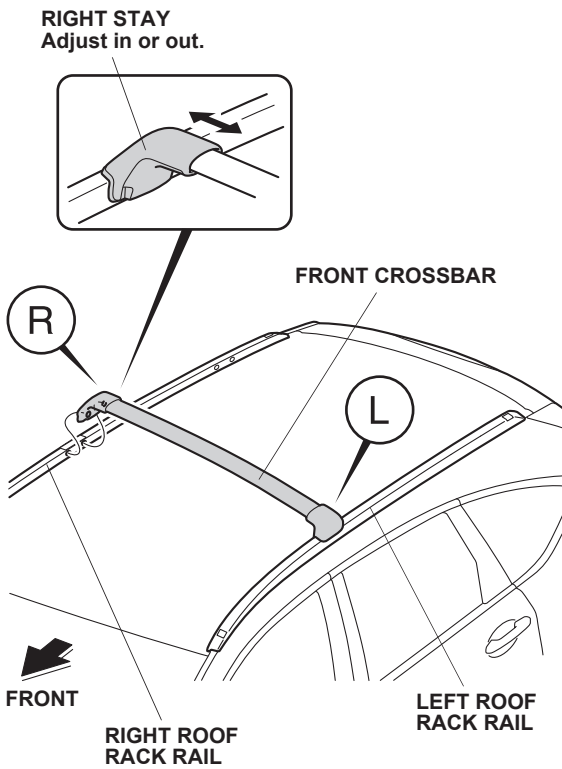

 
- Position the rear crossbar onto the left and right roof rack rail, and install the rear crossbar the same way.

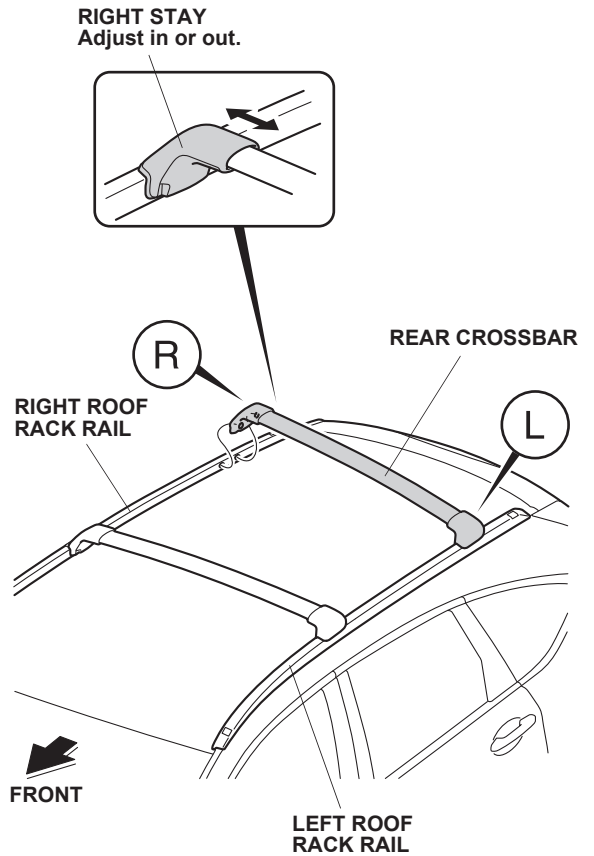

 - Secure the front crossbar to the roof rack rails using four bolts. Torque the bolts to 10 N·m (7.3 lbf·ft).

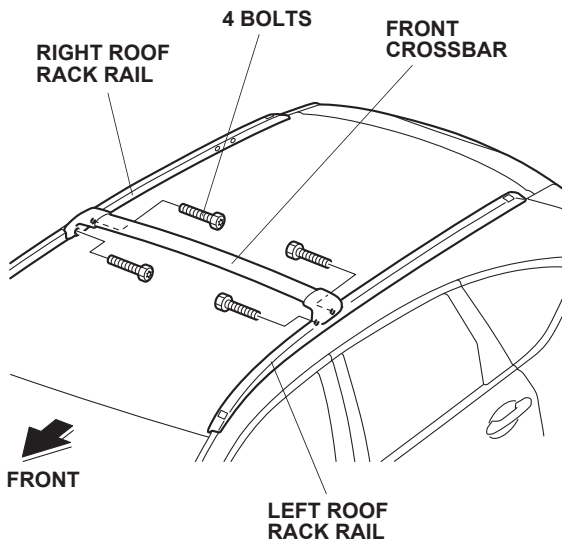

 - Secure the rear crossbar to the roof rack rails using four bolts. Torque the bolts to 10 N·m (7.3 lbf·ft).

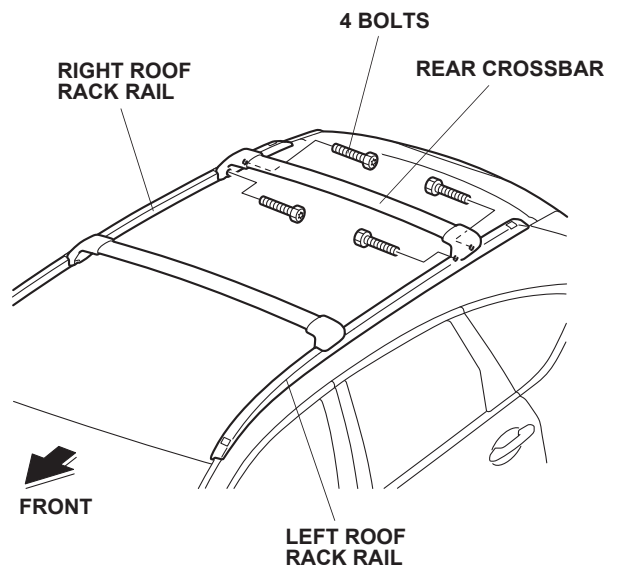

USE AND CARE

- Check the crossbar mounting bolts frequently, and re-tighten if necessary.
- Distribute the weight of the cargo evenly, and do not exceed the maximum weight capacity of 75 kg (165 lbs).

HONDA INSTALLATION INSTRUCTIONS

 
Accessory
CROSSBARS
P/N 08L04-T0A-100

Application
2014 CR-V


Publications No.
All 50010
Issue Date
JULY 2013

PARTS LIST


Front crossbar (Long)

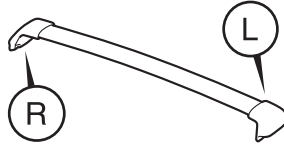

Rear crossbar (Short)

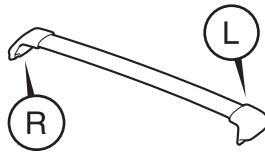 


8 Bolts

 

TOOLS AND SUPPLIES REQUIRED

T-30 Torx bit
Torque wrench

 Illustration of the Crossbars on the Vehicle

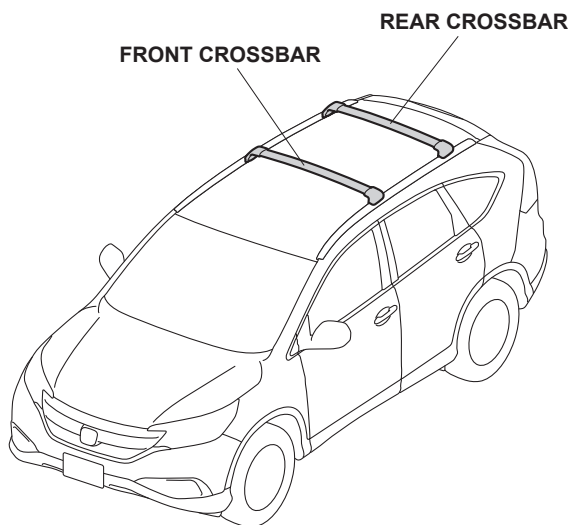

INSTALLATION

 
Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:


- The weight of the cargo must not exceed the maximum weight capacity of 75 kg (165 lbs).
- Be careful not to damage the roof and other finished surfaces of the body when installing the crossbars.

Installing the Crossbars


1. On each roof rack rail, remove the four covers.

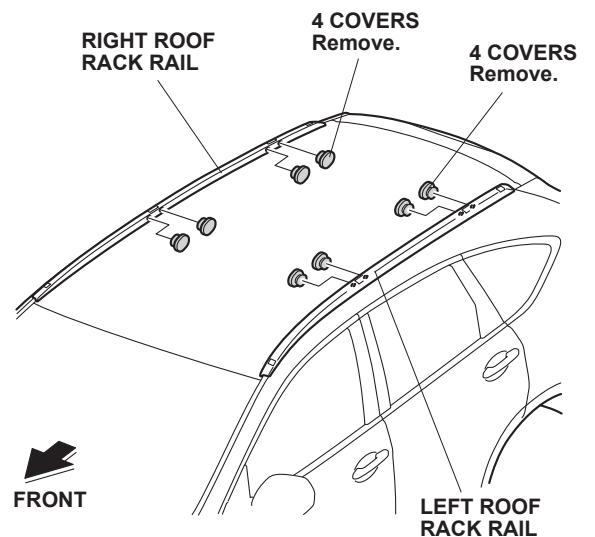

 
- Position the front crossbar onto the left and right roof rack rail, and adjust the right stay in or out until it fits securely into position.

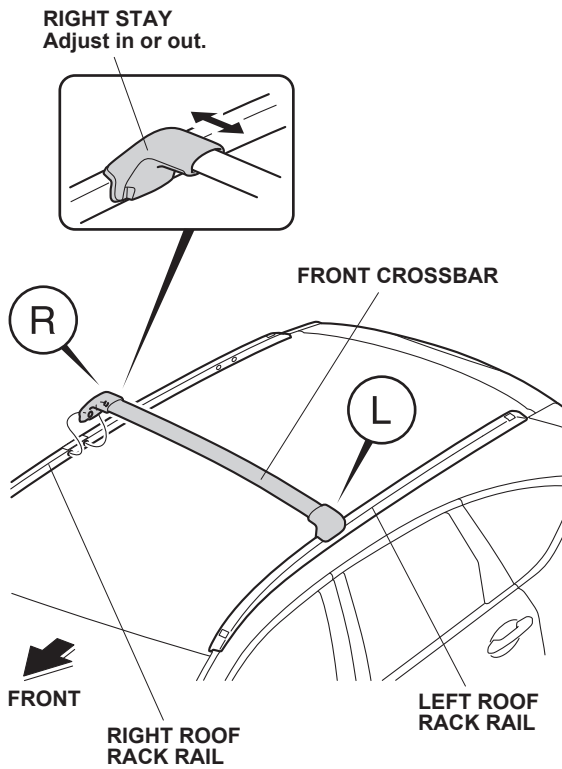

 
- Position the rear crossbar onto the left and right roof rack rail, and install the rear crossbar the same way.

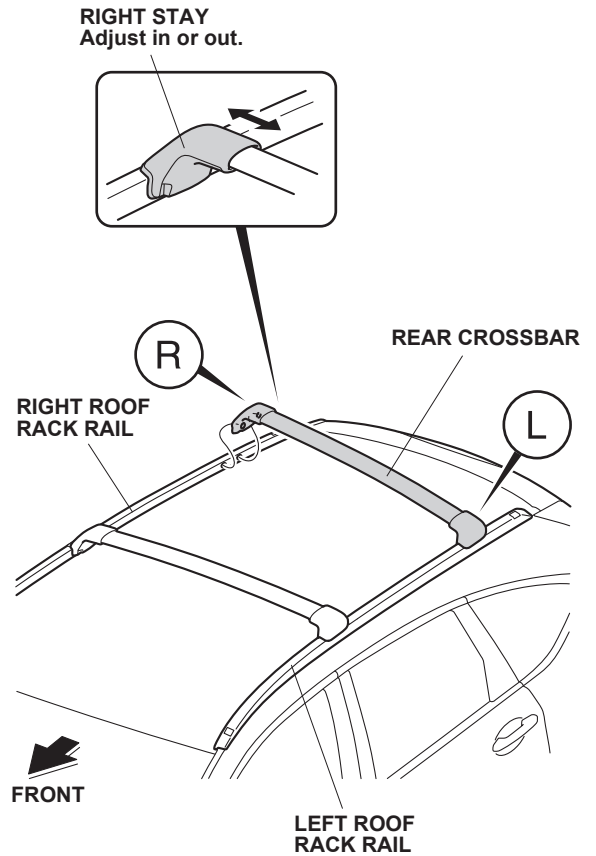

 - Secure the front crossbar to the roof rack rails using four bolts. Torque the bolts to 10 N·m (7.3 lbf·ft).

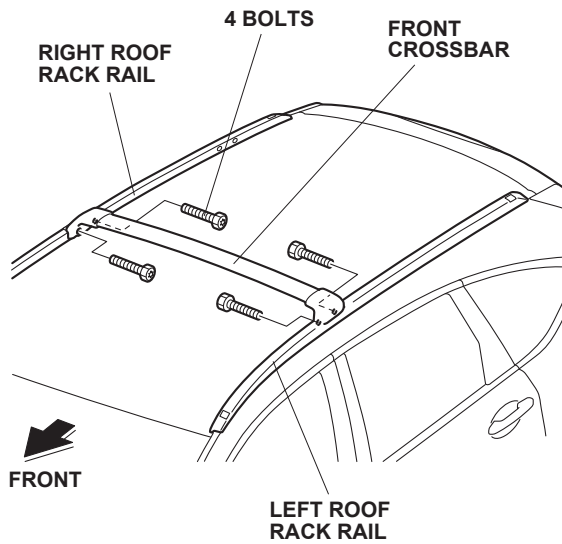

 - Secure the rear crossbar to the roof rack rails using four bolts. Torque the bolts to 10 N·m (7.3 lbf·ft).

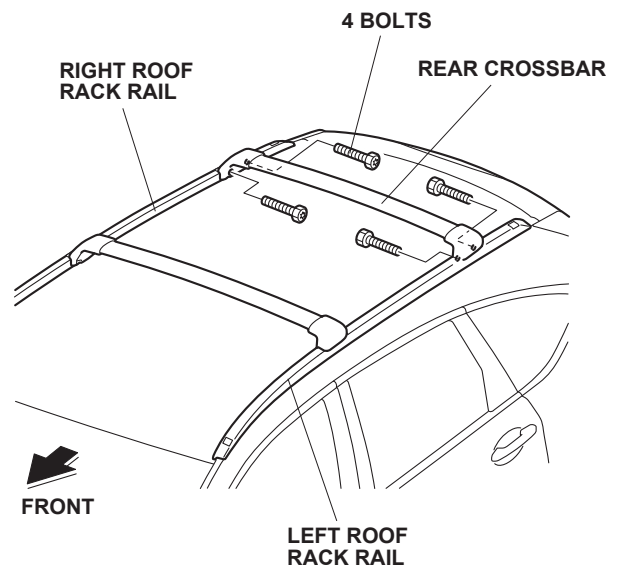

USE AND CARE

- Check the crossbar mounting bolts frequently, and re-tighten if necessary.
- Distribute the weight of the cargo evenly, and do not exceed the maximum weight capacity of 75 kg (165 lbs).

HONDA INSTALLATION INSTRUCTIONS

 
Accessory
CROSSBARS
P/N 08L04-T0A-100

Application
2015 CR-V


Publications No.
VERSION 1
Issue Date
SEP 2014

PARTS LIST


Front crossbar (Long)

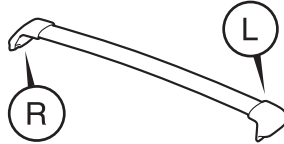

Rear crossbar (Short)

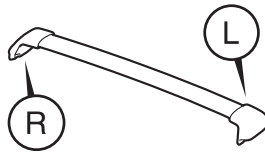 


8 Bolts

 

TOOLS AND SUPPLIES REQUIRED

T-30 Torx bit
Torque wrench

 Illustration of the Crossbars on the Vehicle

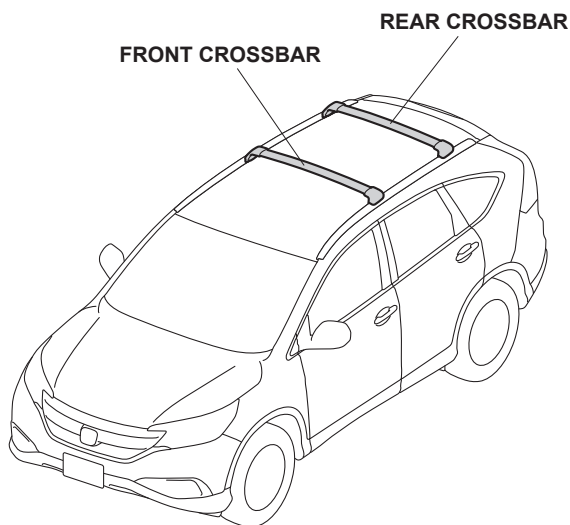

INSTALLATION

 
Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:


- The weight of the cargo must not exceed the maximum weight capacity of 75 kg (165 lbs).
- Be careful not to damage the roof and other finished surfaces of the body when installing the crossbars.

Installing the Crossbars


1. On each roof rack rail, remove the four covers.

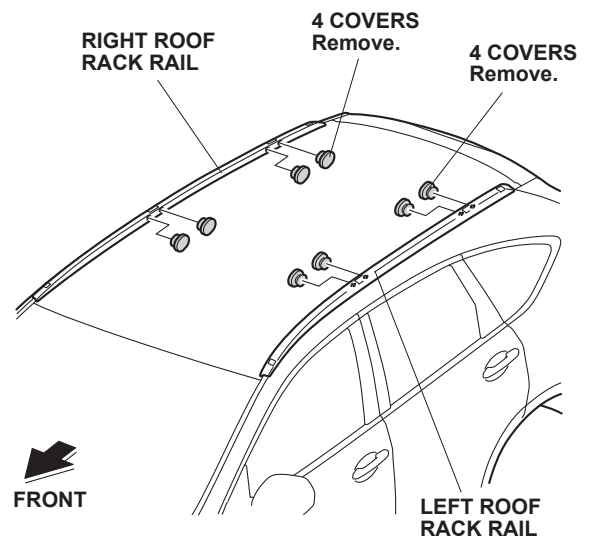

 
- Position the front crossbar onto the left and right roof rack rail, and adjust the right stay in or out until it fits securely into position.

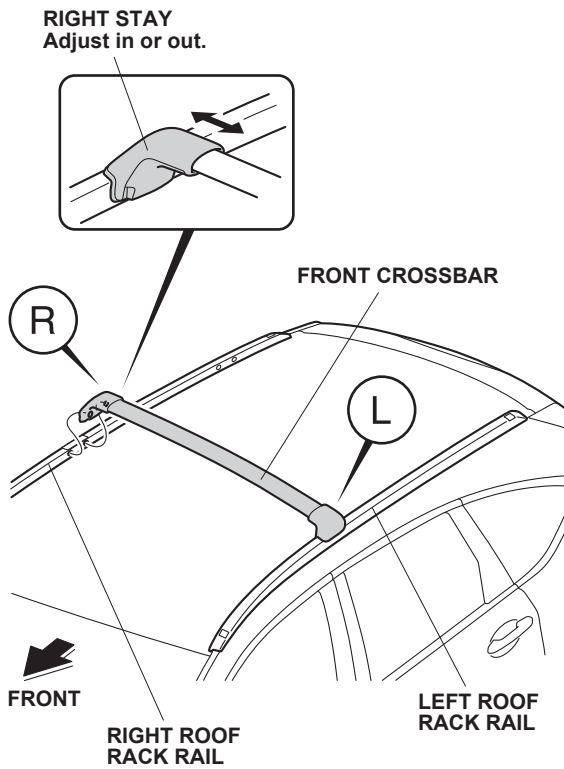

 
- Position the rear crossbar onto the left and right roof rack rail, and install the rear crossbar the same way.

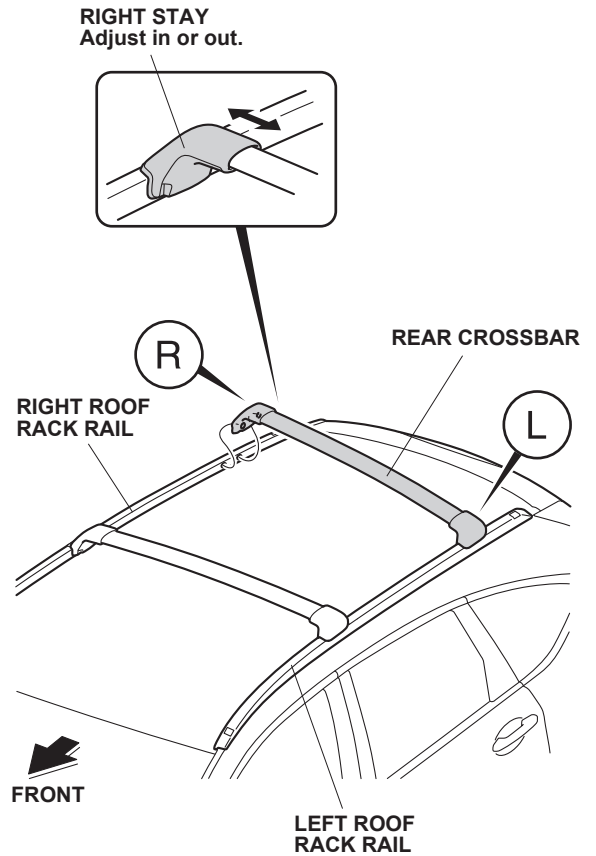

 - Secure the front crossbar to the roof rack rails using four bolts. Torque the bolts to 10 N·m (7.3 lbf·ft).

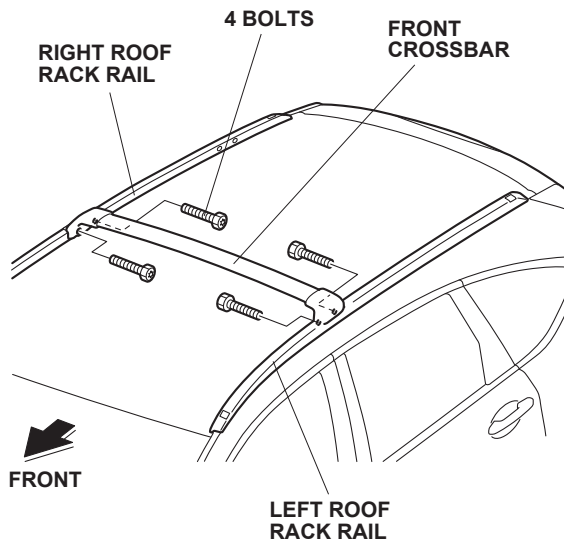

 - Secure the rear crossbar to the roof rack rails using four bolts. Torque the bolts to 10 N·m (7.3 lbf·ft).

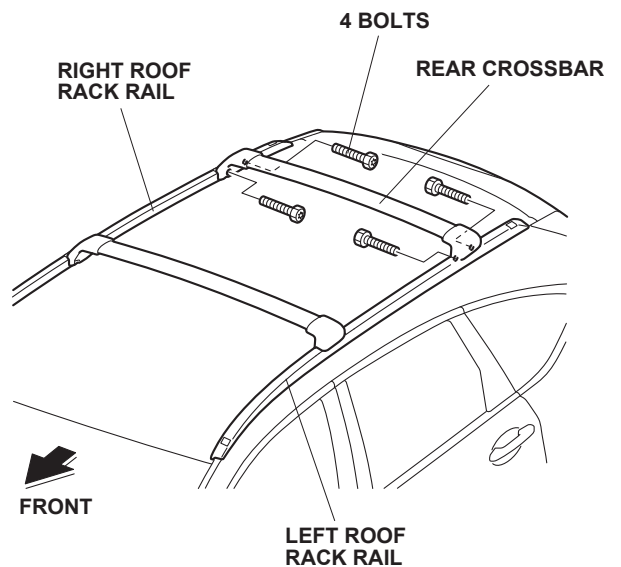

USE AND CARE

- Check the crossbar mounting bolts frequently, and re-tighten if necessary.
- Distribute the weight of the cargo evenly, and do not exceed the maximum weight capacity of 75 kg (165 lbs).