

# InstaBox i90 User's Manual

## Package Includes:

- I90 x 1
- Remote x 1
- USB Cable x 1
- Audio Cable x 1
- User's Manual x 1

## Specifications

- Output power: RMS 4W (THD + N = 10%, f0 = 1KHZ)
- Signal to noise ratio:  $\geq 70$ dB
- Distortion (%):  $\leq 1\%$
- Frequency response: 100Hz ~ 18KHz
- Audio input mode: Bluetooth, AUX, USB, TF card, FM
- Volume adjustment form: 360 degree knob adjustment
- Speaker:  $\Phi 57$ mm, 4 , 5W
- Power supply: lithium polymer rechargeable battery 1800mAh 3.7V
- Charging power: DC5V  $\geq 600$ mA
- AUX maximum input sensitivity: 800mV
- Working environment temperature: 0°C ~ +50 °C
- Product specifications: 156mm / 116mm / 101mm
- Net weight: 0.7kg

## i90 Front View:



### 1 - Play / Pause Button

Radio Mode:

Short press—mute/play

Long press—auto-search

Bluetooth Mode:

Short press — play/pause

Bluetooth Mode (Call received):

Short press—answer/hang up

Time Mode:

Short press-automatic power off setting

When Playing External Audio:

Short press—mute

When Playing U disk / TF Card Music:

Short press—play/pause

## 2 - Back Button

Music Mode: (U Disk / SD Card):

Short press—previous track

Long press—rewind

Bluetooth Music Mode:

Short press—previous track

Radio Mode:

Short press—previous channel

Long press—reverse search

## 3 - Forward Button

Music Mode: (U Disk / SD Card):

Short press—next track

Long press—fast forward

Bluetooth Music Mode:

Short press—next track

Radio Mode:

Short press—next channel

Long press—forward search

## 4 - On / Off Button

Long press—for 3 seconds for ON/OFF; for 8 seconds to clear all settings

## 5 – Volume Control

Works in any Playing Status

Turn clockwise —increase the volume

Turn counterclockwise —reduce the volume

## 6 - Mode Button

Function mode:

Short press to select: CLOCK/USB/SD/FM/AUX /BLUETOOTH

Note: any input not present will be skipped.

Time Mode:

Short press : clock/alarm setting

## i90 Rear View:



### **8 – Aux Audio Input Port**

Audio cable connection for computer, phone, or other source for audio input.

### **9 – Reset hole**

Insert paper clip or other pointed device and hold button for 3 seconds to reset i90 to factory defaults settings.

### **10 – TF or micro SD Card Input Port**

TF card input for MP3 audio files

### **11 – USB Micro B Input/Charging Port**

Insert micro USB cable for charging internal battery or for USB audio cable input


### **12 – Charging Indicator**

When charging, the indicator will illuminate red, when fully charged, green. Charging time may be increased if i90 unit is in use during charging cycle.

### **13 – USB Type A Input Port**

USB port for audio input

## i90 Remote Control

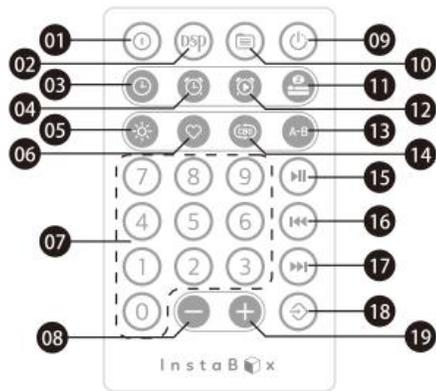

- |                            |                              |                               |
|----------------------------|------------------------------|-------------------------------|
| 01 ON/OFF Button           | 02 Music mode button         | 03 Standby / Play mode Button |
| 04 Alarm Clock Button      | 05 Display Brightness Button | 06 Likes Button               |
| 07 0-9 digits              | 08 Volume decrease Button    | 09 Delayed off Button         |
| 10 Folder setting Button   | 11 Snooze button             | 12 Set Music as Alarm Button  |
| 13 A-B Replay              | 14 Repeat Mode               | 15 Play / Pause Button        |
| 16 Previous track / Rewind | 17 Next track / Fast forward | 18 Function Selection         |
| 19 Volume increase         |                              |                               |

### Note:

1. Please make sure the i90 is ON when you would like to use the remote, the ON/OFF button (01) in the remote is only to set the i90 standby(power saving mode) but not turning on it.
2. Remote is design to provide an easy access to different function such as alarm/time/USB etc.
3. The button which corresponds with the remote:
  - a. ON/OFF button-button 03 in the remote
  - b. Play/pause button-button 15 in the remote
  - c. Previous track- button 16 in the remote
  - d. Next track- button 17 in the remote
  - e. M (mode) button-button 18 in the remote

### Setting the calendar and clock (Sleeping Mode)

- Short press the Mode and make sure the radio in **“time”** display
- Short press the Mode button for 5 times

- Use the Volume knob to adjust settings
- Set current year
- Press **Forward Track** button to select settings
- Set the month
- Set the day
- Set the hour
- Set the minutes
- Press the **ON/OFF** button to finish and save settings
- Please note that the clock only display in **24-hour format**.
- After setting the clock choose the desired Sleep time for the i90. Choices available are:  
OFF, 30, 60, 90, 120 minutes.
  - a. Short press play button
  - b. Use the Volume knob to adjust settings
  - c. Choose your desired time

## Setting the Alarm

The InstaBox i90 has **four** convenient alarms that can be set independently.

1. Make sure the radio in **"TIME"** display
2. Press Mode to set the alarm one
3. Use the volume control to select the desired hour.
4. Press **Forward Track Button** and repeat the same steps to set the minutes.
5. Press **Forward Track Button to choose the alarm days:5/6/7 days to choose**
6. **Use the** volume control to select the desired time
7. Press **Forward Track Button to choose the alarm clock ring (USB/FM RADIO/BEEP/SD)**
8. Press "play" to preview the ring
9. **Use the** volume control to select the desired time
10. Press **OFF/ON** Button to confirm setting. The Alarm sign will be flashing.
11. Press Play to turn the alarm ON or OFF. When ON is selected the alarm sign will remain on the screen.
12. To set additional alarms follow the steps above. After step 1, use the M Control to choose which of the four alarms to set – then follow the remaining steps.

Note: You must have the TF/SD card inserted when the alarm is ON.

A quick access to delete all the alarms: press "Mode" to clear all the alarms.

A quick access to set the alarm clock ring (apply to alarm 1/2):

- a. In USB/SD/RAD mode, press the alarm button in the remote, when the screen shows "AL1", it is set as the ring.
- b. Short press the alarm button twice, when "AL2" appears, setting finished.
- c. Note that this quick access is only apply to alarm 1/2.

### 13. Snoozing Function

- a. Press the volume knob or the snooze button of the remote, alarm will be paused for 5/10 minutes, and ring again when countdown ends
- b. Press any button except the volume knob and the snooze button to end the alarm

## Using the FM Radio

1. You can scan the FM band and save desired stations.
  - a) Click Mode and select the FM function
  - b) Short press the **Forward Track** button to choose next channel, long press to delete the existing station
  - c) Short press the Back button to choose the previous channel, long press to top the station
  - d) Long press Play on the radio or the remote control. The radio will automatically scan the FM band from 87.5-108.5MHz and save stations found as P01-P60.

The Instabox i90 can store 60 preset radio stations.

2. You can step through saved stations using the forward and back buttons on the front panel or on the remote. Select any previously stored channel by pressing the numbers (1-60) on the remote, then press Play. If no station has been saved in a selected channel **Err** will display.
3. You can semi-automatically scan and save FM stations:
  - a) Hold the forward or back button to scan through available radio stations. To save a selected station, press 'DSP' in the remote control. Your selection is saved in the next available preset position.
4. You may select any FM station directly by entering the station frequency then press Play. (e.g.: for 105.1MHz = Press 1051 + Play).
5. To momentarily mute the radio press the Play button on the remote or on the front panel.

Note: The i90 external high gain antenna helps guarantee a high quality FM reception. Extend the antenna and position it for the best reception.

## Playing music from a micro-SD card or a Flash drive

Ports are provided on the rear panel of the i90 for a Micro-SD card and for a USB Flash drive. When either type of device is plugged into the i90, **TF** or **USB** will appear on the screen and MP3 format music will begin to play. The i90 supports memory sources up to 32GB at a maximum bit rate of 320kbps. **All music selections must be in MP3 format.**

- Press the forward or back button to play the next or previous selection.
- Press and hold the forward or back button to fast-forward or rewind a selection
- Press the play button to pause/play the music, long press to set repeat mode
- You can use the remote to numerically select a track. (Press 30 + Play= Play song 30)
- Press **"DSP"** to select one of six different sound profiles:  
**NORMAL / ROCK / POP / CLASS / JAZZ / BASS**
- You can record segments of a selection for a playback repeat. Press **A-B**. **"P—A"** will show on the display as the segment is saved. End the segment by again pressing **A-B**, **"P—B"** will display. The segment will now play repeatedly until A-B is pressed again. The segment will stop and **"P—E"** will display.

## Using the External Auxiliary Input

Using the external audio cable provided, you can play audio from any external source using the rear panel Aux audio input port. **"AUX"** will display on the front panel when the cable is used. Use the play button to mute the input. Note: this is an input only port.

## Bluetooth and InstaBox i90

1. The InstaBox i90 supports Bluetooth version V4.0+EDR
2. Press the Mode button or **'m'** on the remote to turn on Bluetooth. **'BLUE'** appears on the screen. When you hear 'DO-DI' the Bluetooth is on and ready to pair.
3. Turn on the Bluetooth on your device and search for **D90**.
4. The i90 will connect in about 20 seconds and the external device content will begin to play.
5. Press the play button to play/pause the device playback
6. If the device content has tracks use the forward or back controls to play next or previous tracks.
7. The i90 will receive phone call audio and display **'HP'** during a call. Press and hold the Play button to disconnect or auto-connect a call

## Battery Charging Management

- The battery indicator on the upper right of the screen displays the amount of battery charge

- The i90 is charge from a micro USB connector on the rear panel. It requires DC 5v 600MA for charging. The battery reaches full charge in 4 to 6 hours. The charge light on the rear panel changes from red to green when the battery is fully charged.
- The battery has a capacity of 1800 mAH. You can also use this battery as an emergency backup for charging a cell phone. Plug your USB phone charging cable into the USB audio input on the back of the i90 and your phone will commence charging.

#### **Friendly Reminder**

- It is normal that the radio may get hot when charging or using.
- Please turn off the power and disconnect all the outside devices of your radio before cleaning.
- Please do not expose to fire or cigarettes and prevent contact with water or moisture.
- Please make sure your radio and the accessories stay dry and do not drop, throw or use your radio violently.
- Please use any antistatic soft cloth to clean your radio. Do not use any detergent which contains any chemical material such as alcohol, benzene etc.
- Avoid using your radio and the accessories in extreme heat or cold temperatures.
- Do not attempt to take apart or repair your radio, or free warranty is void.