

User Guide

Digital Audio Recorder - M-Audio Microtrack



Initial Setup

 
1 Connect your audio source to inputs located on top of recorder

- To connect to a **mixer**, plug the split ends of the 1/4" Y cable into the L and R "MIC/LINE" inputs on the recorder. Plug the opposite end into a mixer.
- To connect to an **external microphone**, plug the split ends of the 1/4" Y cable into the L and R "MIC/LINE" inputs on the recorder. Connect your microphone to the XLR adaptor on the opposite end of the cable.
- To use the **mini stereo mic**, simply plug it into the 1/8" MIC input on top of the recorder.



2 Adjust recorder settings to match your audio source

- If recording from a microphone, slide the "L / M / H" switch on the left side to **M**. If recording from a line level source (such as a mixer), slide it to **L**.
- Turn recorder **ON** by holding down the **POWER** button in the upper left-hand corner.
- Use the **NAV WHEEL** (on the right side) to scroll down to "Record Settings." Push in on **NAV WHEEL** to select.
- Select "Input Source" by pushing the **NAV WHEEL**. If recording through the MIC/LINE inputs, select the 1/4" TRS option. If recording through the smaller MIC input, select the 1/8" option.
- By using the **NAV WHEEL**, make sure the rest of the "Record Settings" are as follows:
 - Input Monitor [On]
 - 27dB TRS Boost [Off]
 - Encoder [MP3]
 - Sample Rate [44.1]
 - Bits [128]
 - Channels [Stereo]
- Press **MENU** button (on the left side) to go back to the previous screen.

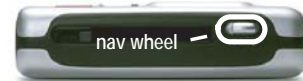

Recording Audio

3 Adjust input levels and begin recording

- While on the Main Menu screen, press the **MENU** button to view the input level settings.
- Adjust audio input levels by using the L and R "LEVELS" buttons on the front of the device.
- To listen during recording and playback, plug headphones into headphone jack on top of recorder.
- Press the **REC** button to begin recording.
- Push in on the **NAV WHEEL** to **pause** and **resume** recording. Push the **REC** button again to stop recording and write your file to memory.



input levels → record



User Guide

 
Digital Audio Recorder - M-Audio Microtrack



Playing Back Audio


4 Play, pause, delete and scroll through your files

- After the recorder finishes writing your file, you can **play** and **pause** the audio by pushing in on the NAV WHEEL.
- Hold the NAV WHEEL up or down to **fast forward** or **rewind** each file.
- You can also access your recorded files through the "Files" option on the Main Menu screen.
- To **delete** a file, press the DEL button. Pressing the button again will erase it from memory. Pressing MENU will return you to the previous screen.

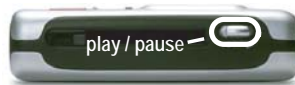


Transferring Audio Files

5 Upload recorded files to your computer

- Hold the POWER button to turn recorder OFF 
- Connect the USB cable from the bottom of the recorder to your computer.
- Your computer should recognize the new hardware and treat the recorder as an external hard drive.
- Locate your audio files by opening the new "Removable Disk" drive in **My Computer** (for Windows) or clicking on the desktop icon (for Mac OS).
- Drag and drop your recorded files (*fileXXXX*) into any folder on your computer.
- You can now edit, play and manage all your files that were captured on the digital audio recorder.



6 Powering OFF

- For PC users, click the "Safely Remove Hardware" icon and then click "USB Mass Storage Device"
- For Mac users, simply drag the hard disk icon on your desktop into your trash can. Don't worry - this will not erase your audio files.
- Hold down the POWER button until the screen reads, "Powering Off" 



If you encounter any problems whatsoever, please call us at 1-877-633-8866. We're more than happy to help!