



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for HP PHOTOSMART C5280. You'll find the answers to all your questions on the HP PHOTOSMART C5280 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual HP PHOTOSMART C5280
User guide HP PHOTOSMART C5280
Operating instructions HP PHOTOSMART C5280
Instructions for use HP PHOTOSMART C5280
Instruction manual HP PHOTOSMART C5280

HP Photosmart C5200 All-in-One series



Basics Guide



[Your user manual](#)
[HP PHOTOSMART C5280](#)

Manual abstract:

If no photos are selected, a prompt appears asking if you want to print all the photos on your card. **Red Eye Removal:** Turns the Red Eye Removal feature On or Off. By default, this feature is turned off. When the feature is turned on, the HP All-in-One automatically corrects red eye coloring in the photo currently shown on the display. **Reprints:** Enables you to make a copy of an original photo placed on the glass. **Scan Menu:** Opens the Scan Menu where you can select a destination for your scan. **Copy Menu:** Opens the Copy Menu where you can select copy options, such as number of copies, paper size, and paper type. **Start Copy Black:** Starts a black-and-white copy. **Start Copy Color:** Starts a color copy. **Setup:** The Setup menu provides a variety of reports, device settings and maintenance functions.

Cancel: Stops the current operation. **On:** Turns the HP All-in-One on or off. When the HP All-in-One is off, a minimal amount of power is still supplied to the device. You can further reduce power supply by holding down the On button for 3 seconds. This will put the unit in Standby/Off state.

To completely remove power, turn the HP All-in-One off, and then unplug the power cord. **Zoom out - (magnifying glass icon):** Zooms out to show more of a photo. If you press this button when a photo is shown on the display at 100%, the Fit to Page feature is applied to the photo automatically. **Zoom in + (magnifying glass icon):** Zooms in to enlarge the image on the display. You can also use this button together with the arrows on the directional pad to adjust the crop box for printing.

OK: Selects a menu setting, value, or photo on the display. **Directional pad:** Allows you to navigate through photos and menu options by pressing the up, down, left, or right arrow buttons. If you are zooming in on a photo, you can also use the arrow buttons to pan around the photo and select a different area to print. 7 8 9 10 11 12 13 14 15 HP All-in-One overview 16 17 18 19 4 HP All-in-One overview Find more information A variety of resources, both printed and onscreen, provide information about setting up and using the HP All-in-One. · **Setup Guide** The Setup Guide provides instructions for setting up the HP All-in-One and installing software. Make sure you follow the steps in the Setup Guide in order. If you have problems during setup, see **Troubleshooting** in the last section of the Setup Guide, or see "Troubleshooting and support" on page 17 in this guide. **Onscreen Help** The onscreen Help provides detailed instructions on features of the HP All-in-One that are not described in this User Guide, including features that are only available using the software you installed with the HP All-in-One. www.hp.com/support

If you have Internet access, you can get help and support from the HP Web site. This Web site offers technical support, drivers, supplies, and ordering information. **HP All-in-One overview** · **Load originals and load paper** You can copy or scan up to letter- or A4-size originals by loading them on the glass. To load an original on the scanner glass 1. Lift the lid on the HP All-in-One. 2. Load your original print side down on the right front corner of the glass. **TIP:** For more help on loading an original, refer to the engraved guides along the edge of the glass. 3. Close the lid.

Find more information 5 Chapter 1 To load full-size paper 1. Raise the output tray to load paper into the main input tray. 2. Slide the paper-width guide to its outermost position. 3.

Tap a stack of paper on a flat surface to align the edges, and then check the paper for the following: · Make sure it is free of rips, dust, wrinkles, and curled or bent edges. · Make sure all the paper in the stack is the same size and type. 4. Insert the stack of paper into the main input tray with the short edge forward and the print side down. Slide the stack of paper forward until it stops.

HP All-in-One overview **CAUTION:** Make sure that the HP All-in-One is idle and silent when you load paper into the main input tray..



[Your user manual](#)
[HP PHOTOSMART C5280](#)