

Experts In Home Cleaning™

PowerFresh™ Steam Mop

USER'S GUIDE

1440-J SERIES

- 2 Thank You**
- 3 Safety Instructions**
- 4 Product View**
- 5 Assembly**
- 6 Special Features**
- 7-9 Operations**
- 9 Maintenance and Care**
- 10 Troubleshooting**
- 10 Replacement Parts & Additional Accessories**
- 11 Warranty**
- 12 Product Registration**
- 12 Consumer Care**




Thanks for buying a BISSELL PowerFresh™ Steam Mop

We're glad you purchased a BISSELL PowerFresh™ Steam Mop. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL PowerFresh Steam Mop is well made, and we back it with a limited two-year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL PowerFresh Steam Mop.

Thanks again, from all of us at BISSELL.

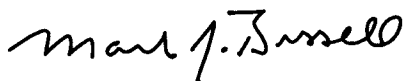

Mark J. Bissell
Chairman & CEO

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should be observed, including the following:

Read all instructions before using your PowerFresh™ Steam Mop.

Always connect to a properly Earthed outlet. Unplug from outlet when not in use and before conducting maintenance or troubleshooting.

WARNING:

To reduce the risk of fire, electric shock, or injury:



- Use indoors only
- Do not immerse
- Use only on surfaces moistened by cleaning process
- Do not leave machine when it is plugged in
- Do not service machine when it is plugged in
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard
- Do not use machine if it has been dropped, damaged, left outdoors or dropped into water
- Do not expose to rain, store indoors
- Do not pull or carry by cord, use cord as a handle, close door on cord, pull cord around sharp corners or edges, run appliance over cord, or expose cord to heated surfaces
- Do not carry the appliance while in use
- Do not unplug by pulling on cord; unplug by grasping plug not the cord
- Do not handle plug or appliance with wet hands
- Do not put any object into appliance openings, use with blocked opening or restrict air flow
- Do not expose hair, loose clothing, fingers or body parts to openings or moving parts
- Do not pick up hot or burning objects
- Do not pick up flammable or combustible materials (lighter fluid, petrol, kerosene, etc.) or use in the presence of explosive liquids or vapours
- Do not use appliance in an enclosed space filled with vapours given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapours
- Remove plug from electrical outlet before cleaning or maintaining the appliance


- Not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- Young children should be supervised to ensure that they do not play with the appliance
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, petrol, etc.)
- Do not modify the Earthed plug
- Do not allow to be used as a toy
- Do not use for any purpose other than described in this User's Guide
- Use only manufacturer's recommended attachments
- Use only cleaning products formulated by BISSELL for use in this appliance to prevent internal component damage
- Keep openings free of dust, lint, hair, etc.
- Keep appliance on a level surface
- Turn off all controls before unplugging
- Be extra careful when cleaning stairs
- Liquid or steam must not be directed towards equipment containing electrical components
- Pay close attention when working around children

SAVE THESE INSTRUCTIONS.

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

 **WARNING:** This appliance must be Earthed.

 The symbol  means WARNING: Danger of scalding.

 Surface may be hot. Avoid contact.

IMPORTANT FOR OPERATION ON A 220-240 VOLT A.C. 50/60 Hz POWER SUPPLY ONLY.

 
If your appliance is fitted with a nonrewireable BS 1363 plug it must not be used unless a 13 amp (ASTA approved to BS 1362) fuse is fitted in the carrier contained in the plug. Spares may be obtained from your BISSELL supplier. If for any reason the plug is cut off, it must be disposed of, as it is an electric shock hazard should it be inserted into a 13 amp socket.

Product view

Optional Accessories:



Washable Microfiber Mop Pads with Microban® Antibacterial Product Protection (2-pack)



Removable & Washable Easy Scrubber



Carpet Refresher Attachment



Spring Breeze Fragrance Discs Replacement Pack (2-pack)



Water Tank



FPO

Water Filter Replacement



FPO

Removable Water Tank With Replaceable Water Filter



Assembly

Your PowerFresh™ Steam Mop assembles quickly and easily. It is packaged with the following items:

Handle Assembly with one screw

Lower Body

Manoeuvrable Mop Head

**Removable Water Tank
(Comes With Replaceable Water
Filter on Select Models)**

**Removable Easy Scrubber
(Attached to Mop Head)**

2 - PowerFresh™ Steam Mop Pads

2 - Spring Breeze Fragrance Discs

1. Attach lower body to mop head by snapping it into place.
2. Slide handle assembly down and screw until tightened.

PowerFresh Steam Mop assembly is now complete.



OR



Removable Water Tank
With Replaceable Water Filter
(Select Models Only)



2 PowerFresh
Steam Mop Pads

1



2



Special features

Water Tank (With Replaceable Water Filter on Select Models)

The water tank is located on the top of the PowerFresh™ Steam Mop. It can be refilled with water any time during use. Distilled or demineralized water is recommended. On select models, this tank is connected to a removable, replaceable water filter that prolongs the life of your steam mop by filtering out tap water minerals.

Do not use chemicals in the water tank of your PowerFresh Steam Mop.

Steam-On-Demand Trigger

The steam trigger allows you to release steam when and where you need it for more targeted cleaning.

SmartSet™ Steam Control (Low, Medium, High)

SmartSet™ Steam Control indicator light will stop blinking when PowerFresh™ Steam Mop is ready to use. Then press the Steam Level button to choose the level of steam you desire.

Microfibre Mop Pads with Microban® Antibacterial Protection

Reusable microfibre mop pads are machine washable and safe for virtually all hard floor surfaces. Your PowerFresh may have come with two different pads. The white microfibre pad is best for everyday use on delicate flooring like sealed hardwoods and laminate. The gray and white striped pad can be used for scrubbing heavily soiled floors and cleaning tougher messes. These steam mop pads contain built-in Microban® antibacterial protection that helps prevent the growth of 99.9% of harmful bacteria on the pad surface to help keep your pads fresher and cleaner between uses.

Removable Easy Scrubber

Quickly clean sticky messes by pressing the Easy Scrubber with your foot and locking it into position. Clean grout and crevices easily with this tool.

Carpet Refresher Attachment

Refresh carpets with steam.



OR



Tip:

Do not attempt to use your PowerFresh Steam Mop without water in the tank. You may hear a knocking sound indicating there is no water.

Operations

Getting ready

The mop pad may have already come attached to the mop head, if not follow steps 1A and 1B below.

1. Add Freshening Disc and Attach Mop Pad

- A. Insert Spring Breeze Freshening Disc into pocket inside mop pad. Use the whole disc for a refreshing scent or cut in half for a lighter scent.
- B. Set mop head in mop pad, making sure quick-grip release tab is located on the back.

2. For tank without filter

Fill the water tank

- A. Remove tank by lifting straight up and away from unit.
- B. Unscrew cap at bottom of water tank.
- C. Fill water tank with water. For best results, water should be at room temperature.
- D. Replace the cap, tighten until snug.
- E. Replace water tank by gently sliding tank into place and press down firmly.

3. For tank with filter

Fill the water tank

- A. Remove tank by lifting straight up and away from unit.
- B. Lift lid on top of water tank.
- C. Fill water tank with water. For best results, water should be at room temperature.
- D. Press tank lid back down to cover tank.
- E. Replace water tank by gently sliding tank into place and press down firmly.


4. Twist the Quick Release™ cord wrap clockwise to unwrap the power cord completely and plug into a 220-240 Volt outlet as described on the **Important Safety Instructions**, page 3.

5. SmartSet™ Steam Select Indicator light will glow when PowerFresh Steam Mop is ready to use. Press the Steam Level button to choose the level of steam you desire. Depress the Steam-on-Demand trigger located on the handle to begin steam cleaning.

1A



1B

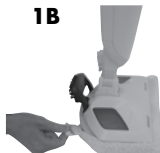

2A



2B



3A



3B



FPO

Tip:

Use of distilled water is recommended to prolong the life of your PowerFresh Steam Mop.

NOTE: Upon first use of the PowerFresh™ Steam Mop or first use after refilling the water tank, the pump may make a "knocking" sound. This is normal and should only last a few seconds.

Operations

Before you clean

Thoroughly sweep or vacuum floor prior to cleaning with the PowerFresh™ Steam Mop.

Cleaning hard floors

Your PowerFresh™ Steam Mop is designed to clean hard flooring such as ceramic tile, vinyl, laminate, marble, stone and sealed hard wood floors. Use of your PowerFresh Steam Mop on waxed or some unwaxed floors may result in a diminished glossiness. The PowerFresh Steam Mop is not for use on unsealed wood floors. For best results test in an inconspicuous area and check the care instructions from your flooring manufacturer.

1. Plug the unit in and wait 30 seconds for it to heat up. Choose the level of steam to clean your floor: Low (delicate floors), Medium (regular cleaning), High (durable floors or sticky messes). Begin cleaning by slowly passing the unit over the floor surface.
2. To sanitise an area of your floor, (attack invisible germs and bacteria) place the PowerFresh Steam Mop over the spot for a minimum 15 seconds using continuous steam, but no longer than 20 seconds using continuous steam. For larger areas, overlap swivel head placement.
3. To thoroughly clean dried-on sticky spots place the scrubby pad on the steam mop. Then press and lock the Easy Scrubber brush into place and slowly move the brush over the sticky spot to remove.
4. When the PowerFresh™ Steam Mop stops emitting steam, unplug the unit. Simply remove the water tank, refill, and continue cleaning.

Carpet Refresher Attachment

This accessory is recommended for the refreshing of carpets. Once the steam mop is cradled in the carpet refresher attachment, it will easily glide over the carpet.

NOTE: Always be sure a mop pad is in place before placing in carpet refresher attachment. Only white mop pads should be used with the carpet attachment. Do not use carpet attachment on spots or stains, or glide it over the same spot for no longer than 20 seconds.



WARNING:

Never put descaling, alcoholic, or detergent products into the steam cleaner, as this may damage it or make it unsafe for use.



WARNING:

Tinted plates on foot may get hot while steam mop is in use. Do not touch while hot.



CAUTION:

Exercise extreme care when using the Steam Mop on timber flooring. Ensure the Steam mop is thoroughly tested in an inconspicuous area prior to mopping a large floor area. The Steam Mop generates hot steam, so when depressing the trigger to apply steam, ensure the Steam Mop is moving continuously. The trigger does not need to be depressed at all times. Prolonged application of steam in one area increases the risk of damage to the surface treatment on timber floors. Check with your timber floor treatment application specialist prior to Steam Mop operation. Regular foot traffic and direct sunlight will wear down timber floor surface treatment making it more susceptible to extreme care when using the Steam Mop on timber flooring.

Operations

Carpet Refresher Attachment (continued)

1. Place the swivel mop head, with mop pad attached, in the carpet refresher attachment.

NOTE: The PowerFresh™ Steam Mop rests in the carpet refresher attachment and may not stay attached to the swivel mop head. It is meant to glide over the carpet.

2. Fill the water tank with water. Begin refreshing your carpet or rug by depressing the Steam-on-Demand trigger while pushing the PowerFresh™ Steam Mop in a forward and backward motion, releasing steam as you go.
3. When you have finished refreshing your carpet or rug, unplug the steam mop and remove from the carpet or rug.

NOTE: Move the PowerFresh™ Steam Mop and carpet refresher attachment in a continuous motion until you are finished. This product is not intended to be used as a carpet cleaner, only a carpet refresher or deodorizer. Never attempt to use the PowerFresh™ Steam Mop on carpet without the carpet refresher attachment in place. DO NOT leave the mop in a stationary position.



Maintenance and care

When you're done

1. Unplug power cord from outlet.
2. Carefully remove the mop pad using the Quick Release™ tab from the mop head. The mop pad and lower assembly may be hot. Remove Spring Breeze Freshening Disc from mop pad.
3. Any water remaining in the water tank should be emptied prior to machine storage.
4. Mop pad can be machine washed in warm water. Use only liquid detergents. Do not use fabric softeners or bleach. For best results, air dry.
5. Wrap power cord around quick release cord wrap on back of PowerFresh™ Steam Mop.
6. Wipe all surfaces of PowerFresh™ Steam Mop with a soft cloth. Store upright in a protected, dry area.



CAUTION:

Upright storage of the PowerFresh Steam Mop with a wet mop pad may result in the formation of white marks on your floor. To remove the white marks, clean area with vinegar.

Troubleshooting

Reduced steam or no steam.

Possible Causes

1. Water tank empty
2. Steam level not selected

Remedies

1. Fill tank
2. Select steam level by pushing steam level button.

Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.

Please do not return this product to the store.

For any questions or concerns, BISSELL is happy to be of service.

Replacement parts

Item	Part No.	Part Name
1	xxx-xxxx	Handle Assembly
2	203-xxxx	Water Tank with Cap and Insert
3	203-xxxx	Cap and Insert Assembly
4	203-8410	Easy Scrubber
5	203-8429	Carpet Glider
6	xxx-xxxx	Water Tank With Replaceable Water Filter
7	xxx-xxxx	Water Filter Replacement



Additional Accessories

Item	Part No.	Part Name
1	xxxx	Washable Microfiber Mop Pad with Microban® Antimicrobial Product Protection (2-pack)
2	1095	Spring Breeze Freshening Discs – 8-pack



Warranty

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care by E-mail, telephone, or regular mail as described below.

Limited Two-Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for two year any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to routine maintenance components such as mop pads. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the product's use instructions is not covered.

If your BISSELL product should require service:

Contact BISSELL Consumer Care to locate a BISSELL Authorized Service Center in your area.

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Care.

For Russia Inquiries:

ООО Сервис
123001, г. Москва,
ул. Большая Садовая, д. 10
через Фирменный Магазин BORK.
Часы работы: с 10.00 до 20.00
без перерывов и выходных.
Тел. (495) 755-85-20, 797-81-18

For all other inquiries:

USA Headquarters
01.616.453.4451
Monday - Friday 8 am - 4 pm

BISSELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE TWO YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty last so the above limitation may not apply to you.

NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim.

If your BISSELL product should require service:

Call BISSELL Consumer Care at the numbers below and we will give you the location of a BISSELL Authorized Service Center in your area. If you have questions about your warranty or need replacement parts please contact the numbers below.

For Russia Inquiries:

000 Сервис
123001, г. Москва,
ул. Большая Садовая, д. 10
через Фирменный Магазин BORK.
Часы работы: с 10.00 до 20.00
без перерывов и выходных.
Тел. (495) 755-85-20, 797-81-18

For all other inquiries:

USA Headquarters
01.616.453.4451
Monday - Friday 8 am - 4 pm

Or visit the BISSELL website - **www.bissell.com**

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____

Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 11 for details.



Experts In Home Cleaning™

©2012 BISSELL Homecare, Inc.
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 120-4624
Rev 9/12
Visit our website at:
www.bissell.com