



CABANA ISLANDER OWNER'S MANUAL

Important information enclosed in this manual please read these materials prior to assembling and using this product. Keep for future reference.

For questions on assembly, parts or warranty, contact the experts at Sportsstuff. **DO NOT RETURN** this product to the store!

Contact us TOLL FREE: 888-814-8833 (USA) (8am-5pm, CST Monday-Friday)

Congratulations on your new product purchase! Sportsstuff prides itself in making the most innovative inflatable products on the planet. Your high performance product is designed to enhance your outdoor water activities.

Product Name	Model #	Approximate Inflated Dimensions	Person Capacity	Weight Limit
Cabana Islander	54-1920A	76" x 102" x 82" (L x W x H) (190 x 255 x 205cm)	4-6	1020 lbs



WARNING!



GENERAL USE AND SAFETY:

To lessen your risk of serious injury or death, follow these rules:

- Not a lifesaving device.
- Never leave children unattended.
- Use only under competent supervision.
- Read all instructions and warnings provided to you in this owner's manual and those printed on the product before using your Sportsstuff product. Do not discard this manual.
- When using a Sportsstuff product, you are engaging in an exciting recreational activity that can result in injury if this product is not used properly. Users of this product must exercise caution and common sense at all times. Act responsibly and only use your product with the awareness of and willingness to accept the risks involved. **USE AT YOUR OWN RISK!**
- This product and its components are NOT for use by children under 6 years of age.
- Do not use under the influence of drugs or alcohol.
- Intended only for use in pools, very calm waters away from boats and other hazards, or on soft flat outdoor land surfaces such as a beach or lawn.
- Do not drag across any land surface. Carry the product to the water. This may take several people to lift and carry the product. Do not attempt to lift this product

by yourself.

- When the product is on the water, it is possible for the cabana hood to act as a sail, causing the product to move rapidly into open water, even in low wind conditions. Be aware of this possibility and use with the awareness of and willingness to accept the risks involved.
- Stay close to shore and avoid deep waters at all times.
- Do not use in unsafe waters. Use only in calm wide open waters with appropriate depth, at a safe distance away from boats and personal watercraft, docks, pilings, bridges, rocks, branches, and other hazardous objects. Remove any debris or obstructions from under the product before use.
- Be aware of changing weather conditions, gusty winds, and water currents. Do not use in such conditions that could cause the product to drift.
- Do not stand on this product at any time. Use only in the sitting or reclined position.
- This product is not designed for aerial tricks or gymnastics. Landing on the neck or head can cause serious injury, paralysis or death.
- Make sure the product is properly inflated with the air valve closed tightly.
- Examine the product before and after each use. Do not use this product if it is damaged or leaking air.
- Do not exceed the manufacturer's recommended person capacity for this product (6 people).
- **THIS IS NOT A TOWABLE TUBE.** Do not tow this product with anyone on it! This product can be pulled in the water **ONLY** to reach a desired location **without exceeding 5 mph.**
- This product is not to be used by nonswimmers without a life vest.
- Do not entrap yourself or anyone else underneath this product. Do not swim underneath the product.
- Do not climb on the canopy portion of this item.
- This product must be inflated on land. Do not inflate this product in or near the water.
- Check with your state and local government to learn their specific legal requirements concerning watersports.
- Do not use this item as a baby or pet float.
- Do not use this item as a fishing vessel.
- Store this item deflated and indoors in a cool, dry place.
- Sportsstuff products are **NOT** intended for rental use.

RELEASE OF LIABILITY:

By assembling and inflating this product, you agree that you have read and understand the entire Sportsstuff's product manual, including all instructions and warnings contained in that material prior to using this product. You additionally agree that you will ensure any additional or subsequent users of this product will read and understand the entire owner's manual. Misuse or improper use of this product could result in risks, dangers and hazards which may result in serious injury or death. The risks and dangers that may be encountered through the improper use of this product can be avoided by reading and following the warning guidelines listed within the owner's manual and by proper use of this product. Your assembly and use of this product shall be evidence of your agreement, to the fullest extent permitted by law, to properly follow the instructions and abide by the warnings set forth within the product manual. Your assembly and use of this product shall also constitute a release, to the extent permitted by law, by you and by any third party permitted by you to use, in any manner, this product, to Sportsstuff from any and all liabil-

ity for any loss, damage, injury and/or expense that you or any user of this product may suffer as a result of the use of this product. This release shall extend to any loss, damage, injury or expense due to any cause whatsoever, including negligence or breach of contract on the part of Sportsstuff and/or any party participating in the design and/or manufacture of this product. The terms of this release shall be effective and binding upon you, your heirs, next of kin, executors, administrators, assigns and representatives. Your assembly and use of this product shall constitute your agreement to assume and accept any or all known or unknown risks of injury to you and/or to third parties through the use of this product. Sportsstuff and related parties have not made and hereby expressly deny any oral or written representation and/or warranty, including warranty for a particular purpose, other than what is set forth herein and in the Sportsstuff's owners manual.

The Cabana Islander includes:

- Heavy-Gauge PVC
- Detachable Nylon Canopy Shade with Fiberglass Poles
- Center Porthole
- Back Rests
- Inflatable 16-Quart Cooler with Zippered Lid
- Mounting Platform
- Anchor System

* Please note the Cabana Islander is not a towable.

ASSEMBLY AND INSTALLATION:

1. Carefully unfold the product. Set aside the cooler, canopy and canopy poles.
2. Spread out the main unit to its actual size. Please make sure you have a large enough space to inflate the product.
3. Locate the valve and fasten the red portion of the valve to the base. Please note you need to utilize a high volume pump to inflate a product of this size. Refer to the specific instructions below on inflation. Inflate the main chamber. When you are done inflating the product it should be firm to the touch and should not be easy to press in on the product.
4. Find the valve on the mounting platform and inflate until firm.
5. Find the valves on the cooler. There is one for the main body and one for the lid. Refer to inflation instructions below for safety valve use.
6. Carefully layout cabana hood portion.
7. Attach each pole portion to its neighboring pole fitting. Ensure that all pole sections are completely connected and secure.
8. Insert two ends of the assembled pole frame into the sleeves on each side of the product's backrest so that the printed side of the hood will face the sky when the hood is completely attached. Repeat for the other side. (This will take more than one person)
9. Fasten the buckles on the outside ends of the hood portion to the back of the main unit (where the main tube and the canopy hood meet).
10. If desired, the canopy hood can be removed. Simply unfasten the buckles on the outside ends of the canopy hood portion, and remove the pole frame from the sleeves on each side of the product's backrests. Detach each pole portion from its neighboring pole fitting, fold and store.

11. Once product assembly is complete, it may be carried to a location near the water for anchor assembly. This will take several people to lift and carry the product. Do not attempt to lift this product by yourself. Do not drag across any land surface.

12. Utilizing the anchor feature will help reduce drifting and unwanted motion of the product. This product may be anchored by filling the included anchor sack with sand, rocks, or a weight of up to 25 lbs. Attach one end of a rope to the anchor and tie the other end to a grommet on the under side of the Cabana Islander. Place the anchor on the Cabana Islander until the product is in the water at the desired location.

13. The product may be floated or pulled out to the location of your choice where it can remain for use.

14. If pulled to location, there should be no one on the product until towing has stopped and the item is anchored. Do not exceed 5 mph when pulling to location.

15. Once the product is in the desired location, drop the anchor bag in the water. The Cabana Islander can also be tethered to a dock or shore instead of using the anchor system.

16. Tether cooler to the Cabana Islander.

17. Relax and have fun!

MOUNTING PLATFORM CONNECTION:

To connect the mounting platform to the main unit, lace the supplied rope through each unit and tie a knot at each end as shown below:



1) Begin by tying a knot around the right-most loop on the main unit. Lace the rope through each loop, alternating between a main unit loop and a mounting platform loop.



2) Continue lacing the rope through the loops, tightening and closing the gap between the two units as you proceed.



3) Once the rope has been laced through all loops, tighten rope and tie a knot around the last remaining loop.

As the unit is used, be sure to check the connection and tighten as necessary

REPLACING PRODUCT PARTS:

If a leak or problem is suspected with your tube, locate the valve and deflate the item to inspect possible problem areas. If the problem is suspected on the main tube, first remove the canopy hood. Contact Sportsstuff warranty department for prompt parts replacement if a problem is located. For non-warranty parts replacement, follow the same procedure. When a replacement is received, repeat applicable steps in the ASSEMBLY AND INSTALLATION section.

USE:

Once product is properly inflated this float can be used in pools or very calm waters away from boats and other hazards.

INFLATION:

Your Sportsstuff product is equipped with the following type of valves:



Speed Safety Valve - Pulls out for fast inflation/deflation, then can be pushed in flush with the tube. For use with standard electric pumps, shop vac, wet vac, leaf blowers, vacuum with a 2-way switch for fast inflation/deflation.



Safety Valve – push-in valve used on safety chambers for use with electric or hand pump. Affix the end of your inflator hose into the small opening in valve. Make sure you open the small flap inside the opening and inflate until firm. A small plastic straw is included with tubes using this valve. This straw may temporarily be inserted in the valve to keep the flap open while inflating and deflating.

Proper inflation is the key to the optimum performance of this product. The PVC bladder must expand and should be firm to the touch.

The best air pumps to use are:

- 110v electric: 2.5 psi (model #57-1504A) or 3.0 psi (model #57-1508)
- Hand/foot pump specifically for towables: LP1 (model #57-1003)
- 12v pumps (model #57-1510) can also be used but their maximum output is only .8 psi so a secondary pump such as the Sportsstuff LP1 hand pump (model #57-1003) will need to be used.
- Leaf Blower
- Vacuum with two-way switch

Various types of air pumps are available from Sportsstuff at 1-888-814-8833.

IMPROPER INFLATION



PROPER INFLATION



Photo “A” shows a tube severely underinflated. Note how the adult standing on the tube sinks down into the tube.

Photo “B” shows a tube properly inflated. Note how the adult standing on the tube barely sinks down into the tube. When properly inflated, all features of the product would remain sturdy and perform better, prolonging the life of the unit.

Inflation Maintenance:

Finally, it is not enough to simply fill it up and go! It is important to monitor the amount of air in this product as heat will cause the bladder to expand, possibly causing damage to the seams or I-beams. If you leave a full tube sitting in the sun for any length of time, it will expand. Either store it in the shade, or let some air out. Don't let it sit on the beach, dock, or boat full of air! At the same time, if it is stored out of the sun in a cool place, you may need to add air. Check and adjust inflation levels each time you use your tube. You'll have more fun, and your toys will last longer.

MAINTENANCE:

Very little care is required for the product components:

- You may clean your product using soap and water or mild detergent.
- Never use strong cleaning agents.
- The product, when clean and dry, can be deflated and stored in a cool, dry area out of direct sunlight.
- To deflate, simply unfasten the valve from the base.
- Avoid storing this product in areas of extreme temperatures and please take precautions against animals and rodents.
- Bright colored fabric covers used on the product may bleed or fade when initially wet. Protect all boat and car interiors and all other surfaces from possible staining.

GENERAL TROUBLE SHOOTING GUIDE:

Symptom: Product won't hold air.

Solution: Check to see that the speed safety valve is fastened properly. Re-install valve if needed. Check to see if the product was inflated fully from the beginning. If you suspect it wasn't inflated fully, add more air. PVC Repair Adhesive is available from Sportsstuff at www.sportsstuff.com or 888-814-8833 for small hole or seam repairs.

Symptom: Product inflates but doesn't become firm.

Solution: Please check to make sure it was inflated firmly with a high volume air pump or compressor adapter. If you are sure you inflated it properly, fully assess it for a leak or re-install the speed valve. If a leak is detected, the bladder may be patched by using Sportsstuff PVC Adhesive which can be purchased directly from Sportsstuff.

WARRANTY POLICY:

Sportsstuff warrants, to the original purchaser only, that their high performance products, when used for normal recreational purposes, are free from defects in material and workmanship for a period of ninety (90) days from the date of purchase. This warranty does NOT cover: products for rental, for hire and other uses not considered for normal recreational purposes; nor punctures, cuts, abrasions in normal use. For prompt parts replacement or warranty issues, contact Sportsstuff directly at 888-814-8833. Replacement parts are shipped within 48 hours of notification Monday through Friday. Do not return to your dealer. (USA ONLY.) This warranty is only valid in the USA.

If you have any questions about any Sportsstuff, Inc. product, replacement parts or locating a dealer in your area, contact us at:

Sportsstuff Inc.
11213 E Circle Suite A
Omaha, NE 68137
Toll Free: 888-814-8833
Tel: 402-592-9085
Fax: 402-592-1354
E-mail: customercare@sportsstuff.com

Warranty registration is available on-line at: <http://www.sportsstuff.com>

Prior authorization is required for returned merchandise. No credit will be given for a product that is sent back without prior authorization from Sportsstuff, Inc. After receiving an authorization number, please ship returned products to the following address:

Sportsstuff, Inc. Return Center
11111 E Circle, Suite A
Omaha, NE 68137
(Please label package with RA #)