# 2012 Samsung TV F/W Upgrade Guide



# **Samsung Electronics**

### Step1. How to prepare the USB Memory Drive

- 1. Download the firmware file from Samsung.com into your computer. File Name : T-MST10PAUSC.zip
- 2. Connect the USB Memory Drive to the USB port of your PC.

Copy the file to USB Memory Drive.

3. Follow below steps to extract the file and make a folder for firmware. The folder should have same name with the file and exist in the root directory.

(An extracting process might be different by application in PC)

3-A. Click the file and 'Extract All...'. Then select USB driver that files will be extracted.

		Extract Compressed (Zipped) Folders	BX
	Open	🕑 🊹 Extract Compressed (Zipped) Folders	
	Extract All	Select a Destination and Extract Files	
	Open with	Files will be extracted to this folder:	
	Share with	G:₩	
	Restore previous versions	☑ Show extracted files when complete	
	Send to		
	Cut		
T-MST10PAUSC.zip	Сору		
· · · · · · · · · · · · · · · · · · ·	Create shortcut		
	Delete		
	Rename		
	Properties	Extract	ncel

3-B. Confirm that USB Driver has a folder named 'T-MST10PAUSC' in the root directory



3-C. Safely disconnect the USB memory drive by clicking in 'Safely Remove' in Task Bar.

### Step2. How to upgrade the Firmware by USB

 Insert the USB Memory Drive containing the firmware into the USB port of TV.

2. Turn on the TV and wait around 1 or 2 minutes.

3. Press the MENU button, select

'Support', 'Software Upgrade', and then

'By USB'.



4. The message for searching for update files is displayed.



5. If the TV finds a valid firmware version,

it displays the message below.



6. Press Yes, then TV starts updating.



7. When the firmware upgrade is complete, the TV turns off and then back on by itself.



## Cautions

While upgrading,

- ✓ Do not pull the USB Memory drive out.
- $\checkmark$  Do not unplug the power cable.
- $\checkmark$  Do not turn off the TV.





#### Warning

Pulling the USB Memory drive out or unplugging the power cable will cause a firmware error or main board failure. Firmware errors and main board failures are not covered by Samsung warranty policy.

## How to Upgrade the Firmware by Online

1. Turn on the TV.

2. Confirm that your TV is connected to the Network by using the Network Status test.

	Network Status				
Wired network and Internet	connection complete.				
	MAC Address	60:6b	: bd :	78 : 5t	5:31
	IP Address	192.	168.	0.	112
	Subnet Mask	255.	255.	255.	0
	Gateway	192.	168.	0.	1
	DNS Server	192.	168.	0.	1
You are connected to the Inter	rnet. If you have any probl	ems usina	onlir	ne	
You are connected to the Inter services, please contact your Ir		ems using	onlir	ne	
	nternet Service Provider.	ems using Close	onlir	ne	

3. Press the MENU button, select

'Support', 'Software Upgrade', and then 'Online'.



4. The message "Connecting to the network server..." is displayed.



5. If the TV finds a higher firmware version from the server, it starts downloading.



6. After downloading, TV asks you to update new version.



7. When the firmware upgrade is completed, the TV turns off and then back on by itself.

