



07840

Please read the following instructions carefully.
Keep this instruction manual for future reference.

Tools required: Phillips head screwdriver (not included),
drill with 1/8" drill bit (not included) and wrench (included).

**For technical support Call 1-800-268-6237 or
e-Mail customerservice@summerinfant.com**

⚠ WARNING:

Adult assembly required.

Exercise care when unpacking and assembling product.

Intended for use with children
from 6 months through 24 months.




INSTRUCTION MANUAL

Sure & Secure® Deluxe Top of Stairs Wood Walk-Thru Gate


⚠ WARNING: IMPORTANT! KEEP FOR FUTURE REFERENCE!

- To prevent serious injury or death, securely install gate and use according to manufacturer's instructions.
- Never use with a child able to climb over or dislodge the gate.
- Never leave child unattended.
- Use only with lock securely engaged.
- Do not use if any components are missing or damaged.
- To prevent falls, never use at the top of the stairs without wall mounting cups and door stopper.
- This product is intended for use with children from 6 months up to 24 months of age.
- This product will not necessarily prevent all accidents. Proper adult supervision is required at all times.
- Adult assembly required. Exercise care when unpacking and assembling product.

FEATURE & COMPONENTS:

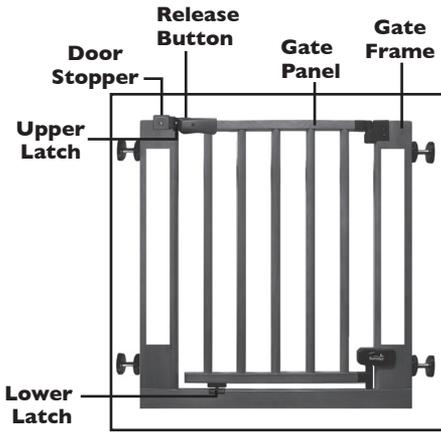

Extension Frames (2)

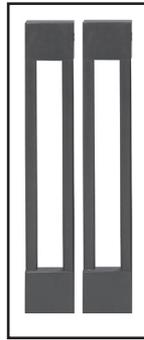

Screws (4)




Wall Anchors (4)




Extension Pins (4)




Adhesive Mounting Pads (4)

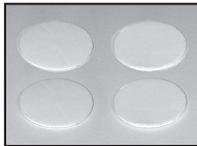

Mounting Cups (4)

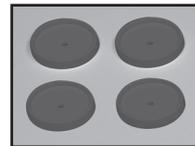

Wrench

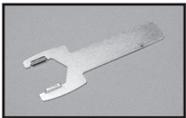


Tension Bolts (4)




SET-UP:


Step 1: Measure the width of the opening where you intend to install the gate. Please refer to the following pictures to determine the correct installation configuration.

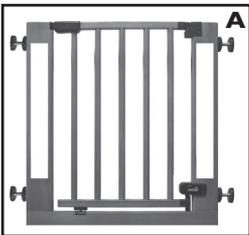

(29.5" – 33.25") without Extension Frames

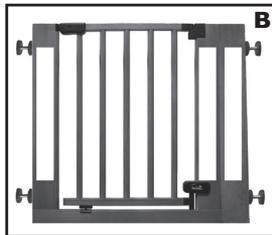

(33.5" – 37") with one Extension Frame

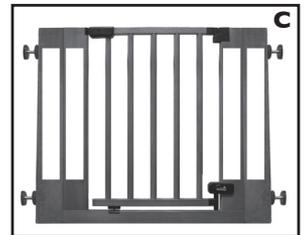


(37.25" – 40.5") with two Extension Frames

Step 2: To use with one or two extension frames, assemble as shown in Figure D.

Warning: Do not install two extension frames on the same side of the gate.

Step 3: Screw the tension knobs onto the tension bolts until they contact the pads. Insert 4 tension bolts into holes on outside and slide inward toward frame as far as possible.

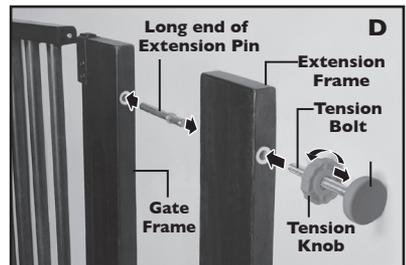

SET-UP (Cont'd):

WARNING: FOR USE AT TOP OF STAIRS, MOUNTING CUP INSTALLATION IS MANDATORY.

Mounting Cup Installation - mandatory for top of stair use.

(Optional for non top of stair use): Fasten mounting cups to the door frame or studs with screws as shown in Figure E. If mounting into wall, use wall anchors.

Important Note: Screws are provided for installing the Mounting Cups directly to wood. If mounting into wallboard, use the Wall Anchors and Screws provided. If you are mounting the gate to another surface, purchase and use the appropriate hardware.

If wall anchors are needed:

- Pre-drill a hole in the wall (3/16" or 5mm drill bit)
- Insert the wall anchors (included) into the hole with a hammer, tap gently on the end until the wall anchor is flush with the wall.

Note: The adhesive mounting pads are included only for positioning the mounting cups and must be used in conjunction with screws. This gate includes a door stopper, as shown in Figure F, which prevents the gate from swinging open in one direction. When mounting this product at the top of stairs, be sure to assemble gate so door does not swing over the stairs. If product is not being used at the top of stairs, door stopper may be removed (by removing screws) to allow gate to swing open in both directions. Additionally, the door stopper may be removed and installed on opposite side of door to prevent door from opening in opposite direction.

Step 4: Place the gate in the opening so that the bottom of the gate frame is completely flat on the floor, as shown in Figure G.

Step 5: Center the gate in the opening, so that the distance from the bottom of gate frame to each side wall is equal, as shown in Figure H.

Note: Never create a gap on either side more than 3".

Slide the tension bolts out until the pads contact the door frame or wall. Then screw the tension knob away from the pad until it contacts the gate frame as shown in Figure I.



Note: Wrench is provided for final tightening of all four tension knobs (if necessary), as shown in Figure J.

Step 6: Tighten both of the bottom tension knobs inward toward the frame at the same time, as shown in Figure K. Then tighten both of the top tension knobs inward toward the frame at the same time, as shown in Figure L, so that the upper latch goes below the release button completely, as shown in Figure N.

To verify installation:

Push the frame to ensure that it is secure in the opening and then push the gate panel to ensure that the upper and lower latch sets lock securely in the housings on the frame, as shown in Figures M and N.

Note: If gate is difficult to unlatch, top tension knobs may be too tight.

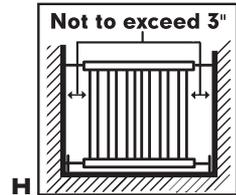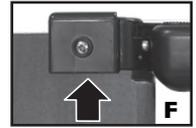

Lower Latch



Upper Latch


OPERATION:

To open the gate: (Figure O)

1. Push the release button away from the door frame or wall.
2. Lift up the gate panel.
3. Swing open in opposite direction to door stopper.

To close the gate: Simply release the gate and it will close automatically.

Caution: After closing the gate, ALWAYS check to be certain that it is latched securely.

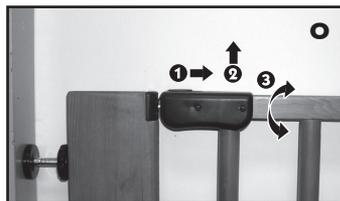

TROUBLESHOOTING:

If the gate does not stay closed:


1. The upper latch set is not properly adjusted.

Solution: Adjust the upper tension knobs by turning them counter-clockwise to release tension or clockwise to increase tension. Ensure that the upper latch set button always remains below the release button as shown in Figure N (Page 3). Also ensure that the upper latch set button engages securely when the gate swings closed and that it can be released properly when the release button is pushed.

2. Lower latch set position is too low.

Solution: Although unusual, some door frames may be out of alignment. In this case you may have to adjust the individual tension knobs to ensure that the gate is aligned properly. Make sure the upper latch set is still below the release button as shown in Figure N (Page 3).

If the gate does not stay in position, it may not be installed properly, as shown in Figure P. Remove and re-install the gate, making sure it is installed correctly.

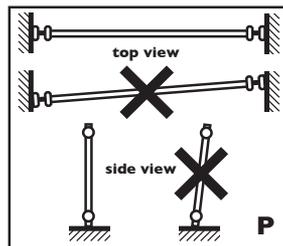

MAINTENANCE:

1. Regularly check tension knobs and rubber pads to make sure the gate is securely in place.
2. Do not use the gate if any components are damaged or missing.
3. Wipe surface with a damp cloth or sponge, using mild detergent and warm water.



visit us at

www.summerinfant.com

We at Summer Infant stand behind all of our products. If you are not completely satisfied or have any questions, please contact our Customer Service Department at 1-800-268-6237 or e-mail us at customerservice@summerinfant.com.

Summer Infant, Inc.
1275 Park East Drive
Woonsocket, RI 02895 USA
1-800-268-6237

Summer Infant Europe, Ltd.
Office Suite 6, Second Floor
Bournehall House, Bournehall Road
Bushey, Hertfordshire WD23 3HP UK
+44 (0) 208 420 4429

©2009 Summer Infant, Inc.
Please retain for future reference.
Colors and styles may vary.

MADE IN CHINA.

6/09