

INTEX® OWNER'S MANUAL

Built-in Fast-Fill™ Electric Pump

Model AP640R

6-"C" cell size batteries

IMPORTANT SAFETY INSTRUCTIONS

READ AND FOLLOW ALL INSTRUCTIONS BEFORE USING THIS PRODUCT

WARNING

- **NEVER PLACE AN INFANT TO SLEEP ON AIR MATTRESSES.**
- Never introduce any flammable substance into the inflatable airbed, SUCH AS AEROSOL TIRE REPAIR PRODUCTS, as it may ignite or explode.
- This is not a toy. Children must not be left unattended when using the airbed.
- Keep the storage bag away from babies and children. The storage bag is not a toy. When not in use, fold the bag and put it away out of the reach of children.
- Do not walk, stand on or jump on or use the airbed as a trampoline.
- Do not use on or near water. This is not a raft.
- Do not set up bed near stairs, doors, drops, sharp edges or breakable objects. Provide adequate space between bed and objects to avoid entrapment.
- Make sure the area is flat, smooth, even and free of sharp objects that could puncture the bed.
- Keep pets away from the airbed. Pets may puncture the surface of the bed.
- Avoid sleeping on the edge of the airbed. Edges produce less support than the middle of the bed.
- Do not obstruct the air passage opening or insert any objects into the opening.
- Do not operate air pump for more than 10 minutes at a time. Let pump cool at least 5 minutes between uses.

FOLLOW THESE RULES AND ALL INSTRUCTIONS TO AVOID SUFFOCATION, PROPERTY DAMAGE, ELECTRIC SHOCK, BURNS OR OTHER INJURY.

INSTRUCTIONS

General


- For maximum power use alkaline batteries. Remove batteries from equipment which is not to be used for an extended period of time.
- Do not mix old and new batteries. Do not mix alkaline, standard (Carbon - Zinc), or rechargeable (Nickel - Cadmium) batteries.
- Remove used batteries promptly.
- Do not dispose of batteries in a fire. Check your local regulations for proper disposal instructions.
- Keep away from heat or direct sunlight.
- No specific air pump maintenance is required.
- Always purchase the correct size and grade of battery most suitable for the intended use.
- Replace all batteries of a set at the same time.
- Clean the battery contacts and also those of the device prior to battery installation.
- Ensure batteries are installed correctly with regard to polarity (+ and -).
- For cleaning use only mild soapy solution. Do not use any chemicals.
- In case of repairs, use only common PVC repair glue and patches.

SAVE THESE INSTRUCTIONS



Page 1

139-PO-R1-1208

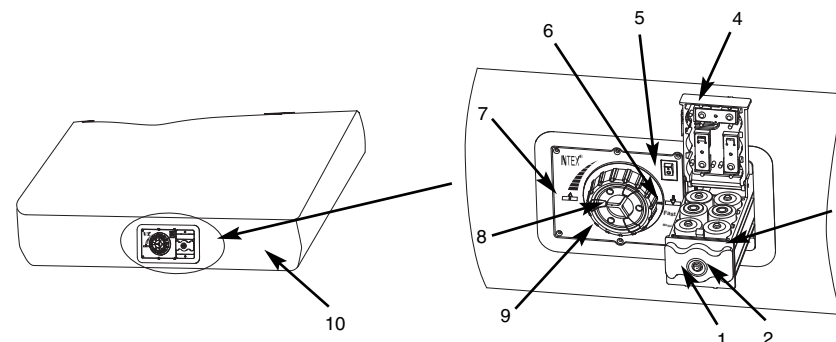PARTS REFERENCE



Part Descriptions:

- | | |
|-------------------|-----------------------------------------------------------------------------------------------------------|
| 1. BUTTON | 6. INFLATION MARK () |
| 2. HANDLE | 7. DEFLATION MARK () |
| 3. BATTERY HOLDER | 8. AIR PASSAGE AND CONTROL DIAL VALVE |
| 4. BATTERY COVER | 9. CONTROL DIAL |
| 5. SWITCH | 10. AIRBED |

NOTE: Drawings for illustration purpose only. May not reflect actual product. Not to scale.

INFLATION

1. Pull out the battery holder by holding the handle. See Fig (1).
2. Press the button on the batteries holder and open the battery cover. See Fig (2).
3. Insert 6 - "C" alkaline batteries (**NOT INCLUDED**) as shown on the drawings inside the battery compartment. See Fig (3).

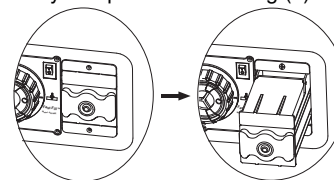


FIG (1)

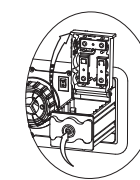


FIG (2)

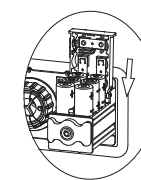
 


FIG (3)

4. Close the battery holder securely and slide back into the housing.
5. Turn the control dial clockwise until arrow points to inflation mark (). See Fig (4).
6. Press "I" to switch ON. See Fig (5).
7. When the airbed is fully inflated to the desired firmness, press "O" to switch OFF. See Fig (6).

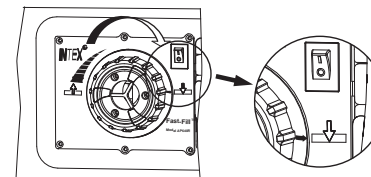


FIG (4)

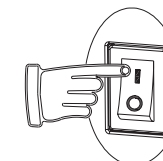


FIG (5)

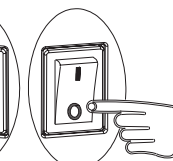


FIG (6)

SAVE THESE INSTRUCTIONS

Page 2

8. Lie down on the airbed to test the firmness.
9. If the sleeping surface is too hard, adjust the firmness by turning the control dial counterclockwise gradually until air starts to exit through the air passage. See Fig (7). Turn the control dial fully clockwise when the desired firmness is achieved. See Fig (8). If the airbed becomes too soft repeat step #5 thru #9 as necessary.

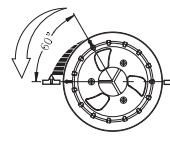


FIG (7)

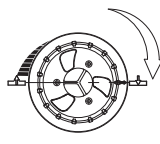


FIG (8)

139
PO

IMPORTANT NOTE


Proper inflation of the airbed.

The ambient temperatures of air have an effect on the airbed internal pressure. At low ambient temperature the air will contract within the airbed and the airbed will feel softer: add air as necessary. At high ambient temperature the air within the airbed will expand significantly and the airbed will become hard and may burst: release air to avoid damage to the airbed or to soften the feel. **Do not** expose the airbed to extreme temperatures (hot or cold). Stretching is a natural characteristic of new vinyl. During initial use, the airbed may become soft and require additional inflation to maintain desired firmness. This is normal for the first few days of use.

Dimensions shown are approximate and will vary due to the vinyl temperature and the air temperature.

In no event shall Intex, their authorized agents or employees be liable for damages (such as pin holes) to the airbed caused by negligence, ordinary wear and tear, abuse and carelessness, or external forces.

DEFLATION

1. Turn the control dial counterclockwise until arrow points to deflation mark (). See Fig (9).

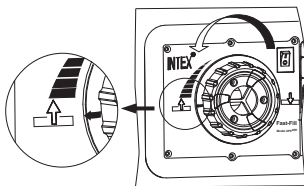


FIG (9)



FIG (10)

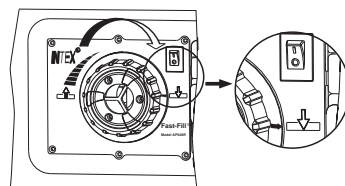


 
FIG (11)

2. Press "I" to switch ON. See Fig (5).
3. When the airbed is completely deflated, begin rolling the airbed from the foot of the airbed towards the head of the airbed where the pump is located. See Fig (10).
4. When all air is removed from the airbed, press "O" to switch OFF. See Fig (6).
5. Turn the control dial fully clockwise. See Fig (11).

SAVE THESE INSTRUCTIONS

Page 3

INFLATION OPTION

1. If electrical power is not available then a conventional foot or manually operated air pump can be connected to the control dial valve for inflation. See Fig (12).
2. Turn the control dial clockwise until arrow points to the inflation mark ().
3. Insert air pump nozzle to the control dial valve to inflate the airbed.

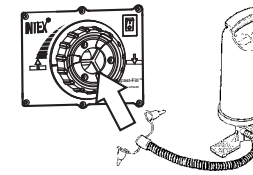



FIG (12)

139
PO

IMPORTANT

Inflate only with a low pressure inflator. Do not over inflate. Fill with cold air only.

STORAGE

1. Deflate the airbed following the "DEFLATION" instructions.
2. Turn the control dial counterclockwise until arrow points to deflation mark (). See Fig (9).
3. Make sure the airbed is clean and dry.
4. Lay bed flat with sleeping surface facing upwards and follow the folding steps on Figs (13 - 17). Fold the airbed loosely and avoid sharp bends, corners and creases which can damage the airbed.

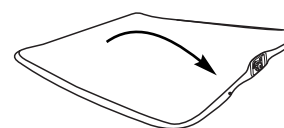


FIG (13)

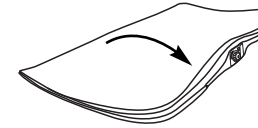


FIG (14)

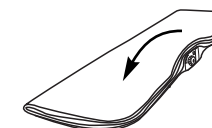


FIG (15)

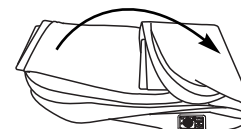


FIG (16)



FIG (17)

5. Turn the control dial fully clockwise. See Fig (11).
6. Place the airbed inside the storage bag and store in a dry, cool storage location.

©2011 Intex Marketing Ltd. - Intex Development Co. Ltd. - Intex Trading Ltd. - Intex Recreation Corp.
All rights reserved/Tous droits réservés/Todos los derechos reservados/Alle Rechte vorbehalten.
Printed in China/Imprimé en Chine/Impreso en China/Gedruckt in China.

®™ Trademarks used in some countries of the world under license from®™ Marques utilisées dans certains pays sous licence de/Marcas registradas utilizadas en algunos países del mundo bajo licencia de/Warenzeichen verwendet in einigen Ländern der Welt in Lizenz von/Intex Marketing Ltd. to/a/an Intex Trading Ltd., Intex Development Co. Ltd., G.P.O. Box 28829, Hong Kong & Intex Recreation Corp., P.O. Box 1440, Long Beach, CA 90801 • Distributed in the European Union by/Distribué dans l'Union Européenne par/Distribuido en la unión Europea por/Vertrieb in der Europäischen Union durch/Intex Trading B.V., P.O. Box nr. 1075 - 4700 BB Roosendaal - The Netherlands
Consumer Service 1-800-234-6839

INTEX®

SAVE THESE INSTRUCTIONS

Page 4