



# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for BREVILLE SK500XL. You'll find the answers to all your questions on the BREVILLE SK500XL in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual BREVILLE SK500XL**  
**User guide BREVILLE SK500XL**  
**Operating instructions BREVILLE SK500XL**  
**Instructions for use BREVILLE SK500XL**  
**Instruction manual BREVILLE SK500XL**

**Breville**

Breville is a registered trademark of Breville Pty. Ltd.

**Breville Customer Service Centre**  
**US Customers**

2851 E. Las Hermanas Street  
Rancho Dominguez  
CA 90221-5507

Service Centre: 1 (866) BREVILLE  
Email [askus@brevilleusa.com](mailto:askus@brevilleusa.com)  
[www.brevilleusa.com](http://www.brevilleusa.com)

**Canada Customers**

Anglo Canadian  
2555, avenue Aviation  
Pointe-Claire (Montréal) Québec  
H9P 2Z2

Service Centre: 1 (866) BREVILLE  
Fax (514) 683-5554  
Email [askus@breville.ca](mailto:askus@breville.ca)  
[www.breville.com](http://www.breville.com)



© Copyright, Breville Pty. Ltd. 2005

Due to continual improvements in design or otherwise, the product you purchase may differ slightly from the one illustrated in this booklet.

Model SK500XL Issue 1/05 Packaging Code: AM / CN



[Your user manual](#)  
[BREVILLE SK500XL](#)

#### **Manual abstract:**

*This kettle must only be used with the power base supplied. Use caution when pouring water from your kettle, as boiling water will scald. Do not pour the water too quickly. Lift the kettle from the power base and pour the water. Take care to hold the kettle level, especially when filled to the maximum level. To re-boil it may be necessary to wait for a few seconds to allow the control to reset. The kettle may be stored on its power base when not in use. Remove the power cord from the power outlet. To fill the kettle, remove it from the power base and open the lid by pressing the lid release button. fill with the desired amount of water.*

*Always fill the kettle between the minimum and maximum marks on the water window. Too little water will result in the kettle switching off before the water has boiled. 2. Ensure that the lid is locked firmly into place. Place the kettle firmly onto the power base.*

*Plug the power cord into 110V power outlet. The power 'On' light and the water gauge will illuminate. Always fill the kettle between the minimum (Min) and the maximum (Max) marks on the exterior of the kettle. Too little water will result in the kettle switching "Off" before the water has boiled. Filling above the maximum mark on the exterior of the kettle may result in boiling water splashing from the kettle.*

*Safety boil dry protection The kettle is fitted with a safety device, which protects against overheating should the appliance be operated with insufficient water. if this occurs the kettle will stop heating. Switch 'Off' at the power point and allow kettle to cool before refilling. The safety device will automatically reset when the kettle has cooled down. For additional safety your kettle is fitted with an additional thermal cut out. In the event of overheating, the kettle will automatically shut down to prevent further damage. Should this occur, take your kettle to an authorised Breville Service Center. Always switch off at the power outlet, and then unplug the appliance from the power outlet before cleaning. The outside of the kettle may be wiped over with a damp cloth and polished with a soft dry cloth. Do not use chemical, steel wool, or abrasive cleaners to clean the outside of the kettle.*

*To remove the scale deposits remove the filter by opening the lid and lifting up and out of the kettle. The filter can be cleaned by running under hot water and rubbing with a cleaning cloth or brush. To replace filter, simply slide the filter down into the slot behind the spout of the kettle. This may be removed by using a proprietary kettle descaler which is available from most leading supermarkets, department stores and hardware stores. alternatively: 1. Fill the kettle until 2/3 full with 1 part vinegar and 2 parts water. Empty the solution from the kettle. Fill the kettle with clean water, bring to boil and discard the water. Repeat and the kettle will be ready for use. Breville® warrants this Breville® appliance against defects that are due to faulty material or workmanship for a period of one (1) year from the date of original consumer purchase.*

*This warranty does not cover damage from abuse, neglect, use for commercial purposes, or any other use not found in the printed "Instructions for use" booklet. There is no warranty for glass parts, glass containers, filter basket, blades and agitators. HWI Breville® expressly disclaim all responsibility for consequential damages for incidental losses caused by use of this appliance. Some states or provinces do not allow this exclusion or limitation for incidental or consequential losses, so the foregoing disclaimer may not apply to you. aNY WARRANTY OF MERCHANTABILITY OR FITNESS WITH RESPECT TO THIS PRODUCT IS ALSO LIMITED TO THE ONE YEAR LIMITED WARRANTY PERIOD.*

*Some states or provinces do not allow disclaimer of the implied warranty with respect to consumer goods, so the foregoing disclaimer may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state or province to province. If the appliance should become defective within the warranty period, do not return the appliance to the store..*



[Your user manual](#)  
[BREVILLE SK500XL](#)