



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for REMINGTON MB-35. You'll find the answers to all your questions on the REMINGTON MB-35 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual REMINGTON MB-35
User guide REMINGTON MB-35
Operating instructions REMINGTON MB-35
Instructions for use REMINGTON MB-35
Instruction manual REMINGTON MB-35

REMINGTON

Precision® Beard & Mustache Trimmer Use & Care Manual

Thank you for purchasing a Precision® Beard and Mustache Trimmer from Remington®.

Inside you will find tips on using and caring for your trimmer to help you look your best.

Use & Care Guide



Models:
MB-10
MB-30
MB-35
MB-40
MB-45
MB-50

IMPORTANT SAFETY INSTRUCTIONS

When using your Beard & Mustache Trimmer, basic precautions should always be observed, including the following. Read all instructions before using this trimmer.

DANGER

To reduce the risk of electric shock:

- Do not reach for a trimmer that has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower.
- Do not place or store trimmer where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- Except when charging, always unplug this trimmer from the electrical outlet immediately after using.
- Unplug this trimmer before cleaning.

WARNING

To reduce the risk of burns, fire, electric shock, or injury:

- Your trimmer should never be left unattended when plugged in, except when charging your rechargeable trimmer.
- Close supervision is necessary when this trimmer is used by, on, or near children or invalids.
- Use this trimmer only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Keep the cord away from heated surfaces.

- Never operate this trimmer if it has a damaged cord or if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the trimmer to a service center for examination and repair.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this trimmer with a damaged or broken cutting unit, as facial injury may occur.
- Always attach plug to trimmer, then adapter to outlet. To disconnect, turn all controls to OFF, then remove adapter from outlet, then detach power cord from the trimmer for storage.
- Always store your trimmer and adapter in a moisture-free area. Make sure the cord is disconnected from the trimmer.
- Dispose of used batteries properly. Do not incinerate. Batteries may explode if overheated. Do not wrap in metal or aluminum foil. Wrap in newspaper before discarding. It is suggested that you contact local town/city officials to determine proper battery redemption site(s) in your area.
- Do not attempt to recharge alkaline, heavy-duty, or regular batteries in a nickel-cadmium battery charger.
- For household use only.

SAVE THESE INSTRUCTIONS



[Your user manual](#)
[REMINGTON MB-35](#)

Manual abstract:

Trimmer Guard Attachment Remove trimmer guard attachment if you are: defining hairline edges such as sideburns, trimming the nape of your neck, trimming your beard line on front of neck, or if you want to clean cutter assembly. to remove: s Be sure the trimmer is in OFF position. S While holding trimmer in one hand, and holding the "Zoom Wheel" to prevent it from turning, gently pull the trimmer guard attachment away from the trimmer. The guard can be removed and replaced on any setting. to replace: s Be certain trimmer is in OFF position. S While holding the trimmer in one hand, and holding the "Zoom Wheel" to prevent it from turning, slide the guard over the top of the trimmer until it "clicks" into position. NOTE: the trimmer guard attachment can only be placed on the trimmer one way; if it does not fit properly, remove and reverse it. Plugging in the adapter cord will not provide power to the trimmer, but only recharge the batteries. S Be sure the trimmer is turned off. S Hold the trimmer with the bottom end slightly above the top end.

Depress the two locking tabs on the front and back covers and pull the battery cover off the bottom of the unit. s Insert batteries so that the (+) and (-) marks on the batteries face the same marks in the battery compartment. S Replace the battery cover by sliding it back on the end of the trimmer until it seats with an audible "click. " NOTE: trimmer will not operate if batteries are inserted incorrectly. nOTE: Battery cover only fits one way.

If the cover does not go on correctly, turn it around. S Before you begin, comb your hair in the direction that it grows so that the hairs are at their maximum height and facing in the same direction. S Determine how much hair you want to cut and position the hair length selector accordingly. Remember, until you are familiar with using the trimmer, it's always better to select a longer hair setting initially in order not to trim too much hair. s Turn the unit's power switch to ON , and begin trimming.

S When finished trimming, turn the unit's power switch to OFF. S Use the unit's styling comb or a small comb to comb and hold the beard hairs in place while trimming. S Holding the trimmer horizontally with the cutting unit facing away from you, move the trimmer along the length of the comb. S Trimmer guard attachment should be on and set to position 1 (1. S Hold trimmer horizontally with the cutting unit facing either up or down. S Trim hairs using an upward or downward motion against or with the direction of hair growth, whichever is preferred. S For an even closer "stubble look," remove the hair length selector attachment and repeat the previous two steps. However, caution must be taken not to remove too much hair, creating a "blotchy" look. S Turn the trimmer so the front of the cutting unit ("Zoom Wheel" side) is facing away from you. S Start trimming under your chin and, following your jawbone line, work toward your ear and upper beard line using an upward motion.

Allow the hair length selector attachment to follow the contours of your face. You may trim either against or with the direction of beard growth, whichever is preferred. Without trimmer guard attachment s Remove trimmer guard attachment. S Place a finger on upper lip only to lift hair up, away from skin. NOTE: Use slow and light pressure. Too much pressure may trim off more hair than desired. s Turn trimmer off. To trim sideburns s Comb sideburns following the direction of your hair growth. S You will need a hand mirror for this operation if performing it alone. The mirror is not necessary if trimming is performed by a second person.

s Remove the hair length selector attachment. S Use your fingers to lift the hair at the base of your head up off the neck. Your index finger should be covering the roots of the hairs you are lifting to prevent accidental removal by trimmer. S Using your other hand, hold the trimmer horizontally to the base of your neck with the cutting unit facing up, and move the trimmer along the length of the neck until the unit touches your finger covering the hair roots at the base of your head. Repeat this procedure for the entire area of the neck.

Be sure to move the unit slowly when performing this operation and to keep the hair roots at the base of your head out of the way of the trimmer..



[Your user manual](#)
[REMINGTON MB-35](#)