



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for FISHER PRICE RAINFOREST J8518. You'll find the answers to all your questions on the FISHER PRICE RAINFOREST J8518 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual FISHER PRICE RAINFOREST J8518

User guide FISHER PRICE RAINFOREST J8518

Operating instructions FISHER PRICE RAINFOREST J8518

Instructions for use FISHER PRICE RAINFOREST J8518

Instruction manual FISHER PRICE RAINFOREST J8518



[Your user manual](#)

[FISHER PRICE RAINFOREST J8518](#)

Manual abstract:

Wrap the ends of the fabric panel around the frame tubes. At an angle, fit the peg on one end of the tray into the seat bottom hinge. â· Then, push to "snap" the other tray peg into the seat bottom hinge. Fit the upper pocket on the back of the pad over the seat back tube. Fit the waist restraint straps on the seat bottom up through the slots in the pad. Fit the elastic loops on the pad down through the holes on the seat bottom. â· Turn the seat over and fit the elastic loops to the pegs. Fit the pad clips around the edge of the seat bottom. Turn the seat face down. â· Fit the frame tube connector to the pegs on the seat bottom.

Hint: You may need to turn the seat tube to fit it to the pegs on the seat bottom. 9 cm) screws into the frame tube connector and tighten with a Phillips screwdriver. First, fit an M5 lock nut into a hole in the motor assembly tube. Make sure the rounded side of the lock nut faces out. While holding the lock nut in place, tighten the bolt with the Allen wrench.

Turn the frame assembly on its side. â· Fit the end of the frame tube between the fabric panel and the frame hub. Hint: Install batteries if you need to use this swing away from an outlet. We recommend using alkaline batteries for longer battery life. Fit the strings on each toy into the slot in each mobile hanger.

â· Pull the toy down to be sure it is secure. Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only). In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).

Always remove exhausted batteries from the product. Remove rechargeable batteries from the product before charging. â· If removeable, rechargeable batteries are used, they are only to be charged under adult supervision. Note: Low battery power may cause product movement to slow, sound to become faint or product to turn off all together. If this should happen, use the AC adaptor as a power source (be sure AC power) or replace to slide the power source switch to the batteries.

To prevent serious injury or death from falls and being strangled in the restraint system: Â· Never use with an active child who may be able to climb out of the product. â· Never leave child unattended. Push the hub down to lock the frame. To close the tray, rotate the tray down and "snap" into place. Feed the anchored end of the waist belt up through the buckle to form a loop . Pull the free end of the waist belt . to Loosen Â· Feed the free end of the waist belt up through the buckle to form a loop . enlarge the loop by pulling on the end of the loop toward the buckle. Pull the anchored end of the waist belt to shorten the free end of the waist belt . For your convenience, lift the mobile arm to move the mobile out of the way.

Make sure you hear a "click" on both sides. â· Check to be sure the restraint system is securely attached by pulling it away from your child. Place the swing near a standard wall outlet. â· Plug the AC adaptor into the power cord extending from the back of a leg. â· Plug the AC adaptor into the wall outlet.

â· Use the 6V AC adaptor only in a wall outlet. Do not plug the adaptor into a ceiling outlet. Hint: The power AC adaptor cord is designed to easily disconnect if stepped on accidentally. Simply plug the AC adaptor cord back into the power cord extending from the back base. Lift or lower the seat back to upright or recline.

Turn the seat until it locks into place to select a swinging direction. Turn the power dial to select any of six speed settings Â· Be sure to turn swinging off when not in use. hints: Â· As with most battery-powered swings, a heavier child will reduce the amount of swinging motion on all settings. In most cases, the low setting works best for a smaller child while the high setting works best for a larger child. â· If the low setting provides too much swinging motion for your child, try placing one end of a blanket underneath your child and let the other end of the blanket drape down while swinging. Hint: The mobile will continue to spin a few seconds after sliding the switch to the off position..



[Your user manual](#)

[FISHER PRICE RAINFOREST J8518](#)