



User's Manual

www.relivetherush.com

OVERVIEW

| 4

- *LCD Menu Icons* | 5

INITIAL SET UP

| 6

- *Installing SD Memory Card* | 6
- *Installing Batteries*
| 8

“HOW TO” - INSTRUCTIONS

| 9

- *Power ON/OFF* | 9
- *Set the Video Resolution* | 9
- *Shoot a Video* / 9
- *Set the Camera Resolution* | 10
- *Take Still Pictures*
| 10
- *Delete Videos/Pictures* | 10

SETTINGS

| 11

- *Zooming In* | 11
- *Adjusting Self-Timer* | 11

SUB-SETTINGS

 
- *Adjusting Burst Mode* | 11
- *Switch Viewpoints - Upside Down Camera Angle (180°)*
| 12
- *Beep Tone* | 12
- *TV-Out Mode* | 12
- *Auto Power-Off Timer* | 13

DOWNLOADING	 13
• <i>USB Connection</i>	13
• <i>Card Reader</i>	13
VIEWING LIVE VIDEO	 14
• <i>PC Live Mode</i>	14
• <i>TV Live Mode</i>	14
• <i>EPIC Viewer</i>	14
PLAYBACK MODE	 14
• <i>Playing back your videos and pictures</i>	14
MOUNTING OPTIONS	 15 - 16
WARRANTY / CONTACT INFO	 17
FCC COMPLIANCE	 18

***** IMPORTANT *****

Go to www.epicstealthcam.com to register your new camera. By doing this you will be kept up to date on all the latest news as well as product updates and giveaways. Visit EPIC on Facebook, Twitter and Youtube.

OVERVIEW

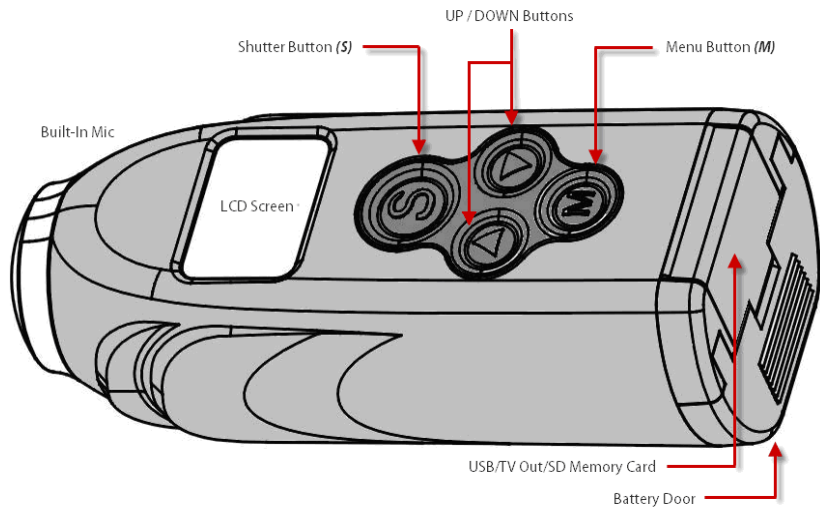

LCD MENU ICONS



 
(Counter Display)



(Video Mode / Resolution)



(Still Image / Resolution)

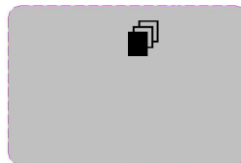

(Burst Mode)



(View Point Mode)



(Zoom/Battery)

INITIAL SET UP

INSTALLING SD MEMORY CARD

1. Make sure the camera is in the OFF position before adding or removing memory!
2. Push open the USB/TV/SD door located at the rear of the camera. (Figure 1.1)
3. Install a 2, 4, 8 or 16 GB SD memory card into the rear slot. Make sure memory card is firmly seated into the camera by pushing the card until you hear a slight click. Then close the rear door. (Figure 1.2)
4. If "no" SD Memory card is inserted into the camera, the screen will show "NoSd" when you turn on the camera.
*In **VIDEO MODE**, press **(S)**, the camera will take a video and save it to the built in Flash memory, and the camera display will show the recording time from 0001 up. Pressing **(S)** again, the camera will stop video capturing and the display will show the last QTY in .5 secs then back to "NoSd".*
*In **STILL IMAGE MODE**, press **(S)** to capture a still image that is also saved to the built in Flash memory. Once capturing is done, the camera display will show the last captured QTY then back to "NoSd".*
5. SD memory cards must be clean (no images from other sources). If you are using the SD memory card from other cameras, please make sure to format the SD memory card in your computer prior to use in the camera. New cards are good to use straight from the package.

SD Memory card reads full: When memory card is full, the LCD screen will display the word "FULL". If you have the Beep tone set to ON, you will hear short consecutive beeps for 30 seconds. At this point you can decide to either choice to delete or download your files.



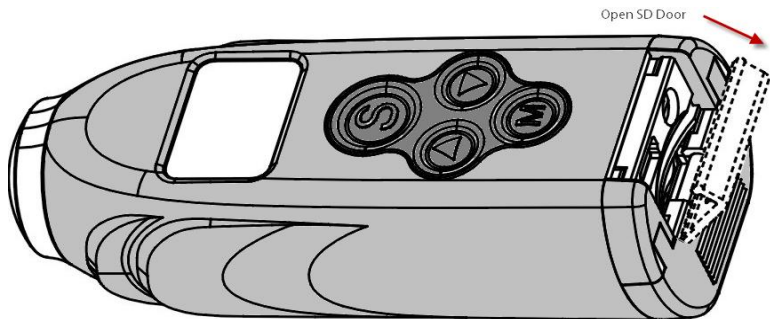 


Figure 1.1

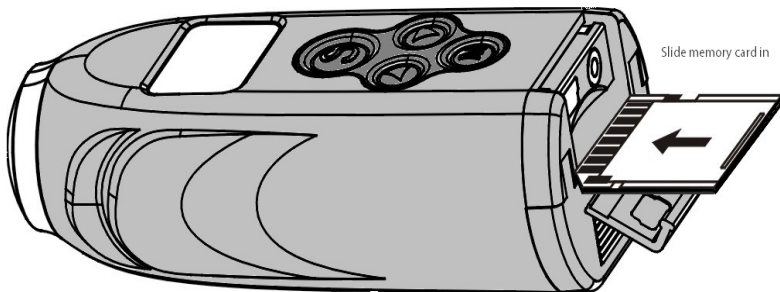 


Figure 1.2

INSTALLING BATTERIES

1. Open the USB/TV/SD door located at the rear of the camera.
2. Push the BATTERY door down and outward. (Figure 2.1)
3. Insert batteries, then close the battery door first then close top door second. (Figure 2.2)

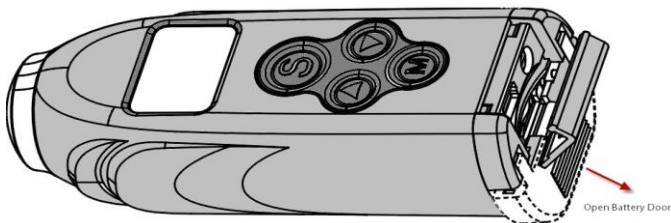 


Figure 2.1

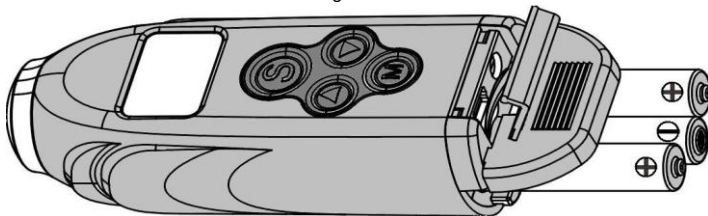 


Figure 2.2

Helpful tip on batteries: To extend your recording time, EPIC highly recommends Energizer™ Lithium batteries for optimum performance.

NOTE: To save battery life, the camera will automatically shut down after 5 minutes of inactivity.

Low battery indication: When the batteries are low, the half battery icon will begin to flash continuously along with a beep sound for 60 seconds. This is a warning to replace the batteries with fresh ones, or the camera will power down automatically.

“HOW TO” - INSTRUCTIONS

POWER ON/OFF

To turn the **EPIC** ON, press the **(M)** button once.

To turn the **EPIC** OFF, press and hold the **(M)** button for 2 seconds.

NOTE: After the camera is turned off, you will need to wait **5 seconds** before turning the EPIC back on.

NOTE: The camera's LCD display will show four dashes and the battery (as shown) for a few seconds as you toggle between some Menus and Settings.



SET THE VIDEO RESOLUTION

Videos can be captured in three different resolutions. The default setting is HD resolution.

1. Turn on the **EPIC** by pressing the **(M)** button once.
 - By default, the camera will be in the Video mode when it's turned on.
2. Press the **UP** or **DOWN** arrow to change resolution.
 - Three stars for HI (HD-1280x720) / Two stars for MID (D1-720x480) / One star for LO (VGA-640x480).



SHOOT A VIDEO

1. Turn on the **EPIC** by pressing the **(M)** button once.
2. Press **(S)** to start recording a video.
3. Press **(S)** again to stop recording.
 - During video recording, the LCD screen will show recording length in seconds.



SET THE CAMERA RESOLUTION

Images can be captured in three different resolutions. The default setting is HI resolution.

1. Turn on the **EPIC** by pressing the **(M)** button once.
2. Press **(M)** once again to enter Still Image mode.
 - The video icon will disappear from the top left of the LCD screen (as shown).
3. Press the **UP** or **DOWN** arrow to change resolution.
 - Three stars for HI (8Mp) / Two Stars for MID (5Mp) / One star for LO (1.3Mp).



TAKE STILL PICTURES

1. Turn on the **EPIC** by pressing the **(M)** button once.
2. Press **(M)** again to enter Still Image mode (as shown).
 - The video icon will disappear in the top left of the LCD screen.
3. Press **(S)** to capture still image(s).
 - Number count will go up incrementally depending on your Burst Mode settings.



DELETE VIDEOS/PICTURES

The **EPIC** allows you to delete some or all your videos or images on the camera.

(ERASE ONE)

1. Turn on the **EPIC** by pressing the **(M)** button once.
2. Press **(M)** until you see the word **EONE (Erase One)** on the screen.
3. Press **(S)** to delete only the last image or video recorded in memory.
4. Press **(M)** four times to return to VIDEO mode.



(ERASE ALL)

1. Press **(M)** until **EONE** appears on the screen.
2. Press the **UP** or **DOWN** arrow to select **EALL (Erase All)**.
3. Press **(S)** to confirm and delete all images & videos out of memory.
4. Press **(M)** four times; wait a few seconds to exit back to VIDEO mode.



SETTINGS

ZOOMING IN

The **EPIC** also has the ability for 1X, 2X & 4X Zooming.

1. Turn on the **EPIC** by pressing the **(M)** button once.
2. Press **(M)** until the “Counter & Zoom/Battery” icons are on the far right (as shown).
3. Press the **UP** or **DOWN** arrow to select which magnification you prefer.
4. Press **(S)** once to make your selection.
5. Press **(M)** twice; wait a few seconds to return to VIDEO mode.



ADJUSTING SELF-TIMER

This feature allows the delay and the tripping of a camera shutter so that the photographer can be included in either the video or the photograph.

1. Turn on the **EPIC** by pressing the **(M)** button once.
2. Press **(M)** until you see “St #” (as shown).
3. Press the **UP** or **DOWN** arrow to select OFF, (St 10) 10 secs, (St 30) 30 secs.
4. Press **(S)** once to make your selection.
5. Press **(M)** once; wait a few seconds to return to VIDEO mode.



SUB-SETTINGS

ADJUSTING BURST MODE

This feature allows you to take multiple still image exposures.

1. Turn on the **EPIC** by pressing the **(M)** button once.
2. Press **(M)** until you see the word “**SET**” then press **(S)**.
3. Press **(S)** again to enter the Burst mode (as shown).
4. Press the **UP** or **DOWN** arrow to select the resolution.
5. Select the number of images (1-9) for sequential action shots.
6. Press **(S)** to save your setting.
7. Press **(M)** twice; wait a few seconds to exit back to VIDEO mode.

 
 


To start shooting pictures, simply press the **(S)** button and the camera will shoot images based on your programmed setting.

SWITCH VIEW POINTS - UPSIDE DOWN CAMERA ANGLE (180°)

This feature allows you to rotate the camera angle 180° degrees in case you require mounting the camera upside down.

1. Turn on the **EPIC** by pressing the **(M)** button once.
2. Press **(M)** until you see the word “**Set**” then press **(S)**.
3. Press the **DOWN** arrow until you see “**FLIP**” (as shown).
4. Press **(S)** to enter the FLIP mode.
5. Press the **UP** or **DOWN** arrow to select ON or OFF.
6. Press **(S)** to save your setting. Once saved, you will see the View Point icon.
7. Press **(M)** twice; wait a few seconds to return to VIDEO mode.



BEEP TONE

Beep (on/off) setting allows the user the option of turning on or off the beep sound when pressing buttons.

1. Turn on the **EPIC** by pressing the **(M)** button once.
2. Press **(M)** until you see the word “**Set**” then press **(S)**.
3. Press the **DOWN** arrow until you see “**beep**” (as shown).
4. Press **(S)** to enter the BEEP mode.
5. Press the **UP** or **DOWN** arrow to select ON or OFF.
6. Press **(S)** to save your setting.
7. Press **(M)** twice; wait a few seconds to exit back to VIDEO mode.

 


NOTE: If beep tone is set to OFF, you will only hear the tone when entering beep tone setting, or when the battery is low.

TV-OUT MODE - (Default mode – NTSC)

This feature allows you to choose either NTSC or PAL television/video output. **NTSC** - is the analog television system used in most of the Americas. **PAL** - is the analogue television encoding system used in large parts of the world outside the Americas.

1. Turn on the **EPIC** by pressing the **(M)** button once.
2. Press **(M)** until you see the word “**Set**” then press **(S)**.
3. Press the **DOWN** arrow until you see “**tu**” (as shown).
4. Press **(S)** to enter the TV mode.
5. Press the **UP** or **DOWN** arrow to select (tv-P) PAL or (tv-N) NTSC.
6. Press **(S)** to save your setting.



7. Press **(M)** twice; wait a few seconds to exit back to VIDEO mode.

AUTO POWER-OFF TIMER

This feature allows you to either turn off the auto power or set the time the camera turns itself off.

1. Turn on the **EPIC** by pressing the **(M)** button once.
2. Press **(M)** until you see the word “**Set**” then press **(S)**.
3. Press the **DOWN** arrow until you see “AoFF” (as shown).
4. Press **(S)** to enter the AUTO POWER-OFF mode.
5. Press the **UP** or **DOWN** arrow to select OFF, (oFF3) 3 minutes, (oFF5) 5 minutes.
6. Press **(S)** to save your setting.
7. Press **(M)** twice; wait a few seconds to exit back to VIDEO mode.



DOWNLOADING

There are two simple ways to download your video or images to your personal computer.

USB Connection

MSDC mode: When **EPIC** is powered OFF, connect the camera to PC/Mac via USB cable; the camera will go into MSDC mode for the PC/Mac to access the captured image/video from the SD memory card inside the camera. The camera display will show USB.



Your computer should recognize the **EPIC** as a USB mass storage device. Simply drag & drop the images or videos to the desired destination folder on your computer.

Note to MAC users: *iPhoto™ will launch when the **EPIC** is plugged in. You may download the images and video directly into iPhoto™.*

Card Reader

Another option for downloading is to remove the SD memory card from the camera and insert into a USB SD card reader.

Your computer should recognize the SD memory card as a USB mass storage device. Simply drag & drop the images or videos to the desired destination folder on your computer.

VIEWING LIVE VIDEO

The EPIC has the unique ability for you to view live video. There are several ways to actually accomplish this, either through your PC, TV or EPIC Viewer (Coming Soon).

PC LIVE MODE

Power ON the **EPIC**, connect the camera to the PC by the supplied USB cable. The camera will automatically enter PC Live mode to display live viewing on PC. The camera display will show PCC (as shown).



TV LIVE MODE

Power ON the **EPIC**, connect the camera to the TV via an AV cable (*sold separately*). The camera will automatically enter TV Live mode to display live viewing on TV. The camera display will show TV-P or TV-N depending on the user setting. (Default mode – NTSC)

NTSC - is the analog television encoding system used in most of the Americas.

PAL – is the analogue television encoding system used in large parts of the world outside the Americas.

EPIC VIEWER – SOLD SEPERATELY

The new EPIC viewer will allow customers to both view live video or playback videos and images right in the palm of your hand.

For more information on the EPIC Viewer, please visit our website at www.relivetherush.com.

PLAYBACK VIEWING MODE

The EPIC allows you to playback either the videos you've captured or the still images you've taken and display them onto your TV or optional EPIC Viewer (Coming Soon).

1. Power OFF the **EPIC**, connect the camera to the TV via an AV Cable (*sold separately*). Then power ON the camera to enter playback mode. The camera display will show TV-P or TV-N per user setting.
2. Press **UP** or **DOWN** arrow to play back the captured still image. For video file, press **(S)** to start playing the video. Press **(S)** again to stop playing.

MOUNTING OPTIONS

The EPIC's ultra light weight and compact size makes it ideal for all kinds of action. We have provided you with some basic mounts to help get you started.

All the EPIC mounting accessories utilize a quick clip device that allows the camera to be easily changed between mounting accessories.

Depending on the kit you purchased, your EPIC may or may not include the following mounts.

Strap Mount – perfect for mounting to helmets with vents, wear on your wrist or just about anywhere you can think of, strap on the EPIC and catch all the action.

Waterproof Housing – while EPIC is splash resistant, the Waterproof case is a must for any extreme wet applications. This housing makes the EPIC completely waterproof down to 20 feet! Note: **You must remove the protective film on both side of the lens cover inside the waterproof housing prior to using under water.**

Clip Mount – easily clip to the brim of a hat or the visor of your vehicle.

Bar Mount – whether it's the cross bars of your ATV, or the handle bars of your mountain bike, this tube mount will accommodate bars between ½" to 2" in diameter.

Tree Screw – while high in a tree stand or low in a blind, simply screw into any tree branch or trunk at the desired height to capture your line of view.

Shock resistant saddle – want a little extra padding or just don't want to use any of the provided mounting accessories? This dense foam pad used with a simple strap will help you mount the EPIC and absorb vibrations.

Elbow Joint – With three adjustable wheel hinges, you can capture almost any point of view angle without any obstruction.

Suction cup – Heavy duty RAM Suction Cup design offers a secure lock mount for contoured or flat surfaces such as moto helmets and fuel tanks.

Curve mount – Permanent 3M™ VHB™ adhesive labels adhere to the underside base of our universal quick clip. Ideal for helmets of any size or material finish.

Surface Preparation for Curve Mount:

1. Use rubbing alcohol to clean the mounting surface.
2. Wipe dry the surface.
3. Remove adhesive protective label.
4. Apply your mount to surface.
5. Press and hold for sixty seconds to allow adhesive to bond to the surface.
6. Bond strength will increase through time. At room temperature, wait for at least 24 hours to achieve 90% bonding strength, and 72 hours for 100% bonding strength.

For more details, please visit 3M™ website, under 3M™ VHB™ tapes technical data section or follow this link: http://solutions.3m.com/wps/portal/3M/en_US/VHB/Tapes/Document-Center/Technical-Data/ and download PDF file: **Surface Preparation for 3M™ VHB™ Tape Applications.**

NOTE: To see how to properly install all mounts, please click on www.epicstealthcam.com/mountings.

To purchase additional mounts, go to www.epicstealthcam.com or call toll free: **877-269-8490**

WARRANTY / CONTACT INFO

The EPIC is covered by a one year limited warranty on parts and labor from the date of original purchase and purchases must be made through an authorized dealer. The warranty covers defects in workmanship and materials. The warranty does not apply to cameras which have been damaged or abused intentionally or unintentionally. A purchase from individuals or unauthorized internet sites such as eBay voids the warranty.

Tampering with or altering the camera will also void the warranty. Any unauthorized service will void the warranty. Original sales receipt must be produced for any warranty service, and a Return Authorization (RA) number must be obtained from customer service at 877-269-8490 prior to returning product.

Contact Info:

By email

info@epicstealthcam.com
www.epicstealthcam.com

By phone

Toll Free 877-269-8490

By mail

Stealth Cam, LLC
P.O. Box 539504
Grand Prairie, TX 75053-9504

US Patent D592, 231

Caution:

Modification not approved by the party responsible for compliance could void user's warranty agreement.

FCC COMPLIANCE

This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television receptions, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measure:

- ❖ Reorient or relocate the receiving antenna.
- ❖ Increase the separation between the equipment and the receiver.
- ❖ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ❖ Consult the dealer or an experienced radio/TV technician for help.

Product Specifications are subject to change. Stealth Cam is not responsible for any photographic or typographical errors. You Tube is a registered trademark of Google, Inc.



Quick Start Guide

STEP 1: *Install Batteries & SD Memory Card.*

STEP 2: *Press the (M) button to power on your EPIC.*

STEP 3: *Once the LCD screen turns on, press the (S) button to begin recording video. Press (S) again to stop recording.*

STEP 4: *Press and hold the (M) button to power off your EPIC.*

For more details on additional EPIC features please consult the complete User's Manual.

Need Help? Call toll free at 877-269-5490

www.relivetherush.com