

User's Manual

Disney
PRINCESS

Magical Learning Laptop



4-7
Years

vtech®

© Disney

Visit the Disney website at DisneyPrincess.com

© 2010 VTech

Printed in China

91-002449-001-000 (英)

VTech understands that a child's needs and abilities change as they grow and with that in mind we develop our toys to teach and entertain at just the right level...

vtech Baby

Toys that will stimulate their interest in different textures, sounds and colours

I am...

...responding to colours, sounds and textures

...understanding cause and effect

...learning to touch, reach, grasp, sit-up, crawl and toddle

Birth-36 months



Pre-School

Interactive toys to develop their imagination and encourage language development

I want...

...to get ready for school by starting to learn the alphabet and counting

...my learning to be as fun, easy and exciting as can be

...to show my creativity with drawing and music so my whole brain develops

3-6 years



Electronic Learning Computers

Cool, aspirational and inspiring computers for curriculum related learning

I need...

...challenging activities that can keep pace with my growing mind

...intelligent technology that adapts to my level of learning

...National Curriculum based content to support what I'm learning at school

4-10 years

 


To learn more about this and other VTech® products, visit www.vtechuk.com

INTRODUCTION

Thank you for purchasing the **VTech® Magical Learning Laptop!**

Go on a magical learning journey with Cinderella, Belle, Snow White and Aurora. 18 interesting activities introduce essential preschool curriculum including letters, basic maths, manners and logic skills in a fun and engaging way. Use the key to open the laptop and discover the secret drawer! Magical sounds and classical style melodies add to the enjoyment.

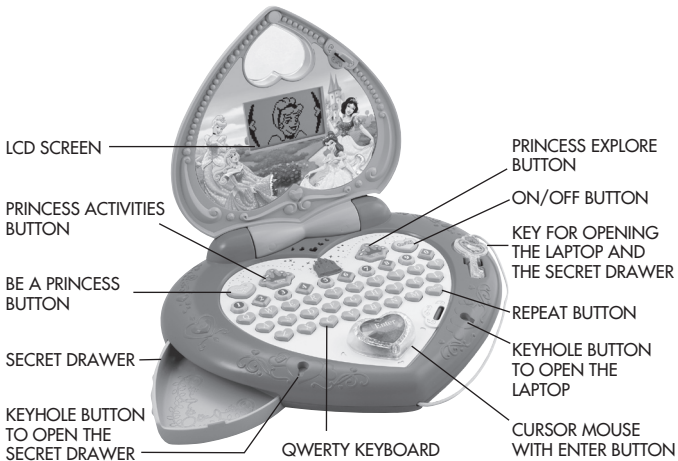


INCLUDED IN THIS PACKAGE

- One VTech® Magical Learning Laptop
- One User's Manual

WARNING: All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

NOTE: Please keep instruction manual as it contains important information.

 Unlock the packaging locks:

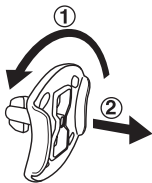

- ① Rotate the packaging locks 90 degrees anti-clockwise.
- ② Pull out the packaging locks.

 
Demo strip removal:

When the product is taken out of the packaging, please remove the demo strip from the bottom of the unit to activate normal play mode.

GETTING STARTED

BATTERY INSTALLATION

1. Make sure the unit is **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Install 3 new "AA" size (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
4. Replace the battery cover.

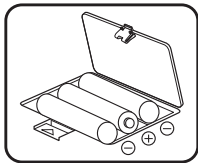

BATTERY NOTICE

- The use of new alkaline batteries is recommended for maximum performance.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision (if removable).
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- The toy is not to be connected to more than the recommended number of power supplies.
- Do not dispose of batteries in fire.

WE DO NOT RECOMMEND THE USE OF RECHARGEABLE BATTERIES.

Help the environment by disposing of your product responsibly.

The wheelie bin symbols indicate the product and batteries must not be disposed of in the domestic waste as they contain substances which can be damaging to the environment and health. Please use designated collection points or recycling facilities when disposing of the item or batteries.



More information can be found at:

<http://www.recycle-more.co.uk>; www.recyclenow.com

PRODUCT FEATURES

1. KEY

Put the **KEY** into the **KEYHOLE** on the right and push down to open the laptop. The laptop will turn on automatically. Alternatively, press the **KEYHOLE BUTTON**.



Put the **KEY** into the **KEYHOLE** on the left and push down to open the secret drawer. Alternatively, press the **KEYHOLE BUTTON**.

2. ON/OFF BUTTON

When the laptop is open, press the **ON/OFF BUTTON** to turn the laptop **ON** or **OFF**. Alternatively, close the lid to turn the laptop **OFF**.



3. PRINCESS EXPLORE BUTTON

Press the **PRINCESS EXPLORE BUTTON** to enter this mode of play.



4. PRINCESS ACTIVITIES BUTTON

Press the **PRINCESS ACTIVITIES BUTTON** to enter this mode of play.



5. BE A PRINCESS BUTTON

Press the **BE A PRINCESS BUTTON** to enter this mode of play.



6. QWERTY KEYBOARD

Use the **QWERTY KEYBOARD** to learn letters and numbers and to answer questions in related activities.



7. REPEAT BUTTON

Press the **REPEAT BUTTON** to hear an instruction or question repeated.



8. CURSOR MOUSE

Move the **CURSOR MOUSE** and press the **ENTER BUTTON** to choose an activity or to select an answer in related activities.



9. VOLUME CONTROL SWITCH

Slide the **VOLUME CONTROL SWITCH** on the bottom of the unit to adjust the volume.



10. AUTOMATIC SHUT-OFF

To preserve battery life, the **VTech®** Magical Learning Laptop will automatically power-off after several minutes without input. The unit can be turned on again by pressing the **ON/OFF BUTTON**.

ACTIVITIES

MODE 1: PRINCESS EXPLORE

Explore Letters (Cinderella)

Press the letter buttons to learn capital and small letters with Cinderella.



Explore Words (Belle)

Press the letter buttons to learn words and objects with Belle.



Explore Numbers (Snow White)

Press the number buttons to learn numbers with Snow White.



Explore Manners (Aurora)

Use the cursor mouse then press enter to select a picture and explore manners with Aurora.



Music Magic (All Princesses)

Enjoy some music with Cinderella, Belle, Snow White and Aurora. Press the number buttons or move the cursor mouse and then press enter to choose a song.



MODE 2: PRINCESS ACTIVITIES

When you enter this mode, use the cursor mouse and press enter to choose a princess to learn with.

CINDERELLA



Letter Pairs

Cinderella needs your help to match the capital and small letters. Use the cursor mouse and press enter to answer.



Number Order

Can you help Cinderella find out which number is missing in the sequence? Press a number button to answer.



Which One's Different?

Find the picture which shows a different feeling from the others. Three pictures will be shown, two show the same feeling and one shows a different feeling. Use the cursor mouse and press enter to answer.



Happy

BELLE



Missing Letter

Would you show Belle which letter is missing in the word? Press a letter button or use the cursor mouse and press enter to answer.



More or Less?

Show Belle which is more or less. Press a number button or use the cursor mouse and press enter to answer.



Picture Match

A picture will be shown on the left of the screen. Help Belle find the matching picture on the right. Use the cursor mouse and press enter to answer.



SNOW WHITE



Letter Bubbles

Pop the letter bubble by pressing the corresponding letter buttons as the letters are shown.



Counting

How many forest friends can you see? Help Snow White count the animals and press a number button to answer.



Shadow Match

A picture will be shown on the right of the screen. Help Snow White find the matching shadow on the left. Use the cursor mouse and press enter to answer.



AURORA



Magical Addition

Help Aurora answer the equation by adding up the objects. Press a number button to answer.



Magical Subtraction

The squirrel has taken some objects away. Help Aurora answer the equation by adding up how many objects are left. Press a number button to answer.



What to Say

Remember the phrase that is spoken and shown on the screen. Move the cursor mouse and press enter to help Aurora find the picture that matches the phrase.



MODE 3: BE A PRINCESS

Do you dream about being a princess? You will be asked to complete four random activities to test your princess knowledge. If you complete at least one activity correctly you have passed the test! Input your princess name using the letter buttons then press enter to confirm. Then use the cursor mouse and press enter to choose your princess picture to make your princess name card.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from direct sources of heat.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit ON. The unit should now be ready to play again.
5. If the product still does not work, replace with a new set of batteries.

If the problem persists, please call our Consumer Services Department on 01235 546810 (from UK) or +44 1235 546810 (outside UK) and a service representative will be happy to help you.

IMPORTANT NOTE:

Creating and developing **VTech**[®] products is accompanied by a responsibility that we at **VTech**[®] take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department on 01235 546810 (from UK), or +44 1235 546810 (outside UK) with any problems and/or suggestions that you might have. A service representative will be happy to help you.

vtech®

PRODUCT WARRANTY



Thank you for choosing this quality product from VTech. We hope it will bring many hours of entertainment, imaginative play and learning.

1. The product detailed above is covered by a one year warranty from the date of purchase, against any defects in materials or workmanship.
2. The product may be returned to the place of purchase. Alternatively the product can be returned to VTech Electronics Europe plc (see address below), with proof of purchase, without proof of purchase no replacement will be provided.
3. VTech Electronics Europe plc will examine the product and if it is found to be defective due to faulty materials or workmanship, will replace the product at their discretion.
4. If the product covered by this warranty is damaged due to misuse, modification or unauthorised repair, or because of faulty batteries, battery discharge or incorrect electrical connections, then this warranty becomes void.
5. This warranty is personal to the original purchaser and is not transferable.
6. Breakages to the LCD screen are not covered by the warranty.
7. Returns to VTech Electronics Europe plc should include a cheque or postal order for £1.50 towards the cost of return postage and packaging.
8. Products returned to VTech Electronics Europe plc, should be addressed as follows and packed carefully to avoid damage in transit (Please do not include batteries or adaptor).
Please include details of the fault together with your name and address.

VTech Electronics Europe plc, c/o Tablogix Limited, 200 Milton Park, Abingdon, Oxon OX14 4TA

THIS WARRANTY IS OFFERED AS AN EXTRA BENEFIT AND DOES NOT AFFECT CONSUMERS' STATUTORY RIGHTS.

This warranty is valid for the UK and Eire only. For products purchased outside the UK and Eire, please contact your local distributor or place of purchase.

