


TX-6 is an ultra light planer board and is designed to use with light tackle. We do not recommend using trolling weights with the TX-6. If you need to run your lure deeper, we recommend using Church Tackle Co.® Trolling Weights with our Walleye Board, TX-22 or TX-12 Planer Board. To ensure that you will enjoy your TX-6 Planer Board, read and follow the care guide below.

1. Make sure your clip is adjusted properly. Never let your board slide on the line, this will damage the clip.
2. Never drop your board; this can damage the board, the clip and the rear pin.
3. In time your clip may start to slip, remove the phillips screw, check to see if plastic is showing signs of wear. If no wear is visible, clean plastic with damp cloth and reassemble clip. Clip will need to be replaced when showing signs of wear. When using the super lines, clips will have to be replaced more often. The super lines are so fine in diameter it causes the clips to wear more rapidly.
4. The rear pin will need to be replaced at some point, again check for signs of wear.


TX-6 Magnum Mini Planer Board Instructions

1. Align clip with tow-arm, using pliers & screw driver, snug nylon nut; don't over tighten.
2. To adjust clip, turn phillips screw clockwise to increase tension; counter clockwise to decrease tension. Make sure your clip is adjusted properly. Never let your board slide on the line; this will damage the clip.
3. While at trolling speed let out your lure to desired distance from board.
4. Pull rear pin, insert line and release pin.
5. Open board clip, insert line and release.
6. Place your board in the water, let out line to desired distance you want your board to run from your boat, keep light tension on line to help keep board afloat, set drag..
7. To remove board, reel in board, pull rear pin, open clip and remove board. You will have the fastest release on the water.

We highly recommend 14# or larger diameter super braids, 8# or larger diameter monofilament lines.

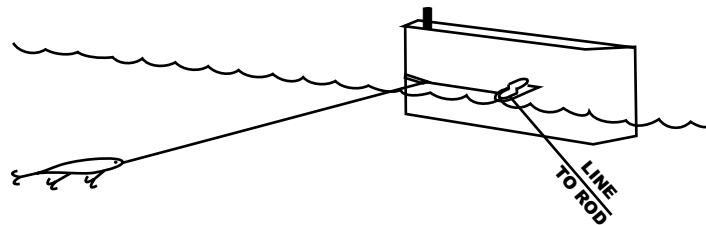

A. If you want the board to release, (fig. 2) position line underneath the nose of the clip, open clip, do a 180 and insert line ½ way into clip and release. The line from board to rod will be pulling from back side of clip. This will give you the angle needed to release clip with a quick jerk; always adjust clip so it won't slip, or damage will occur. Attach a #7 swivel or split-shot about 18" in front of your lure. Your board will slide down to swivel or split-shot, this will prevent board from making contact with fish.

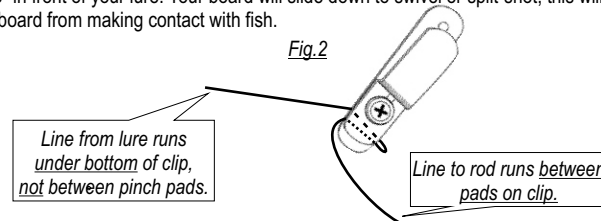

B. If you want the board to stay on the line, insert line all the way into the clip, increase clip tension. With fish on, reel board in, pull rear pin, release clip and retrieve fish. Caution: when reeling in your board at high trolling speeds the board can dive and cause line twist. To prevent this when bringing in your board to change lures, reel in board slowly and hold the rod tip very low, parallel to board. If your board does dive, slow up forward motion, release drag and let board come to surface.