

OPERATING INSTRUCTIONS

The LG-480 is activated by a strategically located pressure pad. With a normal shooting grip, your middle finger will naturally hit the pressure pad whether shooting right or left-handed.

A master ON/OFF switch is also provided near the bottom of the left side panel to turn the laser off. The laser should be left in the ON position under most circumstances. Turning the master switch OFF will NOT increase battery life.

PLEASE READ ENTIRE OWNER'S MANUAL PRIOR TO INSTALLING AND USING YOUR NEW LASERGRIPS.

Crimson Trace
800-442-2406 or 503-783-5333
Fax: 503-783-5334
Customer Service E-Mail: customer@crimsontrace.com
www.crimsontrace.com

L A S E R G R I P S[®]

27-4088 REV 001 10/2/11

www.crimsontrace.com

9780 SW Freeman Dr.
Wilsonville, OR 97070 USA
Tel: (800) 442-2406
Fax: (503) 783-5334

Crimson C_{TC} Trace[®]




Crimson C_{TC} Trace[®]

**LG-480 for
WALTHER PPK/S & PP**

INSTALLATION HANDBOOK

L A S E R G R I P S[®]

THANK YOU FOR SELECTING THE FINEST LASER SIGHTING SYSTEM: **CRIMSON TRACE LASERGRIPS AND LASERGUARD**. WHEN IT COMES TO SPEED, ACCURACY AND SECURITY, CRIMSON TRACE IS THE TOP CHOICE OF LAW ENFORCEMENT, MILITARIES AND LEGALLY ARMED CITIZENS AROUND THE WORLD.

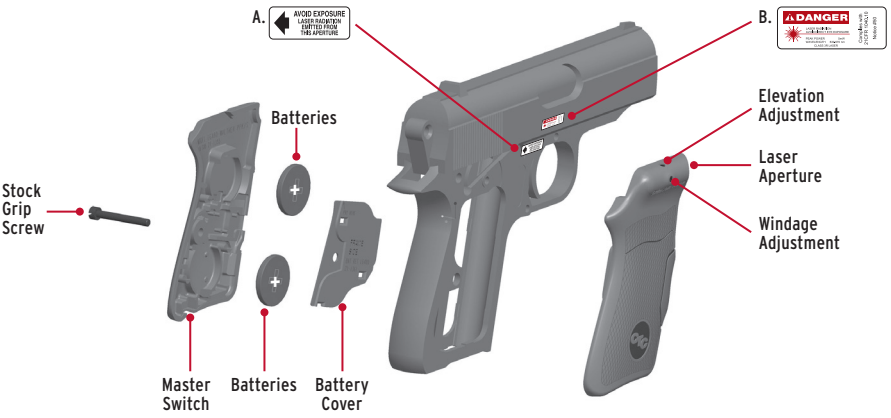


BATTERIES

Two (2) CR2032 or DL2032 Lithium Cells.

PRODUCT SPECIFICATIONS

BEAM INTENSITY: 5mW peak, 633 nm, Class 3R laser
DOT SIZE: Approximately 0.5 inches diameter at 50 feet
BATTERIES: Two #2032 lithium batteries;
over four hours of illumination
ACTIVATION: Front-located integrated momentary
pressure pad and master ON/OFF switch
WARRANTY: Three-year full warranty
This product complies with 21 CFR 1040.10

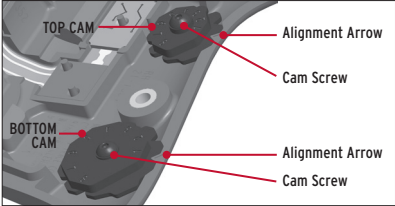

INSTALLATION INSTRUCTIONS

1. Make sure firearm is unloaded. Remove magazine and double check that chamber is empty. (See "Four Basic Rules Of Firearm Safety" in Owner's Handbook.)
2. Remove existing grips. Retain stock screws to be used with Lasergrips®.
3. Place both batteries into the left panel with positive side up.
4. Install battery cover; battery cover should snap into place on the three snap posts.
5. Wrap the Lasergrips around the gun frame.
6. If movement occurs or grip cannot fully seat on frame some adjustment may be required. Install the right side of the Lasergrips. Push on the right side grip to see if it moves forward and back.
7. Starting with the top cam, use the .050" hex key to adjust the cams built into the right side of the Lasergrip. The adjustment cams are located on the inside of the grip. Start by loosening the cam screw on the top cam 1 full turn. Move the cam to a lower number to make the grip fit looser on the gun. Move the cam to a lower number to make the cam fit looser on the gun. The number should line up with the alignment arrow built into the grip. Adjust the cam one number at a time and refit the grip on to the gun between each adjustment.
8. Repeat process with bottom cam, tightening the cam one number at a time until the grip is tight on the gun frame without any forward or backwards movement. Grip should be flush against frame all the way around.
9. Wrap the front strap around the gun frame and install Walther grip screw from left side of grip. Screw should be snug but not over-tightened.
10. Attach "Aperture" warning label with the arrow pointing to the laser aperture. Attach laser "Danger" sticker to outside of pistol.
11. To activate Lasergrips, slide the master ON/OFF switch forward to the ON position. The switch is located on the bottom left side of the Lasergrips. Press pressure activation pad located in center of rubber front strap directly beneath trigger guard to activate the laser.
12. Confirm that laser and iron sights are in alignment. Laser dot should rest on top of front site post with correct iron sight picture. Lasergrips are sighted-in at the factory to 50 feet, but can be fine-tuned to any point of impact by adjusting for windage and elevation. (See Laser Sight Owner's Handbook for complete sighting information.)

LASER SAFETY LABELING

IMPORTANT: LASER PRODUCTS MUST ONLY BE OPERATED WITH THE SAFETY LABEL APPLIED TO THE FIREARM.

Labels could not be affixed to the product but are supplied and must be installed as indicated below:

- A. Attach the "Aperture" warning label with the arrow pointing to the laser aperture.
- B. Attach the "Danger" warning label to the outside of the firearm.

Use caution when activating the laser to avoid direct eye exposure, which can result in permanent eye damage. Follow all precautions as outlined by the firearms manufacturer. Keep this and all firearm related products locked and secured from children or other unauthorized users.

NOTE: ANY FUTURE REMOVALS OF THE LASERGRIP WILL NOT REQUIRE READJUSTING THE ADJUSTMENT CAMS OR THE LASER SIGHT. TO INSTALL GRIP ON ANOTHER GUN, REMOVE FROM GUN AND FOLLOW CAM INSTALLATION INSTRUCTIONS AGAIN.

