



# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for DELONGHI BCO 264. You'll find the answers to all your questions on the DELONGHI BCO 264 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual DELONGHI BCO 264**  
**User guide DELONGHI BCO 264**  
**Operating instructions DELONGHI BCO 264**  
**Instructions for use DELONGHI BCO 264**  
**Instruction manual DELONGHI BCO 264**

GB 20-02-2003 10:10 Pagina 13

Please read this instruction booklet carefully before installing and operating the appliance. This is the only way to ensure the best results and maximum safety for the user.

**DESCRIPTION OF THE APPLIANCE**  
The following terminology will be used on subsequent pages.

- A Espresso coffee or steam selector knob
- B Steam indicator light
- C Espresso coffee on indicator light
- D Espresso coffee or steam OK indicator light
- E Drip coffee on/off button
- F Drip coffee on/off indicator light
- G Display
- H AUTO indicator light
- I Delayed start-up button
- J Minute set button
- K Hour set button
- L 1-5 cups button
- M 1-5 cups indicator light
- N Espresso coffee water tank
- O Drip coffee water tank
- O1 Chlorine filter holder (if fitted)
- O2 Chlorine filter (if fitted)
- P Drip coffee "Flavour System" selector
- Q Water tank cover
- R Drip coffee filter holder
- R1 Permanent filter (if fitted)
- S Flavour Saver
- T Drip coffee warming plate
- U Pressing pad
- V Drip tray
- W Cup tray for espresso coffee
- X Steam delivery tube
- Y Cappuccino maker
- Z Nozzle
- Z1 Espresso boiler outlet
- Z2 Steam knob for cappuccino coffee
- Z3 Filter-wish boiler
- Z4 Filter holder for espresso coffee
- Z5 Filter for pods (if fitted)
- Z6 Filter holder for pods (if fitted)
- Z7 Coffee measure
- Z8 Jug for drip coffee

**SAFETY WARNINGS**

- This appliance is designed to "make espresso coffee" and "heat drinks". Use with care to avoid scalds from the water and steam jets or through incorrect use.

• Never touch hot parts.

• After removing the packaging, make sure the product is complete. If in doubt, do not use the appliance and contact qualified personnel only.

- Do not leave packaging (plastic bags, polystyrene foam, etc.) within reach of children as they could be dangerous.

• This appliance is for home use only. All other uses are considered improper and thus dangerous.

- The manufacturer cannot be held responsible for any damage caused by improper, erroneous and unreasonable use.
- Never touch the appliance with damp or wet hands or feet.
- Never allow the appliance to be used by children or unfit persons without supervision.
- Never allow children to play with the appliance.
- In the event of failure or malfunction, switch off the appliance and do not tamper with it in any way. If the appliance requires repair, contact an authorised technical service centre only and ask for original spare parts to be used. Failure to respect the above could reduce the safety of the appliance.
- The power cable must never be replaced by the user as this requires the use of special tools. If the cable is damaged or requires replacing, contact an authorised service centre only to avoid all risks.

**INSTALLATION**

- Place the appliance on a work surface far away from water taps and basins.
- Check that the mains supply corresponds to the voltage on the appliance rating plate. Connect the appliance to an efficiently earthed mains socket with a minimum rating of 10A only. The manufacturer may not be considered liable for possible accidents caused by the failure to adequately earth the mains.
- If the plug fitted to the appliance does not match the power socket, have the socket replaced with a suitable type by qualified personnel.
- Never install the machine in environments where the temperature may reach 0°C or lower (the appliance may be damaged if the water freezes).

**CHLORINE FILTER (IF FITTED)**  
The filter eliminates the taste of chlorine from the water. To install the filter, proceed as follows:

- Remove the chlorine filter from the plastic bag and rinse it in tap water.
- Lift the coffee lid, remove the filter holder from its housing by lifting it upwards.
- Open the filter holder by pressing the parts marked

13



[Your user manual](#)  
[DELONGHI BCO 264](#)

#### **Manual abstract:**

The espresso coffee machine will not come on. **LENGTH OF WARMING TIME (AUTOMATIC SHUT-OFF TIME)** The appliance is programmed by the manufacturer to keep the coffee hot for two hours after start-up. However, this setting can be changed as follows: 1. Press the coffee "ON/OFF" button (fig. 4) for about 2 seconds until 0:00 flashes on the display; 2. Modify the time required by repeatedly pressing the HOUR button (and also the MIN button if required); 3. After setting the time, wait 5 seconds. When the display stops flashing, the time will be memorised: NB: If 0:00 is set, the appliance keeps the coffee hot for an unlimited period. **SETTING 1 5 CUPS** To improve extraction and the aroma when making less than 6 cups, press the 1-5 cups coffee button (fig. 5).

The 1-5 cups coffee LED will light up. **PREPARING DRIP COFFEE** · Lift the cover and remove the water tank on the right (fig. 6). · Fill the tank with fresh clean water up to the mark corresponding to the number of cups of coffee to be prepared, taking care not to exceed the MAX level (fig. 7). · Replace the tank in the appliance, pressing lightly to open the valve on the bottom of the tank. The tank may also be filled without being removed using the drip coffee jug marked with the level indicators (fig. 8). · Open the filter holder by rotating towards the right (fig. 9). · Position the permanent filter (if fitted) or the paper filter in the filter holder (fig. 10). · Place the ground coffee in the filter, using the measuring spoon supplied, and level evenly (Fig. 11). As a general rule, use a level measure of coffee (about 7 grams) for each cup required (for example, 10 measures for 10 cups). The quantity of ground coffee used may, however, be varied according to personal taste. Use good quality, medium ground coffee for drip coffee machines. · Close the filter holder and place the jug on the warming plate with the lid on. · Choose the desired flavour as indicated in the paragraph "HOW TO CHOOSE THE FLAVOUR OF DRIP COFFEE". NB: The coffee machine is fitted with a "Flavour Saver" device inside the drip coffee filter holder.

This increases **HOW TO MAKE DRIP COFFEE HOW TO SET THE CLOCK** When the coffee machine is connected to the domestic mains supply for the first time, the figures 0:00 will flash on the display. To set the time, proceed as follows: 1. Press the "HOUR" button (fig. 2) for about 2 seconds until the number of hours on the display increases; 2. Before the display ceases to flash (about 5 seconds), set the time required by repeatedly pressing the HOUR button. 3. Set the minutes by repeatedly pressing the MIN button (to speed up the operation, hold the button down). 4. After setting the hour, wait 5 seconds. When the display stops flashing, the hour programmed is memorised.

To reset the hour, press the HOUR button for about 2 seconds then follow the procedure described in point 2. The hour set will not be retained in the memory in the event of temporary power failure. **PROGRAMMING AUTOMATIC START-UP.** You can programme the appliance to prepare drip coffee automatically. Make sure the time is set correctly.

To set delayed startup (the time you want to make the coffee), proceed as follows: 1. Press the "AUTO" button (fig. 3) for about 2 seconds until 0:00 flashes on the display; 2. Before the display ceases to flash (about 5 seconds), set the time required by repeatedly pressing the HOUR button. 3. Set the minutes by repeatedly pressing the MIN button. 4. After 5 seconds, the display will stop flashing and the programmed time will be memorised; 5. After programming the appliance, to obtain coffee at the time set, just press the AUTO button. The indicator light on the button will come on. If you want to change the delayed start up time set, press the AUTO button for about 2 seconds then set a new time as described in point 2. 14 GB 20-02-2003 10:30 Pagina 15 coffee infusion time to improve extraction. The resulting coffee has a full intense flavour. · Press the DRIP COFFEE ON/OFF button (fig. 4).

The ON indicator light on the button comes on and the appliance starts to make the coffee. (To make the coffee at the programmed time, press the AUTO button (fig. 3) and the AUTO light on the button comes on. · Delivery of coffee will start after a few seconds..



[Your user manual](#)  
[DELONGHI BCO 264](#)