



# myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for HAIER XQJ50-31. You'll find the answers to all your questions on the HAIER XQJ50-31 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

**User manual HAIER XQJ50-31**  
**User guide HAIER XQJ50-31**  
**Operating instructions HAIER XQJ50-31**  
**Instructions for use HAIER XQJ50-31**  
**Instruction manual HAIER XQJ50-31**



[Your user manual](#)  
[HAIER XQJ50-31](#)

#### **Manual abstract:**

Pour in liquid fabric softener into dispenser as recommended by the manufacturer. 2. Add water up to its fill level, but do not exceed the level. fabric softener dispenser Warning: · Never pour fabric softener directly onto clothes because it will stain your clothes or you may get spots on your clothes. · Do not stop washer during its first spin or dispenser will automatically release the softener in to the wash load. · Do not use powder form of softener into dispenser otherwise it will clog up the dispenser. This dispenser is only designed for liquid form. 8 XQJ50-31 manual 10/22/01 11:30 AM Page 10 English Bleach Dispenser: · Bleach dispenser is located on front corner under the loading door. · Pour in recommended amount of bleach into dispenser during the first wash fill. Note: Use only liquid bleach in dispenser.

You can use powdered bleach by directly adding it to wash tub. Warning: · Be careful not to spill undiluted bleach on the washer cabinet or your clothes. As it is a strong chemical, it may damage some of your clothes or the finish of the washer if not properly diluted. · Use the manufacturer's chart, on product container for recommended use of liquid or powder bleach. Temperature Control: WASH/RINSE Temperature TEMPERATURE WASH RINSE COLD COLD WARM COLD HOT COLD WARM WARM 9 XQJ50-31 manual 10/22/01 11:30 AM Page 11 English · Depending on what types of clothes you are washing, select the desired temperature setting.

See the garment for proper temperature that is recommended by garment manufacturers. You can wash and rinse from five temperature combinations: WASH/RINSE Hot/Cold Warm/Warm Warm/Cold Cold/Cold TYPES OF FABRICS Sturdy whites & colored fabrics such as work & play clothes, soiled fabrics Delicate & colored fabric Soiled, permanent press, silks, woolens, nylon & acrylic Non-colors Fabrics, lingerie with light or normal soil clothes & special care fabrics Note: Hot water needs to be at a temperature of at least 120°F 140°F. (49°C- 60°C) for the soap to dissolve and to avoid soap residue remains on clothes. Normal Operating Sounds The following sounds are normally heard during the operation of the washer: · Tumbling sounds: This is normal as the heavy wet clothes in the Washer are continuously being tossed around. · Air rushing noise: This happens when the Washer tub spins at very high RPM.

· Wash and Rinse cycles going on and off will also make clicking sounds. 10 XQJ50-31 manual 10/22/01 11:30 AM Page 12 English Lint Filter · A self-cleaning lint filter works throughout the wash cycle to constantly remove lint and other residue from the water. It is located between the outer and inner tub. As water passes from the outer tub to the inner tub, water is forced through the bottom of the lint filter. The filter catches lint and holds it until the spin cycle begins. During the spin cycle, due to automatic centrifugal force of the machine it removes the lint by pulling it off the bottom of the filter and washing it down the drain. Note: It does not require any maintenance or special cleaning. Safety Lid Switch · If for any reason you open the lid in the middle of the wash cycle, the washer will not spin and will shut off automatically. Once the lid is closed, the washer will start back on. 11 XQJ50-31 manual 10/22/01 11:30 AM Page 13 English Care and Cleaning Guide Warning: Always unplug your washer to avoid electric shock before cleaning.

Ignoring this warning may result in death or injury. Before using cleaning products, always read and follow manufacturer's instructions and warnings to avoid personal injury or product damage. Cleaning and Maintenance · Use only damp or sudsy cloth for cleaning control panel. · To avoid any kind of damage to cabinet finish, wipe washer cabinet as needed. If you spill liquid/powdered softener, bleach or detergent on the cabinet, wipe cabinet immediately because it can damage the finish. · Do not use any abrasive, harsh chemicals, ammonia, chlorine bleach, concentrated detergent, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your washer. · Remove pins or other sharp objects from clothes to prevent scratching interior parts..



[Your user manual](#)  
[HAIER XQJ50-31](#)