

OPERATING INSTRUCTIONS

The LG-442 is activated by a strategically located pressure pad. With a normal shooting grip, your middle finger will naturally hit the pressure pad whether shooting right or left-handed.

A master ON/OFF switch is also provided near the bottom of the left side panel to turn the laser off. The laser should be left in the ON position under most circumstances. Turning the master switch OFF will NOT increase battery life.

PLEASE READ ENTIRE OWNER'S MANUAL PRIOR TO INSTALLING AND USING YOUR NEW LASERGRIPS.

Crimson Trace
800-442-2406 or 503-783-5333
Fax: 503-783-5334
Customer Service E-Mail: customer@crimsontrace.com
www.crimsontrace.com

L A S E R G R I P S[®]

27-4182 REV 002 12/10

www.crimsontrace.com

9780 SW Freeman Dr.
Wilsonville, OR 97070 USA
Tel: (800) 442-2406
Fax: (503) 783-5334

Crimson C_{TC} Trace[®]




Crimson C_{TC} Trace[®]

**LG-442 for
BERSA THUNDER .380 SERIES* & FIRESTORM
*EXCEPT THUNDER .380 CONCEALED CARRY**

INSTALLATION HANDBOOK

L A S E R G R I P S[®]

THANK YOU FOR SELECTING THE FINEST LASER SIGHTING SYSTEM: **CRIMSON TRACE LASERGRIPS AND LASERGUARD**. WHEN IT COMES TO SPEED, ACCURACY AND SECURITY, CRIMSON TRACE IS THE TOP CHOICE OF LAW ENFORCEMENT, MILITARIES AND LEGALLY ARMED CITIZENS AROUND THE WORLD.

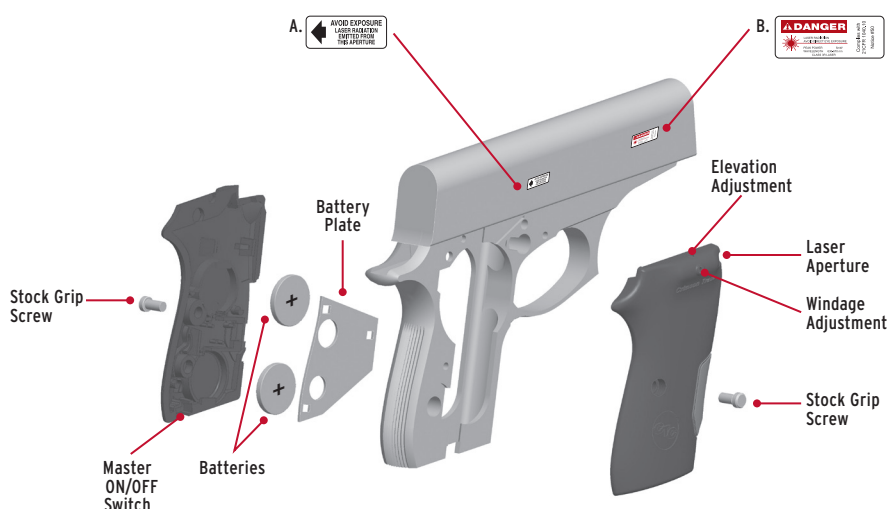

BATTERIES

Two (2) CR2032 or DL2032 Lithium Cells.

PRODUCT SPECIFICATIONS

BEAM INTENSITY: 5mW peak, 633 nm, Class 3R laser


DOT SIZE: Approximately 0.5 inches diameter at 50 feet

BATTERIES: Two #2032 lithium batteries;
over four hours of illumination

ACTIVATION: Front-located integrated momentary
pressure pad and master ON/OFF switch

WARRANTY: Three-year full warranty

This product complies with 21 CFR 1040.10

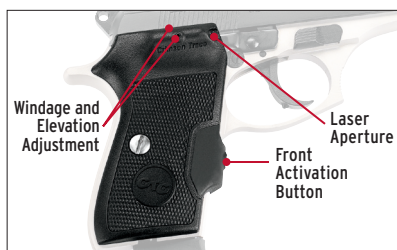

INSTALLATION INSTRUCTIONS

1. Make sure firearm is unloaded. Remove magazine and double check that chamber is empty. (See "Four Basic Rules Of Firearm Safety" in Owner's Handbook.)
2. Remove existing grips. Retain stock screws and star washers to be used with Lasergrips®.
3. Remove stock grip panels.
4. Place each battery straight down into battery well, with the flat, (+) side visible. Snap battery plate into place directly over the batteries.
5. Align the left grip panel with the grip hole and tighten down the left panel using a stock screw. Once the left panel is installed, insert the right panel and tighten down using the remaining stock screw.
6. To activate Lasergrips®, slide the master ON/OFF switch forward to the ON position. The switch is located on the bottom left side of the Lasergrips. Press pressure activation pad located in center of rubber front strap directly beneath trigger guard to activate the laser.
7. Confirm that laser and iron sights are in alignment. Laser dot should rest on top of front sight post with correct iron sight picture. Lasergrips are sighted-in at the factory to 50 feet, but can be fine-tuned to any point of impact by adjusting for windage and elevation. (See Laser Sight Owner's Handbook for complete sighting information.)

LASER SAFETY LABELING

IMPORTANT: LASER PRODUCTS MUST ONLY BE OPERATED WITH THE SAFETY LABEL APPLIED TO THE FIREARM.

Labels could not be affixed to the product but are supplied and must be installed as indicated below:

- A. Attach the "Aperture" warning label with the arrow pointing to the laser aperture.
- B. Attach the "Danger" warning label to the outside of the firearm.

Use caution when activating the laser to avoid direct eye exposure, which can result in permanent eye damage. Follow all precautions as outlined by the firearms manufacturer. Keep this and all firearm related products locked and secured from children or other unauthorized users.