

# SONY®


3-214-656-11(1)

*Digital HD Video Camera Recorder*

## HANDYCAM®

# Handycam Handbook

## *HDR-CX7/CX7K*

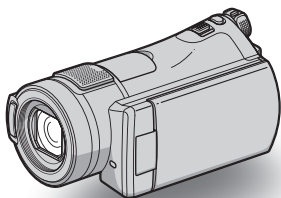

Enjoying Your  
Camcorder 8

Getting Started 15

Recording/Playback 24

Editing 46

Utilizing Recording Media 54

Customizing Your  
Camcorder 57

Troubleshooting 77

Additional  
Information 87

Quick  
Reference 98

AVCHD

MEMORY STICK™

InfoLITHIUM™  
SERIES

HDMI

# Read this before operating your camcorder

Before operating the unit, please read this Handbook thoroughly, and retain it for future reference.

## On “Handycam Handbook” (this book)

“Handycam Handbook” (PDF/this Handbook) explains how to operate your camcorder in detail. Please read “Operating Guide” (the separate paper volume) as well.

## Handling the images recorded on your camcorder on a computer

Read “Picture Motion Browser Guide” on the supplied CD-ROM.

## Types of “Memory Stick” you can use with your camcorder

- For recording movies, it is recommended that you use a “Memory Stick PRO Duo” of 512 MB or larger marked with:
  - MEMORY STICK PRO DUO (“Memory Stick PRO Duo”)
  - MEMORY STICK PRO-HG DUO (“Memory Stick PRO-HG Duo”)
- A “Memory Stick PRO Duo” of up to 8 GB has been confirmed to operate correctly with this camcorder.
- See page 10 for the recordable time of a “Memory Stick PRO Duo.”

“Memory Stick PRO Duo”/“Memory Stick PRO-HG Duo”  
(This size can be used with your camcorder.)



“Memory Stick”  
(You cannot use it in your camcorder.)



- “Memory Stick PRO Duo” and “Memory Stick PRO-HG Duo” are both referred to

as “Memory Stick PRO Duo” in this manual.

- You cannot use any type of memory card other than those mentioned above.
- “Memory Stick PRO Duo” can be used only with “Memory Stick PRO” compatible equipment.
- Do not attach a label or the like on a “Memory Stick PRO Duo” or a Memory Stick Duo adaptor.

## When using a “Memory Stick PRO Duo” with “Memory Stick” compatible equipment


Be sure to insert the “Memory Stick PRO Duo” into the Memory Stick Duo adaptor.

Memory Stick Duo adaptor



## Using the camcorder

- Do not hold the camcorder by the following parts.

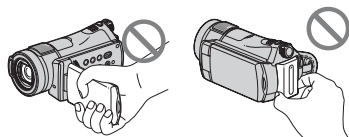

LCD screen


Battery pack

- The camcorder is not dustproofed, dripproofed or waterproofed. See “About handling of your camcorder” (p. 93).
- To prevent the “Memory Stick PRO Duo” from being broken or recorded images from being lost, do not do the following when either of the respective lamps of the POWER switch (p. 20) or the access lamp (p. 28) is on:
  - to remove the battery pack or AC Adaptor from the camcorder.
  - to apply mechanical shock or vibration to the camcorder.

- When connecting your camcorder to another device with a cable, be sure to insert the connector plug in the correct way. Pushing the plug forcibly into the terminal will damage the terminal and may result in a malfunction of your camcorder.
- Connect the A/V connecting cable to the Handycam Station when using your camcorder attached to the Handycam Station.
- Disconnect the AC Adaptor from the Handycam Station holding both the Handycam Station and the DC plug.
- Be sure to slide the POWER switch to OFF (CHG) when you insert the camcorder into the Handycam Station or remove the camcorder from it.

### About menu items, LCD panel and lens

- A menu item that is grayed out is not available under the current recording or playback conditions.
- The LCD screen is manufactured using extremely high-precision technology, so over 99.99% of the pixels are operational for effective use. However, there may be some tiny black points and/or bright points (white, red, blue, or green in color) that appear constantly on the LCD screen. These points are normal results of the manufacturing process and do not affect the recording in any way.

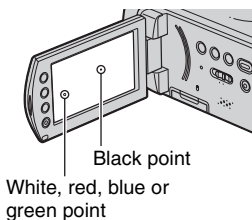

- Exposing the LCD screen or the lens to direct sunlight for long periods of time may cause malfunctions.

- Do not aim at the sun. Doing so might cause your camcorder to malfunction. Take images of the sun only in low light conditions, such as at dusk.

### About changing the language setting

- The on-screen displays in each local language are used for illustrating the operating procedures. Change the screen language before using your camcorder if necessary (p. 21).

### On recording

- Before starting to record, test the recording function to make sure the image and sound are recorded without any problems.
- Compensation for the contents of recordings cannot be provided, even if recording or playback is not possible due to a malfunction of the camcorder, storage media, etc.
- TV color systems differ depending on the country/region. To view your recordings on a TV, you need an NTSC system-based TV.
- Television programs, films, video tapes, and other materials may be copyrighted. Unauthorized recording of such materials may be contrary to the copyright laws.

### On playing back recorded images on other devices

- To view the HD (high definition) images on the “Memory Stick PRO Duo” on other devices, the device must comply with the AVCHD format. Otherwise, you cannot view the images.

### Save all your recorded image data

- To prevent your image data from being lost, save all your recorded images on external media. It is recommended that you save the image data on a disc such as DVD-R using your computer (p. 45). Also, you can save your image data using a VCR, or a DVD/HDD recorder (p. 51).

- It is recommended that you save your image data periodically, after recording.

### **Notes on battery pack/AC Adaptor**

- While the access lamp is lit, be sure to avoid the following. They may cause malfunctions.
  - Removing the battery pack
  - Removing the AC Adaptor (while operating the camcorder on the external power source)
  - Ejecting the “Memory Stick PRO Duo”
- Be sure to remove the battery pack or the AC Adaptor after turning off the POWER switch.

### **About this Handbook**

- The images of the LCD screen used in this Handbook for illustration purposes are captured using a digital still camera, and therefore may appear different.
- Design and specifications of recording media and other accessories are subject to change without notice.

### **About the Carl Zeiss lens**



Your camcorder is equipped with a Carl Zeiss lens, which was developed jointly by Carl Zeiss, in Germany, and Sony Corporation, and produces superior images. It adopts the MTF measurement system for video cameras and offers a quality typical of a Carl Zeiss lens. Also, the lens for your camcorder is T\*<sup>®</sup>-coated to suppress unwanted reflections and faithfully reproduce colors.

MTF= Modulation Transfer Function. The number value indicates the amount of light from a subject coming into the lens.

# Table of Contents

Read this before operating your camcorder .....	2
Subject examples and solutions .....	7

## Enjoying Your Camcorder

Operation flow .....	8
“  HOME” and “  OPTION”	
- Taking advantage of two types of menus .....	12

## Getting Started


Step 1: Checking supplied items ..	15
Step 2: Charging the battery pack	16
Step 3: Turning the power on and setting the date and time .....	20
Changing the language setting ....	21
Step 4: Adjusting the camcorder to suit you .....	21
Step 5: Inserting a “Memory Stick PRO Duo” .....	22

## Recording/Playback


Recording and playback with ease (Easy Handycam operation) .....	24
Recording .....	28
Zooming .....	30
Recording sound with more presence (5.1ch surround recording) .....	30
Using the flash .....	31
Recording high quality still images during movie recording (Dual Rec) .....	31
Recording in dark places (NightShot).....	32
Adjusting the exposure for backlit subjects .....	32
Recording in mirror mode .....	32
Recording the fast action in slow-motion (SMTH SLW REC) .....	33

Playback .....	34
Playing back from a face image (Face Index) .....	37
Using PB zoom .....	37
Searching for desired movies by date (Date Index) .....	37
Playing back a series of still images (Slide show) .....	38
Playing the image on a TV .....	39
Saving images .....	45




## Editing




 (OTHERS) category .....	46
Deleting images .....	46
Dividing a movie .....	48
Creating the Playlist .....	49
Dubbing to VCR or DVD/HDD recorders .....	51
Printing recorded images (PictBridge compliant printer) .....	52

## Utilizing Recording Media

 (MANAGE MEMORY STICK) category .....	54
Formatting the “Memory Stick PRO Duo” .....	54
Checking the “Memory Stick PRO Duo” information .....	55
Repairing the image database file .....	56

## Customizing Your Camcorder

What you can do with the  (SETTINGS) category of the  HOME MENU .....	57
Using the HOME MENU .....	57
List of the  (SETTINGS) category items .....	58
MOVIE SETTINGS .....	59

(Items for recording movies)	
<b>PHOTO SETTINGS</b> .....	63
(Items for recording still images)	
<b>VIEW IMAGES SET</b> .....	65
(Items to customize the display)	
<b>SOUND/DISP SET</b> .....	66
(Items to adjust the sound and the screen)	
<b>OUTPUT SETTINGS</b> .....	67
(Items for when connecting other devices)	
<b>CLOCK/ LANG</b> .....	68
(Items to set clock and language)	
<b>GENERAL SET</b> .....	69
(Other setup items)	
<b>Activating functions using the</b>	
 <b>OPTION MENU</b> .....	70
Using the OPTION MENU .....	70
Recording items on the OPTION MENU .....	71
Viewing items on the OPTION MENU .....	71
<b>Functions set in the  OPTION MENU</b> .....	72

## Troubleshooting

<b>Troubleshooting</b> .....	77
<b>Warning indicators and messages</b> .....	84

## Additional Information

<b>Using your camcorder abroad</b> .....	87
<b>Files/folder structure on the “Memory Stick PRO Duo”</b> .....	89
<b>Maintenance and precautions</b> .....	90
About the AVCHD format .....	90
About the “Memory Stick” .....	90
About the “InfoLITHIUM” battery pack .....	92
About x.v.Color .....	93
About handling of your camcorder .....	93

## Quick Reference

<b>Identifying parts and controls</b> .....	98
<b>Indicators displayed during recording/playback</b> .....	103
<b>Glossary</b> .....	105
<b>Index</b> .....	106

# Subject examples and solutions

## Checking your golf swing



- ▶ SMTH SLW REC .....33

## Getting a good shot of a ski slope or beach



- ▶ Backlight .....32
- ▶ BEACH .....74
- ▶ SNOW .....74

## Capturing still images during movie recording



- ▶ Dual Rec .....31

## A child on the stage under a spot light



- ▶ SPOTLIGHT .....74

## Flowers in close-up



- ▶ PORTRAIT .....74
- ▶ FOCUS .....72
- ▶ TELE MACRO .....72

## Fireworks with all its splendor



- ▶ FIREWORKS .....73
- ▶ FOCUS .....72

## Focusing on the dog on the left side of the screen



- ▶ FOCUS .....72
- ▶ SPOT FOCUS .....72

## A sleeping child under dim light



- ▶ NightShot .....32
- ▶ COLOR SLOW SHTR .....75

# Operation flow

▶ **Get ready (p. 15).**

- On the “Memory Stick PRO Duo” you can use with your camcorder, see page 11.



▶ **Record using your camcorder (p. 28).**

- You can record movies and still images on a “Memory Stick PRO Duo.”
- You can select the image quality: HD (high definition) image quality or SD (standard definition) image quality (p. 59).



## HD (high definition) image quality


## SD (standard definition) image quality

### AVCHD format



Image resolution: about 4.5 times of that of SD (standard definition) image quality

### MPEG2 format

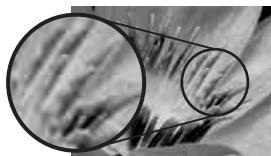

Records with SD (standard definition) image quality.

### 🔔 Notes

- Your camcorder is compatible with the “1440 × 1080/60i” standard of AVCHD format (p. 90). “AVCHD 1080i format” is abbreviated as “AVCHD” in this manual, except when it must be described in more detail.



**► Play back the images (p. 34).****■ Viewing on a high definition TV (p. 39)**

You can enjoy movies with HD (high definition) image quality, with the same image quality as they were recorded.

**■ Viewing on a non-high-definition TV (p. 39)**

You can enjoy movies recorded with HD (high definition) image quality, but they will be converted to SD (standard definition) image quality.

**🔊 Notes**

- To view the HD (high definition) images on the “Memory Stick PRO Duo” on other devices, the device must comply with the AVCHD format. Otherwise, you cannot view the images.
- Some AVCHD format devices may not be able to play the “Memory Stick PRO Duo.”

**💡 Tips**

- You can consult the [TV CONNECT Guide] (p. 39) displayed on the screen on connecting your TV and camcorder.

**► Save recorded images (p. 45).****■ Saving images on a disc using a computer****■ Importing images to a computer****■ Dubbing images on VCR or DVD/HDD recorders (p. 51)****💡 Tips**


- You can view movies with HD (high definition) image quality on computers, using the supplied “Picture Motion Browser.”
- See “Picture Motion Browser Guide” on the supplied CD-ROM about handling images on a computer.



### ► Delete images.

If the “Memory Stick PRO Duo” is full, you cannot record new images. Delete image data that has been saved on a computer or a disc from the “Memory Stick PRO Duo.” If you delete images that have been saved elsewhere, you can record new images on newly freed up space of the “Memory Stick PRO Duo.”




- **Deleting the selected images (p. 46)**
- **Deleting all the images ([] FORMAT), p. 54)**

## Expected recording time of movies

The recording time depends on the capacity of “Memory Stick PRO Duo” and recording mode (p. 59).

Approximate recordable time in minutes (Minimum recordable time in minutes)

“Memory Stick PRO Duo” capacity	512MB	1GB	2GB	4GB	8GB
HD (high definition) image quality					
AVC HD 15M (XP) (highest quality)	3* (3)	7 (7)	15 (15)	30 (30)	60 (60)
AVC HD 9M (HQ) (high quality)	6 (4)	10 (10)	25 (20)	55 (40)	115 (80)
AVC HD 7M (SP) (standard quality)	8 (6)	15 (10)	35 (25)	65 (45)	140 (100)
AVC HD 5M (LP) (long play)	10 (8)	20 (15)	45 (35)	85 (70)	175 (145)
SD (standard definition) image quality					
SD 9M (HQ) (high quality)	6 (5)	10 (10)	25 (25)	55 (50)	115 (100)
SD 6M (SP) (standard quality)	10 (5)	20 (10)	40 (25)	80 (50)	170 (100)
SD 3M (LP) (long play)	15 (10)	40 (25)	80 (55)	160 (105)	325 (215)

\* Since the recordable time is less than 5 minutes,  appears (p. 84).

### Tips

- Figures such as 15M and 9M in the table show the average bit rate. M stands for Mbps.

## “Memory Stick” you can use with your camcorder

- For recording movies, it is recommended that you use a “Memory Stick PRO Duo” of 512 MB or larger marked with:
  - MEMORY STICK PRO DUO (“Memory Stick PRO Duo”)
  - MEMORY STICK PRO-HG DUO (“Memory Stick PRO-HG Duo”)
- A “Memory Stick PRO Duo” of up to 8 GB has been confirmed to operate correctly with this camcorder.
- See the following URL on the “Memory Stick” you can use on your camcorder.  
<http://www.sony.net/memorystick/supporte/>
- For the recordable number of still images, see page 63.
- You can record movies of a maximum of 3,999 scenes with HD (high definition) image quality, and 9,999 scenes with SD (standard definition) image quality.

Your camcorder uses the VBR (Variable Bit Rate) format to automatically adjust image quality to suit the recording scene. This technology causes fluctuations in the recording time of the “Memory Stick PRO Duo.” Movies containing quickly moving and complex images are recorded at a higher bit rate, and this reduces the overall recording time.

# “HOME” and “OPTION”

## - Taking advantage of two types of menus

“HOME MENU” - the starting point for operations with your camcorder

[?] (HELP)

Displays a description of the item (p. 13)



Category

### ► Categories and items of the HOME MENU

#### (CAMERA) category

Item	Page
MOVIE*	29
PHOTO*	29
SMTH SLW REC	33

#### (VIEW IMAGES) category

Item	Page
VISUAL INDEX*	34
INDEX*	35
INDEX*	37
PLAYLIST	49

#### (OTHERS) category

Item	Page
DELETE*	46
EDIT	48
PLAYLIST EDIT	49
PRINT	52
COMPUTER	46
TV CONNECT Guide*	39

#### (MANAGE MEMORY STICK) category

Item	Page
FORMAT*	54
INFO	55
REPAIR IMG.DB F.	56


#### (SETTINGS) category\*

To customize your camcorder (p. 57).

\* You can also set these items during Easy Handycam operation (p. 24). For the items available in the (SETTINGS) category, see page 58.


## Using the HOME MENU

- 1 While pressing the green button in the center, slide the POWER switch in the direction of the arrow to turn on the power.

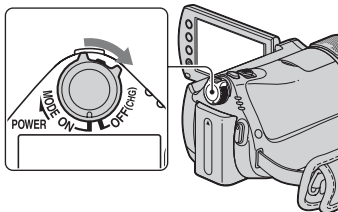

- 2 Press (HOME) [A] (or [B]).

(HOME) [B]

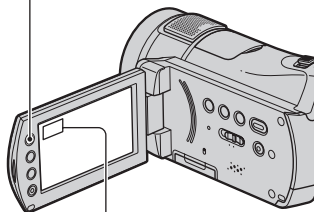

(HOME) [A]

- 3 Touch the desired category.

Example: (OTHERS) category



- 4 Touch the desired item.

Example: [EDIT]



- 5 Follow the guide on the screen for further operation.

### To hide the HOME MENU screen

Touch .

- ▶ When you want to know something about the function of each item on the HOME MENU - HELP

- 1 Press (HOME).

The HOME MENU appears.



- 2 Touch (HELP).

The bottom of the (HELP) turns orange.



---

### 3 Touch the item you want to learn more about.



When you touch an item, its explanation appears on the screen.

To apply the option, touch [YES], otherwise, touch [NO].


---

### To deactivate the HELP

Touch [?] (HELP) again in step 2.

### Using the OPTION MENU


Just a touch on the screen during shooting or playback displays the functions available at that moment. You will find it easy to make various settings. See page 70 for further details.

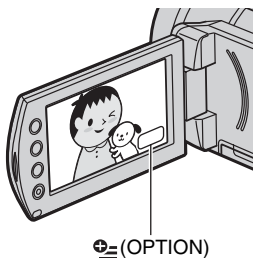

# Step 1: Checking supplied items

Make sure that you have the following items supplied with your camcorder. The number in the parentheses indicates the number of that item supplied.


AC Adaptor (1) (p. 16)

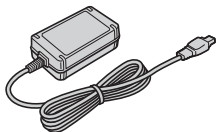


Power cord (1) (p. 16)



 Handycam Station (1) (p. 16, 101)




Component video cable (1) (p. 41)

 

A/V connecting cable (1) (p. 41, 51)



 USB cable (1) (p. 52)




Wireless Remote Commander (1) (p. 102)



A button-type lithium battery is already installed.

Rechargeable battery pack (1) (p. 16, 92)  
NP-FH60

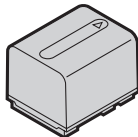

CD-ROM "Handycam Application Software" (1)


- Picture Motion Browser (Software)
- Picture Motion Browser Guide
- Handycam Handbook (This Handbook)

"Operating Guide" (1)

**HDR-CX7K**

"Memory Stick PRO Duo" 4 GB (1) (p. 22)

## Step 2: Charging the battery pack

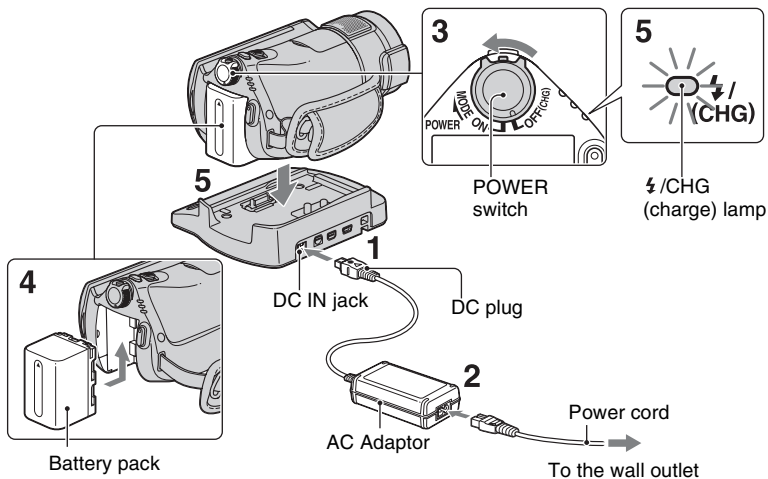

You can charge the “InfoLITHIUM” battery pack (H series) (p. 92) after attaching it to your camcorder.

### ⚡ Notes

- You cannot attach any “InfoLITHIUM” battery pack other than the H series to your camcorder.

### 1 Connect the AC Adaptor to the DC IN jack on the Handycam Station.

Be sure that the ▲ mark on the DC plug is facing up.

### 2 Connect the power cord to the AC Adaptor and the wall outlet.

### 3 Slide the POWER switch in the direction of the arrow to OFF (CHG) (the default setting).

### 4 Attach the battery pack by sliding it in the direction of the arrow until it clicks.

### 5 Place the camcorder on the Handycam Station as shown above, and insert it into the Handycam Station securely, all the way to the bottom.


The ⚡/CHG (charge) lamp lights up and charging starts. When the ⚡/CHG (charge) lamp turns off, the battery is charged.

### ⚡ Notes

- When inserting the camcorder into the Handycam Station, close the DC IN jack cover.


## To remove your camcorder from the Handycam Station

Turn off the power, then remove the camcorder from the Handycam Station holding both your camcorder and the Handycam Station.

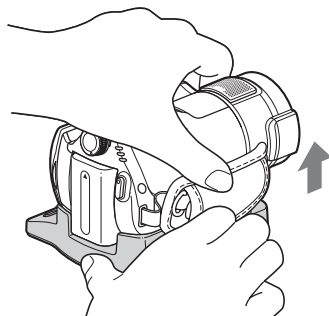

## To charge the battery pack using only the AC Adaptor

Turn off the power, then connect the AC Adaptor to the DC IN jack on your camcorder.

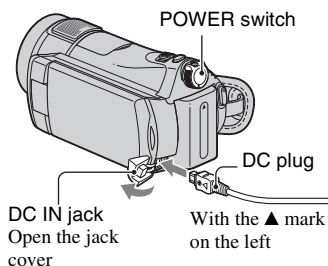


### Notes

- Disconnect the AC Adaptor from the DC IN jack holding both the camcorder and the DC plug.



## To remove the battery pack

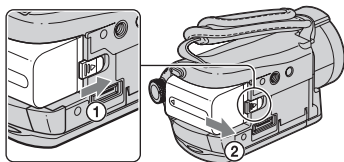Slide the POWER switch to OFF (CHG). Slide the BATT (battery release) lever and remove the battery pack.



BATT (battery release) lever

### Notes

- When you remove the battery pack or disconnect the AC Adaptor, make sure that the  (Movie) lamp/  (Still) lamp (p. 20) is turned off.

## When storing the battery pack


Fully discharge the battery pack before storing it for an extended period (see page 93 for the details of storage).

## To use a power source from a wall outlet

Make the same connections as you do when charging the battery pack. The battery pack will not lose its charge in this case.

## To check the remaining battery (Battery Info)


Set the POWER switch to OFF (CHG), then press DISP/BATT INFO.

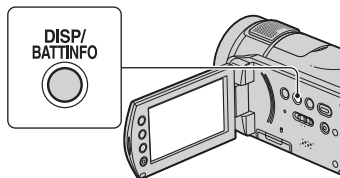

After a while, the approximate recordable time and battery information appear for about 7 seconds. You can view the battery

information for up to 20 seconds by pressing DISP/BATT INFO again while the information is displayed.

Remaining battery (approx.)

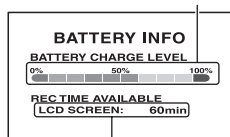

Recording capacity (approx.)

## Charging time (full charge)

Approximate time (min.) required when you fully charge a fully discharged battery pack.

Battery pack	Charging time
NP-FH50	135
NP-FH60 (supplied)	135
NP-FH70	170
NP-FH100	390

## Recording time

Approximate time (min.) available when you use a fully charged battery pack. “HD” stands for high definition image quality, and “SD” stands for standard image quality.

Battery pack	Continuous recording time		Typical recording time*	
	HD	SD	HD	SD
Image quality	HD	SD	HD	SD
	NP-FH50	70 80	35 40	40
NP-FH60 (supplied)	70 85	35 40		
	95 110	45 55		
NP-FH70	95 115	45 55		
	150 180	75 90		
NP-FH100	155 185	75 90		
	350 405	175 200		
	360 415	180 205		

\* Typical recording time shows the time when you repeat recording start/stop, turning the power on/off and zooming.

## Notes

- All times are measured under following conditions.
  - Recording mode: SP
  - [] INDEX: [OFF]
  - LCD backlight: [ON] (top), [OFF] (bottom)

## Playing time

Approximate time (min.) available when you use a fully charged battery pack. “HD” stands for high definition image quality, and “SD” stands for standard image quality.

Battery pack	LCD panel opened*	
	HD	SD
Image quality	HD	SD
NP-FH50	120	140
NP-FH60 (supplied)	160	190
NP-FH70	255	300
NP-FH100	580	680

\* When the LCD backlight is on.

## On the battery pack

- Before changing the battery pack, slide the POWER switch to OFF (CHG) and turn off the (Movie) lamp/ (Still) lamp (p. 20) .
- The /CHG (charge) lamp flashes during charging, or Battery Info (p. 17) will not be correctly displayed under the following conditions:
  - The battery pack is not attached correctly.
  - The battery pack is damaged.
  - The battery pack is worn-out (For Battery Info only).
- The power will not be supplied from the battery as long as the AC Adaptor is connected to the DC IN jack of your camcorder or the Handycam Station, even when the power cord is disconnected from the wall outlet.
- When attaching an optional video light, it is recommended that you use an NP-FH70 or NP-FH100 battery pack.

- We do not recommend using an NP-FH30, which only allows short recording and playback times, with your camcorder.

#### **On the charging/recording/playback time**

- Times measured when using the camcorder at 25 °C (77 °F) (10 °C to 30 °C (50 °F to 86 °F) is recommended).
- The recording and playback time will be shorter when you use your camcorder in low temperatures.
- The recording and playback time will be shorter depending on the conditions under which you use your camcorder.


#### **On the AC Adaptor**

- Use the nearby wall outlet when using the AC Adaptor. Disconnect the AC Adaptor from the wall outlet immediately if any malfunction occurs while using your camcorder.
- Do not use the AC Adaptor placed in a narrow space, such as between a wall and furniture.
- Do not short-circuit the DC plug of the AC Adaptor or battery terminal with any metallic objects. This may cause a malfunction.
- Even if your camcorder is turned off, AC power (house current) is still supplied to it while connected to the wall outlet via the AC Adaptor.

# Step 3: Turning the power on and setting the date and time

Set the date and time when using this camcorder for the first time. If you do not set the date and time, the [CLOCK SET] screen appears every time you turn on your camcorder or change the POWER switch position.

Lens cover

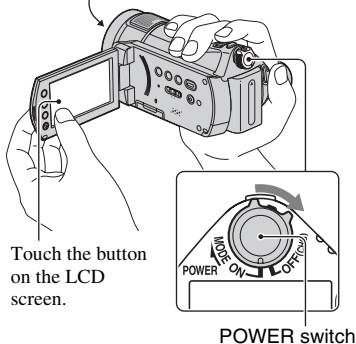


- 1 While pressing the green button, slide the POWER switch repeatedly in the direction of the arrow until the respective lamp lights up.

(Movie): To record movies

(Still): To record still images

The [CLOCK SET] screen appears.

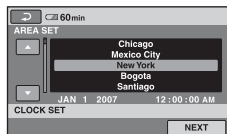

- 2 Select the desired geographical area with  $\blacktriangle/\blacktriangledown$ , then touch [NEXT].

- 3 Set [DST SET] or [SUMMERTIME], then touch [NEXT].

- 4 Set [Y] (year) with  $\blacktriangle/\blacktriangledown$ .



- 5 Select [M] with  $\blacktriangle/\blacktriangledown$ , then set the month with  $\blacktriangle/\blacktriangledown$ .

- 6 Set [D] (day), hour and minute in the same way, then touch [NEXT].

- 7 Make sure that the clock is correctly set, then touch [OK].

The clock starts.

You can set any year up to the year 2037.

For midnight, set it to 12:00 AM.

For midday, set it to 12:00 PM.

## To turn off the power

Slide the POWER switch to OFF (CHG).

## To reset the date and time

Touch  $\blacktriangle$  (HOME)  $\rightarrow$  (SETTINGS)  $\rightarrow$  [CLOCK/ $\blacktriangle$ ] LANG]  $\rightarrow$  [CLOCK SET], and set the date and time.

## Notes

- If you do not use your camcorder for **about 3 months**, the built-in rechargeable battery gets discharged and the date and time settings may be cleared from the memory. In that case,

## Step 4: Adjusting the camcorder to suit you

charge the built-in rechargeable battery and then set the date and time again (p. 95).

- It takes a few seconds for your camcorder to be ready to shoot after the power is turned on. You cannot operate your camcorder during this time.
- The lens cover opens automatically when the power is turned on. It closes when the playback screen is selected, or the power is turned off.
- In the setting at the time of purchase, the power turns off automatically if you leave your camcorder without any operation attempted for approximately 5 minutes, to save battery power ([A.SHUT OFF], p. 69).

### 💡 Tips

- The date and time does not appear during recording, but they are automatically recorded on the “Memory Stick PRO Duo,” and can be displayed during playback ([DATA CODE], p. 65).
- Refer to page 88 for information concerning “World time difference.”
- Instead of [DST SET], [SUMMERTIME] is displayed for some models.
- If the buttons on the touch panel do not work correctly, adjust the touch panel (CALIBRATION, p. 94).


### Changing the language setting

You can change the on-screen displays to show messages in a specified language. To select the screen language, touch

🏠 (HOME) → ⚙️ (SETTINGS) → [CLOCK/🗂️ LANG] → [A] LANGUAGE SET] (p. 68).

### Adjusting the LCD panel

Open the LCD panel 90 degrees to the camcorder (①), then rotate it to the best angle to record or play (②).

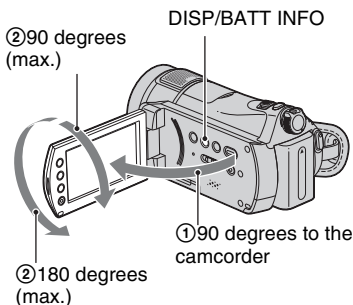

### To turn off the LCD backlight to make the battery last longer

Press and hold DISP/BATT INFO for a few seconds until  $\text{☐} \text{OFF}$  appears.

This setting is practical when you use your camcorder in bright conditions or you want to save battery power. The recorded image will not be affected by the setting. To turn on the LCD backlight, press and hold DISP/BATT INFO for a few seconds until  $\text{☐} \text{OFF}$  disappears.

### 📌 Notes


- Do not press the buttons beside the LCD screen accidentally when you open or adjust the LCD panel.

### 💡 Tips

- If you open the LCD panel 90 degrees to the camcorder, then rotate it 180 degrees to the lens side, you can close the LCD panel with the LCD screen facing out. This is convenient during playback operations.
- Touch 🏠 (HOME) → ⚙️ (SETTINGS) → [SOUND/DISP SET] → [LCD BRIGHT] (p. 66), and adjust the brightness of the LCD screen.
- The information is displayed or hidden (display ↔ no display) each time you press DISP/BATT INFO.

## Fastening the grip belt

Fasten the grip belt and hold your camcorder correctly.

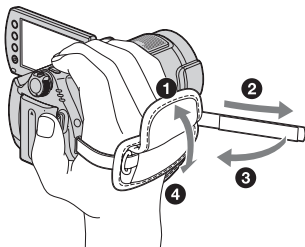

## Step 5: Inserting a “Memory Stick PRO Duo”

See page 11 on the “Memory Stick” you can use with your camcorder.

### 💡 Tips

- See following pages on the recordable time of movies and recordable number of still images.
  - Movies (p. 10)
  - Still images (p. 63)


---

### 1 Open the LCD panel.

---


### 2 Slide the POWER switch repeatedly until the (Movie) lamp lights up.

If the power is turned off, slide the POWER switch while pressing the green button.

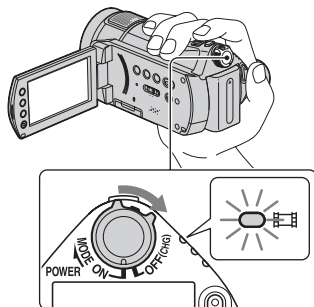


### 3 Insert the “Memory Stick PRO Duo.”


- 1 Open the Memory Stick Duo cover in the direction of the arrow.
- 2 Insert the “Memory Stick PRO Duo” into the Memory Stick Duo slot in the right direction until it clicks.
- 3 Close the Memory Stick Duo cover.

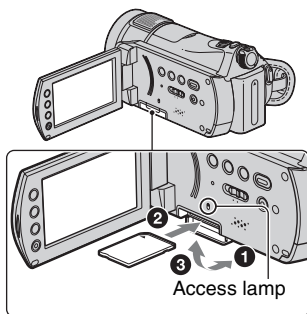

If you insert a new “Memory Stick PRO Duo,” the [Create a new Image Database File.] screen appears.

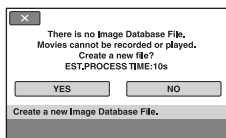

### 4 Touch [YES].

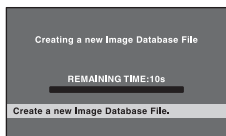

### To eject a “Memory Stick PRO Duo”

Open the LCD panel and Memory Stick Duo cover, lightly push the “Memory Stick PRO Duo” in once.

#### ⚠ Notes

- When the access lamp is lit or flashing, your camcorder is reading/writing data. To prevent image data from being damaged, do not:
  - eject the “Memory Stick PRO Duo”
  - remove the battery pack or AC Adaptor
  - shake or knock your camcorder
- Do not open the Memory Stick Duo cover during recording.
- If you force the “Memory Stick PRO Duo” into the slot in the wrong direction, the “Memory Stick PRO Duo,” the Memory Stick Duo slot, or image data may be damaged.
- If [Failed to create a new Image Database File. It may be possible that there is not enough free space.] is displayed on step 4, format the “Memory Stick PRO Duo.” Note that formatting will delete all data recorded on the “Memory Stick PRO Duo.”
- When inserting or ejecting the “Memory Stick PRO Duo,” be careful so that the “Memory Stick PRO Duo” does not pop out and drop.


#### 💡 Tips

- You can shoot still images without creating a management file.



# Recording and playback with ease (Easy Handycam operation)


Easy Handycam operation makes nearly all settings automatic so that you can perform recording or playback operation without detailed settings. It also makes screen font size larger for easy viewing.

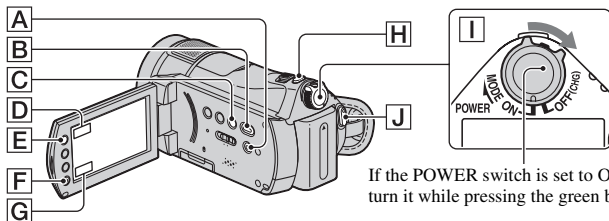

If the POWER switch is set to OFF (CHG), turn it while pressing the green button.

## Recording movies



- Slide the POWER switch **I** in the direction of the arrow until the  (Movie) lamp lights up.




- Press EASY **A**.



EASY appears on the LCD screen.


- Press START/STOP **J** (or **F**) to start recording.\*

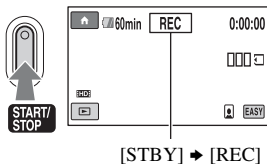

To stop recording, press START/STOP again.

## Recording still images



- Slide the POWER switch **I** in the direction of the arrow until the  (Still) lamp lights up.




- Press EASY **A**.



EASY appears on the LCD screen.

- Press PHOTO **H** lightly to adjust the focus **A** (a beep sounds), then press it fully **B** (a shutter click sounds).\*\*

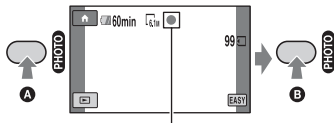

Flashing → Lights up

\* The recording mode is fixed to SP (p. 59).


\*\* The setting of [  QUALITY ] is fixed to [ FINE ] (p. 63).

## Playing back recorded movies/still images

**1** Slide the **POWER** switch **I** to turn on your camcorder.

**2** Press **VIEW IMAGES** **B** (or **G**).

The **VISUAL INDEX** screen appears on the LCD screen (It may take some time to display the thumbnails).

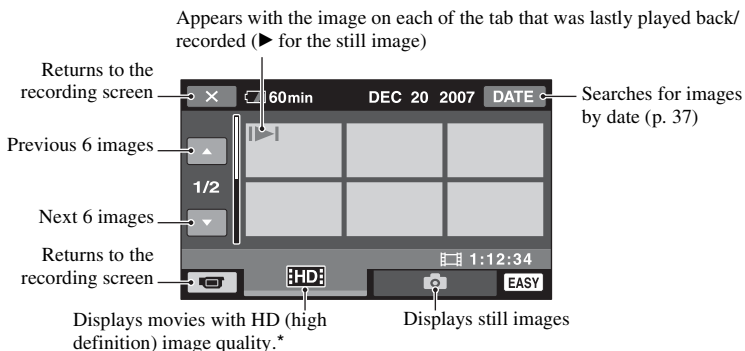

\* **SD** appears for movies with SD (standard definition) image quality. To play back movies of another image quality, touch **HOME** **E** (or **D**) → **SETTINGS** → **[VIEW IMAGES SET]** → **[HD/SD] INDEX SET**.


### Playing back images from **INDEX**

Press **Film Roll Index** **C**, or touch **HOME** **E** (or **D**) → **VIEW IMAGES** → **[INDEX]**.

### 3 Start playback.

#### Movies:

Touch the **HDD** or **HSD** tab, and then touch the desired movie.

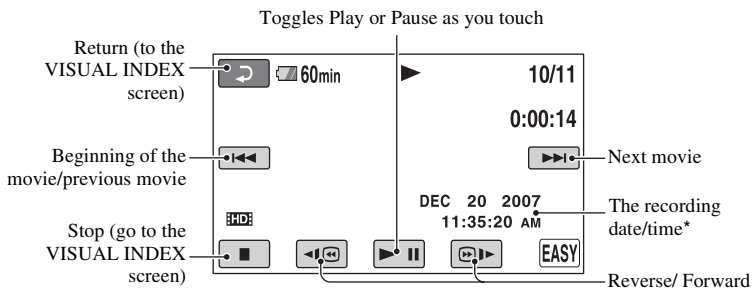


\* The setting of [DATA CODE] is fixed to [DATE/TIME] (p. 65).

#### Tips

- When playback from the selected movie reaches the last movie, the screen returns to the VISUAL INDEX screen.
- You can slow down the playback speed by touching / during pause.
- You can adjust volume by touching (HOME) (or ) → (SETTINGS) → [SOUND SETTINGS] → [VOLUME], then touch / .

#### Still images:

Touch the tab, and then touch the desired still image.

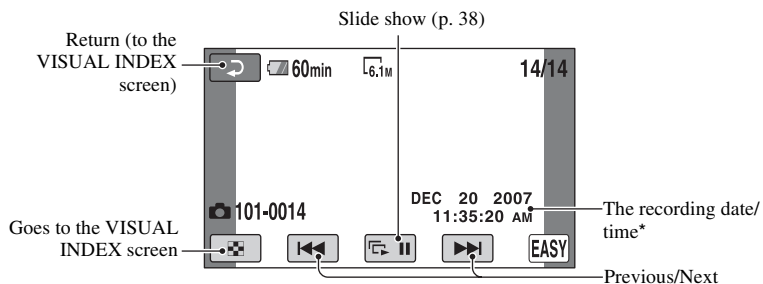

\* The setting of [DATA CODE] is fixed to [DATE/TIME] (p. 65).

## To cancel Easy Handycam operation

Press EASY **[A]** again. **EASY** disappears from the LCD screen.

## Menu settings during Easy Handycam operation

Press **[HOME]** **[E]** (or **[D]**) to display the menu items available for setup changes (p. 12, 57).


### 🔍 Notes

- Most of the menu items automatically return to the default settings. The settings of some menu items are fixed. For details, see page 77.
- You cannot use the **[OPTION]** menu.
- Cancel Easy Handycam operation if you want to add effects to images or change settings.

## Invalid buttons during Easy Handycam operation

You cannot use some buttons/functions during Easy Handycam operation since they are automatically set (p. 77). If you set an invalid operation, [Invalid during Easy Handycam operation] may appear.

# Recording

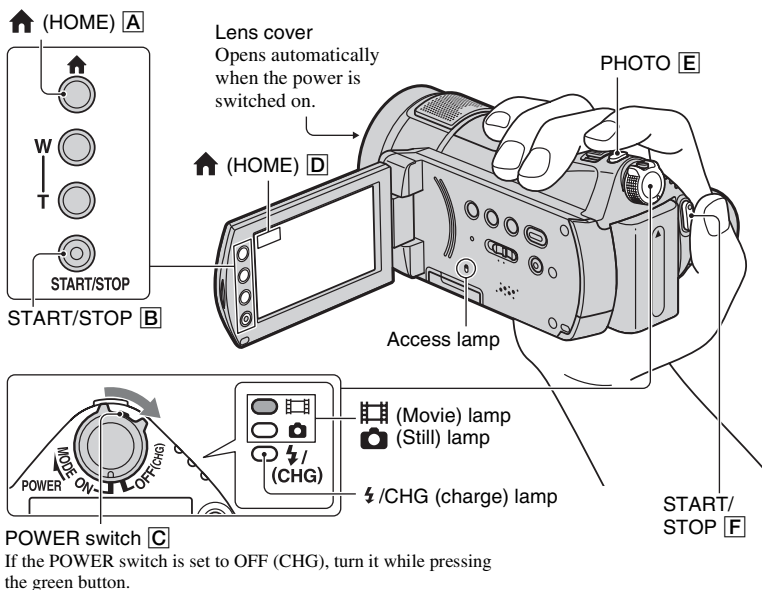

## “Memory Stick” you can use with your camcorder

- For recording movies, it is recommended that you use a “Memory Stick PRO Duo” of 512 MB or larger marked with:
  - MEMORY STICK PRO DUO (“Memory Stick PRO Duo”)
  - MEMORY STICK PRO-HG DUO (“Memory Stick PRO-HG Duo”)
- A “Memory Stick PRO Duo” of up to 8 GB has been confirmed to operate correctly with this camcorder.
- See the following URL on the “Memory Stick” you can use on your camcorder.  
<http://www.sony.net/memorystick/supporte/>

## 🔊 Notes

- When a movie file exceeds 2 GB, the next movie file is created automatically.

## 💡 Tips

- You can check the free space of the “Memory Stick PRO Duo” by touching **↑ (HOME) A** (or **D**) → **MANAGE MEMORY STICK** → **INFO** (p. 55).


## Recording movies



For the recordable time, see page 10.

**1** Slide the POWER switch **C** in the direction of the arrow to light up the (Movie) lamp.

**2** Press START/STOP **B** (or **F**).

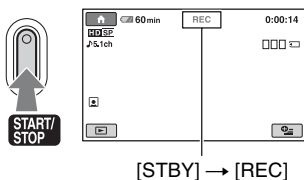

To stop recording, press START/STOP **B** (or **F**) again.


## Recording still images



For the recordable number of still images, see page 63.

**1** Slide the POWER switch **C** until the (Still) lamp lights up.

**2** Press PHOTO **E** lightly to adjust the focus **A** (a beep sounds), then press it fully **B** (a shutter click sounds).

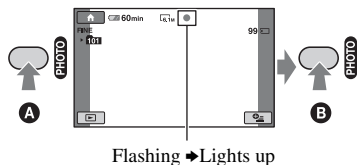


appears beside . When disappears, the image has been recorded.

### Tips

- Movies are recorded in the HD (high definition) image quality in the default setting (p. 59).
- appears when [ INDEX SET] is set to [ON] (the default setting) during movie recording (p. 62).
- You can switch the shooting mode by touching (HOME) **A** (or **D**) → (CAMERA) → [MOVIE] or [PHOTO].
- See page 31 for recording high quality still images during movie recording.
- You can copy scenes of recorded movies as still images on the “Memory Stick PRO Duo” using the supplied “Picture Motion Browser.” For details, see “Picture Motion Browser Guide” on the supplied CD-ROM.

## Zooming

You can magnify images up to 10 times the original size with the power zoom lever or the zoom buttons beside the LCD screen.

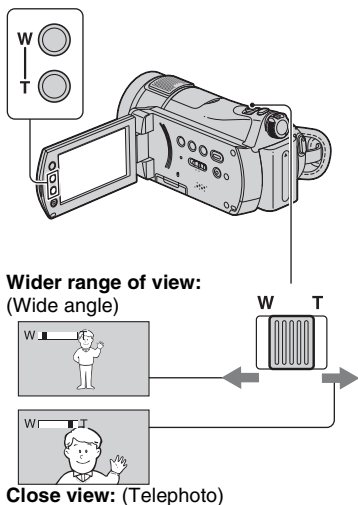

Move the power zoom lever slightly for a slower zoom. Move it further for a faster zoom.

### ⚙ Notes


- Be sure to keep your finger on the power zoom lever. If you move your finger off the power zoom lever, the operation sound of the power zoom lever may also be recorded.
- You cannot change the zoom speed with the zoom buttons beside the LCD screen.
- The minimum possible distance between camcorder and subject while maintaining sharp focus is about 1 cm (about 13/32 in.) for wide angle and about 80 cm (about 2 5/8 feet) for telephoto.

### 💡 Tips

- You can set [DIGITAL ZOOM] (p. 60) if you want to zoom to a level greater than 10 × when recording movies.

## Recording sound with more presence (5.1ch surround recording)

Dolby Digital 5.1ch surround sound can be recorded with the internal microphone. You can enjoy realistic sound when playing the movie on devices that support 5.1ch surround sound.

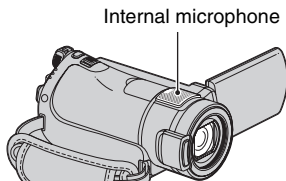


Dolby Digital 5.1 Creator, 5.1ch surround sound  
🔍 Glossary (p. 105)

### ⚙ Notes

- 5.1ch sound is converted to 2ch when played back on your camcorder.
- To enjoy the 5.1ch surround sound recorded, you need a device compatible with 5.1ch surround sound.
- You can create a disc, which contains the movies recorded on your camcorder, on a computer using the supplied software. If you play the disc on a 5.1ch surround system, you can enjoy realistic sound.
- 5.1ch is displayed on the screen during 5.1ch recording/playback.

## Using the flash

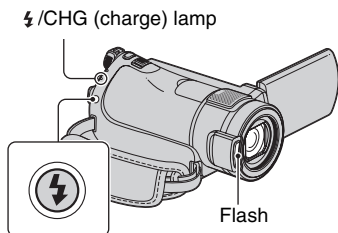

Press **⚡** (flash) repeatedly to select an appropriate setting.

No indication (Auto flash): Automatically flashes when there is insufficient ambient light.



**⚡** (Forced flash): Always uses the flash regardless of the surrounding brightness.



**⚡** (No flash): Records without flash.


### ⚡ Notes


- The recommended distance to the subject when using the built-in flash is approximately 0.3 to 2.5 m (1 to 8 feet).
- Remove any dust from the surface of the flash before using it. Flash effect may be impaired if heat discoloration or dust obscures the lamp.
- The **⚡/CHG** (charge) lamp flickers while charging the flash, and remains lit when the battery charge is complete.
- If you use the flash in bright places such as when shooting a backlit subject, the flash may not be effective.
- When attaching a conversion lens (optional) or a filter (optional) to your camcorder, the flash does not emit light.

### 💡 Tips

- You can change the brightness of the flash by setting [FLASH LEVEL] (p. 62), or you can prevent the redeye by setting [REDEYE REDUC] (p. 62).


## Recording high quality still images during movie recording (Dual Rec)

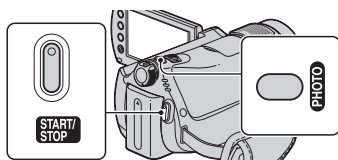

- ① Slide the POWER switch until the  (Movie) lamp lights up, then press START/STOP to start movie recording.


- ② Press PHOTO fully.

After you start recording, and before you finish, you can select up to 3 frames of still images from your movie.

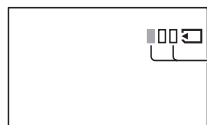

Orange color boxes indicate the number of recorded images. When recording is finished, the color changes to orange.





- ③ Press START/STOP to stop movie recording.

Stored still images appear one by one, and the images are stored. When  disappears, the image has been recorded.


### ⚡ Notes

- Do not eject the “Memory Stick PRO Duo” before movie recording is finished and the still images are completely stored on the “Memory Stick PRO Duo.”
- You cannot use the flash during Dual Rec.

### 💡 Tips

- When the POWER switch is set to  (Movie), the size of still images becomes  4.6M (16:9 wide) or  3.4M (4:3).
- You can record still images during recording standby in the same way as when the  (Still) lamp is turned on. You can also record with the flash.

## Recording in dark places (NightShot)

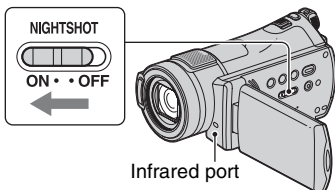

Set the NIGHTSHOT switch to ON (☑ appears).


### 🔊 Notes


- The NightShot and Super NightShot functions use infrared light. Therefore, do not cover the infrared port with your fingers or other objects.
- Remove the conversion lens (optional).
- Adjust the focus manually ([FOCUS], p. 72) when it is hard to focus automatically.
- Do not use the NightShot and Super NightShot functions in bright places. This may cause a malfunction.

### 💡 Tips


- To record an image brighter, use Super NightShot function (p. 75). To record an image more faithfully to the original colors, use Color Slow Shutter function (p. 75).

## Adjusting the exposure for backlit subjects

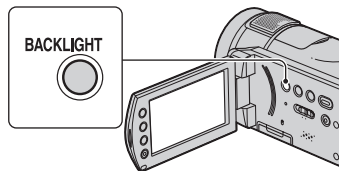

To adjust the exposure for backlit subjects, press BACK LIGHT to display . To cancel the back light function, press BACK LIGHT again.

## Recording in mirror mode

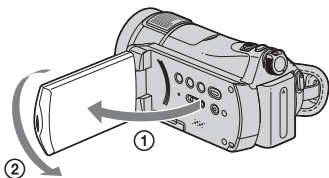


Open the LCD panel 90 degrees to the camcorder (①), then rotate it 180 degrees to the lens side (②).

### 💡 Tips

- A mirror-image of the subject appears on the LCD screen, but the image will be normal when recorded.

## Recording the fast action in slow-motion (SMTH SLW REC)

Fast moving subjects and actions, which cannot be captured under the ordinary shooting conditions, can be shot in smooth moving slow-motion for about 3 seconds. This is useful to shoot fast actions such as a golf or tennis swing.

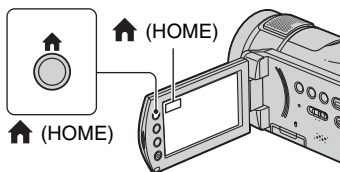

- Slide the POWER switch to turn on the camcorder.
- Touch **HOME** → **CAMERA** → **[SMTH SLW REC]**.




- Press **START/STOP**.  
A 3 second-movie (approx.) is recorded as a 12 second-slow-motion-movie.  
[Recording...] disappears, when recording is finished.

Touch **[CANCEL]** to cancel the smooth slow recording.

### To change the setting

On the **[SMTH SLW REC]** screen, touch **[OPTION]** → **[CAMERA]** tab, then select the setting you want to change.

- [TIMING]**  
Select the recording start point after **START/STOP** is pressed. The default setting is **[3sec AFTER]**.

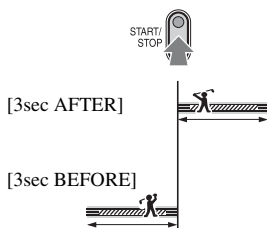


- [RECORD SOUND]**  
Select **[ON]** (🔊) to superimpose sounds such as conversation on the slow motion pictures (The default setting is **[OFF]**). Your camcorder records sounds for about 12 seconds while **[Recording...]** is displayed in step ③.

### Notes

- Sounds cannot be recorded while shooting a 3 second-movie (approx.).
- Image quality of **[SMTH SLW REC]** is not as good as that of normal recording.

# Playback

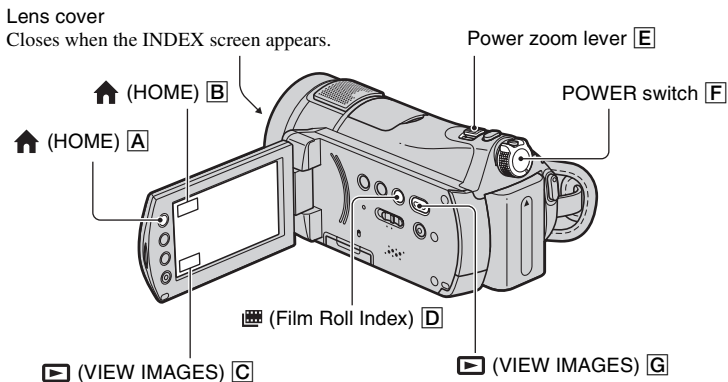


**1** Slide the **POWER switch** F to turn on your camcorder.

**2** Display the desired **INDEX** screen.

## Playing back images from VISUAL INDEX

Press **(VIEW IMAGES)** G (or C).

The **VISUAL INDEX** screen appears on the LCD screen (It may take some time to display the thumbnails).

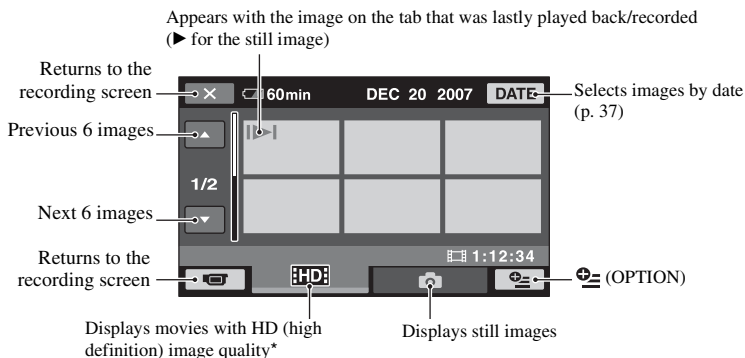

\* **[SD]** appears for movies with SD (standard definition) image quality. To play back movies of another image quality, touch **[OPTION]** → **[ ]** tab → **[HD]/[SD] INDEX SET**] when displaying movies on the INDEX screen.

### Tips


- The number of the images on the VISUAL INDEX screen can be changed 6 ↔ 12 by moving the power zoom lever **[E]**. To fix this number, touch **[HOME]** **[A]** (or **[B]**) → **[SETTINGS]** → **[VIEW IMAGES SET]** → **[ ] DISPLAY**] (p. 66).

## Playing back images from Film Roll Index

Press **[ ] (Film Roll Index)** **[D]**.

The **[ ] INDEX**] screen appears (It may take some time to display the thumbnails). Recorded movies are listed by time and are displayed as an INDEX screen. You can start playing back a movie from the selected image.

Displays the previous/next image.

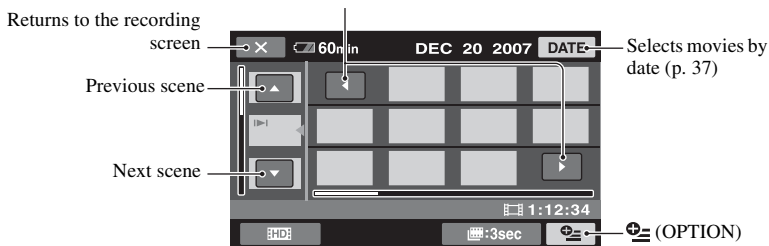

### Notes

- **[ ] INDEX**] is available only for movies.

### Tips


- Touch **[OPTION]** → **[ ] INTERVAL SET**] to select the duration (p. 66).
- To display the movies with SD (standard definition) image quality, touch **[OPTION]** → **[HD]/[SD] INDEX SET**] on the INDEX screen.

### 3 Start playing back.

#### Movies



Touch the **[HD]** or **[SD]** tab to play back movies.

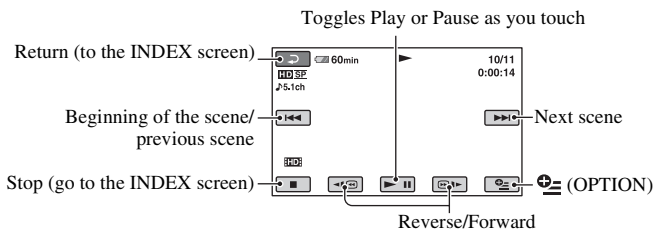


#### Tips

- When playback from the selected movie reaches the last movie, the screen returns to the INDEX screen.
- Touch **[<|>]** during pause to play back movie slowly.
- A touch of **[<|>]** makes the reverse/fast forward approximately 5 times faster, 2 touches makes it approximately 10 times faster, 3 touches makes it approximately 30 times faster, and 4 touches makes it approximately 60 times faster.

#### Still images



On the **VISUAL INDEX** screen, touch the **[📷]** tab to play back still images.

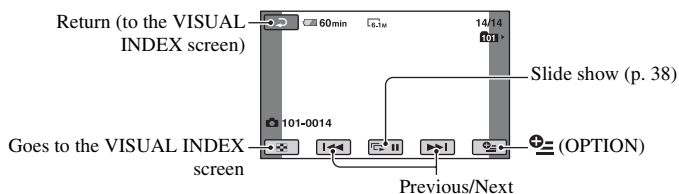

#### To adjust the sound volume

Touch **[+/-]** (OPTION) → **[▶]** tab → [VOLUME], then adjust the volume with **[<]** / **[>]**.

#### Tips

- You can switch the playback mode by touching **[HOME]** **[A]** (or **[B]**) → **[VIEW IMAGES]** → **[VISUAL INDEX]** / **[INDEX]**.


## Playing back from a face image (Face Index)

The detected face images are displayed on the INDEX screen.

You can play back the movie from the selected face image.

- 1 Turn on your camcorder.
- 2 Touch **HOME** [**A**] (or [**B**]) → **VIEW IMAGES** → [**INDEX**].

Returns to the recording screen

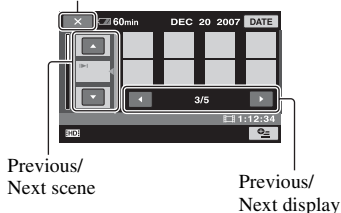

- 3 Touch **▲/▼** to select the desired scene.
- 4 Touch **◀/▶** to search for the desired face image, then touch the face image you want to play back. Playback starts from the selected face image.

### Notes

- Faces may not be detected depending on recording conditions.  
Example: People wearing glasses or hats, or not facing towards the camera.
- Set [**INDEX SET**] to [**ON**] (the default setting) before recording to play back movies from [**INDEX**] (p. 62). The face images do not appear if faces have not been detected.


### Tips

- You can play back movies of another image quality by touching **OPTION** → [**HD/SDH INDEX SET**] on the [**INDEX**] screen.

## Using PB zoom

You can magnify still images from about 1.1 to 5 times the original size.

Magnification can be adjusted with the power zoom lever or the zoom buttons beside the LCD screen.

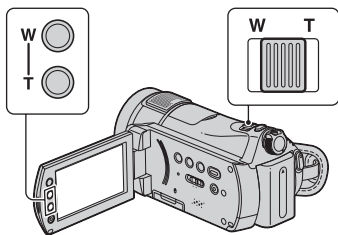


- 1 Play back the still images you want to magnify.
- 2 Magnify the still image with **T** (Telephoto). The screen is framed.
- 3 Touch the screen at the point you want to display in the center of the displayed frame.
- 4 Adjust the magnification with **W** (Wide angle)/**T** (Telephoto).

To cancel, touch **□**.

## Searching for desired movies by date (Date Index)

You can search for desired movies by date efficiently.

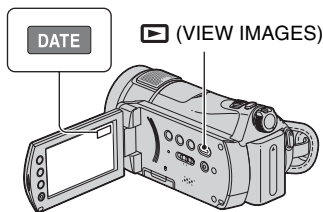


- 1 Slide the POWER switch to turn on the camcorder, and press (VIEW IMAGES).

The VISUAL INDEX screen appears on the LCD screen.

- 2 Touch the or tab.
- 3 Touch [DATE].

The recording dates of movies are displayed on the screen.

Return to the VISUAL INDEX screen

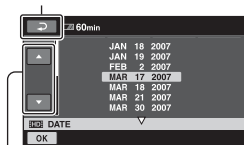


Previous/Next Date

- 4 Touch / to select the date of the desired movie.
- 5 Touch while the selected date of the desired movie is highlighted. The movies of selected date are displayed on the VISUAL INDEX screen.

#### Tips

- On the [ INDEX]/[ INDEX] screen, you can use the Date Index function by following the steps 3 to 5.
- To search for movies of another image quality, touch (OPTION) → → [ INDEX SET] when displaying movies on the INDEX screen.

## Playing back a series of still images (Slide show)

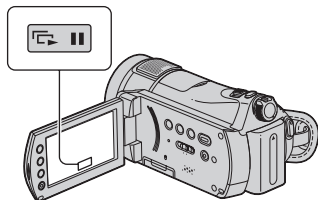

Touch on the still image playback screen.

The slide show begins from the selected image.

Touch to stop the slide show. To restart, touch again.

#### Notes

- You cannot operate playback zoom during slide show.

#### Tips

- You can set continuous slide show playback by touching (OPTION) → tab → [SLIDE SHOW SET]. The default setting is [ON] (continuous playback).
- You can also play back the slide show by touching (OPTION) → tab → [SLIDE SHOW] on the VISUAL INDEX screen.

# Playing the image on a TV

Connection methods and quality of the image viewed on the TV screen differ depending on what type of TV is connected, and the connectors used.

Use the supplied AC Adaptor as the power source (p. 16).

Refer also to the instruction manuals supplied with the device to be connected.

## Notes

- When recording, set [X.V.COLOR] to [ON] to play back on an x.v.Color-compliant TV (p. 61). Some settings may need to be adjusted on the TV when playing back. Refer to the instruction manual of your TV for details.

## Operation flow



You can connect your camcorder to the TV easily following the instructions displayed on the LCD screen, [TV CONNECT Guide].

### Switch the input on the TV to the connected jack.


Refer to the instruction manuals of the TV.

↓  
Connect your camcorder and TV referring to [TV CONNECT Guide].


↓  
Make the required output settings on your camcorder (p. 41).

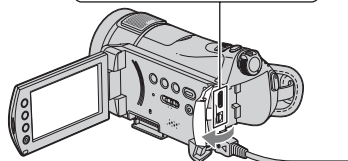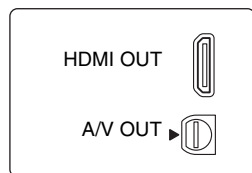

Open the jack cover.

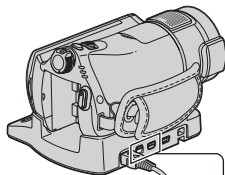

Handycam Station

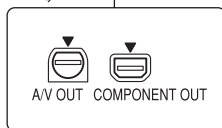

## Notes

- Only the Handycam Station is equipped with the COMPONENT OUT jack.
- The Handycam Station and your camcorder are both equipped with A/V OUT jacks. Connect the A/V connecting cable either to the Handycam Station or to your camcorder, depending on your setup. If you connect A/V connecting cables to both the Handycam Station and your camcorder at the same time, image disturbance may occur.

## Selecting the most advantageous connection - [TV CONNECT Guide]

Your camcorder will advise you of the most advantageous way of connecting your TV.

---

**1** Turn on your camcorder, and press **↑** (HOME).

---

**2** Touch **☰** (OTHERS).


---

**3** Touch [TV CONNECT Guide].

If the item is not on the screen, touch **▲**/**▼** to change the page.

---

**4** Select the TV type you use.

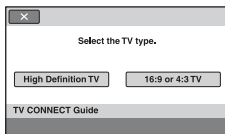


Meanwhile, you can make the relevant connection between your camcorder and the TV.

---

## Connecting to a high definition TV


Images recorded with HD (high definition) image quality are played back with HD (high definition) image quality. Images recorded with SD (standard definition) image quality are played back with SD (standard definition) image quality.

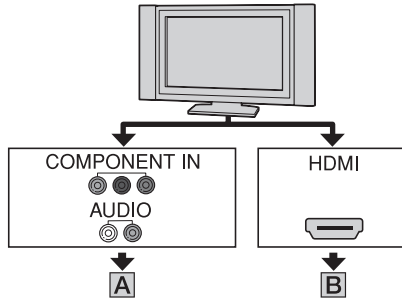

↗ : Signal flow

Type	Camcorder	Cable	TV	HOME MENU setting
------	-----------	-------	----	-------------------

**A**

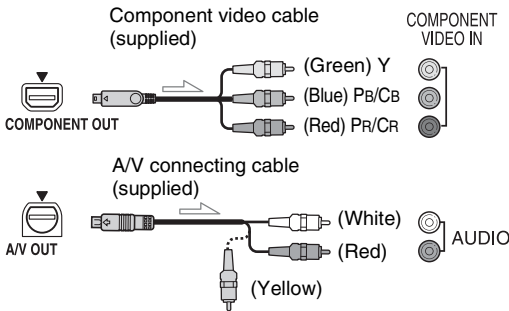

(SETTINGS) →  
 [OUTPUT SETTINGS]  
 → [COMPONENT] →  
 [1080i/480i] (p. 68)


- An A/V connecting cable is also needed to output audio signals. Connect the white and red plugs of the A/V connecting cable to the audio input jack of your TV.



↗ : Signal flow

Type	Camcorder	Cable	TV	HOME MENU setting
------	-----------	-------	----	-------------------

**C**

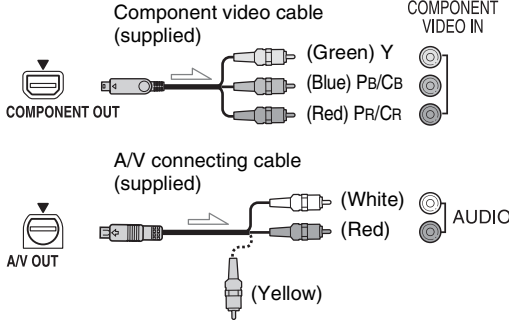


🗑️ (SETTINGS) →  
[OUTPUT SETTINGS]  
→ [COMPONENT] →  
[480i] (p. 68)

🗑️ (SETTINGS) →  
[OUTPUT SETTINGS]  
→ [TV TYPE] → [16:9]/  
[4:3]\* (p. 67)

- An A/V connecting cable is also needed to output audio signals. Connect the white and red plugs of the A/V connecting cable to the audio input jack of your TV.


**D**

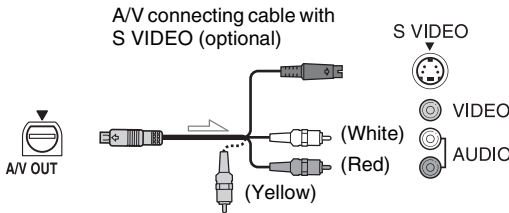

🗑️ (SETTINGS) →  
[OUTPUT SETTINGS]  
→ [TV TYPE] → [16:9]/  
[4:3]\* (p. 67)

- When the S VIDEO plug (S VIDEO channel) is connected, audio signals are not output. To output audio signals, connect the white and red plugs of an A/V connecting cable with the S VIDEO cable to the audio input jack of your TV.
- This connection produces higher resolution images compared with the A/V connecting cable (Type **E**).

**E**

 

🗑️ (SETTINGS) →  
[OUTPUT SETTINGS]  
→ [TV TYPE] → [16:9]/  
[4:3]\* (p. 67)

- \* Set this according to your TV.

## When connecting to your TV via a VCR

Connect your camcorder to the LINE IN input on the VCR using the A/V connecting cable. Set the input selector on the VCR to LINE (VIDEO 1, VIDEO 2, etc.).

## When your TV is monaural (When your TV has only one audio input jack)

Connect the yellow plug of the A/V connecting cable to the video input jack and connect the white (left channel) or red (right channel) plug to the audio input jack of your TV or VCR.

### Notes

- When the A/V connecting cable is used to output images, images are output with SD (standard definition) image quality.

### Tips

- If you connect your camcorder to your TV using more than one type of cable to output images, the order of priority of the output signal is as follows:  
HDMI → component video → S VIDEO → audio/video.
- HDMI (High Definition Multimedia Interface) is an interface to send both video/audio signals. The HDMI OUT jack outputs high quality images and digital audio. If you connect your camcorder to a Sony TV having a Video-A mode, an optimum image quality will be selected automatically. Refer to the instruction manual of your TV for details.

# Saving images

Recorded images are stored on the “Memory Stick PRO Duo.” Due to the limited capacity of the “Memory Stick PRO Duo,” make sure that you save the image data to some type of external media such as a DVD-R or a computer.

You can save the images recorded on the camcorder as described below.

## Saving images using a computer

By using “Picture Motion Browser” on the supplied CD-ROM, you can save the images recorded on the “Memory Stick PRO Duo.”

You can rewrite movies with HD (high definition) image quality from the computer to your camcorder, if necessary.

### Creating a disc with One Touch (One Touch Disc Burn)

You can save images recorded on the camcorder directly to a disc with ease.

### Saving images on a computer (Easy PC Back-up)

You can save images recorded on the camcorder on the hard disk of a computer.



### Creating a disc with selected images

You can save images copied to your computer on a disc. You can also edit those images.

➔ **Images can be saved in HD (high definition) image quality or SD (standard definition) image quality. See “Picture Motion Browser Guide” stored on the supplied CD-ROM.**

## Saving images by connecting your camcorder to other devices

### Dubbing to VCR or DVD/HDD devices

This is a convenient way of distributing dubbed discs.



➔ **When connecting with an A/V connecting cable, images can be saved in SD (standard definition) image quality. See “Dubbing to VCR or DVD/HDD recorders” (p. 51).**



## (OTHERS) category

This category enables you to edit the images, to print still images and to connect your camcorder to a computer.



(OTHERS) category

### Item list

#### DELETE

You can delete images on the “Memory Stick PRO Duo” (p. 46).

#### EDIT

You can edit the images on the “Memory Stick PRO Duo” (p. 48).

#### PLAYLIST EDIT

You can create and edit a Playlist (p. 49).

#### PRINT

You can print still images on a connected PictBridge printer (p. 52).

#### COMPUTER

You can connect your camcorder to a computer.

See “Operating Guide” for connecting the computer.

#### TV CONNECT Guide

Your camcorder helps you select the appropriate connection for your device (p. 39).

## Deleting images

You can increase the free space on the “Memory Stick PRO Duo” by deleting image data.

You can check the free space on the “Memory Stick PRO Duo” using [INFO] (p. 55).

### Notes

- You cannot restore images once they are deleted.
- Important data should be saved on external media (p. 45).
- Do not try to delete the files on the “Memory Stick PRO Duo” in your camcorder using a computer.

**1** Touch (HOME) → (OTHERS) → [DELETE].

**2** Touch [MOTION] DELETE] or [MOTION] DELETE] to delete movies, or [MOTION] DELETE] to delete still images.

**3** Touch the image to be deleted.





The selected image is marked with . Press and hold the image on the LCD screen to confirm the image. Touch to return to the previous screen.



**4** Touch [OK] → [YES] → [OK].


## To delete all images of the same type (on each tab) at one time

In step 2, touch [HDD] DELETE ALL/[SSD] DELETE ALL/[MEMORY STICK] DELETE ALL] → [YES] → [YES] → [OK].


 

- You can delete an image when viewing it by selecting  (OPTION) →  tab → [DELETE] on the playback screen.
- To delete all images recorded on the “Memory Stick PRO Duo,” format the “Memory Stick PRO Duo” (p. 54).

## To delete all the movies or the still images recorded on the same day at one time

- ① Touch  (HOME) →  (OTHERS) → [DELETE].
- ② Touch the type of image you want to delete ([HDD] DELETE by date)/[SSD] DELETE by date).

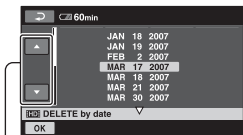

Previous/Next Date

- ③ Touch / to select the recording date of the desired image.
- ④ Touch [OK] while the selected recording date is highlighted. The images recorded on the selected date are displayed on the screen. Touch the image on the LCD screen to confirm the image. Touch  to return to the previous screen.
- ⑤ Touch [OK] → [YES] → [OK].

### ⚡ Notes

- Do not remove the battery pack or the AC Adaptor, or eject the “Memory Stick PRO Duo” from your camcorder while deleting the images. It may damage the “Memory Stick PRO Duo.”
- If the deleted movie is included in the Playlist (p. 49), the movie is deleted also from the Playlist.
- You cannot delete images if write-protection is set to the images by another device.

### 💡 Tips

- You can select up to 100 images at one time.

# Dividing a movie

You can divide movies on the “Memory Stick PRO Duo.”

## Notes

- During Easy Handycam operation, you cannot divide movies. Cancel Easy Handycam operation (p. 24).

---

**1** Touch **HOME** → **OTHERS** → **[EDIT]**.

---

**2** Touch **[DIVIDE]** → **[DIVIDE]** / **[SD] DIVIDE**.

---

**3** Touch the movie to be divided.


The selected movie starts playback.

---

**4** Touch **[PAUSE]** at the point where you want to divide the movie into scenes.

The movie pauses.

Adjusts the dividing point with more precision after the dividing point has been selected with **[PAUSE]**.

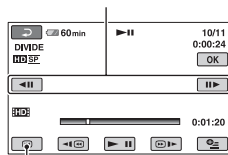

Returns to the beginning of the selected movie.

Play and pause toggles as you press



---

**5** Touch **OK** → **[YES]** → **OK**.

---

## Notes

- You cannot restore movies once they are divided.
- Do not remove the battery pack or the AC Adaptor, or eject the “Memory Stick PRO Duo” from your camcorder while dividing the movie. It may damage the “Memory Stick PRO Duo.”
- If the divided original movie is included in the Playlist, the movie in the Playlist will also be divided.
- A slight difference may occur from the point where you touch **[PAUSE]** and the actual dividing point, as your camcorder selects the dividing point based on about half-second increments.
- Movies in a Playlist may not be divided because of the limitation of the movie numbers that can be added in a Playlist. In this case, first erase unwanted movies from the Playlist before dividing movies.

# Creating the Playlist

A Playlist is a list showing thumbnails of the movies that you have selected. The original scenes are not changed even if you edit or delete the scenes in the Playlist.

## Notes

- During Easy Handycam operation, you cannot add movies to the Playlist or edit the Playlist. Cancel Easy Handycam operation (p. 24).
- Images with HD (high definition) image quality and SD (standard definition) image quality are added to an individual Playlist.

## Tips

- The images recorded by this camcorder and stored onto the “Memory Stick PRO Duo” are called “original.”

---


**1** Touch **HOME** → **(OTHERS)** → **[PLAYLIST EDIT]**.

---

**2** Touch **[ $\overline{\text{HD}}$  ADD]** or **[ $\overline{\text{SD}}$  ADD]**.

---

**3** Touch the image to be added to the Playlist.

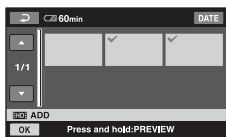

The selected image is marked with **✓**. Press and hold the image on the LCD screen to confirm the image.

Touch **[ $\overline{\text{PREV}}$ ]** to return to the previous screen.


---

**4** Touch **OK** → **[YES]** → **OK**.

---

## To add all the movies recorded on the same day at one time

- ① Touch **HOME** → **(OTHERS)** → **[PLAYLIST EDIT]**.
- ② Touch **[ $\overline{\text{HD}}$  ADD by date]** or **[ $\overline{\text{SD}}$  ADD by date]**.  
The recording dates of movies are displayed on the screen.

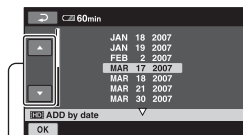

Previous/Next Date

- ③ Touch **▲/▼** to select the recording date of the desired movie.
- ④ Touch **OK** while the selected recording date is highlighted.  
The movies recorded on the selected date are displayed on the screen. Touch the image on the LCD screen to confirm the movie.  
Touch **[ $\overline{\text{PREV}}$ ]** to return to the previous screen.
- ⑤ Touch **OK** → **[YES]** → **OK**.

## Notes

- Do not remove the battery pack or the AC Adaptor, or eject the “Memory Stick PRO Duo” from your camcorder while editing the Playlist. It may damage the “Memory Stick PRO Duo.”
- You cannot add still images to a Playlist.

## Tips

- You can add a maximum of 999 movies with HD (high definition) image quality, or 99 movies with SD (standard definition) image quality to the Playlist.
- You can add a movie also in the following steps:
  - On the playback screen, touch **(OPTION)** → **tab** → **[ $\overline{\text{HD}}$  ADD]/[ $\overline{\text{SD}}$  ADD]**.
  - On the INDEX screen, touch **(OPTION)** → **tab** → **[ $\overline{\text{HD}}$  ADD]/[ $\overline{\text{SD}}$  ADD]/[ $\overline{\text{HD}}$  ADD by date]/[ $\overline{\text{SD}}$  ADD by date]**.
- You can copy the Playlist to a disc as it is, by using the supplied software.

## Playing the Playlist

- 1 Touch **HOME** → **VIEW IMAGES** → **[PLAYLIST]**.

The Playlist screen appears.



- 2 Touch the image from which you want to playback.

The Playlist is played back from the selected image to the end, then the screen returns to the Playlist screen.

### Tips

- You can play back movies of another image quality by touching **OPTION** → **tab** → **[HDD/HSD] INDEX SET**.

## To erase unnecessary images from the Playlist

- 1 Touch **HOME** → **(OTHERS)** → **[PLAYLIST EDIT]**.
- 2 Touch **[HDD] ERASE** or **[HSD] ERASE**.  
To erase all the images from the Playlist, touch **[HDD] ERASE ALL**/**[HSD] ERASE ALL** → **[YES]** → **[OK]**.
- 3 Select the scene to be deleted from the Playlist.



The selected scene is marked with ✓.

Press and hold the image on the LCD screen to confirm the image.

Touch **RETURN** to return to the previous screen.

- 4 Touch **OK** → **[YES]** → **[OK]**.

### Tips

- The original scenes are not changed even if you erase the scenes from the Playlist.

## To change the order within the Playlist

- 1 Touch **HOME** → **(OTHERS)** → **[PLAYLIST EDIT]**.
- 2 Touch **[HDD] MOVE** or **[HSD] MOVE**.
- 3 Select the image to be moved.




The selected scene is marked with ✓.

Press and hold the image on the LCD screen to confirm the image.

Touch **RETURN** to return to the previous screen.

- 4 Touch **OK**.
- 5 Select the destination with **LEFT**/**RIGHT**.

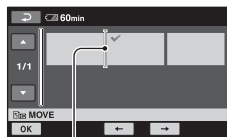

Destination bar

- 6 Touch **OK** → **[YES]** → **[OK]**.

### Tips

- When you select multiple images, the images are moved following the order appearing in the Playlist.

# Dubbing to VCR or DVD/HDD recorders


You can dub images played back on your camcorder to other recording devices, such as VCRs or DVD/HDD recorders. This is a convenient way of distributing dubbed discs. Connect the device in either of the following ways.

Connect your camcorder to the wall outlet using the supplied AC Adaptor for this operation (p. 16). Refer also to the instruction manuals supplied with the devices to be connected.

## Notes

- **Movies recorded with HD (high definition) image quality will be dubbed with SD (standard definition) image quality.**
- To copy a movie recorded with HD (high definition) image quality, install the application software (supplied) on your computer, and copy the images to a disc in the computer.
- Since dubbing is performed via analog data transfer, the image quality may deteriorate.

### A/V OUT jack

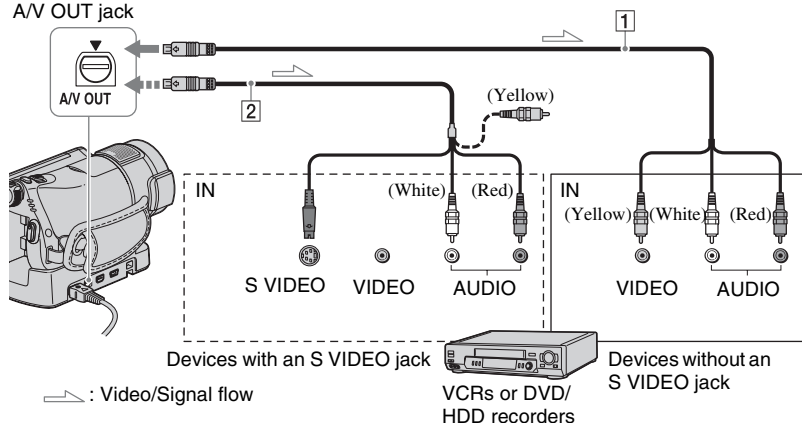

### 1 A/V connecting cable (supplied)

The Handycam Station and your camcorder are both equipped with A/V OUT jacks (p. 100, 101). Connect the A/V connecting cable either to the Handycam Station or to your camcorder, depending on your setup.

### 2 A/V connecting cable with S VIDEO (optional)

When connecting to another device via the S VIDEO jack, by using an A/V connecting cable with an S VIDEO cable (optional), higher quality images can be produced than with an A/V connecting cable. Connect the white and red plug (left/right audio) and the S VIDEO plug (S VIDEO channel) of the

A/V connecting cable with an S VIDEO cable (optional). The yellow plug connection is not necessary. S VIDEO connection only will not output audio.

## Notes

- You cannot dub to recorders connected with an HDMI cable.
- To hide the screen indicators (such as a counter, etc.) on the screen of the monitor device connected, touch **HOME** → **SETTINGS** → **[OUTPUT SETTINGS]** → **[DISP OUTPUT]** → **[LCD PANEL]** (the default setting) (p. 68).
- To record the date/time and camera settings data, display them on the screen (p. 65).
- When you are connecting your camcorder to a monaural device, connect the yellow plug of the

A/V connecting cable to the video input jack, and the red (right channel) or the white (left channel) plug to the audio input jack on the device.

---

## 1 Turn on your camcorder, and press (VIEW IMAGES).

Set [TV TYPE] according to the display device (p. 67).

---

## 2 Insert the recording media in the recording device.

If your recording device has an input selector, set it to the input mode.

---

## 3 Connect your camcorder to the recording device (VCR or DVD/HDD recorder) with the A/V connecting cable (supplied) or an A/V connecting cable with S VIDEO (optional) .

Connect your camcorder to the input jacks of the recording device.

---

## 4 Start the playback on your camcorder, and record it on the recording device.

Refer to the instruction manuals supplied with your recording device for details.

---

## 5 When dubbing is finished, stop the recording device, and then your camcorder.

---

# Printing recorded images (PictBridge compliant printer)

You can print out still images using a PictBridge compliant printer, without connecting the camcorder to a computer.

## PictBridge

Connect your camcorder to the AC Adaptor to obtain power from the wall outlet (p. 16). Turn on the printer.

Insert the “Memory Stick PRO Duo” containing the still images you want to print into your camcorder.

---

## 1 Connect the Handycam Station to the wall outlet using the supplied AC Adaptor.

---

## 2 Set the camcorder onto the Handycam Station securely, then turn on your camcorder.


---


## 3 Connect the (USB) jack of the Handycam Station to the printer using the USB cable (p. 101).

[USB SELECT] appears on the screen automatically.

---


## 4 Touch [PRINT].

When connection is complete,  (PictBridge connecting) appears on the screen.

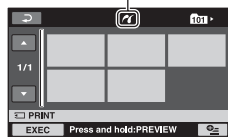


You can select a still image on the screen.

## 5 Touch the still image to be printed.

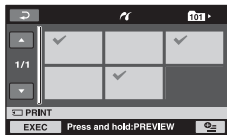

The selected image is marked with ✓.

Press and hold the image on the LCD screen to confirm the image.

Touch  to return to the previous screen.

## 6 Touch (OPTION), set the following options, then touch .

[COPIES]: Set number of copies of a still image to be printed. You can set up to 20 copies.



[DATE/TIME]: Select [DATE], [DAY&TIME], or [OFF] (no date/time printed).

[SIZE]: Select the paper size.

 

If you do not change the setting, go to step 7.

## 7 Touch [EXEC] → [YES] → .


The image selection screen appears again.

- Do not attempt the following operations when  is on the screen. The operations may not be performed properly.
  - Operate the POWER switch.
  - Press  (VIEW IMAGES).
  - Remove your camcorder from the Handycam Station.
  - Disconnect the USB cable from the Handycam Station or the printer.
- If the printer stops working, disconnect the USB cable, turn the printer off and on again, and restart the operation from the beginning.
- You can select only the paper sizes that the printer can print.
- On some printer models, the top, bottom, right, and left edges of images may be trimmed. If you print a still image recorded in a 16:9 (wide) ratio, the left and right ends of the image may be trimmed widely.
- Some printer models may not support the date printing function. Refer to your printer's instruction manual for details.
- The images described below may not be printed out:
  - The image edited by a computer
  - The image recorded by other devices
  - The image file exceeding 3 MB
  - The image file larger than 2,848 × 2,136 pixels

### Tips

- PictBridge is an industry standard established by the Camera & Imaging Products Association (CIPA). You can print still images without using a computer by connecting a printer directly to a digital video camera or digital still camera, regardless of model or manufacturer.
- You can print a still image on the still image playback screen by touching  (OPTION) →  tab → [PRINT].

## To finish printing


Touch  on the image selection screen.


### Notes

- We can guarantee the operation of only models that are PictBridge compatible.
- Refer also to the instruction manual of the printer to be used.

## (MANAGE MEMORY STICK) category

This category enables you to use the “Memory Stick PRO Duo” for various purposes.

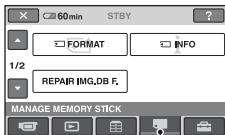

 (MANAGE MEMORY STICK) category

### Item list

#### FORMAT

You can format the “Memory Stick PRO Duo” and recover the recordable free space (p. 55).

#### INFO

You can display the “Memory Stick PRO Duo” capacity (p. 55).


#### REPAIR IMG.DB F.

You can repair the management information on the “Memory Stick PRO Duo” (p. 56).

## Formatting the “Memory Stick PRO Duo”

You can delete all the images on the “Memory Stick PRO Duo” to recover recordable free space. Connect your camcorder to the wall outlet using the supplied AC Adaptor for this operation (p. 16).


### Notes

- To avoid the loss of important images, you should save them (p. 45) before performing [ FORMAT].

### 1 Turn on your camcorder.

### 2 Insert the “Memory Stick PRO Duo” to be formatted into your camcorder.

### 3 Touch (HOME) → (MANAGE MEMORY STICK) → [ FORMAT].

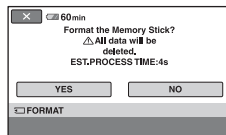

### 4 Touch [YES] → [YES].

### 5 When [Completed.] appears, touch .

### Notes




- Even the still images protected with another device against accidental deletion are also deleted.


- Do not attempt the following operations when [Executing...] is on the screen:
  - Operate the POWER switch or buttons
  - Eject the “Memory Stick PRO Duo”
- While [FORMAT] is activated, do not disconnect the AC Adaptor.

## Checking the “Memory Stick PRO Duo” information

You can display the “Memory Stick PRO Duo” information, and check the free space on the “Memory Stick PRO Duo.”

**1** Turn on your camcorder.

**2** Touch  (HOME) →  (MANAGE MEMORY STICK) →  [INFO].

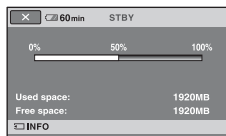

### To turn off the display

Touch .

#### Notes

- The calculation for space available on a “Memory Stick PRO Duo” is  $1\text{MB} = 1,048,576$  bytes. The fractions less than 1 MB are discarded when the “Memory Stick PRO Duo” space is displayed. Therefore, the displayed size of the total space available on a “Memory Stick PRO Duo,” both free and used, will be slightly smaller than the advertised size of the “Memory Stick PRO Duo.”
- Since there is a management file area, the used space is not displayed as 0 MB even if you perform [FORMAT] (p. 54).

# Repairing the image database file

This function checks the management information and the consistency of movies in the “Memory Stick PRO Duo,” and repairs any inconsistencies found.

## Notes

- Do not apply mechanical shock or vibration to the camcorder during this operation.
- Do not disconnect the AC Adaptor or remove the battery pack, or eject the “Memory Stick PRO Duo” during this operation.


---

## 1 Turn on your camcorder.

---

## 2 Touch **↑** (HOME) → **⏏** (MANAGE MEMORY STICK) → [REPAIR IMG.DB F.].


The [REPAIR IMG.DB F.] screen appears.

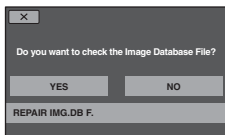

---

## 3 Touch [YES].

Your camcorder will check the management file.

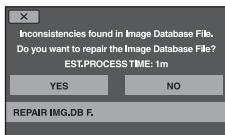

If no inconsistency was found, touch **[OK]** to finish the operation.

---

## 4 Touch [YES].

---

## 5 When [Completed.] appears, touch **[OK]**.


---

# What you can do with the (SETTINGS) category of the HOME MENU

You can change the recording functions and the operating settings for your convenience.


## Using the HOME MENU

- 1 Turn on your camcorder, then press  (HOME).


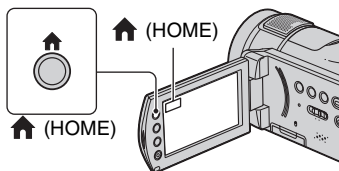



 (SETTINGS) category

- 2 Touch  (SETTINGS).


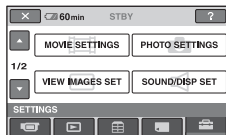



- 3 Touch the desired setup item.

  If the item is not on the screen, touch  /  to change the page.

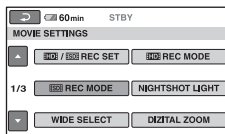

- 4 Touch the desired item.

  If the item is not on the screen, touch  /  to change the page.

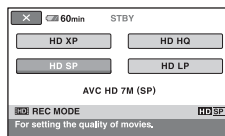

- 5 Change the setting, then touch .

## List of the (SETTINGS) category items

### MOVIE SETTINGS (p. 59)

Items	Page
/SD REC SET* <sup>1</sup>	59
REC MODE	59
REC MODE	60
NIGHTSHOT LIGHT	60
WIDE SELECT	60
DIGITAL ZOOM	60
STEADYSHOT	61
AUTO SLW SHUTTR	61
X.V.COLOR	61
GUIDEFAME	61
ZEBRA	61
REMAINING	61
FLASH LEVEL	62
REDEYE REDUC	62
INDEX SET* <sup>1</sup>	62

### PHOTO SETTINGS (p. 63)

Items	Page
IMAGE SIZE* <sup>1</sup>	63
QUALITY	63
FILE NO.	64
NIGHTSHOT LIGHT	60
STEADYSHOT	61
GUIDEFAME	61
ZEBRA	61
FLASH LEVEL	62
REDEYE REDUC	62

### VIEW IMAGES SET (p. 65)

Items	Page
/SD INDEX SET* <sup>1</sup>	65
DATA CODE	65
DISPLAY	66
INTERVAL SET* <sup>1</sup>	66

### SOUND/DISP SET\*<sup>2</sup> (p. 66)

Items	Page
VOLUME* <sup>1</sup>	66
BEEP* <sup>1</sup>	66
LCD BRIGHT	66
LCD BL LEVEL	67
LCD COLOR	67

### OUTPUT SETTINGS (p. 67)

Items	Page
TV TYPE	67
DISP OUTPUT	68
COMPONENT	68

### CLOCK/ LANG (p. 68)

Items	Page
CLOCK SET* <sup>1</sup>	20
AREA SET	68
DST SET/SUMMERTIME	68
LANGUAGE SET* <sup>1</sup>	68

# MOVIE SETTINGS

(Items for recording movies)

## GENERAL SET (p. 69)

Items	Page
DEMO MODE	69
REC LAMP	69
CALIBRATION	94
A.SHUT OFF	69
REMOTE CTRL	69

\*1 You can set these items also during Easy Handycam operation (p. 24).

\*2 The menu name is changed to [SOUND SETTINGS] during Easy Handycam operation.



Touch ①, then ②.

If the item is not on the screen, touch ▲/▼ to change the page.

## How to set

🏠 (HOME MENU) → page 57

⊕ (OPTION MENU) → page 70

The default settings are marked with ▶.



You can select a recording quality to record a movie.

### ▶ HD: HD QUALITY

Records with HD (high definition) image quality.

### SD: SD QUALITY

Records with SD (standard definition) image quality.



You can select a recording mode to record a movie with HD (high definition) image quality from 4 levels.

### HD XP

Records in the highest quality mode (AVC HD 15M (XP)).

### HD HQ

Records in high quality mode (AVC HD 9M (HQ)).

### ▶ HD SP

Records in standard quality mode (AVC HD 7M (SP)).

## HD LP

Increases the recording time (Long Play) (AVC HD 5M (LP)).

### 🔊 Notes

- If you record in the LP mode, details in scenes with quick movements may appear rough when you play back the movie.

### 💡 Tips

- See page 10 for the expected recording time of each recording mode.

## REC MODE



You can select a recording mode to record a movie with SD (standard definition) image quality from 3 levels.

### SD HQ

Records in high quality mode (SD 9M (HQ)).

### ▶ SD SP

Records in standard quality mode (SD 6M (SP)).

### SD LP

Increases the recording time (Long Play) (SD 3M (LP)).

### 🔊 Notes

- If you record in the LP mode, the quality of scenes may be degraded, or scenes with quick movements may appear with a block noise when you play back the movie.

### 💡 Tips

- See page 10 for the expected recording time of each recording mode.

## NIGHTSHOT LIGHT



When using either the NightShot (p. 32) or [SUPER NIGHTSHOT] (p. 75) function to record, you can record clearer images by setting [NIGHTSHOT LIGHT], which emits infrared light (invisible), to [ON] (the default setting).

### 🔊 Notes

- Do not cover the infrared port with your fingers or other objects (p. 32).
- Remove the conversion lens (optional).
- The maximum shooting distance using [NIGHTSHOT LIGHT] is about 3 m (10 feet).

## WIDE SELECT



When recording with SD (standard definition) image quality, you can select the aspect ratio according to the TV connected. Refer also to the instruction manuals supplied with your TV.

### ▶ 16:9 WIDE

Records images to the full screen on a 16:9 (wide) TV screen.

### 4:3 (4:3)

Records images to the full screen on a 4:3 TV screen.


### 🔊 Notes

- Set [TV TYPE] correctly according to the TV connected for playback (p. 67).

## DIGITAL ZOOM



You can select the maximum zoom level in case you want to zoom to a level greater than 10 × (the default setting) during recording. Note that the image quality decreases when you use the digital zoom.

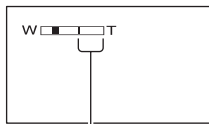

The right side of the bar shows the digital zooming factor. The zooming zone appears when you select the zooming level.

### ▶ OFF

Up to 10 × zoom is performed optically.

## 20 ×

Up to 10 × zoom is performed optically, and after that, up to 20 × zoom is performed digitally.

## STEADYSHOT



You can compensate for camera shake (the default setting is [ON]). Set [STEADYSHOT] to [OFF] ( ) when using a tripod (optional), then the image becomes natural.

## AUTO SLW SHUTTR (Auto Slow Shutter)



When recording in dark places, the shutter speed is automatically reduced to 1/30 second (The default setting is [ON]).

## X.V.COLOR



When recording, set to [ON] to capture wider range of colors. Various colors such as the brilliant color of flowers and turquoise blue of the sea can be more faithfully reproduced.

### ⚙ Notes

- Set [X.V.COLOR] to [ON] only when the recorded content will be played back on an x.v.Color-compliant TV. Otherwise, set to [OFF] (the default setting).
- If the movie recorded with this function [ON] is played back on a non-x.v.Color-compliant TV, the color may not be reproduced correctly.
- [X.V.COLOR] cannot be set to [ON]:
  - while recording with SD (standard definition) image quality
  - while recording a movie

## GUIDEFAME



You can display the frame and check that the subject is horizontal or vertical by setting [GUIDEFAME] to [ON]. The frame is not recorded. Press DISP/BATT INFO to make the frame disappear (The default setting is [OFF]).

### 💡 Tips

- Positioning the subject at the cross point of the guide frame makes a balanced composition.

## ZEBRA



Diagonal stripes appear in portions of the screen where brightness is at a preset level. This is useful as a guide when adjusting the brightness. When you change the default setting, is displayed. The zebra pattern is not recorded.

### ▶ OFF

The zebra pattern is not displayed.

### 70

The zebra pattern appears at a screen brightness level of about 70 IRE.

### 100

The zebra pattern appears at a screen brightness level of about 100 IRE or higher.

### ⚙ Notes

- Portions of the screen where brightness is about 100 IRE or above may appear overexposed.

### 💡 Tips

- IRE represents the unit of images brightness amplitude.

## REMAINING



### ▶ AUTO

Displays the remaining recording time of movies for about 8 seconds in situations such as those described below.

- When your camcorder recognizes the remaining “Memory Stick PRO Duo” capacity with the POWER switch set to (Movie).
- When you press DISP/BATT INFO to switch the indicator from off to on with the POWER switch set to (Movie).
- When you select the movie recording mode on the HOME MENU.

## ON

Always displays the remaining “Memory Stick PRO Duo” indicator.

### 🔌 Notes

- When the remaining recordable time for movies is less than 5 minutes, the indicator stays on the screen.

## FLASH LEVEL

You can set this function when you use the built-in flash, or an external flash (optional) that is compatible with your camcorder.

### HIGH(⚡+)

Makes the flash level higher.

### ▶ NORMAL(⚡)

### LOW(⚡-)

Makes the flash level lower.

## REDEYE REDUC

You can set this function when you use the built-in flash, or an external flash (optional) that is compatible with your camcorder.

You can prevent redden by activating the flash before recording.

Set [REDEYE REDUC] to [ON], then press ⚡ (flash) (p. 31) repeatedly to select a setting.

👁️ (Auto redden reduction): Pre-flashes to reduce redden before the flash automatically flashes when there is insufficient ambient light.



👁️ ⚡ (Forced redden reduction): Always uses the flash and the redden reducing pre-flash.



👁️ (No flash): Records without flash.


### 🔌 Notes

- The redden reduction may not produce the desired effect due to individual differences and other conditions.


## INDEX SET


The default setting is [ON], allowing you to detect faces during movie recording.

### Face icons and their meanings

: When the setting is [ON].

: When the first face is detected.

: The icon flashes when a face is detected.

: Faces cannot be detected.\*

\* Your camcorder can detect up to about 100 faces for each scene.

To play back scenes using Face Index, see page 37.

# PHOTO SETTINGS

(Items for recording still images)



Touch ①, then ②.

If the item is not on the screen, touch ▲/▼ to change the page.

## How to set

🏠 (HOME MENU) → page 57

⊕ (OPTION MENU) → page 70

The default settings are marked with ▶.

### IMAGE SIZE

#### ▶ 6.1M (L6.1M)

Records still images clearly.

#### ▶ 4.6M (L4.6M)

Records still images clearly in the 16:9 (wide) ratio.

#### ▶ 3.1M (L3.1M)

Allows you to record more still images in relatively clear quality.

#### ▶ VGA (0.3M) (LVGA)

Allows the maximum number of still images to be recorded.

### Notes

- [IMAGE SIZE] can be set only during recording standby.

### QUALITY

#### ▶ FINE (FINE)

Records still images at the fine image quality level.

#### ▶ STANDARD (STD)

Records still images at the standard image quality level.

## Capacity of the “Memory Stick PRO Duo” (MB) and the number of recordable images

When the POWER switch is (Still)

	6.1M 2848 × 2136 L6.1M	4.6M 2848 × 1602 L4.6M	3.1M 2048 × 1536 L3.1M	VGA (0.3M) 640 × 480 LVGA
512MB	145 375	195 495	280 730	2750 6900
1GB	305 770	405 1000	580 1500	5700 14000
2GB	640 1600	850 2100	1200 3100	11500 29500
4GB	1200 3100	1650 4150	2350 6100	23000 58000
8GB	2500 6400	3350 8400	4800 12000	47000 115000

## When the POWER switch is (Movie)\*

	4.6M 2848 × 1602 L4.6M	3.4M 2136 × 1602 L3.4M
512MB	195 495	260 660
1GB	405 1000	540 1350
2GB	850 2100	1100 2800
4GB	1650 4150	2150 5500
8GB	3350 8400	4450 11000

\* The image size is fixed depending on the aspect ratio of the image recorded:

- [4.6M] with HD (high definition) image quality
- [4.6M] in the aspect ratio 16:9 with SD (standard definition) image quality

- [3.4M] in the aspect ratio 4:3 with SD (standard definition) image quality

#### **Notes**

- All numbers measured at the following setting:  
Top: [FINE] is selected for image quality.  
Bottom: [STANDARD] is selected for image quality.
- All numbers measured when using a “Memory Stick PRO Duo” made by Sony Corporation. The number of still images and the length of time for movies may vary depending on the shooting conditions and the recording mediums.
- The unique pixel array of Sony’s ClearVid CMOS sensor and image processing system (new Enhanced Imaging Processor) allows for still image resolution equivalent to the sizes described.
- For recording still images, you can use a “Memory Stick PRO Duo” of a capacity smaller than 256 MB.

#### **FILE NO.**



#### **► SERIES**

Assigns file numbers in sequence even if the “Memory Stick PRO Duo” is replaced with another one. The file number is reset when a new folder is created or the recording folder is replaced with another.

#### **RESET**

Assigns file numbers in sequence, following the largest file number existing on the current recording medium.

#### **NIGHTSHOT LIGHT**



See page 60.

#### **STEADYSHOT**



See page 61.

#### **GUIDEFAME**



See page 61.

#### **ZEBRA**



See page 61.

#### **FLASH LEVEL**



See page 62.

#### **REDEYE REDUC**



See page 62.

# VIEW IMAGES SET

(Items to customize the display)



Touch ①, then ②.

If the item is not on the screen, touch ▲/▼ to change the page.

## How to set

🏠 (HOME MENU) → page 57

⊕ (OPTION MENU) → page 70

The default settings are marked with ▶.



You can select the image quality of the movie you play back.

### ▶ HD HD QUALITY

Plays back movies recorded with HD (high definition) image quality.

### ▶ SD SD QUALITY

Plays back movies recorded with SD (standard definition) image quality.



During playback, displays the information (data code) recorded automatically at the time of recording.

### ▶ OFF

Data code is not displayed.


## DATE/TIME

Displays the date and time.

## CAMERA DATA (below)

Displays camera setting data.

## DATE/TIME

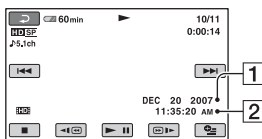


1 Date


2 Time

## CAMERA DATA

Movie

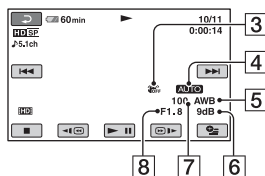

Still image

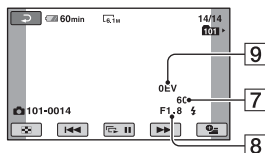

3 SteadyShot off

4 Brightness

5 White balance

6 Gain

7 Shutter speed

8 Aperture value

9 Exposure

## 💡 Tips

- ⚡ appears for an image recorded using a flash.
- The data code is displayed on the TV screen if you connect your camcorder to a TV.
- The indicator toggles through the following sequences as you press DATA CODE on the Remote Commander: [DATE/TIME] → [CAMERA DATA] → [OFF] (no indication).

- Depending on the “Memory Stick PRO Duo” condition, bars [---:--] appear.

## DISPLAY

You can select the number of thumbnails that appear on the VISUAL INDEX screen.

### ► ZOOM LINK

Change the number of thumbnails (6 or 12) with the power zoom lever on your camcorder.\*

### 6IMAGES

Displays thumbnails of 6 images.

### 12IMAGES

Displays thumbnails of 12 images.

\* You can also operate with the zoom buttons beside the LCD screen or on the Remote Commander.


## INTERVAL SET

You can select the duration of each thumbnail from 3, 6, 12 seconds, 1 or 5 minutes.

The default setting is [3 sec].

# SOUND/DISP SET

(Items to adjust the sound and the screen)

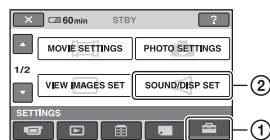


Touch ①, then ②.

If the item is not on the screen, touch ▲/▼ to change the page.



## How to set

  (HOME MENU) → page 57

 (OPTION MENU) → page 70

The default settings are marked with ►.

## VOLUME

Touch  /  to adjust the volume (p. 36).

## BEEP

 
### ► ON

A melody sounds when you start/stop recording, or operate the touch panel.

### OFF

Cancels the melody.

## LCD BRIGHT

You can adjust the brightness of the LCD screen with  / .

① Adjust the brightness with  / .

② Touch .

## Tips

- This adjustment does not affect the recorded images in any way.

## LCD BL LEVEL



You can adjust the brightness of the LCD screen's backlight.

► **NORMAL**

Standard brightness.

**BRIGHT**

Brightens the LCD screen.

**Notes**

- When you connect your camcorder to outside power sources, [BRIGHT] is automatically selected for the setting.
- When you select [BRIGHT], battery life is slightly reduced during recording.
- If you open the LCD panel 180 degrees to face the screen outside and close the LCD panel to the camcorder body, the setting becomes [NORMAL] automatically.

**Tips**

- This adjustment does not affect the recorded images in any way.

## LCD COLOR



You can adjust the color of the LCD screen with / .




Low intensity High intensity

**Tips**

- This adjustment does not affect the recorded images in any way.

# OUTPUT SETTINGS

(Items for when connecting other devices)

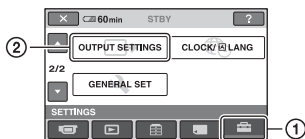

Touch ①, then ②.

If the item is not on the screen, touch ▲/▼ to change the page.

**How to set**

(HOME MENU) → page 57

(OPTION MENU) → page 70

The default settings are marked with ►.

## TV TYPE



You need to convert the signal depending on the TV connected when playing back the image. The recorded images are played back as following illustrations.

► **16:9**

Select this to view your images on a 16:9 (wide) TV.

16:9 (wide) images



4:3 images

**4:3**

Select this to view your images on a 4:3 standard TV.

16:9 (wide) images



4:3 images

 **Notes**

- Aspect ratio of the image recorded with HD (high definition) image quality is 16:9.

- When you connect your camcorder to a TV compatible with the ID-1/ID-2 system and play back a disc, set [TV TYPE] to [16:9]. The TV automatically switches the aspect ratio according to the playback picture. Refer also to the manual supplied with your TV.

## DISP OUTPUT

### ▶ LCD PANEL

Shows displays such as the time code on the LCD screen.

### V-OUT/PANEL

Shows displays such as the time code on the TV screen and the LCD screen.

## COMPONENT

Select [COMPONENT] when connecting your camcorder to a TV with the component input jack.

### 480i

Select when connecting your camcorder to a TV with the component input jack.

### ▶ 1080i/480i

Select when connecting your camcorder to a TV that has the component input jack and is capable of displaying the 1080i signal.

# CLOCK/ LANG

(Items to set clock and language)




Touch ①, then ②.

If the item is not on the screen, touch ▲/▼ to change the page.

## How to set

 (HOME MENU) → page 57

 (OPTION MENU) → page 70

## CLOCK SET

See page 20.

## AREA SET

You can adjust a time difference without stopping the clock.

Set your local area using ▲/▼ when using your camcorder in other time zones.

Refer to the world time difference on page 88.

## DST SET/SUMMERTIME

You can change this setting without stopping the clock.

Set to [ON] to move the time forward 1 hour.

## LANGUAGE SET


You can select the language to be used on the LCD screen.

### Tips

- Your camcorder offers [ENG[SIMP]] (simplified English) for when you cannot find your native tongue among the options.

# GENERAL SET

(Other setup items)

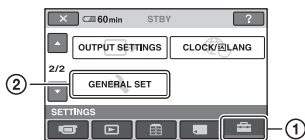

Touch ①, then ②.

If the item is not on the screen, touch ▲/▼ to change the page.


## How to set

🏠 (HOME MENU) → page 57





⊕ (OPTION MENU) → page 70

The default settings are marked with ▶.

## DEMO MODE

The default setting is [ON], allowing you to view the demonstration in about 10 minutes, after you slide the POWER switch to  (Movie).

### Tips

- The demonstration will be suspended in situations such as those described below.
  - When you press START/STOP or PHOTO.
  - When you touch the screen during the demonstration (The demonstration starts again after about 10 minutes).
  - When you remove or insert a “Memory Stick PRO Duo.”
  - When you set the POWER switch to  (Still).
  - When you press  (HOME),  (VIEW IMAGES), or  (Film Roll Index).

## REC LAMP (Recording lamp)

The camera recording lamp on the front of your camcorder lights up, as the default setting is [ON].

## CALIBRATION

See page 94.

## A.SHUT OFF (Auto shut off)

### ▶ 5 min

The camcorder is automatically turned off when you do not operate your camcorder for more than approximately 5 minutes.

### NEVER

The camcorder is not automatically turned off.

### Notes

- When you connect your camcorder to a wall outlet, [A.SHUT OFF] is automatically set to [NEVER].


## REMOTE CTRL (Remote control)

The default setting is [ON], allowing you to use the supplied Remote Commander (p. 102).

### Tips


- Set to [OFF] to prevent your camcorder from responding to a command sent by another VCR remote control unit.

# Activating functions using the OPTION MENU


The  OPTION MENU appears just like the pop-up window that appears when you right-click the mouse on a computer. Various available functions are displayed.

## Using the OPTION MENU

- 1 While using your camcorder, touch  (OPTION) on the screen.

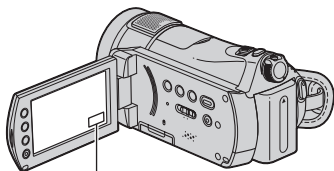


 (OPTION)

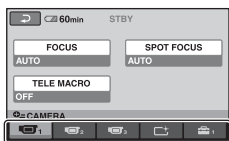

Tab

- 2 Touch the desired item.

If you cannot find the desired item, touch another tab to change the page.

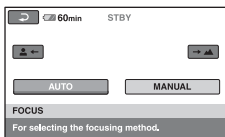


- 3 Change the setting, then touch .










## When the item you want is not on the screen

Touch another tab. If you cannot find the item anywhere, the function does not work under the current situation.

## Notes














- The tabs and items that appear on the screen depend on the recording/playback status of your camcorder at the time.
- Some items appear without a tab.
- The  OPTION MENU cannot be used during Easy Handycam operation.

## Recording items on the OPTION MENU

Items	 *1	Page
 tab		
FOCUS	–	72
SPOT FOCUS	–	72
TELE MACRO	–	72
EXPOSURE	–	73
SPOT METER	–	73
SCENE SELECTION	–	73
WHITE BAL.	–	74
COLOR SLOW SHTR	–	75
SUPER NIGHTSHOT	–	75
 tab		
FADER	–	75
D.EFFECT	–	75
PICT.EFFECT	–	76
 tab		
 REC SET	○	59
 REC MODE	○	59
 REC MODE	○	60
MICREF LEVEL	–	76
 IMAGE SIZE	○	63
 QUALITY	○	63
SELF-TIMER	–	76
TIMING	–	33
RECORD SOUND	–	33

\* Items that are included also in the HOME MENU.


## Viewing items on the OPTION MENU


Items	 *1	Page
 tab		
DELETE	○	46
DELETE by date	–	47
DELETE ALL	○	47
 tab		
DIVIDE	○	48
ERASE	○	50
ERASE ALL	○	50
MOVE	○	50
-- (The tab depends on the situation/No tab)		
 ADD*2	○	49
 ADD*2	○	49
 ADD by date*2	○	49
 ADD by date*2	○	49
PRINT	○	52
SLIDE SHOW	–	38
VOLUME	○	66
DATA CODE	○	65
SLIDE SHOW SET	–	38
 ADD	○	49
 ADD	○	49
 ADD by date	○	49
 ADD by date	○	49
 INDEX SET	○	65
COPIES	–	52
DATE/TIME	–	52
SIZE	–	52
 INTERVAL SET	○	66

\*1 Items that are included also in the HOME MENU.

\*2 Items that are included in the HOME MENU by a different name.

# Functions set in the OPTION MENU




 
 
Items you can set only on the  OPTION MENU will be described below.

The default settings are marked with .

## FOCUS

You can adjust the focus manually. You can select this function also when you want to focus on a certain subject intentionally.



- 1 Touch [MANUAL].  
 appears.
- 2 Touch  (focusing on close subjects)/  
 (focusing on distant subjects) to sharpen the focus.  appears when the focus cannot be adjusted any closer, and  appears when the focus cannot be adjusted farther away.
- 3 Touch [OK].

To adjust the focus automatically, touch [AUTO] → [OK] in step 1.

### Notes


- The minimum possible distance between camcorder and subject while maintaining sharp focus is about 1 cm (about 13/32 in.) for wide angle and about 80 cm (about 2 5/8 feet) for telephoto.


### Tips

- It is easier to focus on the subject by moving the power zoom lever towards T (telephoto) to adjust the focus, then towards W (wide angle) to adjust the zoom for recording. When you want to record a subject at close range, move the power zoom lever to W (wide angle), then adjust the focus.
- The focal distance information (distance at which the subject is focused on, if it is dark and focus adjustment is difficult) appears for a few seconds in the following cases (This information will not display correctly if an optional conversion lens is being used).
  - when the focus mode is switched from automatic to manual
  - when you set focus manually

## SPOT FOCUS

You can select and adjust the focal point to aim it at a subject not located at the center of the screen.

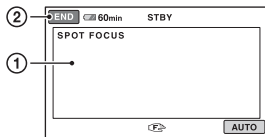

- 1 Touch the subject on the screen.  
 appears.
- 2 Touch [END].


To adjust the focus automatically, touch [AUTO] → [END] in step 1.

### Notes

- If you set [SPOT FOCUS], [FOCUS] is automatically set to [MANUAL].

## TELE MACRO

This is useful to shoot small subjects, such as flowers or insects. You can blur out backgrounds and the subject stands out clearer.

When you set [TELE MACRO] to [ON] () , the zoom (p. 30) moves to the top of the T (telephoto) side automatically and allows recording subjects at a close distance as down to about 45 cm (17 3/4 in.).



To cancel, touch [OFF], or zoom to wide-angle (W side).


### Notes

- When recording a distant subject, focusing may be difficult and can take some time.
- Adjust the focus manually ([FOCUS], p. 72) when it is hard to focus automatically.

## EXPOSURE



You can fix the brightness of a picture manually. Adjust the brightness when the subject is too bright or too dark.

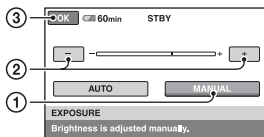


- ① Touch [MANUAL].  
————— appears.
- ② Adjust the exposure by touching [—]/ [+].
- ③ Touch [OK].

To return the setting to automatic exposure, touch [AUTO] → [OK] in step ①.

## SPOT METER (Flexible spot meter)



You can adjust and fix the exposure to the subject, so that it is recorded in suitable brightness even when there is strong contrast between the subject and the background, such as subjects in the spotlight on stage.

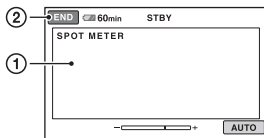

- ① Touch the point where you want to fix and adjust the exposure on the screen.  
————— appears.
- ② Touch [END].

To return the setting to automatic exposure, touch [AUTO] → [END] in step ①.

### Notes

- If you set [SPOT METER], [EXPOSURE] is automatically set to [MANUAL].

## SCENE SELECTION



You can record images effectively in various situations.

### ▶ AUTO

Select to automatically record images effectively without the [SCENE SELECTION] function.

### TWILIGHT\* (☾)

Select to maintain the darkening atmosphere of the distant surroundings in twilight scenes.



### TWILIGHT PORT. (👤)

Select to take subject in foreground against night view.



### CANDLE (🕯)

Select to maintain the dim atmosphere of a candlelit scene.



### SUNRISE&SUNSET\* (🌅)

Select to reproduce the atmosphere of scenes such as sunsets or sunrises.



### FIREWORKS\* (💣)

Select to take spectacular shots of fireworks.



### LANDSCAPE\*(🏞)

Select to shoot distant subjects clearly. This setting also prevents your camcorder from focusing on glass or metal mesh in

windows that comes in between the camcorder and the subject.



### PORTRAIT (Soft portrait) (👤)

Select to bring out the subject such as people or flowers while creating a soft background.



### SPOTLIGHT\*\* (🎤)

Select to prevent people's faces from appearing excessively white when subjects are lit by strong light.



### BEACH\*\* (🏖️)

Select to take the vivid blue of the ocean or a lake.



### SNOW\*\* (❄️)

Select to take bright pictures of a white landscape.



\* Adjusted to focus on subjects farther away only.

\*\* Adjusted not to focus on subjects a short distance away.

### 🔊 Notes

- If you set [SCENE SELECTION], [WHITE BAL.] setting is canceled.
- If you switch to movie recording after shooting still images with [TWILIGHT PORT.], movies are recorded with [AUTO].

## WHITE BAL. (White balance)



You can adjust the color balance to the brightness of the recording environment.

### ▶ AUTO

The white balance is adjusted automatically.

### OUTDOOR (☀️)

The white balance is adjusted to be appropriate for the following recording conditions:

- Outdoors
- Night views, neon signs and fireworks
- Sunrise or sunset
- Under daylight fluorescent lamps

### INDOOR (💡)

The white balance is adjusted to be appropriate for the following recording conditions:

- Indoors
- At party scenes or studios where the lighting conditions change quickly
- Under video lamps in a studio, or under sodium lamps or incandescent-like color lamps


 
 
### ONE PUSH (📷)

The white balance will be adjusted according to the ambient light.

- ① Touch [ONE PUSH].
- ② Frame a white object such as a piece of paper, to fill the screen under the same lighting conditions as you will shoot the subject.
- ③ Touch [📷].  
📷 flashes quickly. When the white balance has been adjusted and stored in the memory, the indicator stops flashing.

### 🔊 Notes

- Set [WHITE BAL.] to [AUTO] or adjust the color in [ONE PUSH] under white or cool white fluorescent lamps.
- When you select [ONE PUSH], keep framing white objects while 📷 is flashing quickly.


-  flashes slowly if [ONE PUSH] could not be set.
- When [ONE PUSH] was selected, if  keeps flashing after touching , set [WHITE BAL.] to [AUTO].
- If you set [WHITE BAL.], [SCENE SELECTION] is set to [AUTO].

### Tips

- If you have changed the battery pack while [AUTO] was selected, or bring your camcorder outdoors from inside the house, or vice versa, select [AUTO] and aim your camcorder at a nearby white object for about 10 seconds for better color balance adjustment.
- When the white balance has been set with [ONE PUSH], if you change the [SCENE SELECTION] settings, or bring your camcorder outdoors from inside the house, or vice versa, you need to redo the [ONE PUSH] procedure to readjust the white balance.

## COLOR SLOW SHTR (Color Slow Shutter)



When you set [COLOR SLOW SHTR] to [ON],  appears, and you can record an image brighter in color even in dark places.


### Notes

- Adjust the focus manually ([FOCUS], p. 72) when it is hard to focus automatically.
- The shutter speed of your camcorder changes depending on the brightness, which may result in a slowdown of the motion of the image.

## SUPER NIGHTSHOT



The image will be recorded at a maximum of 16 times the sensitivity of NightShot recording, if you set [SUPER NIGHTSHOT] to [ON] while the NIGHTSHOT switch (p. 32) is also set to ON.

 appears on the screen.

To return to the normal setting, set [SUPER NIGHTSHOT] to [OFF].


### Notes

- Do not use [SUPER NIGHTSHOT] in bright places. This may cause a malfunction.
- Do not cover the infrared port with your fingers or other objects (p. 32).
- Remove the conversion lens (optional).
- Adjust the focus manually ([FOCUS], p. 72) when it is hard to focus automatically.
- The shutter speed of your camcorder changes depending on the brightness, which may result in a slowdown of the motion of the image.

## FADER



You can record a transition with the following effects added to the interval between scenes.

- ① Select the desired effect during fading in (in [STBY]) or during fading out (in [REC]), then touch .
- ② Press START/STOP.

The fader indicator stops flashing and disappears when the fade is complete.

To cancel the fader before starting the operation, touch [OFF] in step ①. If you press START/STOP, the setting is canceled.



### WHITE FADER

 


### BLACK FADER



## D.EFFECT (Digital effect)




When you select [OLD MOVIE],  appears and you can add an old movie effect to images.

To cancel [D.EFFECT], touch [OFF].

## PICT.EFFECT (Picture effect)



You can add special effects to an image during recording or playback.  appears.

### ► OFF

Does not use [PICT.EFFECT] setting.

### SEPIA

Images appear in sepia.

### B&W (Black and white)

Images appear in black and white.

### PASTEL



Images appear as a pale pastel drawing.

## MICREF LEVEL (Mic reference level)



You can select the microphone level for recording sound.

Select [LOW] when you want to record exciting and powerful sound in a concert hall, etc.

### ► NORMAL

Records surrounding sounds, converting them into the appropriate level.


### LOW (⇓)

Records surrounding sounds faithfully. This setting is not suitable for recording conversations.

## SELF-TIMER



A still image is recorded after about 10 seconds.

Press PHOTO when [SELF-TIMER] is set to [ON], and  appears.

To cancel the count down, touch [RESET].

To cancel the self-timer, select [OFF].

## 💡 Tips

- You can also operate by pressing PHOTO on the Remote Commander (p. 102).

# Troubleshooting

If you run into any problems using your camcorder, use the following table to troubleshoot the problem. If the problem persists, disconnect the power source and contact your Sony dealer.

- Overall operations/Easy Handycam operation/Remote Commander ..... 77
- Batteries/Power sources ..... 78
- LCD screen..... 79
- “Memory Stick PRO Duo”..... 79
- Recording ..... 79
- Playing back images on your camcorder ..... 81
- Editing images on your camcorder ..... 81
- Viewing on the TV ..... 82
- Playing the “Memory Stick PRO Duo” on other devices..... 82
- Dubbing/Connecting to other devices... 82
- Functions that cannot be used simultaneously..... 82

## Overall operations/Easy Handycam operation/Remote Commander

### The power does not turn on.

- Attach a charged battery pack to the camcorder (p. 16).
- The plug of the AC Adaptor has been disconnected from the wall outlet. Connect it to the wall outlet (p. 16).
- Set the camcorder onto the Handycam Station securely (p. 16).

### The camcorder does not operate even when the power is set to on.

- It takes a few seconds for your camcorder to be ready to shoot after the power is turned on. This is not a malfunction.
- Disconnect the AC Adaptor from the wall outlet or remove the battery pack, then reconnect it after about 1 minute. If the functions still do not work, press the RESET button (p. 100) using a pointed object (If you press the RESET button, all

settings, including the clock setting, are reset).



### Buttons do not work.

- During Easy Handycam operation (p. 24), the following buttons/functions are not available.
  - BACK LIGHT button (p. 32)
  - Playback zoom (p. 37)
  - To turn on and off the LCD backlight (Pressing and holding the DISP/BATT INFO button for a few seconds) (p. 21)


### (OPTION) is not displayed.







- The OPTION MENU cannot be used during Easy Handycam operation.

### The menu settings have changed automatically.

- During Easy Handycam operation, nearly all the menu items will be automatically set to the default settings.
- During Easy Handycam operation, some menu items are fixed as follows.
  - [] REC MODE]: [HD SP]
  - [] REC MODE]: [SD SP]
  - [] QUALITY]: [FINE]
  - [DATA CODE]: [DATE/TIME]
- Following menu items return to the default settings when you set the POWER switch to OFF (CHG) for more than 12 hours.
  - [FOCUS]
  - [SPOT FOCUS]
  - [EXPOSURE]
  - [SPOT METER]
  - [SCENE SELECTION]
  - [WHITE BAL.]
  - [MICREF LEVEL]

### Even if you press EASY, menu settings do not switch to their defaults automatically.

- During Easy Handycam operation, settings for the following menu items are maintained the ones before Easy Handycam operation.
  - [] REC SET]

- [WIDE SELECT]
- [X.V.COLOR]
- [  INDEX SET]
- [FILE NO.]
- [  IMAGE SIZE]
- [  INDEX SET]
- [  DISPLAY]
- [  INTERVAL SET]
- [VOLUME]
- [BEEP]
- [TV TYPE]
- [COMPONENT]
- [CLOCK SET]
- [AREA SET]
- [DST SET]/[SUMMERTIME]
- [  LANGUAGE SET]
- [DEMO MODE]
- [TIMING] and [RECORD SOUND] in [SMTH SLW REC]

---

#### Your camcorder gets warm.

- This is because the power has been turned on for a long time. This is not a malfunction.

---

#### The supplied Remote Commander does not function.

- Set [REMOTE CTRL] to [ON] (p. 69).
- Insert a battery into the battery holder with the +/- polarities correctly matching the +/- marks (p. 102).
- Remove any obstructions between the Remote Commander and the remote sensor.
- Point the remote sensor away from strong light sources such as direct sunlight or overhead lighting. Otherwise, the Remote Commander may not function properly.

---

#### Another DVD device malfunctions when you use the supplied Remote Commander.

- Select a commander mode other than DVD 2 for your DVD device, or cover the sensor of your DVD device with black paper.

## Batteries/Power sources

### The power abruptly turns off.

- When approximately 5 minutes have elapsed while you do not operate your camcorder, the camcorder is automatically turned off (A.SHUT OFF). Change the setting of [A.SHUT OFF] (p. 69), or turn on the power again, or use the AC Adaptor.
- Charge the battery pack (p. 16).

---

### The $\frac{1}{2}$ /CHG (charge) lamp does not light while the battery pack is being charged.

- Slide the POWER switch to OFF (CHG) (p. 16).
- Attach the battery pack to the camcorder correctly (p. 16).
- Connect the power cord to the wall outlet properly.
- The battery charge is completed (p. 16).
- Set the camcorder onto the Handycam Station securely (p. 16).

---

### The $\frac{1}{2}$ /CHG (charge) lamp flashes while the battery pack is being charged.

- Attach the battery pack to the camcorder correctly (p. 16). If the problem persists, disconnect the AC Adaptor from the wall outlet and contact your Sony dealer. The battery pack may be damaged.

---

### The remaining battery time indicator does not indicate the correct time.

- The ambient temperature is too high or too low. This is not a malfunction.
- The battery pack has not been charged enough. Fully charge the battery again. If the problem persists, replace the battery pack with a new one (p. 16).
- The indicated time may not be correct depending on the environment of use.

---

### The battery pack is quickly discharged.

- The ambient temperature is too high or low. This is not a malfunction.
- Fully charge the battery again. If the problem persists, replace the battery pack with a new one (p. 16).

### LCD screen

#### Menu items are grayed out.

- You cannot select grayed items in the current recording/playback situation.
- There are some functions you cannot activate simultaneously (p. 82).

---

### The buttons do not appear on the touch panel.

- Touch the LCD screen lightly.
- Press DISP/BATT INFO on your camcorder (or DISPLAY on the Remote Commander) (p. 21, 102).

---

### The buttons on the touch panel do not work correctly or do not work at all.

- Adjust the touch panel ([CALIBRATION], p. 94).

### “Memory Stick PRO Duo”

#### You cannot operate functions using the “Memory Stick PRO Duo.”

- If you use a “Memory Stick PRO Duo” formatted on a computer, format it again on your camcorder (p. 54).

---

#### You cannot delete images stored on or format the “Memory Stick PRO Duo.”

- The maximum number of images that you can delete at one time is 100.
- You cannot delete the images protected on another device.

---

### The data file name is not indicated correctly or flashes.



- The file is damaged.
- The file format is not supported by your camcorder (p. 90).

### Recording

Refer also to “Memory Stick PRO Duo” (p. 79).

---

### Pressing START/STOP or PHOTO does not record images.

- The playback screen is displayed. Set the POWER switch to  (Movie) or  (Still) (p. 29).
- Your camcorder is recording the image you have just shot on the “Memory Stick PRO Duo.” You cannot make new recording during this period.
- The “Memory Stick PRO Duo” is full. Use a new “Memory Stick PRO Duo” or format the “Memory Stick PRO Duo” (p. 54). Or delete the unnecessary images (p. 46).
- Total number of movie scenes or still images exceeds the recordable capacity of your camcorder (p. 10). Delete unnecessary images (p. 46).

---

#### You cannot record a still image.

- The playback screen is displayed. Set your camcorder to recording standby (p. 29).
- You can capture up to 3 still images only during movie recording.
- The “Memory Stick PRO Duo” has run out of space. Use a new “Memory Stick PRO Duo” or format the “Memory Stick PRO Duo” (p. 54). Or delete the unnecessary images (p. 46).
- You cannot record a still image together with:
  - [SMTH SLW REC]
  - [FADER]
  - [D.EFFECT]
  - [PICT.EFFECT]

---

### **The access lamp remains lit or flashing even when you stop recording.**

- Your camcorder is recording the scene you have just shot on the “Memory Stick PRO Duo.”


---

### **The imaging field looks different.**

- The imaging field may look different depending on the condition of your camcorder. This is not a malfunction.

---

### **The flash does not work.**

- You cannot record with the flash with:
  - Capturing still images while shooting a movie
  - If a conversion lens (optional) is attached
- Even if auto flash or  (Auto redeye reduction) is selected, you cannot use the internal flash with:
  - NightShot
  - [SUPER NIGHTSHOT]
  - [TWILIGHT], [CANDLE], [SUNRISE&SUNSET], [FIREWORKS], [LANDSCAPE], [SPOTLIGHT], [BEACH] or [SNOW] in [SCENE SELECTION]
  - [MANUAL] in [EXPOSURE]
  - [SPOT METER]

---

### **The actual recording time for movie is less than the expected approximate recording time of the “Memory Stick PRO Duo.”**

- Depending on an object, such as a fast moving object, the time available for recording may shorten (p. 10, 59).

---

### **There is a time difference between the point where you press START/STOP and the point that the recorded movie starts/stops.**

- On your camcorder, there may be a slight time difference between the point where you press START/STOP and the actual

point that recording movie starts/stops. This is not a malfunction.

---

### **The movie aspect ratio (16:9 (wide)/4:3) cannot be changed.**

- The aspect ratio of the movie recorded with HD (high definition) image quality is 16:9 (wide).

---

### **The auto focus does not function.**

- Set [FOCUS] to [AUTO] (p. 72).
- The recording conditions are not suitable for auto focus. Adjust the focus manually (p. 72).

---

### **[STEADYSHOT] does not function.**

- Set [STEADYSHOT] to [ON] (p. 61).
- [STEADYSHOT] may not be able to compensate for excessive vibrations.

---

### **The BACK LIGHT function does not function.**

- The BACK LIGHT function cannot be used during Easy Handycam operation.

---

### **The subjects passing by the lens very fast appear crooked.**

- This is called the focal plane phenomenon. This is not a malfunction. Because of the way the image device (CMOS sensor) reads out image signals, the subjects passing by the lens rapidly might appear crooked depending on the recording conditions.

---

### **Tiny spots in white, red, blue, or green appear on the screen.**

- The spots appear when you are recording with [SUPER NIGHTSHOT] or [COLOR SLOW SHTR]. This is not a malfunction.

---

### **The color of the image is not correctly displayed.**

- Set the NIGHTSHOT switch to OFF (p. 32).

---

**The screen image is bright, and the subject does not appear on the screen.**

- Set the NIGHTSHOT switch to OFF (p. 32).

---

**The screen image is dark, and the subject does not appear on the screen.**

- Press and hold DISP/BATT INFO for a few seconds to turn on the backlight (p. 21).

---

**Horizontal stripes appear on the images.**

- This occurs when recording images under a fluorescent lamp, sodium lamp, or mercury lamp. This is not a malfunction.

---

**[SUPER NIGHTSHOT] cannot be operated.**

- Set the NIGHTSHOT switch to ON (p. 32).

---

**[COLOR SLOW SHTR] does not operate correctly.**

- [COLOR SLOW SHTR] may not operate correctly in total darkness. Use NightShot or [SUPER NIGHTSHOT].

---

**You cannot adjust [LCD BL LEVEL].**

- You cannot adjust [LCD BL LEVEL] when:
  - The LCD panel is closed on your camcorder with the LCD screen facing out.
  - The power is supplied from the AC Adaptor.

---

**Playing back images on your camcorder**

**Images cannot be played back.**

- Images cannot be played back if you have modified files or folders, or have edited the data on a computer. (The file name flashes

in the case of still images.) This is not a malfunction (p. 92).

- Images recorded on other devices may not be played back. This is not a malfunction (p. 92).

---

**“[?]” is indicated on an image in the VISUAL INDEX screen.**

- This may appear on still images recorded on other devices, edited on a computer, etc.
- You removed the AC Adaptor or the battery pack before the access lamp is turned off after recording. This may damage your image data and [?] is displayed.

---

**“[REPAIR IMG.DB F.]” is indicated on an image in the VISUAL INDEX screen.**

- Perform [REPAIR IMG.DB F.] (p. 56). If it still appears, delete the image marked with [REPAIR IMG.DB F.] (p. 46).

---

**No sound or only a quiet sound is heard during playback.**

- Turn up the volume (p. 36).
- Sound is not output when the LCD screen is closed. Open the LCD screen.
- When you record sound with [MICREF LEVEL] (p. 76) set to [LOW], the recorded sound may be difficult to hear.
- When using [SMTH SLW REC], set [RECORD SOUND] to [ON] (p. 33).

---

**Editing images on your camcorder**

**Unable to edit.**

- Unable to edit because of the condition of the image.

---

**Images cannot be added in the Playlist.**

- There is no free space in the “Memory Stick PRO Duo.”

- You can add no more than 999 images with HD (high definition) image quality, or 99 images with SD (standard definition) image quality, to a Playlist. Erase unnecessary images from the Playlist (p. 50).
- You cannot add still images in the Playlist.

### A movie cannot be divided.

- A movie that is too short cannot be divided.
- A movie protected on another device cannot be divided.

### Unable to copy the movies being played to a “Memory Stick PRO Duo.”

- You cannot copy a movie to a “Memory Stick PRO Duo” as a still image during playback on your camcorder.
- Use the supplied “Picture Motion Browser.” For details, see “Picture Motion Browser Guide” on the supplied CD-ROM.

## Viewing on the TV

### You cannot view the image or hear the sound on the TV.

- When you are using the component video cable, set [COMPONENT] according to the requirements of the connected device (p. 68).
- When you are using the component video cable, make sure the red and white plugs of the A/V connecting cable are connected (p. 41, 42).
- Images are not output from the HDMI OUT jack, if copyright protection signals are recorded in the images.
- When you are using the S VIDEO plug, make sure the red and white plugs of the A/V connecting cable are connected (p. 42).

### The image appears distorted on the 4:3 TV.

- This happens when viewing an image recorded in the 16:9 (wide) mode on a 4:3

TV. Set [TV TYPE] correctly (p. 67) and play back the image.

### Black bands appear at the top and bottom of the screen of the 4:3 TV.

- This happens when viewing an image recorded in the 16:9 (wide) mode on a 4:3 TV. This is not a malfunction.

## Playing the “Memory Stick PRO Duo” on other devices

### The device does not play or read the “Memory Stick PRO Duo.”

- You can play back the images with HD (high definition) image quality only on devices that comply with AVCHD-format.
- For details on the AVCHD-format-compliant devices, see “Read This First” (the separate paper volume), or the following URL.  
<http://www.sony.net/>

## Dubbing/Connecting to other devices

### You cannot dub correctly.

- You cannot dub images using an HDMI cable.
- The A/V connecting cable is not connected properly. Make sure to connect to the input jack of another device (p. 39).

## Functions that cannot be used simultaneously

The following list shows examples of unworkable combinations of functions and menu items.

Cannot use	Because of following settings
BACK LIGHT	[SPOT METER], [FIREWORKS], [MANUAL] in [EXPOSURE]

 
Cannot use	Because of following settings
[SCENE SELECTION]	NightShot, [SUPER NIGHTSHOT], [COLOR SLOW SHTR], [OLD MOVIE], [TELE MACRO], [FADER]
[SPOT METER]	NightShot, [SUPER NIGHTSHOT]
[EXPOSURE]	NightShot, [SUPER NIGHTSHOT]
[WHITE BAL.]	NightShot, [SUPER NIGHTSHOT]
[ONE PUSH] in [WHITE BAL.]	[SMTH SLW REC]
[SPOT FOCUS]	[SCENE SELECTION]
[SUPER NIGHTSHOT]	[FADER], [D.EFFECT]
[COLOR SLOW SHTR]	[FADER], [D.EFFECT], [SCENE SELECTION]
[FADER]	[SUPER NIGHTSHOT], [COLOR SLOW SHTR], [D.EFFECT], [CANDLE], [FIREWORKS]
[D.EFFECT]	[SUPER NIGHTSHOT], [COLOR SLOW SHTR], [FADER]
[OLD MOVIE]	[SCENE SELECTION], [PICT.EFFECT]
[PICT.EFFECT]	[OLD MOVIE]
[TELE MACRO]	[SCENE SELECTION]
[AUTO SLW SHUTTR]	[SMTH SLW REC], [D.EFFECT], [SCENE SELECTION], [COLOR SLOW SHTR], [SUPER NIGHTSHOT]
[WIDE SELECT]	[OLD MOVIE]

# Warning indicators and messages

## Self-diagnosis display/Warning indicators

If indicators appear on the LCD screen, check the following.

You can fix some symptoms by yourself. If the problem persists even after you have tried a couple of times, contact your Sony dealer or local authorized Sony service facility.



### C:(or E): □□:□□ (Self-diagnosis display)

#### C:04:□□

- The battery pack is not an “InfoLITHIUM” battery pack (H series). Use an “InfoLITHIUM” battery pack (H series) (p.92).
- Connect the DC plug of the AC Adaptor to the DC IN jack of the Handycam Station or your camcorder securely (p.16).

#### C:13:□□ / C:32:□□

- Remove the power source. Reconnect it and operate your camcorder again.

#### E:20:□□ / E:31:□□ / E:61:□□ / E:62:□□ / E:91:□□ / E:94:□□

- A malfunction that you cannot service has occurred. Contact your Sony dealer or local authorized Sony service facility. Inform them of the 5-digit code, which starts from “E”.

### 101-0001 (Warning indicator pertaining to files)

#### Slow flashing

- The file is damaged.
- The file is unreadable.

### ⚠ (Battery level warning)

#### Slow flashing

- The battery pack is nearly used up.
- Depending on the operating environment or battery conditions, ⚠ may flash, even if there are approximately 20 minutes remaining.

### ⚠ (Warning indicator pertaining to “Memory Stick PRO Duo”)

#### Slow flashing

- Free space for recording images are running out. For the type of “Memory Stick” you can use with your camcorder, see page 11.
- No “Memory Stick PRO Duo” is inserted (p. 22).

#### Fast flashing

- There are not enough free space for recording images. Delete unnecessary images, or format the “Memory Stick PRO Duo” after storing the images on other media (p. 45, 46, 54).
- The Image Database File is damaged (p. 56).

### ⚠ (Warning indicators pertaining to “Memory Stick PRO Duo” formatting)\*

- The “Memory Stick PRO Duo” is damaged.
- The “Memory Stick PRO Duo” is not formatted correctly (p. 54, 90).

### ⚠ (Warning indicator pertaining to incompatible “Memory Stick PRO Duo”)\*

- An incompatible “Memory Stick PRO Duo” is inserted (p. 90).

### ⚠ (Warning indicator pertaining to the write-protect of the “Memory Stick PRO Duo”)\*

- Access to the “Memory Stick PRO Duo” was restricted on another device.

---

### (Warning indicator pertaining to the Memory Stick Duo cover)

#### Slow flashing

- The Memory Stick Duo cover is open (p. 22).

---

### (Warning indicator pertaining to the flash)

#### Fast flashing\*

- There is something wrong with the flash.

---

### (Warning indicator pertaining to camera-shake warning)

- The amount of lights is not sufficient, so camera-shake easily occurs. Use the flash.
- The camcorder is unsteady, so camera-shake easily occurs. Hold the camcorder steady with both hands and record the image. However, note that the camera-shake warning indicator does not disappear.

\* You hear a melody when the warning indicators appear on the screen (p. 66).

## Description of warning messages

If messages appear on the screen, follow the instructions.

### ■ “Memory Stick PRO Duo”

---

#### Reinsert the Memory Stick.

- Reinsert the “Memory Stick PRO Duo” a few times. If even then the indicator flashes, the “Memory Stick PRO Duo” could be damaged. Try with another “Memory Stick PRO Duo.”

---

#### This Memory Stick is not formatted correctly.

- Check the format, then format the “Memory Stick PRO Duo” with your camcorder if necessary (p. 54, 90).

---

#### Memory Stick folders are full.

- You cannot create folders exceeding 999MSDCF. You cannot create or delete folders using your camcorder.
- Format the “Memory Stick PRO Duo” (p. 54), or delete unnecessary folders using your computer.

---

#### This Memory Stick may not be able to record or play movies.

- Use the recommended “Memory Stick” (p. 11).

---

#### This Memory Stick may not be able to record or play images correctly.

- Contact your Sony dealer or local authorized Sony service facility.

---

#### Do not eject the Memory Stick during writing. Data may be damaged.

- Insert the “Memory Stick PRO Duo” again, and follow the instructions on the screen.

---

#### The Image Database File is damaged. Do you want to create a new file?

---

#### HD movie management information is damaged. Create new information?

- The image management file is damaged. When you touch [YES], a new image management file is created. The old recorded images on the “Memory Stick PRO Duo” cannot be played back (Image files are not damaged). If you perform [REPAIR IMG.DB F.] after creating new

information, playing back the old recorded images may become possible. If it does not work, copy the image to a computer using the supplied software.

---

### **Inconsistencies found in Image Database File. Movies cannot be recorded or played. Do you want to repair the Image Database File?**

### **Inconsistencies found in Image Database File. Cannot record or play HD movies. Do you want to repair the Image Database File?**

- The Image Database File is damaged. Touch [YES] to repair.
- 

### **Recovering data**

- Your camcorder tries to recover data automatically if the data writing was not performed properly.
- 

### **Cannot recover data.**

- Because data writing onto the “Memory Stick PRO Duo” failed, your camcorder tried to recover the data, but could not recover data. You may not be able to record or edit data on the “Memory Stick PRO Duo.”
- 

## **■ PictBridge compliant printer**

---

### **Not connected to PictBridge compatible printer.**

- Turn off the printer and on again, then remove the USB cable (supplied) and reconnect it.
- 

### **Cannot print. Check the printer.**

- Turn off the printer and on again, then remove the USB cable (supplied) and reconnect it.
- 

## **■ Other**

---

### **No further selection is possible.**

- You can select only 100 images at one time for:
    - deleting images
    - editing the playlist of HD (high definition) movies
    - printing still images
- 

 
### **Data protected.**

- You tried to delete data protected on another device. Release the protection of the data on the device used to protect the data.

# Using your camcorder abroad

## Power supply

You can use your camcorder in any countries/regions using the AC Adaptor supplied with your camcorder within the AC 100 V to 240 V, 50/60 Hz range. Use a commercially available AC plug adaptor [a], if necessary, depending on the design of the wall outlet [b].



## Viewing images recorded with HD (high definition) image quality

In countries/regions where 1080i/60i is supported, you can view the images with the same HD (high definition) image quality as that of the recorded images. You need an NTSC-system-based and 1080i/60i compatible TV (or monitor) with component and AUDIO/VIDEO input jacks. Both a component video cable and an A/V connecting cable must be connected.

## Viewing images recorded with SD (standard definition) image quality


To view images recorded with SD (standard definition) image quality, you need an NTSC-system-based TV with AUDIO/VIDEO input jacks. An A/V connecting cable must be connected.

## On TV color systems


Your camcorder is an NTSC-system-based camcorder. If you want to view the playback image on a TV, it must be an NTSC-system-based TV with an AUDIO/VIDEO input jack.

System	Used in
NTSC	Bahama Islands, Bolivia, Canada, Central America, Chile, Colombia, Ecuador, Guyana, Jamaica, Japan, Korea, Mexico, Peru, Surinam, Taiwan, the Philippines, the U.S.A., Venezuela, etc.
	Australia, Austria, Belgium, China, Czech Republic, Denmark, Finland, Germany, Holland, Hong Kong, Hungary, Italy, Kuwait, Malaysia, New Zealand, Norway, Poland, Portugal, Singapore, Slovak Republic, Spain, Sweden, Switzerland, Thailand, United Kingdom, etc.
PAL - M	Brazil
PAL - N	Argentina, Paraguay, Uruguay.
SECAM	Bulgaria, France, Guiana, Iran, Iraq, Monaco, Russia, Ukraine, etc.

## Setting to the local time

You can easily set the clock to the local time by setting a time difference when using your camcorder abroad. Touch **HOME** → **SETTINGS** → **[CLOCK/** **LANG]** → **[AREA SET]** and **[DST SET]/[SUMMERTIME]** (p. 68).

## World time difference

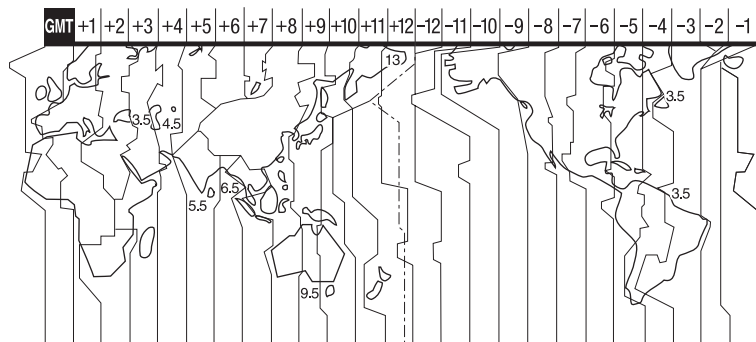


Time-zone differences	Area setting
GMT	Lisbon, London
+01:00	Berlin, Paris
+02:00	Helsinki, Cairo, Istanbul
+03:00	Moscow, Nairobi
+03:30	Tehran
+04:00	Abu Dhabi, Baku
+04:30	Kabul
+05:00	Karachi, Islamabad
+05:30	Calcutta, New Delhi
+06:00	Almaty, Dhaka
+06:30	Rangoon
+07:00	Bangkok, Jakarta
+08:00	HongKong, Singapore, Beijing
+09:00	Seoul, Tokyo
+09:30	Adelaide, Darwin
+10:00	Melbourne, Sydney

Time-zone differences	Area setting
+11:00	Solomon Is.
+12:00	Fiji, Wellington
-12:00	Eniwetok, Kwajalein
-11:00	Midway Is., Samoa
-10:00	Hawaii
-09:00	Alaska
-08:00	LosAngeles, Tijuana
-07:00	Denver, Arizona
-06:00	Chicago, Mexico City
-05:00	New York, Bogota
-04:00	Santiago
-03:30	St. John's
-03:00	Brasilia, Montevideo
-02:00	Fernando de Noronha
-01:00	Azores, Cape Verde Is.

# Files/folder structure on the “Memory Stick PRO Duo”

The file/folder structure is shown below. You do not usually need to acknowledge the file/folder structure, when recording/playing back images on the camcorder. To enjoy still images or movies by connecting to a computer, see “Picture Motion Browser Guide” on the supplied CD-ROM, then use the supplied application.

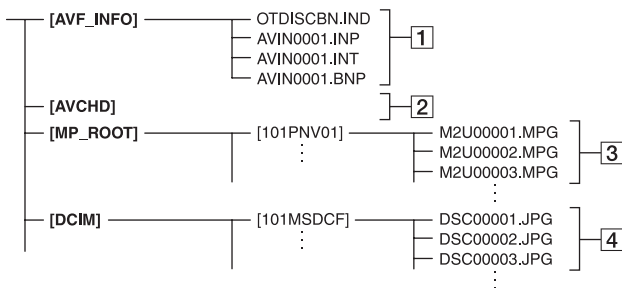

## 1 Image management files

When you delete the files, you cannot record/play back the images correctly. The files are defaulted as hidden files and not usually displayed.

## 2 HD movie management information folder

This folder contains recording data of movies with HD (high definition) image quality. Do not try to open this folder or access the contents of this folder from a computer. Doing so might damage image files, or prevent image files from being played back.

## 3 SD movie files (MPEG2 files)

The extension of the files is “.MPG”. The maximum size is 2 GB. When the capacity of a file exceeds 2 GB, the file becomes divided.

The file numbers go up automatically. When the capacity of a file number exceeds 9999, another folder is created to record new movie files.

The folder name goes up: [101PNV01] → [102PNV01]

## 4 Still image files (JPEG files)

The extension of the files is “.JPG”. The file numbers go up automatically. When the capacity of a file number exceeds

9999, another folder is created to store new image files.

The folder name goes up: [101MSDCF] → [102MSDCF]

- By selecting [ COMPUTER] on [USB SELECT] (p. 52), you can access a “Memory Stick PRO Duo” in the camcorder from a computer through USB connection.
- Do not modify the files or folders on a “Memory Stick PRO Duo” in the camcorder from a computer. The image files may be destroyed or may not be played back.
- We (Sony) will not be responsible for the results of operating the data on a “Memory Stick PRO Duo” in the camcorder from a computer.
- When you delete image files, follow the steps on page 46. Do not delete the image files on a “Memory Stick PRO Duo” in the camcorder directly from a computer.
- Do not format a “Memory Stick PRO Duo” in the camcorder using a computer. The camcorder may not operate correctly.
- Do not copy the files on a “Memory Stick PRO Duo” in the camcorder from a computer. We (Sony) will not be responsible for the results of this kind of operation.

# Maintenance and precautions

## About the AVCHD format

Your digital video camera recorder incorporates both the AVCHD format and the MPEG2 format for the recording function.

### What is the AVCHD format?

The AVCHD format is a high definition digital video camera format used to record an HD (high definition) signal of either the 1080i specification\*<sup>1</sup> or the 720p specification\*<sup>2</sup>, using efficient data compression coding technology. The MPEG-4 AVC/H.264 format is adopted to compress video data, and the Dolby Digital or Linear PCM system is used to compress audio data.

The MPEG-4 AVC/H.264 format is capable of compressing images at higher efficiency than that of the conventional image compressing format. The MPEG-4 AVC/H.264 format enables a high definition video signal shot on a digital video camera recorder to be recorded on 8 cm DVD discs, internal hard disk drive, flash memory, etc.

### Recording and playback on your camcorder

Based on the AVCHD format, your camcorder records with the HD (high definition) image quality mentioned below. In addition to HD (high definition) image quality, your camcorder is capable of recording an SD (standard definition) signal in the conventional MPEG2 format.

#### Video signal:

AVCHD format 1440 × 1080/60i\*<sup>3</sup>

#### Audio signal:

Dolby Digital 5.1 ch

#### Recording media:

“Memory Stick PRO Duo”

\*1: 1080i specification

A high definition specification which utilizes 1,080 effective scanning lines and the interlace system.

\*2: 720p specification

A high definition specification which utilizes 720 effective scanning lines and the progressive system.

\*3: Data recorded in AVCHD format other than the above mentioned cannot be played on your camcorder.

## About the “Memory Stick”

A “Memory Stick” is a compact, portable IC recording medium with a large data capacity.

You can use only a “Memory Stick Duo,” which is about the half size of a standard “Memory Stick,” with your camcorder. However, we do not guarantee the operation of all types of “Memory Stick Duo” on your camcorder. (See the list below for more details.)

Types of “Memory Stick”	Recording/Playback
“Memory Stick Duo” (without MagicGate)	-
“Memory Stick PRO Duo”	○* <sup>1</sup>
“Memory Stick PRO-HG Duo”	○* <sup>1</sup>

\*<sup>1</sup> The types of “Memory Stick” that support high speed data transfer. The speed of data transfer varies depending on the device to be used.

- This product is not compatible with 8-bit parallel data transfer.
- This product cannot record or play data that uses “MagicGate” technology. “MagicGate” is a copyright protection technology that records and transfers the contents in an encrypted format.
- This product is compatible with “Memory Stick Micro” (“M2”). “M2” is the abbreviation for the “Memory Stick Micro.”
- Still image format: Your camcorder compresses and records image data in the JPEG (Joint Photographic Experts Group) format. The file extension is “.JPG.”
- File names of still images:
  - 101-0001: This file name appears on the screen of your camcorder.

- DSC00001.JPG: This file name appears on the display of a computer.
- A “Memory Stick PRO Duo” formatted by a computer (Windows OS/Mac OS) does not have guaranteed compatibility with your camcorder.
- Data read/write speed may vary depending on the combination of the “Memory Stick PRO Duo” and the “Memory Stick PRO Duo” compliant product you use.

## Notes on use

Damaged or lost data may occur in the following cases (the data will not be compensated for):

- If you eject the “Memory Stick PRO Duo,” or turn off your camcorder while your camcorder is reading or writing image files on the “Memory Stick PRO Duo” (while the access lamp is lit or flashing).
- If you use the “Memory Stick PRO Duo” near magnets or magnetic fields.

It is recommended you make a back-up of important data on the hard disk of a computer.

### ■ On handling a “Memory Stick PRO Duo”

Keep the following in mind when handling a “Memory Stick PRO Duo.”

- Be careful not to apply excessive force when writing on a memo area on a “Memory Stick PRO Duo.”
- Do not attach a label or the like on a “Memory Stick PRO Duo” or a Memory Stick Duo adaptor.
- When you carry or store a “Memory Stick PRO Duo,” put it in its case.
- Do not touch, or allow metallic objects to come into contact with the terminals.
- Do not bend, drop or apply strong force to the “Memory Stick PRO Duo.”
- Do not disassemble or modify the “Memory Stick PRO Duo.”
- Do not let the “Memory Stick PRO Duo” get wet.
- Keep “Memory Stick PRO Duo” media out of the reach of small children. There is danger that a child might swallow it.

- Do not insert anything other than a “Memory Stick PRO Duo” into the Memory Stick Duo slot. Doing so may cause a malfunction.

### ■ On a location for use

Do not use or keep the “Memory Stick PRO Duo” in the following locations:

- Places subject to extremely high temperature, such as a car parked outside in the summer.
- Places under direct sunlight.
- Places with extremely high humidity or subject to corrosive gases.

### ■ On the Memory Stick Duo adaptor

After inserting a “Memory Stick PRO Duo” into the Memory Stick Duo adaptor, you can use it with a standard “Memory Stick” compliant device.

- When using a “Memory Stick PRO Duo” with a “Memory Stick” compliant device, be sure to insert the “Memory Stick PRO Duo” into a Memory Stick Duo adaptor.
- When inserting a “Memory Stick PRO Duo” into a Memory Stick Duo adaptor, make sure the “Memory Stick PRO Duo” is inserted facing in the correct direction, then insert it all the way in. Note that improper use may cause a malfunction. Also, if you force the “Memory Stick PRO Duo” into the Memory Stick Duo adaptor in the wrong direction, it may be damaged.
- Do not insert a Memory Stick Duo adaptor without a “Memory Stick PRO Duo” attached into a “Memory Stick” compliant device. Doing so may result in malfunctions of the device.

### ■ On a “Memory Stick PRO Duo”

The maximum memory capacity of a “Memory Stick PRO Duo” or “Memory Stick PRO-HG Duo” that can be used with your camcorder is 8 GB.

## Notes on using “Memory Stick Micro”


- To use a “Memory Stick Micro” with your camcorder, you need a Duo-sized M2 Adaptor. Insert the “Memory Stick Micro” into the Duo-sized M2 Adaptor, and then insert the adaptor into the “Memory Stick Duo” slot. If you insert a “Memory Stick Micro” into your camcorder without using a Duo-sized M2 Adaptor, you might not be able to remove it from your camcorder.

- Do not leave the “Memory Stick Micro” within the reach of small children. They might accidentally swallow it.

## On image data compatibility

- Image data files recorded on a “Memory Stick PRO Duo” by your camcorder conform to the “Design rule for Camera File system” universal standard established by the JEITA (Japan Electronics and Information Technology Industries Association).
- On your camcorder, you cannot play back still images recorded on other devices (DCR-TRV900 or DSC-D700/D770) that do not conform to the universal standard. (These models are not sold in some regions.)
- If you cannot use a “Memory Stick PRO Duo” that has been used with another device, format it with your camcorder (p. 54). Note that formatting erases all information on the “Memory Stick PRO Duo.”
- You may not be able to play back images with your camcorder:
  - When playing back image data modified on your computer.
  - When playing back image data recorded with other devices.

## About the “InfoLITHIUM” battery pack

Your camcorder operates only with an “InfoLITHIUM” battery pack (H series). “InfoLITHIUM” H series battery packs have the  mark.

 
## What is an “InfoLITHIUM” battery pack?

An “InfoLITHIUM” battery pack is a lithium-ion battery pack that has functions for communicating information related to operating conditions between your camcorder and an optional AC Adaptor/charger.

The “InfoLITHIUM” battery pack calculates the power consumption according to the operating conditions of your camcorder, and displays the remaining battery time in minutes.

With an AC Adaptor/charger, the remaining battery time and charging time appear.

## To charge the battery pack

- Be sure to charge the battery pack before you start using your camcorder.
- We recommend charging the battery pack in an ambient temperature of between 10 °C to 30 °C (50 °F to 86 °F) until the /CHG (charge) lamp turns off. If you charge the battery pack outside of this temperature range, you may not be able to charge it efficiently.


## To use the battery pack effectively

 - Battery pack performance decreases when the ambient temperature is 10 °C (50 °F) or below, and the length of time you can use the battery pack becomes shorter. In that case, do one of the following to use the battery pack for a longer time.
  - Put the battery pack in a pocket to warm it up, and insert it in your camcorder right before you start taking shots.
  - Use a large capacity battery pack: NP-FH70/FH100 (optional).
- Frequent use of the LCD screen or a frequent playback, fast forward or rewind operation wears out the battery pack faster. We recommend using a large capacity battery pack: NP-FH70/FH100 (optional).
- Be sure to set the POWER switch to OFF (CHG) when not recording or playing back on your camcorder. The battery pack is also consumed when your camcorder is in recording standby or playback pause.
- Have spare battery packs ready for 2 or 3 times the expected recording time, and make trial recordings before making the actual recording.
- Do not expose the battery pack to water. The battery pack is not water resistant.



## About the remaining battery time indicator

- When the power goes off even though the remaining battery time indicator indicates that the battery pack has enough power to operate, charge the battery pack fully again. Remaining battery time will be indicated correctly. Note, however, that the battery indication will not be restored if it is used in high temperatures for a long time, or if left in a fully charged state, or

when the battery pack is frequently used. Use the remaining battery time indication as a rough guide only.

- The  mark that indicates low battery flashes even if there are still 5 to 10 minutes of battery time remaining, depending on the operating conditions or ambient temperature.

## About storage of the battery pack

- If the battery pack is not used for a long time, fully charge the battery pack and use it up on your camcorder once a year to maintain proper function. To store the battery pack, remove it from your camcorder and put it in a dry, cool place.
- To discharge the battery pack on your camcorder completely, touch  (HOME) →  (SETTINGS) → [GENERAL SET] → [A.SHUT OFF] → [NEVER] and leave your camcorder in recording standby until the power goes off (p. 69).

## About battery life

- Battery capacity decreases over time and through repeated use. If decreased usage time between charges becomes significant, it is probably time to replace it with a new one.
- Each battery's life is governed by storage, operating and environmental conditions.

## About x.v.Color

- x.v.Color is a more familiar term for the xvYCC standard proposed by Sony, and is a trademark of Sony.
- xvYCC is an international standard for color space in video. This standard can express a wider color range than the currently used broadcast standard.

## About handling of your camcorder

### On use and care

- Do not use or store the camcorder and accessories in the following locations:
  - Anywhere extremely hot, cold or humid. Never leave them exposed to temperatures above 60 °C (140 °F), such as under direct sunlight, near heaters or in a car parked in the

sun. They may malfunction or become deformed.

- Near strong magnetic fields or mechanical vibration. The camcorder may malfunction.
  - Near strong radio waves or radiation. The camcorder may not be able to record properly.
  - Near AM receivers and video equipment. Noise may occur.
  - On a sandy beach or anywhere dusty. If sand or dust gets in your camcorder, it may malfunction. Sometimes this malfunction cannot be repaired.
  - Near windows or outdoors, where the LCD screen or the lens may be exposed to direct sunlight. This damages inside the LCD screen.
- Operate your camcorder on DC 6.8 V/7.2 V (battery pack) or DC 8.4 V (AC Adaptor).
  - For DC or AC operation, use the accessories recommended in these operating instructions.
  - Do not let your camcorder get wet, for example, from rain or sea water. If your camcorder gets wet, it may malfunction. Sometimes this malfunction cannot be repaired.
  - If any solid object or liquid gets inside the casing, unplug your camcorder and have it checked by a Sony dealer before operating it any further.
  - Avoid rough handling, disassembling, modifying, physical shock, or impact such as hammering, dropping or stepping on the product. Be particularly careful of the lens.
  - Keep the POWER switch setting to OFF (CHG) when you are not using your camcorder.
  - Do not wrap your camcorder with a towel, for example, and operate it. Doing so might cause heat to build up inside.
  - When disconnecting the power cord, pull it by the plug and not the lead.
  - Do not damage the power cord such as by placing anything heavy on it.
  - Keep metal contacts clean.
  - Keep the Remote Commander and button-type battery out of children's reach. If the battery is accidentally swallowed, consult a doctor immediately.
  - If the battery electrolytic liquid has leaked:
    - consult your local authorized Sony service facility.
    - wash off any liquid that may have contacted your skin.

- if any liquid gets in your eyes, wash with plenty of water and consult a doctor.

### ■ When not using your camcorder for a long time

- Periodically turn it on and let it run such as by playing back or recording images for about 3 minutes.
- Use up the battery pack completely before storing it.

## Moisture condensation

If your camcorder is brought directly from a cold place to a warm place, moisture may condense inside your camcorder. This may cause a malfunction to your camcorder.

### ■ If moisture condensation has occurred

Leave your camcorder for about 1 hour without turning it on.

### ■ Note on moisture condensation

Moisture may condense when you bring your camcorder from a cold place into a warm place (or vice versa) or when you use your camcorder in a humid place as follows:

- You bring your camcorder from a ski slope into a place warmed up by a heating device.
- You bring your camcorder from an air conditioned car or room into a hot place outside.
- You use your camcorder after a squall or a shower.
- You use your camcorder in a hot and humid place.

### ■ How to prevent moisture condensation

When you bring your camcorder from a cold place into a warm place, put your camcorder in a plastic bag and seal it tightly. Remove the bag when the air temperature inside the plastic bag has reached the ambient temperature (after about 1 hour).

## LCD screen

- Do not exert excessive pressure on the LCD screen, as it may cause damage.



- If your camcorder is used in a cold place, a residual image may appear on the LCD screen. This is not a malfunction.
- While using your camcorder, the back of the LCD screen may heat up. This is not a malfunction.


### ■ To clean the LCD screen

If fingerprints or dust make the LCD screen dirty, it is recommended you use a soft cloth to clean it. When you use the LCD Cleaning Kit (optional), do not apply the cleaning liquid directly to the LCD screen. Use cleaning paper moistened with the liquid.

### ■ On adjustment of the touch panel (CALIBRATION)

The buttons on the touch panel may not work correctly. If this happens, follow the procedure below. It is recommended that you connect your camcorder to the wall outlet using the supplied AC Adaptor during the operation.

- ① Turn on your camcorder.
- ② Touch  (HOME) →  (SETTINGS) → [GENERAL SET] → [CALIBRATION].

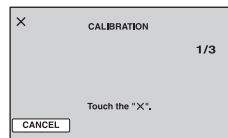

- ③ Touch "x" displayed on the screen with the corner of the "Memory Stick PRO Duo" or the like 3 times.  
Touch [CANCEL] to cancel.

If you did not press the right spot, try the calibration again.

### 🔊 Notes

- Do not use a sharp-pointed object for calibration. Doing so may damage the LCD screen.
- You cannot calibrate the LCD screen if it is rotated, or closed with the screen facing out.

## On handling the casing

- If the casing is soiled, clean the camcorder body with a soft cloth lightly moistened with water, and then wipe the casing with a dry soft cloth.
- Avoid the following to avoid damage to the finish:
  - Using chemicals such as thinner, benzine, alcohol, chemical cloths, repellent, insecticide and sunscreen.
  - Handling the camcorder with above substances on your hands.
  - Leaving the casing in contact with rubber or vinyl objects for a long period of time.

## About care and storage of the lens

- Wipe the surface of the lens clean with a soft cloth in the following instances:
  - When there are fingerprints on the lens surface.
  - In hot or humid locations
  - When the lens is exposed to salty air such as at the seaside.
- Store in a well-ventilated location subject to little dirt or dust.
- To prevent mold, periodically clean the lens as described above. It is recommended that you operate your camcorder about once a month to keep it in optimum state for a long time.

## On charging the pre-installed rechargeable battery


Your camcorder has a pre-installed rechargeable battery to retain the date, time, and other settings even when the POWER switch is set to OFF (CHG). The pre-installed rechargeable battery is always charged while your camcorder is connected to the wall outlet via the AC Adaptor or while the battery pack is attached. The rechargeable battery will be fully discharged in about **3 months** if you do not use your camcorder at all. Use your camcorder after charging the pre-installed rechargeable battery.

However, even if the pre-installed rechargeable battery is not charged, the camcorder operation will not be affected as long as you are not recording the date.

## ■ Procedures

Connect your camcorder to a wall outlet using the supplied AC Adaptor, and leave it with the POWER switch set to OFF (CHG) for more than 24 hours.

## On trademarks

- “Handycam” and **HANDYCAM** are registered trademarks of Sony Corporation.
- “AVCHD” and “AVCHD” logotype are trademarks of Matsushita Electric Industrial Co., Ltd. and Sony Corporation.
- “Memory Stick,”  “Memory Stick Duo,” **“MEMORY STICK DUO,”** “Memory Stick PRO Duo,” **“MEMORY STICK PRO DUO,”** “Memory Stick PRO-HG Duo,” **“MEMORY STICK PRO-HG DUO,”** “Memory Stick Micro,” “MagicGate,” **“MAGIC GATE,”** “MagicGate Memory Stick” and “MagicGate Memory Stick Duo” are trademarks or registered trademarks of Sony Corporation.
- “InfoLITHIUM” is a trademark of Sony Corporation.
- “x.v.Color” is a trademark of Sony Corporation.
- Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- Dolby Digital 5.1 Creator is a trademark of Dolby Laboratories.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- Microsoft, Windows, and Windows Media are trademarks or registered trademarks of U.S. Microsoft Corporation in the U.S. and other countries.
- Macintosh and Mac OS are registered trademarks of Apple Inc. in the U.S. and other countries.
- Intel, Intel Core, and Pentium are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.
- Adobe, the Adobe logo, and Adobe Acrobat are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

All other product names mentioned herein may be the trademarks or registered trademarks of their respective companies. Furthermore, <sup>TM</sup> and “®” are not mentioned in each case in this Handbook.

## Notes on the License

ANY USE OF THIS PRODUCT OTHER THAN CONSUMER PERSONAL USE IN ANY MANNER THAT COMPLIES WITH THE MPEG-2 STANDARD FOR ENCODING VIDEO INFORMATION FOR PACKAGED MEDIA IS EXPRESSLY PROHIBITED WITHOUT A LICENSE UNDER APPLICABLE PATENTS IN THE MPEG-2 PATENT PORTFOLIO, WHICH LICENSE IS AVAILABLE FROM MPEG LA, L.L.C., 250 STEELE STREET, SUITE 300, DENVER, COLORADO 80206.

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO

(i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD (“AVC VIDEO”) AND / OR

(ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE <[HTTP://MPEGLA.COM](http://MPEGLA.COM)>

“C Library,” “Expat,” “zlib,” and “libjpeg” software are provided in your camcorder. We provide this software based on license agreements with their owners of copyright. Based on requests by the owners of copyright of these software applications, we have an obligation to inform you of the following. Please read the following sections.

Read “license1.pdf” in the “License” folder on the CD-ROM. You will find licenses (in English) of “C Library,” “Expat,” “zlib,” and “libjpeg” software.

## On GNU GPL/LGPL applied software

The software that is eligible for the following GNU General Public License (hereinafter referred to as “GPL”) or GNU Lesser General Public License (hereinafter referred to as “LGPL”) are included in the camcorder.

This informs you that you have a right to have access to, modify, and redistribute source code for these software programs under the conditions of the supplied GPL/LGPL.

Source code is provided on the web. Use the following URL to download it. When downloading the source code, select HDR-SR7 as the model for your camcorder.

<http://www.sony.net/Products/Linux/>

We would prefer you do not contact us about the contents of source code.


Read “license2.pdf” in the “License” folder on the CD-ROM. You will find licenses (in English) of “GPL,” and “LGPL” software.





To view the PDF, Adobe Reader is needed. If it is not installed on your computer, you can download it from the Adobe Systems web page:


<http://www.adobe.com/>
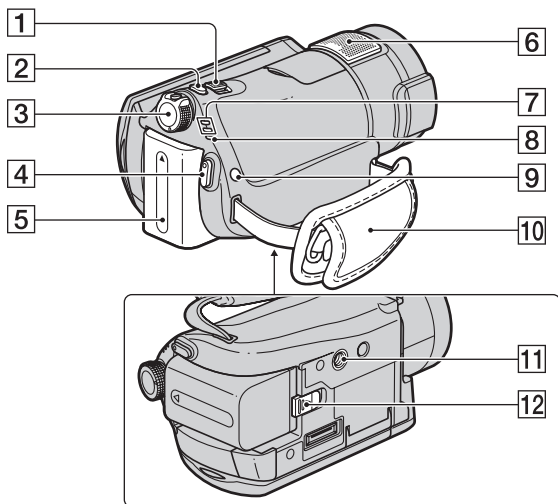
# Identifying parts and controls

The numbers in ( ) are reference pages.



- 1** Power zoom lever (30, 37)
- 2** PHOTO button (29)
- 3** POWER switch (20)
- 4** START/STOP button (29)
- 5** Battery pack (16)
- 6** Internal microphone (30)  
An Active Interface Shoe compatible microphone (optional) will take precedence when connected.
- 7**  (Movie)/ (Still) mode lamps (20)
- 8**  /CHG (charge) lamp (16)
- 9**  (flash) button (31)
- 10** Grip belt (22)
- 11** Tripod receptacle  
Attach the tripod (optional: the length of the screw must be less than 5.5 mm (7/32 in.)) to the tripod receptacle using a tripod screw.
- 12** BATT (battery release) lever (17)

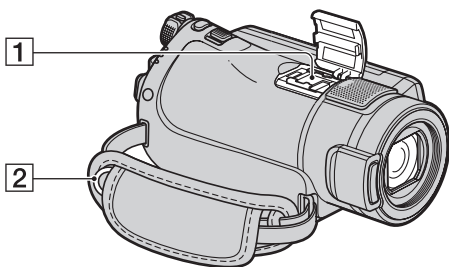


**1** Active Interface Shoe Active Interface Shoe




The Active Interface Shoe supplies power to optional accessories such as a video light, a flash, or a microphone. The accessory can be turned on or off as you operate the POWER switch on your camcorder. Refer to the operating instructions supplied with your accessory for details.


The Active Interface Shoe has a safety device for fixing the installed accessory securely. To connect an accessory, press down and push it to the end, and then tighten the screw. To remove an accessory, loosen the screw, and then press down and pull out the accessory.

- When you are recording movies with an external flash (optional) connected to the accessory shoe, turn off the power of the external flash to prevent charging noise being recorded.
- You cannot use an external flash (optional) and the built-in flash at the same time.
- When an external microphone (optional) is connected, it takes precedence over the internal microphone (p. 30).

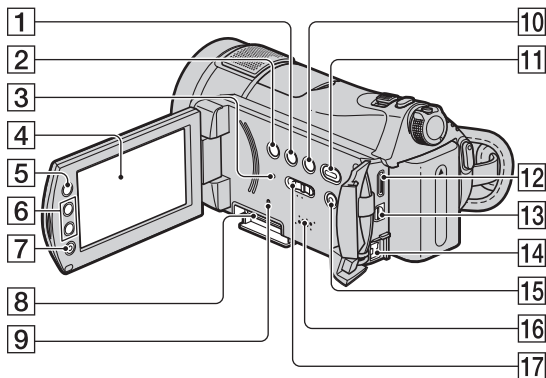**2** Hook for a shoulder belt  
Attach a shoulder belt (optional).




- 1** DISP/BATT INFO button (17, 21)
- 2** BACK LIGHT button (32)
- 3** RESET button  
Initializes all the settings, including the setting of the date and time.
- 4** LCD screen/touch panel (21)
- 5**  (HOME) button (13, 57)
- 6** Zoom buttons (30, 37)
- 7** START/STOP button (29)
- 8** Memory Stick Duo slot (22)
- 9** Access lamp (22)
- 10**  (Film Roll Index) button (35)
- 11**  (VIEW IMAGES) button (34)
- 12** HDMI OUT (mini) jack (41)
- 13** A/V OUT jack (41)
- 14** DC IN jack (16)
- 15** EASY button (24)
- 16** Speaker  
Playback sounds come out from the speaker. For how to adjust the volume, see page 36.
- 17** NIGHTSHOT switch (32)

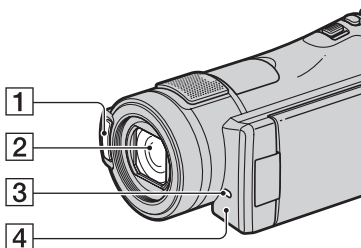


- 1** Flash (31)
- 2** Lens (Carl Zeiss Lens) (4)
- 3** Camera recording lamp (69)  
Lights up in red during recording.  
Flashes when remaining "Memory Stick PRO Duo" space or battery power is low.
- 4** Remote sensor/Infrared port  
Point the Remote Commander (p. 102) towards the remote sensor to operate your camcorder.

## Handycam Station

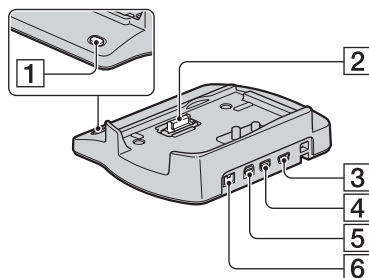

- 1** DISC BURN button (45)
- 2** Interface connector
- 3**  $\Psi$  (USB) jack (52)
- 4** COMPONENT OUT jack (41)
- 5** A/V OUT jack (41)
- 6** DC IN jack (16)


## Remote Commander

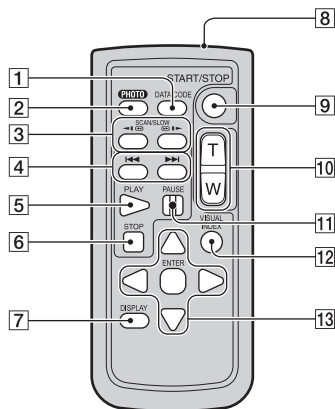

- 1 DATA CODE button (65)  
Displays the date and time or camera setting data of the recorded images when you press this during playback.
- 2 PHOTO button (29)  
The on-screen image when you press this button will be recorded as a still image.
- 3 SCAN/SLOW buttons (36)
- 4 ◀◀ ▶▶ (Previous/Next) buttons (36)
- 5 PLAY button (36)
- 6 STOP button (36)
- 7 DISPLAY button (21)
- 8 Transmitter
- 9 START/STOP button (29)
- 10 Power zoom buttons (30, 37)
- 11 PAUSE buttons (36)
- 12 VISUAL INDEX button (34)  
Displays a VISUAL INDEX screen during playback.
- 13 ◀ / ▶ / ▲ / ▼ / ENTER buttons  
When you press any button on the [VISUAL INDEX]/[INDEX]/[INDEX]/[INDEX]/Playlist screen, the orange frame appears on the LCD screen. Select a desired button or an item with ◀ / ▶ / ▲ / ▼, then press ENTER to enter.

### Notes

 
- Remove the insulation sheet before using the Remote Commander.



- Point the Remote Commander towards the remote sensor to operate your camcorder (p. 101).
- When no commands have been sent from the Remote Commander in a certain period, the orange frame disappears. When you press any of ◀ / ▶ / ▲ / ▼, or ENTER again, the frame appears at the position where it was displayed last.
- You cannot select some buttons on the LCD screen using ◀ / ▶ / ▲ / ▼.

### To change the battery of the Remote Commander

 - ① While pressing on the tab, insert your fingernail into the slit to pull out the battery case.
- ② Place a new battery with the + side facing up.
- ③ Insert the battery case back into the Remote Commander until it clicks.




### WARNING

Battery may explode if mistreated. Do not recharge, disassemble or dispose of in fire.


- When the lithium battery becomes weak, the operating distance of the Remote Commander may shorten, or the Remote Commander may not function properly. In this case, replace the battery with a Sony CR2025 lithium battery. Use of another battery may present a risk of fire or explosion.

# Indicators displayed during recording/playback


## Recording movies

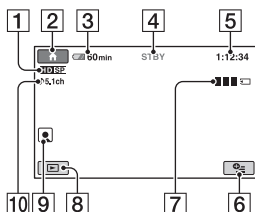


## Recording still images

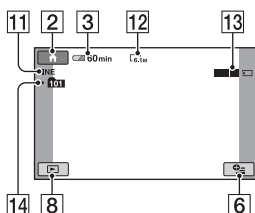

## Viewing movies

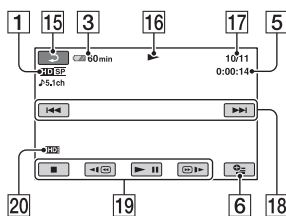

## Viewing still images

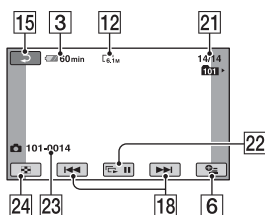


- 1 Recording quality (HD/SD) (59) and recording mode (XP/HQ/SP/LP) (59)
- 2 HOME button (13)
- 3 Remaining battery (approx.) (17)
- 4 Recording status ([STBY] (standby) or [REC] (recording))
- 5 Counter (hour/minute/second)
- 6 OPTION button (14)
- 7 Dual Rec (31)
- 8 VIEW IMAGES button (34)
- 9 Face Index set (37)
- 10 5.1ch surround recording (30)
- 11 Quality ([FINE] / [STD]) (63)
- 12 Image size (63)
- 13 This appears while a still image is being saved.
- 14 Recording folder
- 15 Return button
- 16 Playback mode
- 17 Currently playing movie number/  
Number of total recorded movies
- 18 Previous/Next button (36)
- 19 Video operation buttons (36)
- 20 Playing back image quality
- 21 Currently playing still image number/  
Number of total recorded still images
- 22 Slide show button (38)
- 23 Data file name
- 24 VISUAL INDEX button (34)

## 💡 Tips

- As the number of still images recorded on a “Memory Stick PRO Duo” increases, new folders are automatically created to store them.

## Indicators when you made changes

Following indicators appear during recording/playback to indicate the settings of your camcorder.

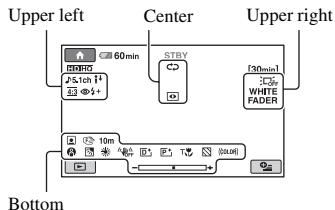

### Upper left

Indicator	Meaning
	5.1ch surround recording/playback (30)
	Self-timer recording (76)
	Flash light (31)/ REDEYE REDUC (62)
	MICREF LEVEL low (76)
	WIDE SELECT (60)

### Center

Indicator	Meaning
	Continuous slide show (38)
	NightShot (32)
	Super NightShot (75)
	Color Slow Shutter (75)
	PictBridge connecting (52)
	Warning (84)

### Upper right

Indicator	Meaning
	WHITE FADER (75)
	LCD backlight off (21)

### Bottom

Indicator	Meaning
	Picture effect (76)
	Digital effect (75)
	Manual focus (72)
	SCENE SELECTION (73)
	Backlight (32)
	White balance (74)
	SteadyShot off (61)
	SPOT METER (73)/ EXPOSURE (73)
	Tele macro (72)
	Zebra (61)
	X.V.COLOR (61)
	Face Index set (37)

### Data code during recording

The recording date and time is recorded automatically on the "Memory Stick PRO Duo." They are not displayed while recording. However, you can check them as [DATA CODE] during playback (p. 65).

# Glossary

## ■ 5.1ch surround sound

A system that plays back sound on 6 speakers, 3 at the front (left, right and center) and 2 at the rear (right and left) with an additional low-pass subwoofer counted as a 0.1 channel for frequencies of 120 Hz or lower.

## ■ AVCHD format

A high definition digital video camera format used to record an HD (high definition) signal using the MPEG-4 AVC/H.264 format.

## ■ JPEG

JPEG stands for Joint Photographic Experts Group, a still image data compression (data capacity reduction) standard. Your camcorder records still images in JPEG format.

## ■ MPEG

MPEG stands for Moving Picture Experts Group, the group of standards for the coding (image compression) of video (movie) and audio. There are MPEG1 and MPEG2 formats. Your camcorder records movies with SD (standard definition) image quality in MPEG2 format.

## ■ MPEG-4 AVC/H.264

The latest image coding format standardized jointly by two international standardization organizations, the ISO-IEC and the ITU-T, in 2003. Compared with the conventional MPEG2 format, MPEG-4 AVC/H.264 has more than twice the efficiency. Your camcorder employs MPEG-4 AVC/H.264 to encode high definition movies.

## ■ VBR

VBR stands for Variable Bit Rate, the recording format for automatically controlling the bit rate (the volume of recording data in a given time segment) according to the scene being recorded. For fast-moving video, a lot of “Memory Stick PRO Duo” space is used to produce a clear image, so the recording time to the “Memory Stick PRO Duo” shortens.

## ■ Thumbnail

Reduced-size images which enable you to view many images at the same time. [VISUAL INDEX], [🖼️ INDEX], [📷 INDEX], etc. are thumbnail display system.

## ■ Dolby Digital

An audio encoding (compression) system developed by Dolby Laboratories Inc.

## ■ Dolby Digital 5.1 Creator

Sound compression technology developed by Dolby Laboratories Inc. which compresses audio efficiently while preserving high sound quality. Sounds are compressed effectively with high quality sound, and it enables producing 5.1ch surround sound.

# Index

## Numeric

- 16:9.....67
- 4:3.....60, 67
- 5.1ch surround recording.....30

## A

- AC Adaptor .....16
- ADD by date.....49
- AREA SET .....68
- AUTO SLW SHUTTR (Auto Slow Shutter).....61, 83
- AVCHD format .....8, 90, 105
- A.SHUT OFF (Auto shut off) .....69
- A/V connecting cable .....41, 51

## B

- BACK LIGHT .....80, 82
- Backup.....See Saving images
- Battery pack.....16
- BEACH .....74
- BEEP .....66
- BLACK FADER .....75
- Button-type lithium battery .....102
- B&W (Black and white).....76

## C

- CALIBRATION .....94
- CAMERA DATA .....65
- CANDLE.....73
- CD-ROM .....15
- Charging the battery .....16
- Charging time .....18
- CLOCK SET .....20
- CLOCK/LANG .....68
- COLOR SLOW SHTR (Color Slow Shutter).....75, 83
- COMPONENT .....68
- Component video cable .....41

## Connection

- 4:3 TV .....42
- DVD/HDD recorders....51
- High definition TV .....41
- Printer .....52
- VCR.....51
- Wide TV .....42

## D

- DATA CODE .....65, 104
- Date Index.....37
- DATE/TIME .....65, 104
- DC IN jack .....16
- DELETE
  - DELETE by date .....47
  - “Memory Stick PRO Duo” .....46
- DEMO MODE.....69
- DIGITAL ZOOM .....60
- DISP OUTPUT .....68
- DISPLAY.....66
- Display indicators .....103
- DIVIDE.....48
- Dolby Digital 5.1 Creator ...30
- DST SET .....68
- Dual Rec .....31
- D.EFFECT (Digital effect) .....75, 83

## E

- Easy Operation.....24
- Easy PC Back-up .....45
- Editing.....46, 48
- EXPOSURE.....73, 83

## F

- Face Index.....37
- FADER .....75, 83
- File .....89
- FILE NO. (File number) .....64
- Film Roll Index.....35

- FINE.....63
- FIREWORKS.....73
- Flash .....31, 80
- FLASH LEVEL.....62
- FOCUS .....72, 80
- Folder .....89
- FORMAT .....54
- Full charge.....18

## G

- GENERAL SET .....69
- Grip belt.....22
- GUIDEFRAE.....61

## H

- Handycam Station .....16
- HD QUALITY .....59
- HD REC MODE.....59
- HD (high definition) image quality.....8
- HDMI cable.....42
- Help .....13
- High Definition TV .....41
- Holding the camcorder .....28
- HOME MENU .....12, 57
  - CLOCK/LANG.....68
  - GENERAL SET.....69
  - MOVIE SETTINGS.....59
  - OUTPUT SETTINGS...67
  - PHOTO SETTINGS .....63
  - SETTINGS category .....57
  - SOUND/DISP SET .....66
  - VIEW IMAGES SET...65
- HQ.....59, 60

## I

- Icon.....See Display indicators
- Image management files.....89
- Image quality
  - Movie .....59
  - Still image .....63

IMAGE SIZE.....	63
Index screen display button .....	103
INDEX SET.....	62, 65
Indicators.....	104
INDOOR.....	74
INFO (“Memory Stick PRO Duo”).....	55
“InfoLITHIUM” battery pack .....	92
INTERVAL SET.....	66

## J

JPEG.....	89, 105
-----------	---------

## L

LANDSCAPE.....	73
LANGUAGE SET.....	68
LCD BL LEVEL (LCD back light level).....	67
LCD BRIGHT.....	66
LCD COLOR.....	67
LCD panel.....	21
LCD BL LEVEL.....	67
LCD BRIGHT.....	66
LCD COLOR.....	67
LCD screen.....	21
LP.....	60

## M

Maintenance.....	90
MANAGE MEMORY STICK category.....	54
“Memory Stick”.....	2, 90
Memory Stick Duo adaptor ..	91
“Memory Stick PRO Duo” .....	2, 91
“Memory Stick PRO-HG Duo” .....	2
MICREF LEVEL.....	76
Mirror mode.....	32
Moisture condensation.....	94

## Movie

Recording mode.....	59
Recording quality.....	59
Shooting.....	29
MOVIE SETTINGS.....	59
MPEG.....	105
MPEG2.....	8, 89
MPEG-4 AVC/H.264.....	105

## N

NightShot.....	32
NIGHTSHOT LIGHT.....	60
NTSC.....	87
Number of recordable pictures.....	63

## O

OLD MOVIE.....	83
ONE PUSH.....	74, 83
One Touch Disc Burn.....	45
Operation confirmation beep .....	See BEEP
OPTION MENU.....	70
Original.....	49
OTHERS category.....	46
OUTDOOR.....	74
OUTPUT SETTINGS.....	67

## P

PASTEL.....	76
PB zoom.....	37
PHOTO SETTINGS.....	63
PictBridge.....	52
PICT.EFFECT (Picture effect) .....	76, 83
Playback.....	25, 34
Playlist.....	49
PORTRAIT (Soft portrait).....	74
Power cord.....	16
Pre-installed rechargeable battery.....	95
Print.....	52

## Q

QUALITY.....	63
--------------	----

## R

REC LAMP (Recording lamp) .....	69
REC SET.....	59
Recording.....	24, 28
Recording format.....	90
Recording quality.....	59
Recording time.....	18
REDEYE REDUC.....	62
Remaining Battery.....	17
“Memory Stick PRO Duo”.....	55
Remaining battery.....	17
REMAINING (movie).....	61
Remote Commander.....	78, 102
REMOTE CTRL (Remote control).....	69
REPAIR IMG.DB F.....	56
RESET.....	100

## S

S VIDEO cable.....	43
SCENE SELECTION.....	73, 83
SD QUALITY.....	59
SD REC MODE.....	60
SD (standard definition) image quality.....	8
Self-diagnosis display.....	84
SELF-TIMER.....	76
SEPIA.....	76
SETTINGS.....	57
SETTINGS category.....	57
Slide show.....	38
SLIDE SHOW SET.....	38
SMTH SLW REC.....	33
SNOW.....	74
SOUND/DISP SET.....	66

SP.....	59, 60
SPOT FOCUS .....	72, 83
SPOT METER (Flexible spot meter).....	73, 83
SPOTLIGHT .....	74
STANDARD .....	63
STEADYSHOT.....	61, 80
Still image	
IMAGE SIZE .....	63
QUALITY .....	63
Shooting .....	29
Still image files .....	89
SUMMERTIME.....	68
SUNRISE&SUNSET .....	73
SUPER NIGHTSHOT....	75, 83

## T

TELE MACRO.....	72, 83
Telephoto.....	30
Thumbnail .....	105
Tripod .....	98
TV color system .....	87
TV CONNECT Guide .....	40
TV TYPE.....	67
TWILIGHT .....	73
TWILIGHT PORT. ....	73

## U

USB cable.....	15
Using abroad.....	87

## V

VBR.....	11, 105
VIEW IMAGES SET .....	65
Viewing pictures on a TV ....	39
VISUAL INDEX.....	34
VOLUME .....	66
Volume adjustment.....	36

## W

Wall outlet .....	16
-------------------	----

Warning indicators.....	84
Warning messages .....	85
WHITE BAL. (White balance)	
74, 83	
WHITE FADER .....	75
Wide angle .....	30
WIDE SELECT .....	60, 83
Wide TV .....	42
World time difference.....	88

## X

XP .....	59
X.V.COLOR .....	61, 93

## Z

ZEBRA .....	61
Zoom.....	30

Additional information on this product and answers to frequently asked questions can be found at our Customer Support Website.

<http://www.sony.net/>