

Gate Extension Instructions

Regalo™

Easy Step Gate

Model# 1160

Please follow these instructions carefully to ensure that your gate extension is properly installed. Improper installation could result in the gate becoming dislodged from the doorway, or unstable. Always make sure the extension is securely attached to the gate before using. The safety of your child is your responsibility.

Note: If using this gate at the top of stairs, the 4 Wall Cups MUST be used. If not used, the gate could be dislodged from the opening.

Important: Keep these instructions for future reference


It is preferable to install the extension on the hinge side of the gate. If you have an application that requires additional extensions, please contact the retailer which you purchased your gate from. We offer, the following sizes of extensions for your gate: 4 inch, 6 inch, 12 inch and 24 inch. They are available at most retailers that carry our Regalo Products line of metal gates.

For questions regarding your gate, or replacement parts contact our customer care department at 952-440-1950. You may also write us at:

Regalo International Inc., 14198 Commerce Ave.
N.E. Suite 600, Prior Lake, MN 55372. Made in China.

Instructions for Gate Extension

Note: Never use more than two extensions per gate!

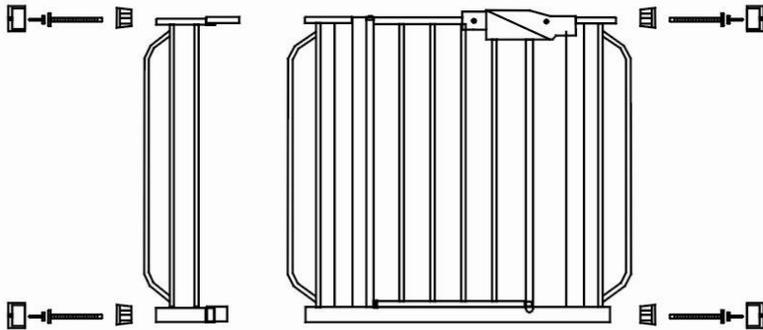

1. Assemble the gate per the gate instructions.
2. Choose the side of the gate to be extended and remove the top and bottom Adjustment Wheel Spindles.
3. Assemble the gate and extension as illustrated.
4. Reposition the gate and fit in accordance with the gate fitting instructions.



Easy Step Gate
Model# 1160

Important: Keep these instructions for future reference

This gate can be used in openings from 29 inches to 38 inches.

Contact Regalo for questions and replacement parts. If in doubt the use of your gate, call our customer care line at 952-440-1950


Regalo International Inc., 14198 Commerce Ave.
N.E. Suite 600, Prior Lake, MN 55372.
Made in China.

Assembly and Installation Instructions

Please read these instructions carefully before installing your gate.
The safety of your child is your responsibility.

Check that you have these contents:

1. Gate Frame

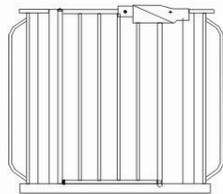

2. Hardware Pack which should contain:

4 - Threaded Spindle Rods



 
4 - Adjustable Wheel Spindles  (already assembled to the Spindle Threaded Rods)

4 - Wall Cups 

4 - Screws 

3. One Extension

1 - 6" Extension



Assembling and Installing Your Gate

****Note: IMPORTANT** you will notice a slight Gap between the gate door latch and the frame tube. THIS IS NOT A DEFECT. Your gate is a pressure mounted gate and this gap will disappear once you tighten your gate in the doorway.

Step 1.

Begin by locating the 4 Threaded Spindle Rods. Before you begin, turn the Adjustment Wheels clockwise until they are almost against the flat end of the Threaded Spindle Rods. **WARNING:** The Adjustment Wheel should NOT touch the flat end of the Thread Spindle Rod. If it does it might get stuck.

 


Diagram A.

Step 2.

You are going to insert the 4 Threaded Spindle Rods into the holes in the 4 ends of the gate frame as shown in Diagram B1.

****IMPORTANT: THE ENDS OF THE GATE FRAME ARE NOT THREADED. THE THREADED SPINDLE ROD SHOULD SLIDE INTO THE END OF THE FRAME TUBES WITHOUT ANY RESISTENCE.** Push the Threaded Spindle Rods all the way into the frame tube until the Adjustment Wheel hits the end of the frame tube as shown in Diagram B2.


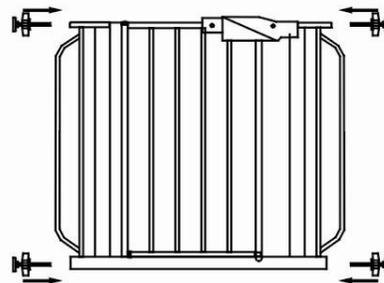


Diagram B1

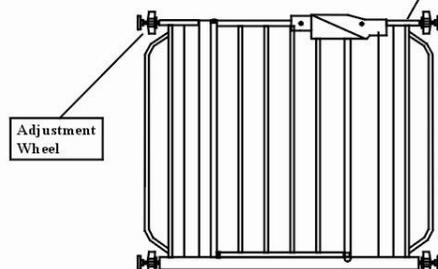

End of the Frame Tube

Diagram B2

Adjustment Wheel

WARNING:

Intended for young children aged six months through 24 months. Check the gate regularly to see if all the hardware and mountings are tight.

To prevent serious injury or death, securely install gate or enclosure and use according to manufacturer's instructions. Never use with a child able to climb over or dislodge the gate or enclosure.

Never leave child unattended.

Use only with the locking/latching mechanism securely engaged.

Note: If using this gate at the top of stairs, the 4 wall Cups MUST be used. If not use, the gate could be dislodged from the opening.

Gate Extension Instructions

Regalo™

Easy Step Gate

Model# 1160

Please follow these instructions carefully to ensure that your gate extension is properly installed. Improper installation could result in the gate becoming dislodged from the doorway, or unstable. Always make sure the extension is securely attached to the gate before using. The safety of your child is your responsibility.

Note: If using this gate at the top of stairs, the 4 Wall Cups **MUST** be used. If not used, the gate could be dislodged from the opening.

Important: Keep these instructions for future reference


It is preferable to install the extension on the hinge side of the gate. If you have an application that requires additional extensions, please contact the retailer which you purchased your gate from. We offer, the following sizes of extensions for your gate: 4 inch, 6 inch, 12 inch and 24 inch. They are available at most retailers that carry our Regalo Products line of metal gates.

For questions regarding your gate, or replacement parts contact our customer care department at 952-440-1950. You may also write us at:

Regalo International Inc., 14198 Commerce Ave.
N.E. Suite 600, Prior Lake, MN 55372. Made in China.

Instructions for Gate Extension

Note: Never use more than two extensions per gate!

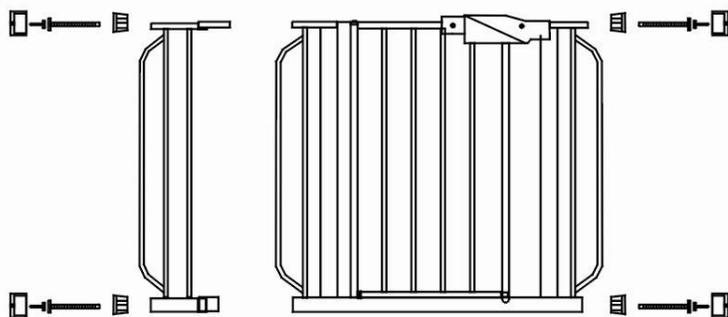

1. Assemble the gate per the gate instructions.
2. Choose the side of the gate to be extended and remove the top and bottom Adjustment Wheel Spindles.
3. Assemble the gate and extension as illustrated.
4. Reposition the gate and fit in accordance with the gate fitting instructions.

Regalo™


Easy Step Gate
Model# 1160

Important: Keep these instructions for future reference

Step 5.

You are now ready to do the Final Adjustment to fasten your gate firmly in the doorway. Start by turning the **BOTTOM** Adjustment Wheels **FIRST**. Continue to turn the lower Adjustment Wheels counter-clockwise until the Adjustment Wheels are firmly against the ends of the frame tubes. . **IMPORTANT:** There should be equal space on each side of the gate. To easily determine this look at the length of threaded rod is that is showing on each side. If the gate is centered, there will be an equal length of threaded rod showing. If more threaded rod is showing on one side you can adjust this using the Adjustment Wheels. Simply turn the side that has too much Threaded Rod showing clockwise, and then turn the other side counter-clockwise. As you so this you will see the sides equaling out as shown in Diagram E.

Diagram E .

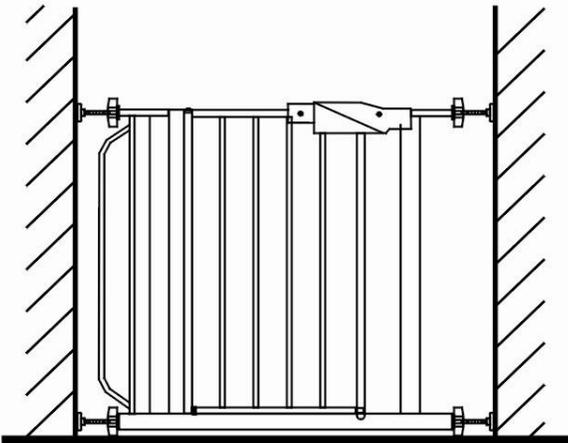


Next, tighten the top 2 Adjustment Wheels by turning them counter-clockwise. Again, make sure both sides are equal as you tighten. As you tighten the Adjustment wheels you will notice the gap between the plastic gate door latch and the frame tube is narrowing. As the gap continues to narrow continue turning the upper Adjustment Wheels until the frame tube engages in the slot in the plastic gate door handle. Leave a 1/16" gap between the frame tube and the plastic gate door latch as shown in Diagram F.

IMPORTANT: The frame tube **MUST NOT** touch the Plastic gate door latch. If it does touch you have turned the Adjustment Wheels a few too many turns.

To correct this simply turn the upper Adjustment wheels clockwise a few turns until you have a 1/16th inch gap. Your gate is now ready to use.

Diagram F .

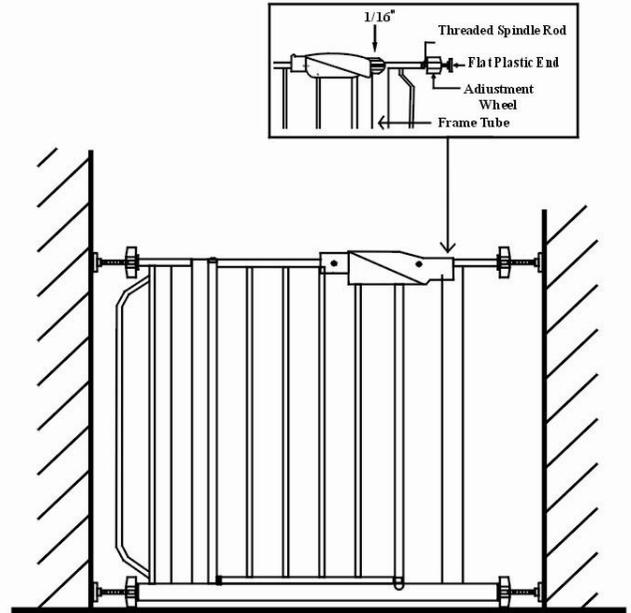

REMOVING YOUR GATE FROM THE WALL

To remove you gate from the wall begin by turning the Adjustment Wheels clockwise until the flat plastic ends of the Threaded Spindle Rods come out from the Wall Cups. This will free you gate from the wall,

CARE AND MAINTENANCE

Periodically check the gate for sign of damage, wear or for missing components.

Do not use if any part is missing, worn or damaged components.

Check the gate regularly to make sure all the hardware and mountings are tighten.

Do not use abrasive cleaners or bleach.

Clean it by sponging with warm water and mild detergent.