


Carpet cleaning (portable mode)

1. Step on the portable spot cleaning pedal (on left side of the unit when facing front) to release the portable spot cleaner and lift up
2. Fill the water and formula tank
 - a. Remove the formula tank from spot cleaner (located on the back of the spot cleaner)
 - b. Unscrew black cap and remove insert
 - c. Fill tank with hot tap water to the WATER fill line and add two ounces of BISSELL 2X formula
 - d. Replace insert and cap
 - e. Replace tank on machine
3. Release flex hose by turning the hose secure latch
4. Plug power cord into proper outlet and press the power button (located on the detachable pod)
5. Cleaning
 - a. Clean by pressing the trigger on the flex hose to spray solution onto the area to be cleaned
 - b. Slowly scrub the tool back and forth over the soiled surface
 - c. Tilt the tool forward to suction liquid
6. Empty dirty tank when it reaches the "FULL" line following instruction #3 under Carpet Cleaning (Upright Mode)
7. When cleaning is complete, replace unit on base of machine
 - a. Align the product as image 7a shows and push down the portable spot cleaner until you hear it click

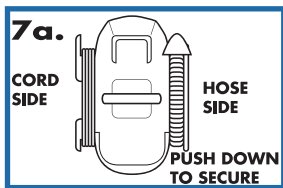

For additional tips and troubleshooting

Please refer to User's Guide

Earn BISSELL rewards! Register your product today!

Visit: www.bissell.com

120-4347

© 2011 BISSELL Homecare, Inc.
BISSELL Homecare, Inc.
P.O. Box 1888
Grand Rapids, MI 49501



LIFT-off®
DEEP CLEANER

94Y2, 27F6,
35K3, 73H5 SERIES

BISSELL is happy to be of service.
Contact us directly at **1-800-237-7691** or
visit the website for helpful instructions at
www.bissell.com

PLEASE DO NOT RETURN THIS PRODUCT TO THE STORE
PLEASE KEEP FOR FUTURE REFERENCE

Quick Start Guide

WARNING:

Refer to the enclosed user guide for complete instructions and important safety notices.

Package contents:

- | | |
|--------------------------------------|--|
| a. Upper Handle | d. Tool Attachment(s)
(varies by model) |
| b. Portable Spot Cleaner/Base | e. BISSELL 2X Formula
(varies by model) |
| c. 4 Screws - taped to handle | |

Phillips head screw driver is needed for assembly



Assembly

1. Slide upper handle onto base
2. Screw 4 screws into the marked holes
NOTE: Two screw holes are located under the support handle
3. Wrap power cord around cord wrap on side of portable spot cleaner
4. Attach tough stain tool to hose grip (extra tool storage located on back)
5. Wrap flex hose on other side of portable spot cleaner and secure with hose latch



Before you begin cleaning

1. Move furniture to another area if cleaning an entire room
2. Vacuum area with a dry vacuum cleaner
3. PreTreat spots & stains and heavy traffic areas (optional- see User's Guide)

Carpet cleaning (upright mode)

1. Fill the formula & water tank
 - a. Remove the formula tank from the base of the machine (located on back of portable spot cleaner)
 - b. Unscrew the black cap and remove insert
 - c. Fill tank with hot tap water to the WATER fill line and add two ounces of BISSELL 2X formula
 - d. Replace the insert and tighten black cap
 - e. Replace formula tank on machine



Carpet cleaning (upright mode)

2. Cleaning
 - a. Plug the power cord into a proper outlet and press the power button
NOTE: Allow 1 minute for hot water heater to warm-up
 - b. While pressing the trigger, make one slow forward wet pass and another one back
 - c. Release the trigger and make another slow forward and backward pass over the same area. Repeated dry passes will help aid in dry time
 - d. Continue passes until the cleaning area is complete
3. Empty dirty tank when it reaches the "FULL" line
 - a. Remove dirty tank
 - b. Unlock the tank lid by rotating the handle over the back of the tank
 - c. Remove lid to pour out dirty water and rinse
 - d. Replace top of tank and rotate the handle forward to lock in place
 - e. Replace the tank on the machine
4. Refill as needed following step #1



For complete user's guide, visit www.bissell.com