



Instructions for electric food mill

Model # EX5

Technical characteristics

Model: EX5


Tension: 110 V

Frequency: 60 Hz

Nominal power: 600 W

Recommended intermittent cycle: 60 minutes of use / 60 minutes of rest

Output speed: 70 rpm

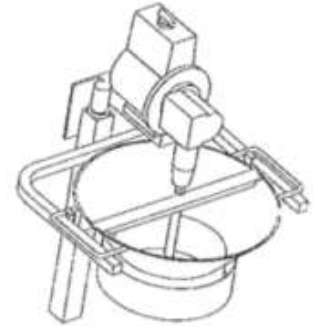

Attention

Any replacement of the electrical parts as well as the replacement of the power cord must be carried out by authorized personnel.

Before switching on, make sure the protective grid is in place.

Cleaning and Maintenance

1. Disconnect the power cord before cleaning.
2. Do not hose down the motor assembly (wash with a damp cloth only)
3. Remove the cone/grid assembly from its support
4. Clean everything with soapy water
5. Wipe with a dry cloth

Remarks

- The grills of our manual appliances cannot under any circumstances be used on electrical appliances.
- When the appliance is new, the inside of the grill is very rough, which is a factor in efficiency.
- When the inside of the grill becomes smooth, it is necessary to replace it.


Warranty *

1 Year Parts & Labor


*The warranty does not cover repairs due to the following instances:

- unintended use or misuse of the device
- damages incurred by shock or fall
- connection to a higher current than that indicated on the device
- dismantling of the unit (other than what's permitted in the manual)
- normal wear and tear


Setup (for better illustration, the safety grid does not appear on the following diagrams)

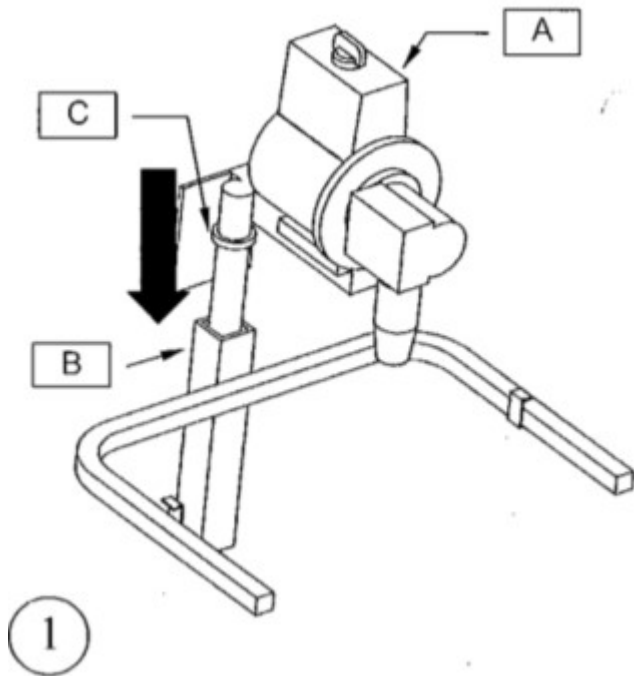


Insert the motor assembly (A) into the square tube of the foot (B) up to the stop ring (C).

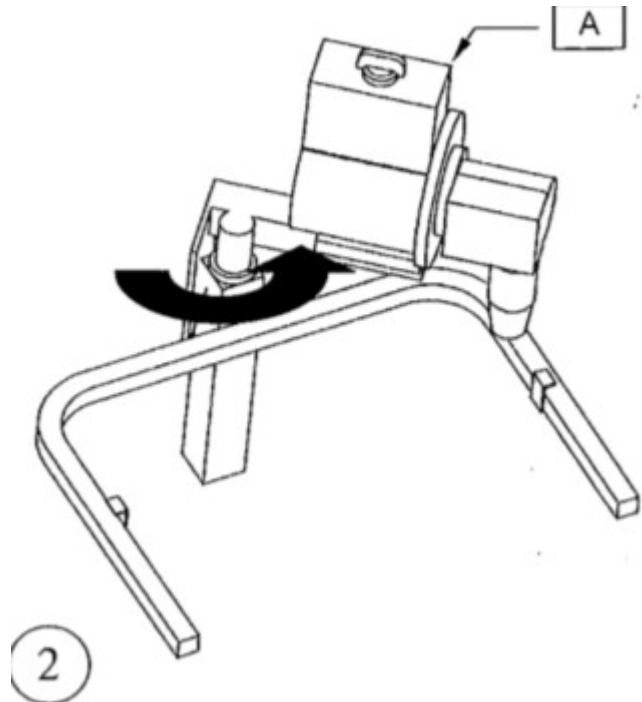

Rotate the motor assembly (A) to the right.

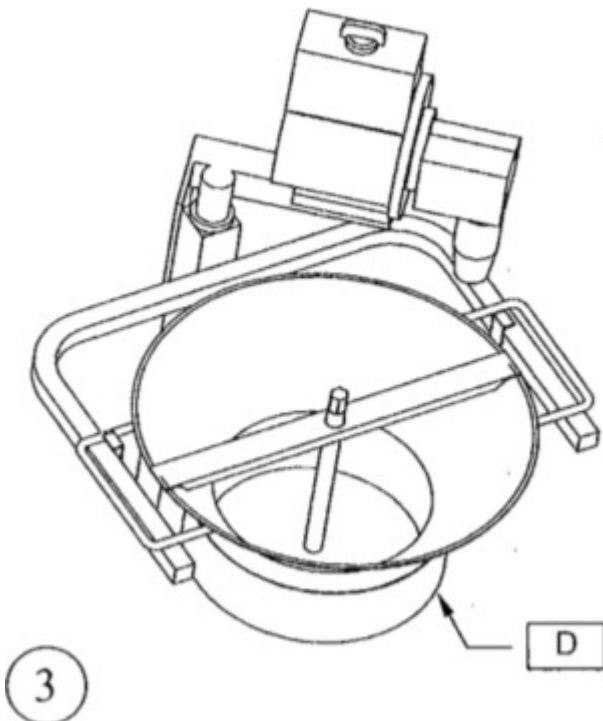


Place the grinder (D) on its support.

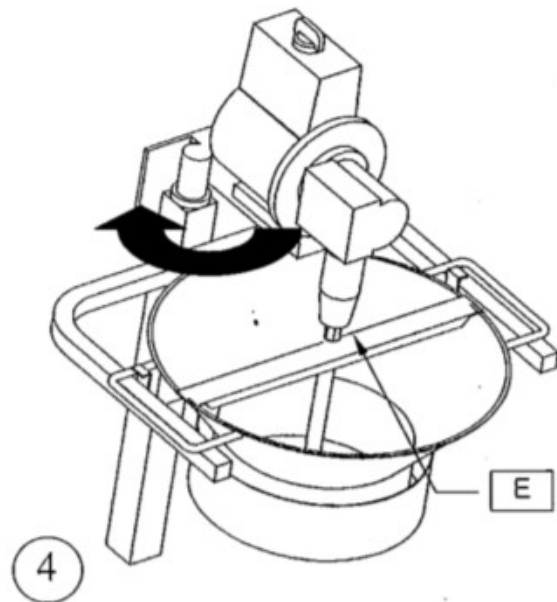

- Raise the engine.
- Rotate it to the left to bring it above the axis of the mill (E).
- Place the motor on the top of the axle.



To attach the grinder, turn on the motor and move the grinder slightly until it snaps into place. To release the grinder, lift the motor and rotate it.

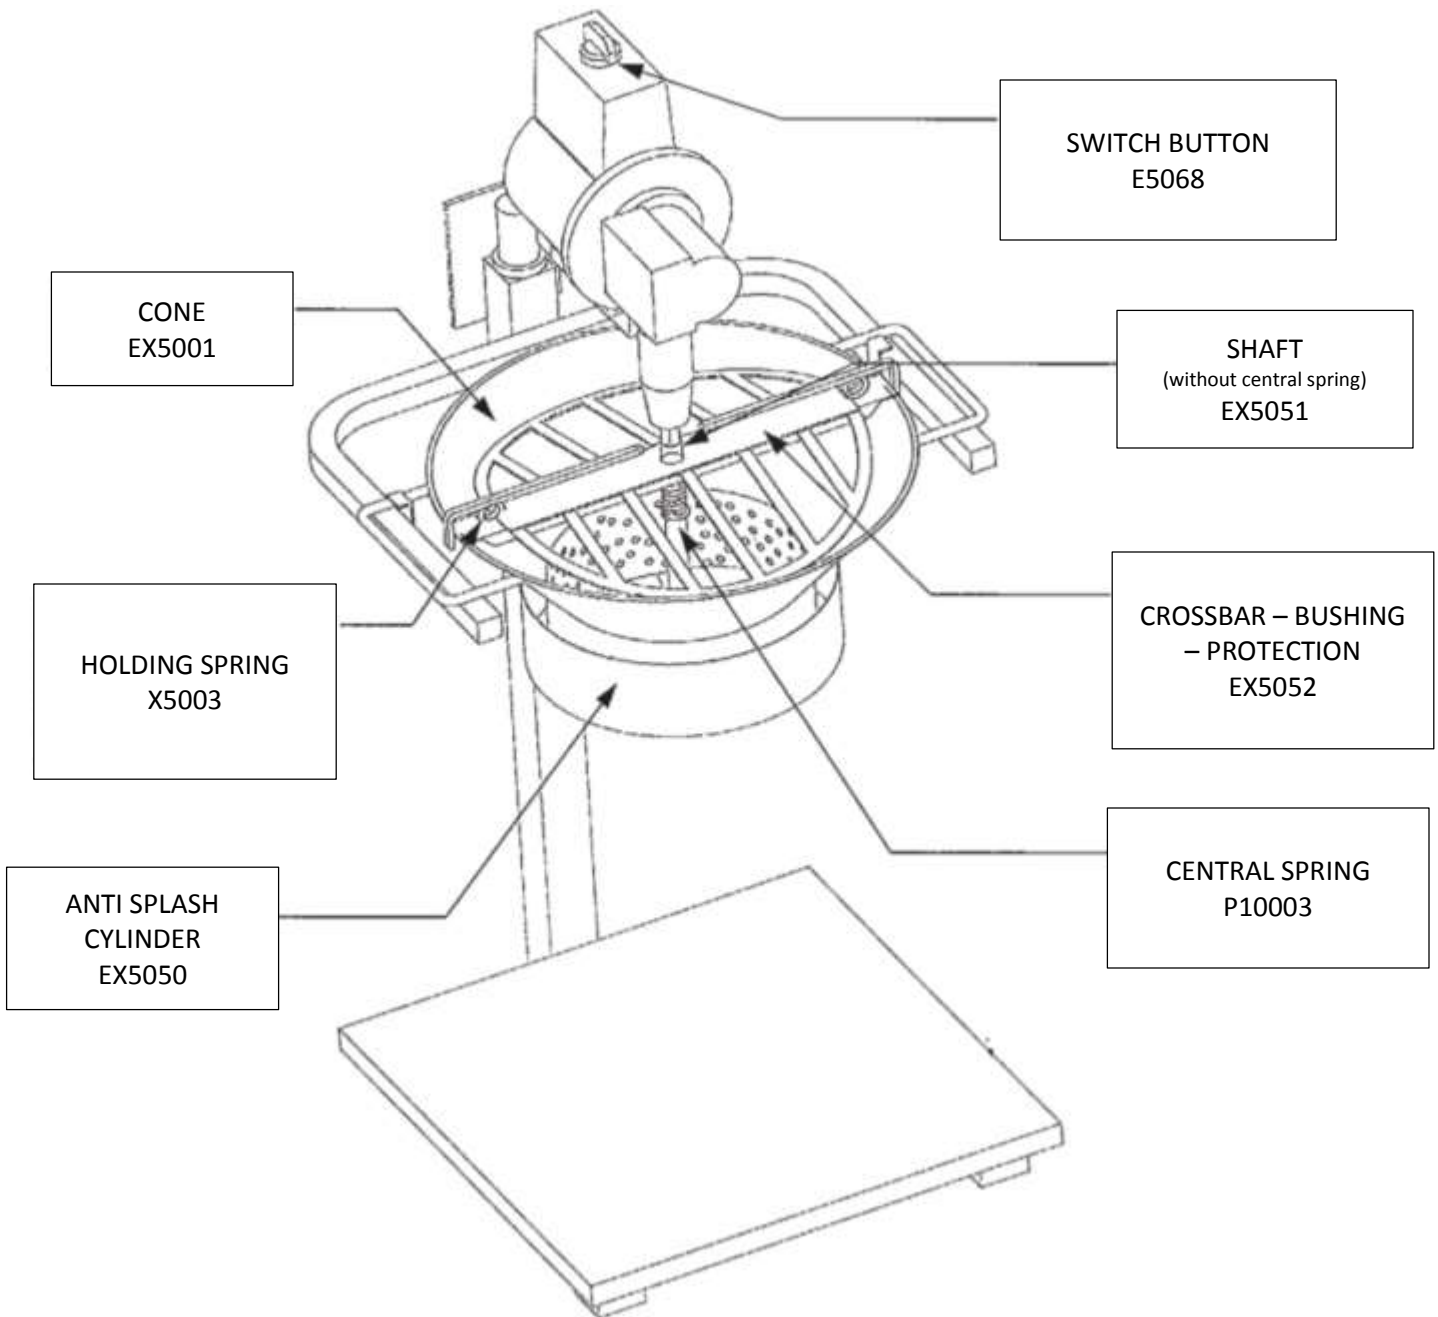

- To disassemble the cone, press on the two hook springs to release the clasps.
- Lift the engine and swing it to the side. You can now access the cone.

Let's help protect the environment!

Your device contains many recoverable or recyclable materials.
Take it to a collection point or to an approved service center for processing.