

MICROAIR For DUMMIES

Use master power switch to turn off/on MircoAir

Use top center control (Volume / on/ /quelch) for volume only

Knob is on / off / volume

Sleeve is for squelch control.

There is no need to use other controls

Leave in memory mode always.

If not in memory mode depress Mode switch until in memory operation

It is possible to lock system in program Mode (PROG)

To return to Memory Mode

Check that it is in Prog mode and the channel and frequencies agree with chart.

Depress Toggle Switch (lever on lower right) to return to memory mode

To change frequencies depress the push button next to the MicroAir:

Two place gliders have a similar switch in the rear panel

Channel Setup

Chan 1	124.875	AWOS
Chan 2	122.725	UNICOM FDK
Chan 3	123.300	
Chan 4	123.500	
Chan 5	126.100	POT TRACON
Chan 6	122.900	UNICOM W-73
Chan 25	121.500	INTL DISTRESS

Channel 25 operates by depressing the Priority Switch