

TABLE BELOW INDICATES CONTACT POSITION FOR BULLETIN 800T 2-3-4 WAY SWITCH
X - INDICATES CLOSED CONTACTS O - INDICATES OPEN CONTACTS

Operator Catalog Number	Contact Block Suffix Cat. No.	Location Of Blocks	Contact Block Used	Circuit Symbol	Side	Handle Position				
						 Handle Up	 Handle Left	 Handle Center	 Handle Right	 Handle Down
800T-T2M -T2S	B21	POS. #1	XD2	—	1	O	—	O	—	X
		POS. #2	XD2	—	2	X	—	O	—	O
	B42	POS. #1	XD3	—	1	X	—	X	—	O
		POS. #2	XD3	—	2	O	—	X	—	X
	B41	POS. #1	XD3	—	1	X	—	X	—	O
		POS. #2	XD2	—	2	X	—	O	—	O
	B20 11	POS. #1	XD2	—	1	O	—	O	—	X
		POS. #3	XD3	—	—	X	—	X	—	O
	B34	POS. #2	XA4 XD2 XD6	B1 B2	2	X	—	O	—	O
		POS. #1	XA4 XD2 XD6	B1 B2	1	O	—	O	—	X
		POS. #2	XA4 XD2 XD6	B1 B2	2	X	—	O	—	O
		POS. #1	XA4 XD2 XD6	B1 B2	1	O	—	O	—	X
	B40 11	POS. #1	XD2	—	1	O	—	O	—	X
		POS. #3	XD3	—	—	X	—	X	—	O
		POS. #2	XD2	—	2	X	—	O	—	O
		POS. #4	XD3	—	—	O	—	X	—	X
	B49 11	POS. #1	XD3	—	1	X	—	X	—	O
		POS. #3	XD3	—	—	X	—	X	—	O
		POS. #2	XD2	—	2	X	—	O	—	O
		POS. #4	XD3	—	—	O	—	X	—	X
	B53 11	POS. #1	XD3	—	1	X	—	X	—	O
		POS. #3	XD3	—	—	X	—	X	—	O
		POS. #2	XA4 XD2 XD6	B1 B2	2	X	—	O	—	O
		POS. #1	XA4 XD2 XD6	B1 B2	1	O	—	O	—	X
800T-T2M6 -T2S6	B68	POS. #1	XD1	—	1	—	X	O	O	—
		POS. #2	XD1	—	2	—	O	O	X	—
800T-T3M8 -T3S8	B26 11	POS. #1	XD2	—	1	O	—	O	O	X
		POS. #3	XD3	—	—	X	—	X	X	O
		POS. #2	XA	B A	2	X	—	O	O	O
		POS. #1	XA	B A	1	—	O	O	O	X
800T-T3M -T3S	B45	POS. #2	XA2 XD1 XD5	A1 A2	2	—	O	O	X	O
		POS. #1	XA	B A	1	—	O	O	O	O
		POS. #2	XA	B A	2	—	O	O	X	O
		POS. #1	XA	B A	1	—	O	O	O	X
800T-T4M -T4S	B22	POS. #1	XA	B A	1	O	O	O	O	X
		POS. #2	XA	B A	2	X	O	O	O	O
		POS. #1	XD2	—	1	O	O	O	O	X
		POS. #3	XD3	—	—	X	X	X	X	O
	B26 11	POS. #2	XA	B A	2	X	O	O	O	O
		POS. #1	XA	B A	1	O	O	O	X	O

11 Will not fit in standard die-cast enclosure.