

BOOK0795-F
Rev. 11/01

**SERIES 2600/2610
SINGLE-PHASE
ADJUSTABLE-SPEED
DC MOTOR CONTROLLERS
(1/6 - 5 HP)**



Fincor Electronics
3750 East Market Street
York, PA 17402
tel 717.751.4200
fax 717.751.4372

TABLE OF CONTENTS

<u>SECTION</u>	<u>TITLE</u>	<u>PAGE</u>
I	GENERAL INFORMATION	1
	Introduction	1
	General Description	1
	Model Types	1
	Motor Selection	2
II	INSTALLATION	3
	Installation Guidelines	3
	Installing The Controller	5
	Initial Startup	15
III	OPERATION	17
	Power On/Off	17
	Run	17
	Stop	17
	Speed Control	18
	Jog	18
	Reverse	18
	Inoperative Motor	18
IV	MAINTENANCE AND REPAIR	21
	General	21
	Adjustment Instructions	21
	Troubleshooting	24
V	OPTIONS	29
VI	PARTS LIST	31
VII	RATINGS AND SPECIFICATIONS	33
	Ratings	33
	Operating Conditions	34
	Performance Characteristics	35
	Adjustments	35
	Specifications	36
VIII	DRAWINGS	39
	INDEX	45

LIST OF TABLES

<u>TABLE</u>	<u>TITLE</u>	<u>PAGE</u>
1	Series 2600 Model Matrix	1
2	Series 2610 Model Matrix	2
3	Jumper J4 Positions	5
4	Initial Potentiometer Settings	15
5	Dynamic Braking Characteristics	17
6	Troubleshooting	24-27
7	Allowable Option Combinations	30
8	Parts List, Series 2600/2610 Controllers	31
9	Typical Application Data	33
10	Operating Voltages And Signals	34
11	Controller Weights	34
12	Speed Regulation Characteristics	35
13	Dip Switch S3 Settings	36
14	Shunt Field Data	37

LIST OF ILLUSTRATIONS

<u>FIGURE</u>	<u>TITLE</u>	<u>PAGE</u>
1	Controller Mounting Dimensions, Models 2601 and 2602	6
2	Controller Mounting Configurations, Models 2611 and 2612	8
3	Controller Mounting Dimensions, Models 2611 and 2612	8
4	Logic Connection Diagram, Run-Stop-Jog Switch, 1/6 - 2 HP	9
5	Logic Connection Diagram, Forward-Reverse Switch And Run-Stop-Jog Switch, 1/6 - 2 HP	9
6	Logic Connection Diagram, Run-Stop Pushbuttons And Run-Jog Switch, 1/6 - 5 HP	10
7	Logic Connection Diagram, Optional Armature Contactor Reversing Using Switches, 1/6 - 5 HP	10
8	Logic Connection Diagram, Optional Armature Contactor Reversing Using Pushbuttons And Run-Jog Switch, 1/6 - 5 HP	11
9	Logic Connection Diagram, Line Starting With Motor Speed Potentiometer, 1/6 - 5 HP	11
10	Signal Connection Diagram, Motor Speed Potentiometer	12
11	Signal Connection Diagram, Tachometer Feedback	12
12	Signal Connection Diagram, Current (Torque) Reference Potentiometer	12
13	Signal Connection Diagram, Line Starting Without A Motor Speed Potentiometer	13

LIST OF ILLUSTRATIONS

<u>FIGURE</u>	<u>TITLE</u>	<u>PAGE</u>
14	Signal Connection Diagram, 4 - 20 mA Interface	13
15	Signal Connection Diagram, 2-Wire Transducer	13
16	Signal Connection Diagram, 4 - 20 mA Transducer With Manual/Auto Switch	14
17	Signal Connection Diagram, Transducer With External Burden Resistor	14
18	Signal Connection Diagram, 0 - 10 VDC External Speed Reference Signal	14
19	Functional Schematic, Series 2600/2610	40
20	Schematic, Series 2600/2610, 1/6 - 3 HP	41
21	Schematic, Series 2600, 5 HP	42
22	Series 2600/2610 Control Board, 1/6 - 3 HP	43
23	Series 2600 Control Board, 5 HP	44

WARNING

The following must be strictly adhered to at all times.

- **YOU AS THE OWNER OR OPERATOR OF FINCOR DRIVE EQUIPMENT HAVE THE RESPONSIBILITY TO HAVE THE USERS OF THIS EQUIPMENT TRAINED IN ITS OPERATIONS AND WARNED OF ANY POTENTIAL HAZARDS OF SERIOUS INJURY.**
- **THE DRIVE EQUIPMENT SHOULD BE INSTALLED, OPERATED, ADJUSTED, AND SERVICED ONLY BY QUALIFIED PERSONNEL FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE EQUIPMENT AND THE HAZARDS INVOLVED INCLUDING THOSE DESCRIBED BELOW. FAILURE TO OBSERVE THIS WARNING CAN RESULT IN PERSONAL INJURY, LOSS OF LIFE, AND PROPERTY DAMAGE.**
- **THE NATIONAL ELECTRICAL CODE REQUIRES THAT AN AC LINE FUSED DISCONNECT OR CIRCUIT BREAKER BE PROVIDED IN THE AC INPUT POWER LINES TO THE CONTROLLER. THIS DISCONNECT MUST BE LOCATED WITHIN SIGHT OF THE CONTROLLER. DO NOT OPERATE THE CONTROLLER UNTIL THIS CODE REQUIREMENT HAS BEEN MET.**
- **THE DRIVE EQUIPMENT IS AT AC LINE VOLTAGE WHENEVER AC POWER IS CONNECTED TO THE DRIVE EQUIPMENT. CONTACT WITH AN ELECTRICAL CONDUCTOR INSIDE THE DRIVE EQUIPMENT OR AC LINE DISCONNECT CAN CAUSE ELECTRIC SHOCK RESULTING IN PERSONAL INJURY OR LOSS OF LIFE.**
- **BE SURE ALL AC POWER IS DISCONNECTED FROM THE DRIVE EQUIPMENT BEFORE TOUCHING ANY COMPONENT, WIRING, TERMINAL, OR ELECTRICAL CONNECTION IN THE DRIVE EQUIPMENT.**
- **ALWAYS WEAR SAFETY GLASSES WHEN WORKING ON THE DRIVE EQUIPMENT.**
- **DO NOT REMOVE OR INSERT CIRCUIT BOARDS, WIRES, OR CABLES WHILE AC POWER IS APPLIED TO THE DRIVE EQUIPMENT. FAILURE TO OBSERVE THIS WARNING CAN CAUSE DRIVE DAMAGE AND PERSONAL INJURY.**
- **ALL DRIVE EQUIPMENT ENCLOSURES, MOTOR FRAMES, AND REMOTE OPERATOR STATIONS MUST BE CONNECTED TO AN UNBROKEN COMMON GROUND CONDUCTOR. AN UNBROKEN GROUNDING CONDUCTOR MUST BE RUN FROM THE COMMON GROUND CONDUCTOR TO A GROUNDING ELECTRODE BURIED IN THE EARTH OR ATTACHED TO A PLANT GROUND. REFER TO THE NATIONAL ELECTRICAL CODE AND LOCAL CODES FOR GROUNDING REQUIREMENTS.**
- **THE ATMOSPHERE SURROUNDING THE DRIVE EQUIPMENT MUST BE FREE OF COMBUSTIVE VAPORS, CHEMICAL FUMES, OIL VAPOR, AND ELECTRICALLY CONDUCTIVE OR CORROSIVE MATERIALS.**
- **SOLID-STATE DEVICES IN THE CONTROLLER CAN BE DESTROYED OR DAMAGED BY STATIC ELECTRICITY. THEREFORE, PERSONNEL WORKING NEAR THESE STATIC-SENSITIVE DEVICES MUST BE APPROPRIATELY GROUNDED.**

SECTION I

GENERAL INFORMATION**INTRODUCTION**

This manual contains installation, operation, and maintenance and repair instructions for Fincor Series 2600/2610 Single-Phase Adjustable-Speed DC Motor Controllers. A parts list, list of options, ratings and specifications, and drawings are also included.

GENERAL DESCRIPTION

Series 2600/2610 Controllers statically convert AC line power to regulated DC for adjustable-speed armature control of shunt-wound and permanent-magnet motors.

Series 2600/2610 Controllers comply with applicable standards established by the National Electrical Code and NEMA for motor and industrial control equipment. The controllers are Underwriters Laboratories Listed (File No. E60207) and CSA approved (File No. LR19781).

MODEL TYPES**TABLE 1. SERIES 2600 MODEL MATRIX**

MODEL	FUNCTION				CONFIGURATION		OPERATOR CONTROLS		POWER SOURCE ^a & HP RANGE	
	RUN-STOP ^b	RUN-STOP-DB ^c	ARMATURE SWITCH REVERSE ^b	ARMATURE CONTACTOR REVERSE AND DB ^c	OPEN CHASSIS	ENCLOSED	LOCAL INTEGRAL	REMOTE	115V	230V
2601	X				X			X	1/6 - 1	1/3 - 3
2601A		X		X	X			X		
2601P0	X					X		X		
2601P1	X					X	X			
2601AP0		X		X		X		X		
2601AP1		X				X	X			
2601AP3				X		X	X			
2602	X				X			X	1/6 - 2	1/3 - 5
2602A		X		X	X			X		
2602P0	X					X		X		
2602P1	X					X		X		
2602AP0		X		X		X		X		
2602AP1		X				X	X			
2602AP3				X		X	X			

- a. Units are reconnectable
b. No armature contactor
c. Includes armature contactor

BOOK0795-F

TABLE 2. SERIES 2610 MODEL MATRIX

MODEL	FUNCTION				CONFIGURATION		OPERATOR CONTROLS		POWER SOURCE ^a & HP RANGE	
	RUN-STOP ^b	RUN-STOP-DB ^c	ARMATURE SWITCH REVERSE ^b	ARMATURE CONTACTOR REVERSE AND DB ^c	OPEN CHASSIS	ENCLOSED	LOCAL INTEGRAL	REMOTE	115V	230V
2611	X				X			X	1/6 - 1	1/3 - 2
2611P0	X					X		X		
2611P1	X					X	X			
2611P2			X			X	X			
2611A		X		X	X			X		
2611AP0		X		X		X		X		
2611AP1		X				X	X			
2611AP3				X		X	X			
2612	X				X			X	1/6 - 1	1/3 - 3
2612A		X		X	X			X		

a. Units are reconnectable

b. No armature contactor

c. Includes armature contactor

MOTOR SELECTION

Series 2600/2610 Controllers control the operation of general purpose DC motors designed for use with solid-state rectified power supplies. The motor may be shunt-wound, stabilized shunt-wound, or permanent magnet. For maximum efficiency, the motor should be rated for operation from a NEMA Code K power supply.

SECTION II

INSTALLATION

Before starting the installation, read this section thoroughly. In addition, a thorough review of the Ratings And Specifications (Section VII) is recommended. The following installation guidelines should be kept in mind when installing the controller.

INSTALLATION GUIDELINES

- 1. CONTROLLER MOUNTING** - Controllers rated 1/6 - 3 HP may be mounted either vertically or horizontally. Controllers rated at 5 HP may only be mounted vertically. Never mount the controller upside down, immediately beside or above heat generating equipment, or directly below water or steam pipes.

The controller must be mounted in a location free of vibration.

Multiple controllers may be mounted side by side, as close to each other as the mounting feet will allow. However, if a Model 2601 or 2602 Controller enclosure has Cover Hinges (Option 1638), 4 inches (102 mm) clearance must be provided on the hinged side of the enclosure to accommodate the swing of the cover.

The minimum clearance at the top and bottom of the controller may be as narrow as the conduit fittings allow.

- 2. ATMOSPHERE** - The atmosphere surrounding the controller must be free of combustible vapors, chemical fumes, oil vapor, and electrically conductive or corrosive materials.

The air surrounding an enclosed controller must not exceed 40 degrees C (104 degrees F), and the air surrounding an open-chassis controller must not exceed 55 degrees C (131 degrees F). Minimum air temperature is 0 degree C (32 degrees F) for enclosed and open-chassis controllers.

Model 2601 and 2602 Controllers (except 5 HP enclosed models) require a natural convection flow of air over the pins on the back of the controller to dissipate the heat generated by the controller. Allow 4 inches (102 mm) clearance on all sides from solid objects which block the flow of air to the pins.

- 3. CONTROLLER CONSTRUCTION** - Series 2600/2610 controller bases are made of die-cast aluminum with a powdered epoxy finish.

Series 2600/2610 Controller enclosures are totally enclosed, nonventilated, and comply with NEMA Type 4 and 12 standards. There is an oil resistant synthetic rubber gasket between the cover and base. Those models with integral operator controls include flexible boots to seal the switches, and a seal for the MOTOR SPEED potentiometer.

Series 2600 enclosure covers are molded of Noryl[®], which is not affected by most water-based solutions, detergents, acids, and bases. However, the cover may be softened by heptane, acetone, and other halogenated and aromatic hydrocarbons, so install Series 2600 Controllers in a location free of these substances.

Series 2610 enclosure covers are made of a die-cast aluminum alloy.

BOOK0795-F

4. **BRANCH CIRCUIT PROTECTION** - The National Electrical Code requires that a two-pole fused disconnect switch be installed in the AC line supply to the controller. Although an optional two-pole circuit breaker (Option 1010) is available for Model 2601 Controllers, this circuit breaker should not be considered as branch circuit protection. However, the existing branch circuit **may** already provide the required protection. Refer to the National Electrical Code and local codes.
5. **LINE SUPPLY** - The controller should not be connected to a line supply capable of supplying more than 100,000 amperes short-circuit current. Short-circuit current can be limited by using an input supply transformer of 50 KVA or less, or by using correctly sized current limiting fuses in the supply line ahead of the controller. Do not use a transformer with less than the minimum transformer KVA listed in Table 9, page 33.

If rated line voltage is not available, a line transformer will be required. If the line supply comes directly from a transformer, place a circuit breaker or disconnect between the transformer secondary and the controller. If power is switched in the transformer primary, transients may be generated which can damage the controller. See Table 9 (page 33) for minimum transformer KVA.

Do not use power factor correction capacitors on the supply line to the controller.

A 12-joule metal oxide varistor (MOV) is connected across the controller terminals. If higher energy transients are present on the line supply, additional transient suppression will be required to limit transients to 150% of peak line voltage.

When a 115 VAC line supply is used, connect the white (common) wire to Terminal L2 and connect the remaining (hot) wire to Terminal L1.

6. **ISOLATION TRANSFORMER** - While not required, an isolation transformer can provide the following advantages:
 - a. Reduce the risk of personal injury if high voltage drive circuits are accidentally touched.
 - b. Provide a barrier to externally generated AC supply transients. This can prevent controller damage from abnormal line occurrences.
 - c. Reduce the potential for damaging current if the motor armature, motor field, or motor wiring become grounded.
7. **GROUNDING** - Connect the green or bare (ground) wire of the line supply to the ground screw located near the top conduit entry hole in the controller base. Then ground the controller base by connecting the ground screw to earth ground.

The motor frame and operator control stations must also be grounded.

Personal injury may occur if the controller, motor, and operator stations are not properly grounded.

8. **WIRING PRACTICES** - The power wiring must be sized to comply with the National Electrical Code, CSA, or local codes. Refer to the controller data label for line and motor current ratings.

Do not use solid wire

Signal wiring refers to wiring for potentiometers, tachometer generators, and transducers. Control wiring refers to wiring for operator controls. Signal and control wiring may be run in a common conduit, but not in the same conduit with the power wiring. In an enclosure, nonshielded signal and control wiring must be kept separated from power wiring and only cross at 90 degree angles.

If shielded wire (such as Alpha 2422 - two conductor, 2423 - three conductor, 2424 - four conductor) is used for the signal and control wiring, connect the shields to chassis ground (ground screw on the controller base) and tape the opposite ends of the shields.

Two 3/4-14 NPT threaded holes are provided for conduit entry, one each in the top and bottom of the controller base.

- 9. OPTIONS** - This equipment manual is for use with the basic controller. If options are installed in the controller, they will be identified on the controller data label. The instruction sheets supplied with the options should be reviewed before the controller is installed.

INSTALLING THE CONTROLLER

1. Remove the controller front cover (if used) by removing the four cover screws.
2. Check components in the controller for shipping damage. Report shipping damage to the carrier.
3. Check the controller and motor data labels to be sure the units are electrically compatible.
4. Be sure the controller has been calibrated correctly for the motor being used. Calibration is performed by changing the position of a Jumper (J4) on the controller control board to comply with Table 3. To change the position of Jumper J4, pull the jumper from the control board and then push it onto the appropriate two pins on the board. For the location of J4, see Figure 22 (page 43) or Figure 23 (page 44) as applicable.

TABLE 3. JUMPER J4 POSITIONS

JUMPER POSITION	MOTOR ARMATURE CURRENT RATING (AMPERES)^a		
	2 HP Maximum	3 HP Maximum	5 HP Maximum
100%	10	15	25
80%	8	12	20
60%	6	9	15
40%	4	6	10
20%	2	3	5

a. Select the position closest to the motor nameplate armature current rating.

5. Check the positions of Jumpers J1, J2, and J3 on the control board. For the locations of J1, J2, and J3, see Figure 22 (page 43) or Figure 23 (page 44) as applicable. For a 230 VAC line supply and a 180V armature motor, Jumper J1 must be in the 230V position, and Jumpers J2 and J3 must both be in the 180V position. For a 115 VAC line supply, J1 must be in the 115V position, and J2 and J3 must be in the 90V position.

NOTE: If Option 1001 (Armature Contactor, Unidirectional), 1004 (Armature Contactor, Reversing), or 1775 (Signal Interface) is to be installed in the controller, do not offset the five-position plug (supplied with the option) at Connector J1 on the control board. Do not confuse Connector J1 with Jumper J1. Refer to the Instruction Sheet (ISP0703, ISP0666, ISP0653, respectively) supplied with the option for connection instructions.

BOOK0795-F

MODEL 2601 and 2602 CONTROLLERS

1. Mount the controller. Mounting dimensions are shown in Figure 1, below.
2. Install conduit and connect the power wiring to Terminals L1, L2, A1 (+), A2 (-), F+ and F-. Be sure to observe Installation Guidelines 5 and 8 on pages 4 and 5. If half-wave shunt field voltage is desired, connect one of the motor shunt field leads to Terminal F/2 (see Table 14 on Page 37).

NOTE: Low inductance motors require a full-wave field to prevent current instability.

3. If the controller contains any options that require external wiring, follow the wiring instructions in the instruction sheet supplied with the option.
4. If remote operator control wiring and/or signal wiring is required, connect the controller as shown in the appropriate connection diagram (Figures 4 through 18). Figures 4 through 9 show operator control connections, and Figures 10 through 18 show signal connections.
5. Set the DIP Switch (S3) as shown in the appropriate connection diagram. See Figure 22 (page 43) or Figure 23 (page 44), as applicable, for the location of DIP Switch S3. Also refer to Table 13, "DIP Switch Settings," page 36.
6. Install the controller cover, if used.

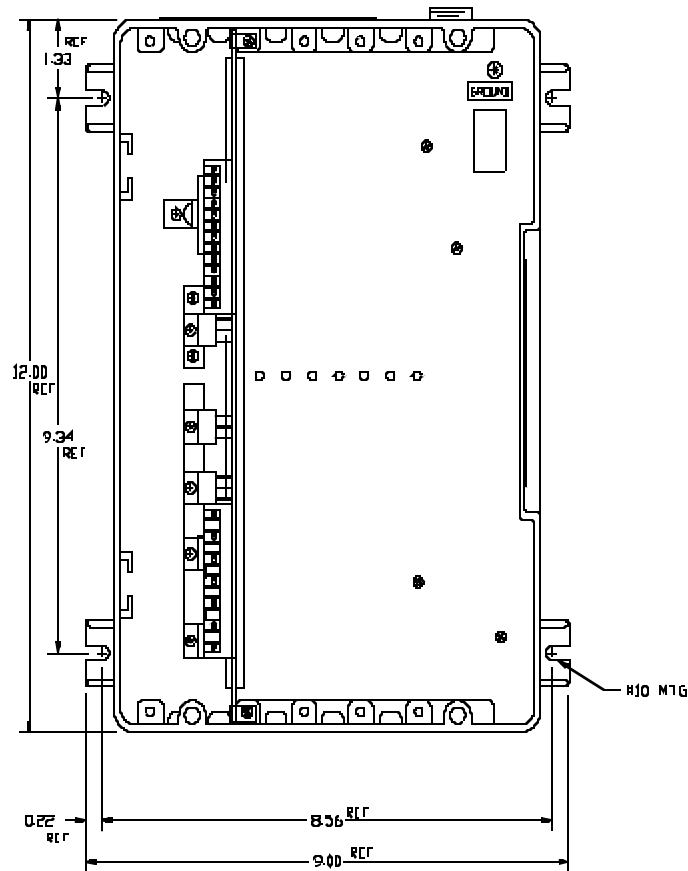


FIGURE 1. CONTROLLER MOUNTING DIMENSIONS, MODELS 2601 AND 2602

MODELS 2611 AND 2612

1. The controller may be surfaced mounted or panel mounted as shown in Figure 2, page 8. Mount the controller. Mounting dimensions are shown in Figure 3, page 8.
2. Conduit entry is made by punching out the knockout at the top or bottom of the controller base. To prevent component damage from knockout fragments, apply masking tape to the inside of the knockout before punching.
3. Connect the power wiring to Terminals L1, L2, A1 (+), A2 (-), F+ and F-. Be sure to observe Installation Guidelines 5 and 8 on pages 4 and 5. If half-wave shunt field voltage is desired, connect one of the motor shunt field leads to Terminal F/2 (see Table 14 on Page 37).

NOTE: Low inductance motors require a full-wave field to prevent current instability.

4. If the controller contains any options that require external wiring, follow the wiring instructions in the instruction sheet supplied with the option.
5. If remote operator control wiring and/or signal wiring is required, connect the controller as shown in the appropriate connection diagram (Figures 4 through 18). Figures 4 through 9 show operator control connections, and Figures 10 through 18 show signal connections.
6. Set the DIP Switch (S3) as shown in the appropriate connection diagram. See Figure 22 (page 43) or Figure 23 (page 44), as applicable, for the location of DIP Switch S3. Also refer to Table 13, "DIP Switch Settings," page 36.
7. Install the controller cover, if used.

BOOK0795-F

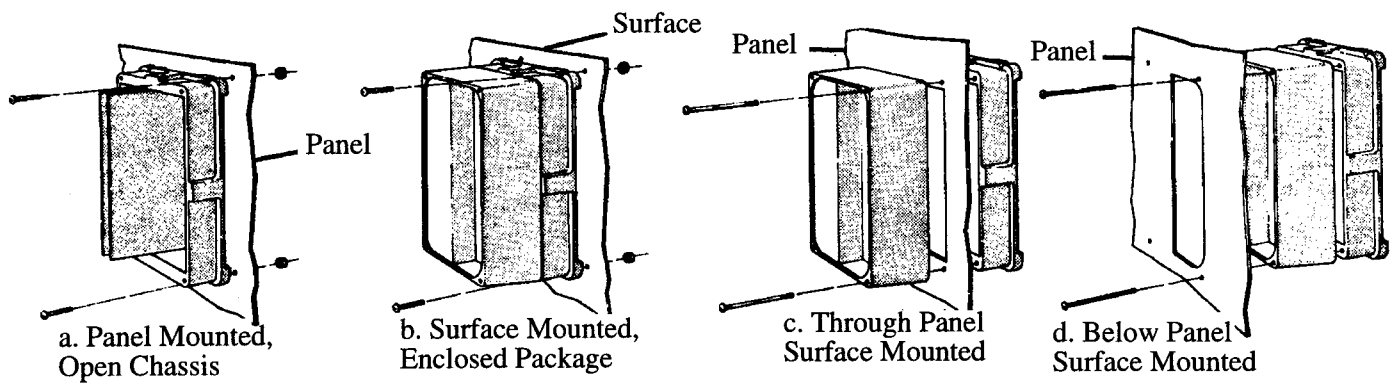


FIGURE 2. CONTROLLER MOUNTING CONFIGURATIONS, MODELS 2611 AND 2612

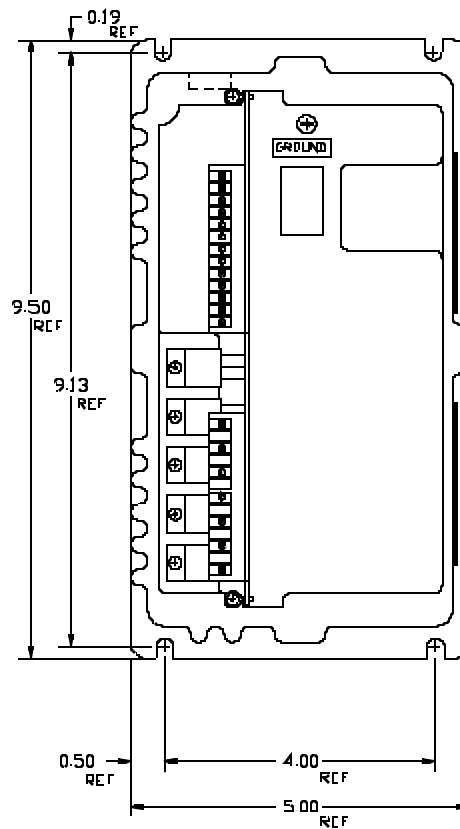


FIGURE 3. CONTROLLER MOUNTING DIMENSIONS, MODELS 2611 AND 2612

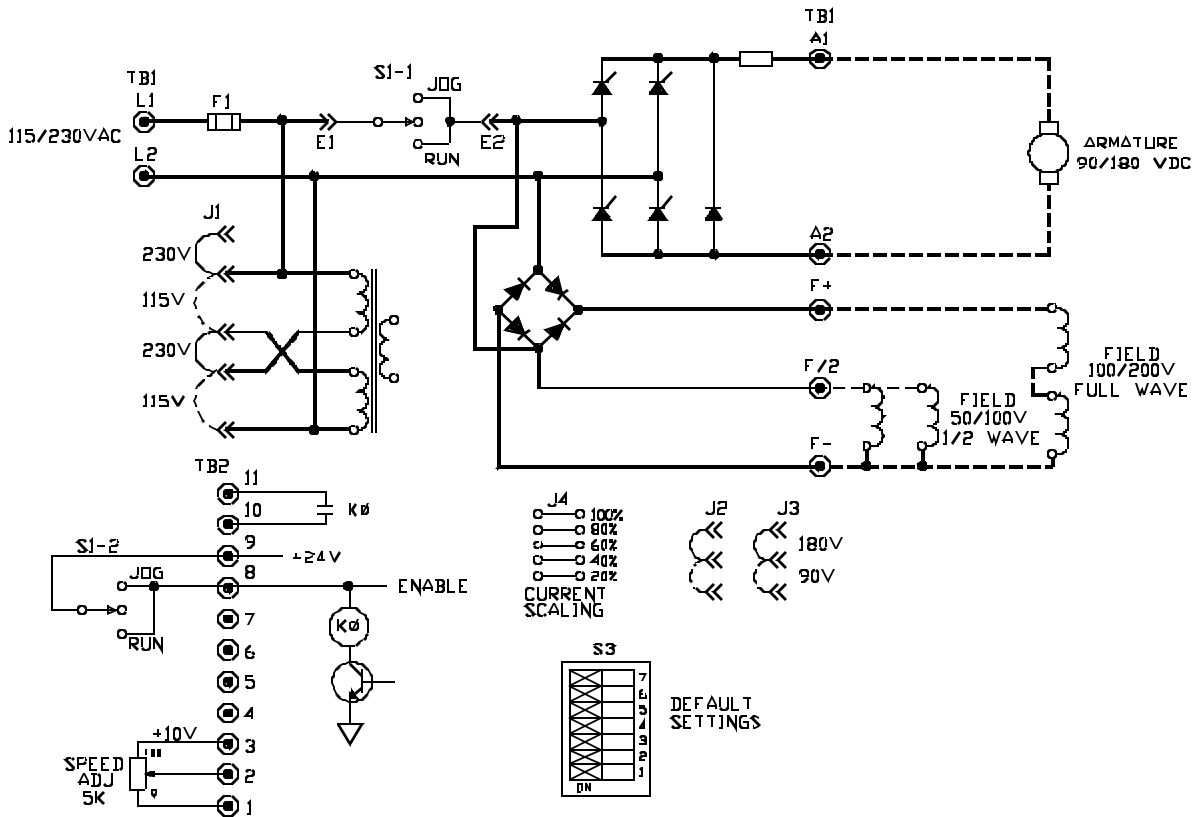


FIGURE 4. LOGIC CONNECTION DIAGRAM, RUN-STOP-JOG SWITCH, 1/6 - 2 HP

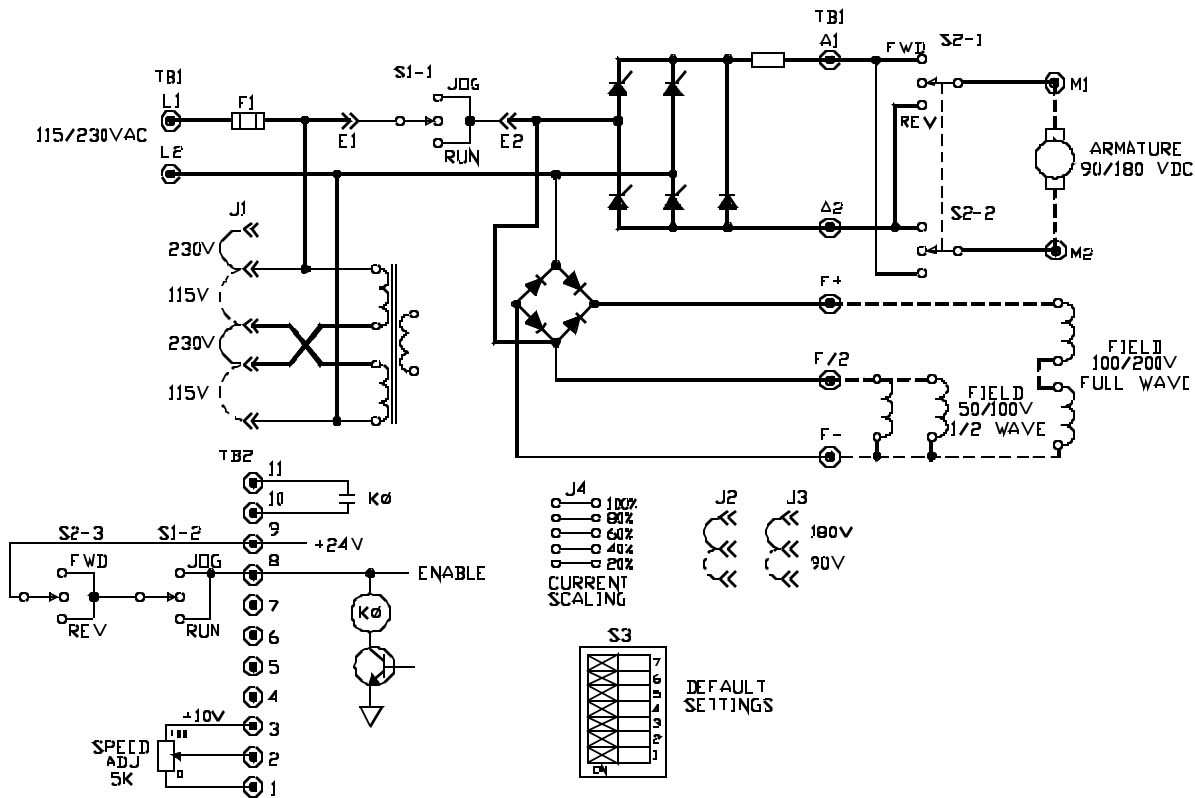


FIGURE 5. LOGIC CONNECTION DIAGRAM, FORWARD-REVERSE SWITCH AND RUN-STOP-JOG SWITCH, 1/6 - 2 HP

BOOK0795-F

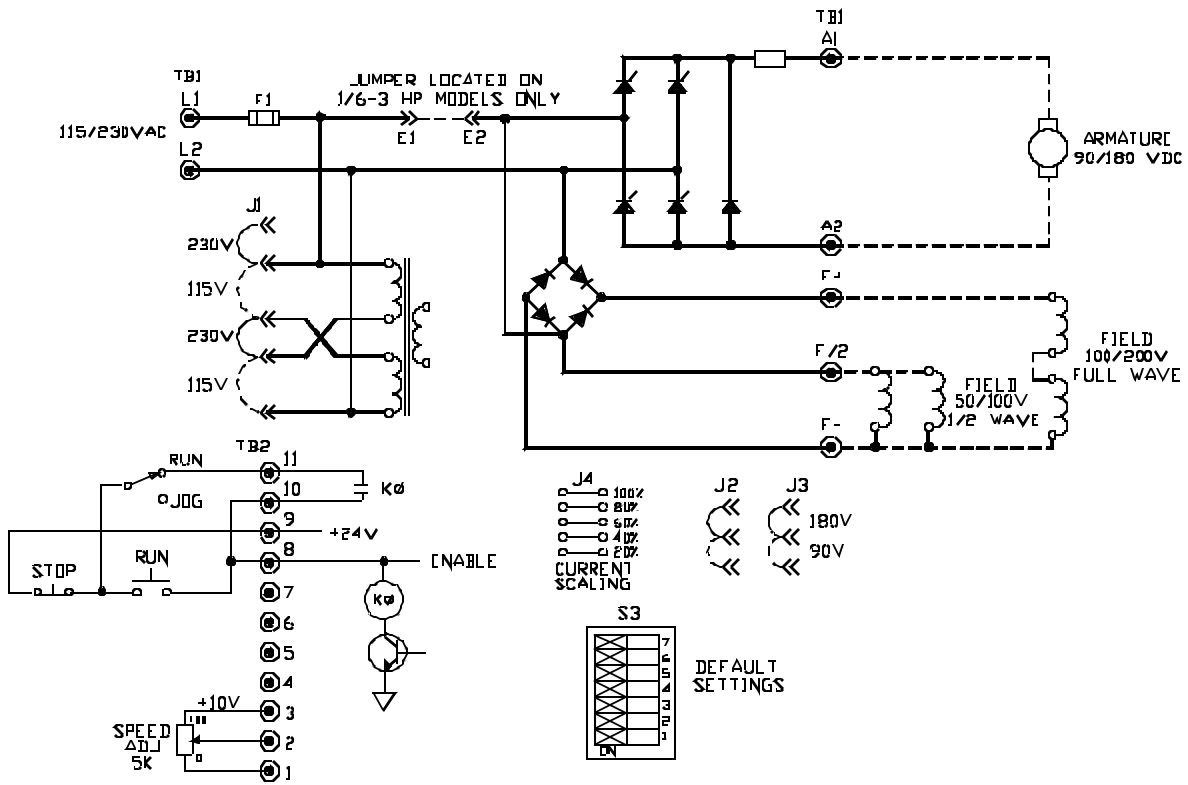


FIGURE 6. LOGIC CONNECTION DIAGRAM, RUN-STOP PUSHBUTTONS AND RUN-JOG SWITCH, 1/6 - 5 HP

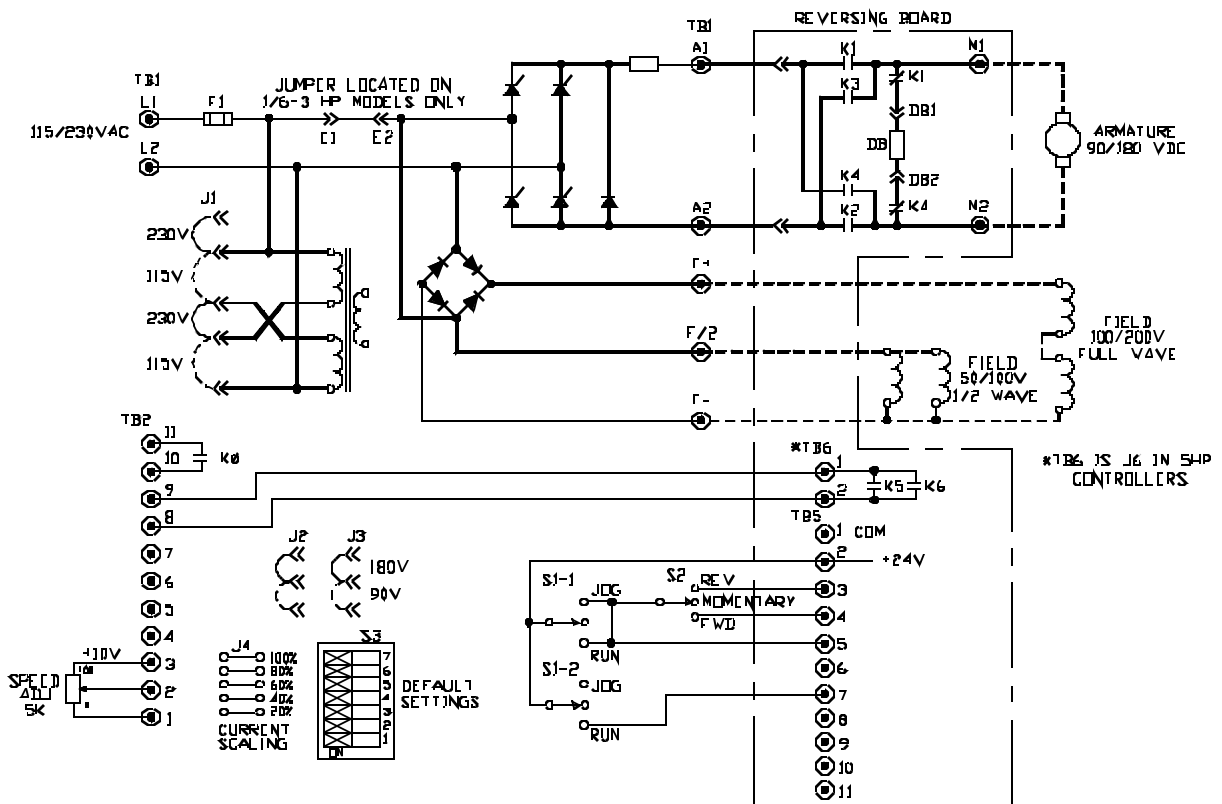


FIGURE 7. LOGIC CONNECTION DIAGRAM, OPTIONAL ARMATURE CONTACTOR REVERSING USING SWITCHES, 1/6 - 5 HP

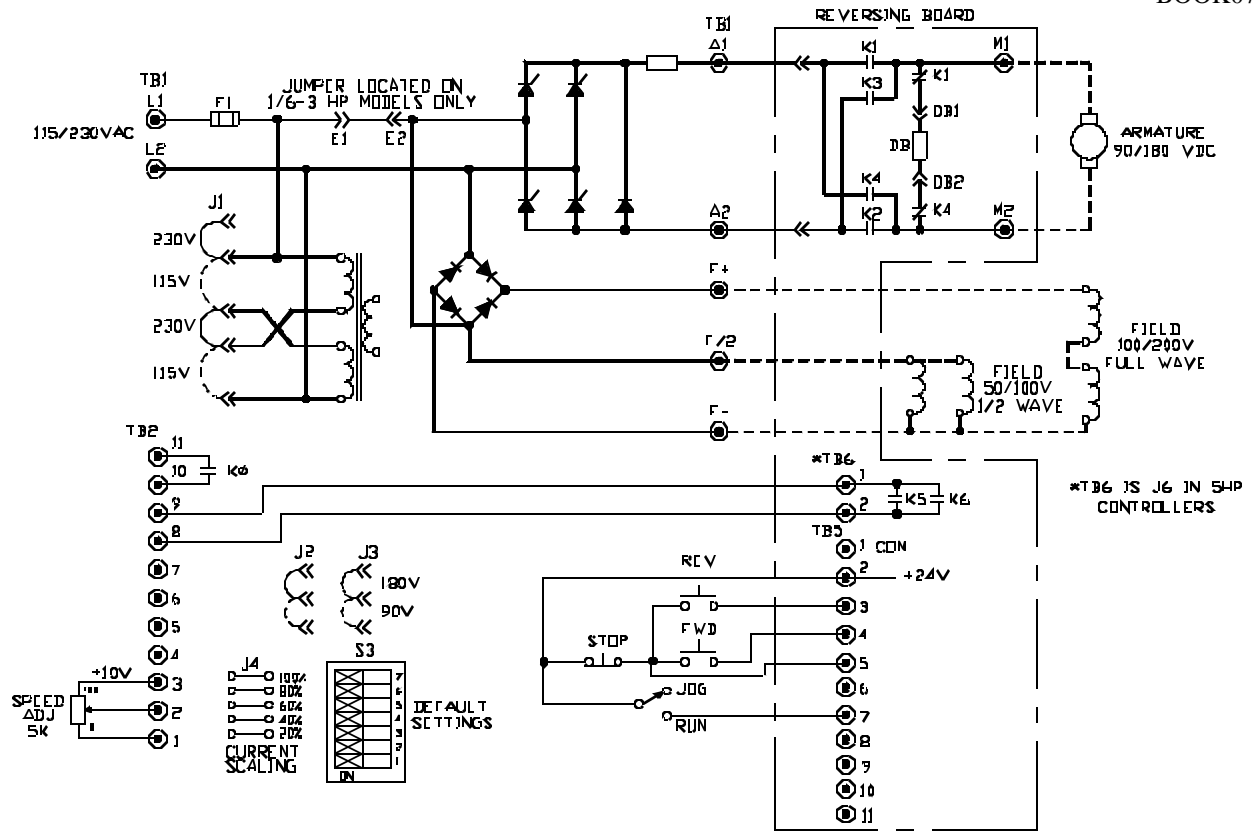


FIGURE 8. LOGIC CONNECTION DIAGRAM, OPTIONAL ARMATURE CONTACTOR REVERSING USING PUSHBUTTONS AND RUN-JOG SWITCH, 1/6 - 5 HP

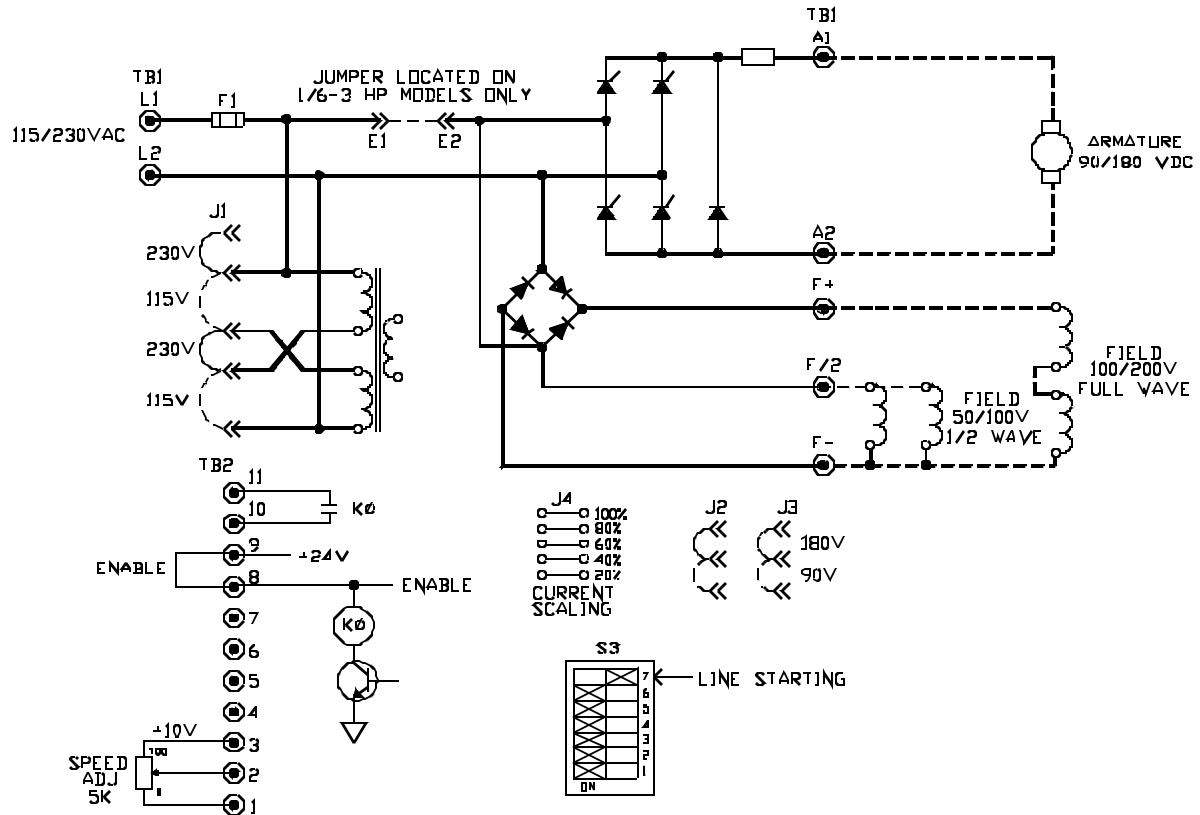


FIGURE 9. LOGIC CONNECTION DIAGRAM, LINE STARTING WITH MOTOR SPEED POTENTIOMETER, 1/6 - 5 HP

BOOK0795-F

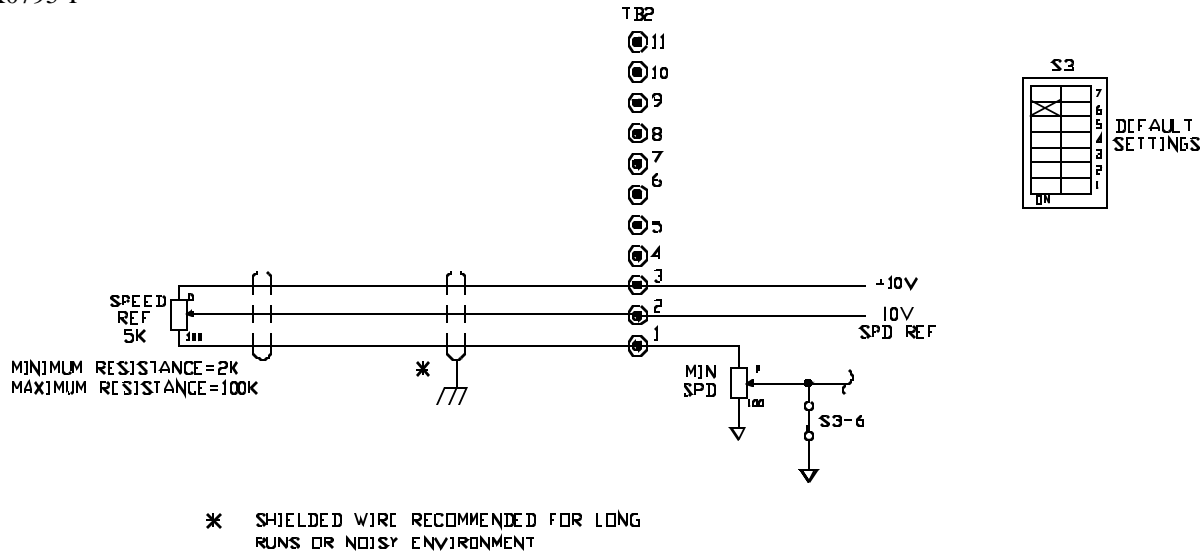


FIGURE 10. SIGNAL CONNECTION DIAGRAM, MOTOR SPEED POTENTIOMETER

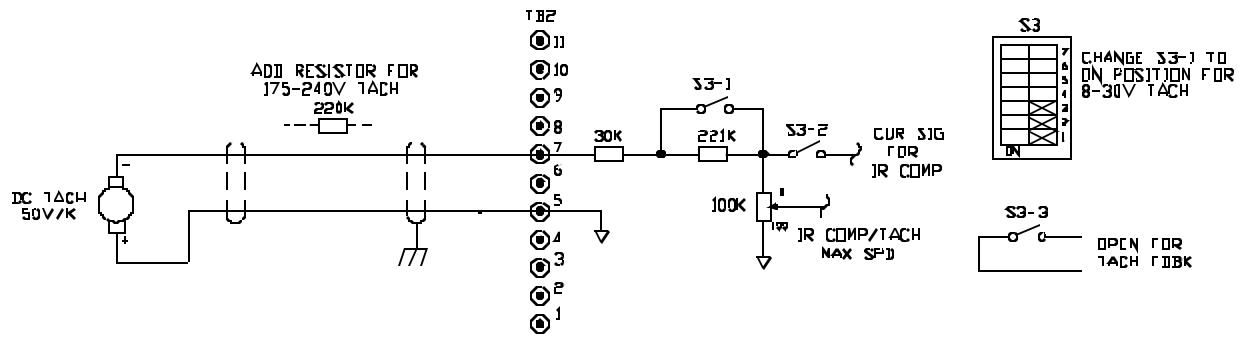


FIGURE 11. SIGNAL CONNECTION DIAGRAM, TACHOMETER FEEDBACK

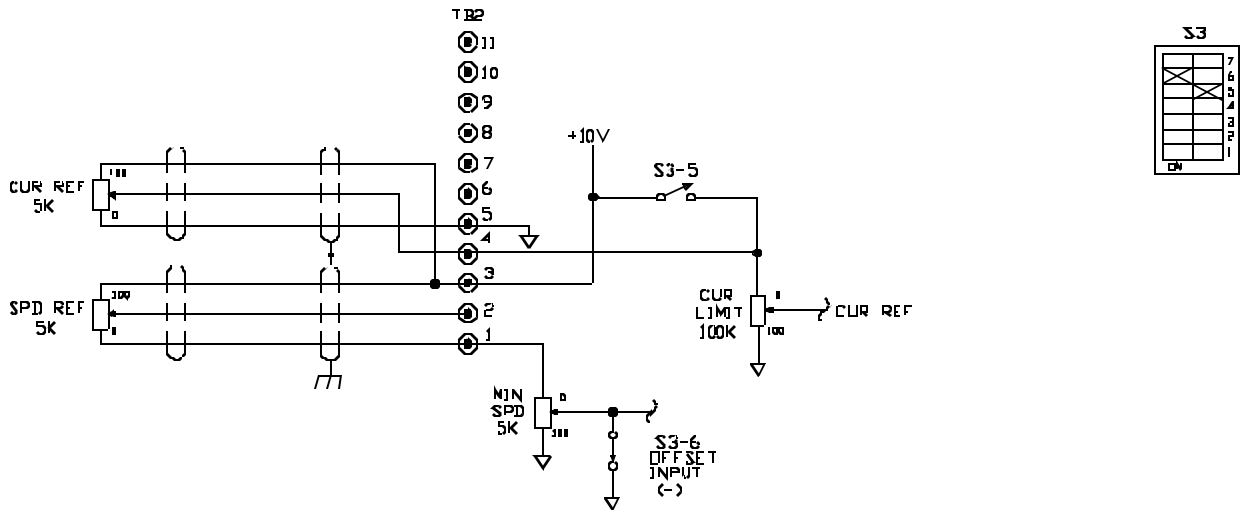


FIGURE 12. SIGNAL CONNECTION DIAGRAM, CURRENT (TORQUE) REFERENCE POTENTIOMETER

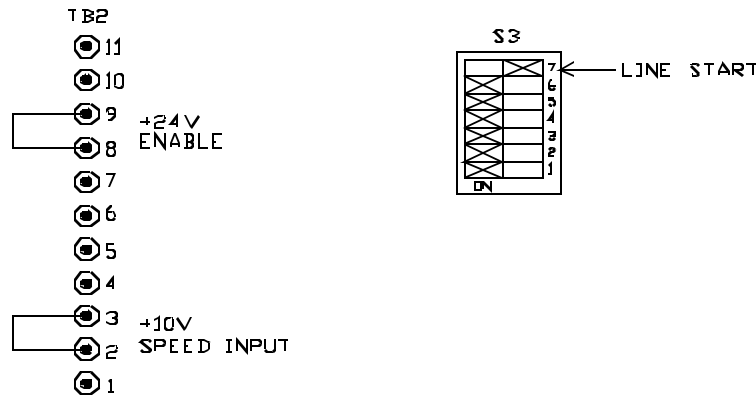


FIGURE 13. SIGNAL CONNECTION DIAGRAM, LINE STARTING WITHOUT A MOTOR SPEED POTENTIOMETER

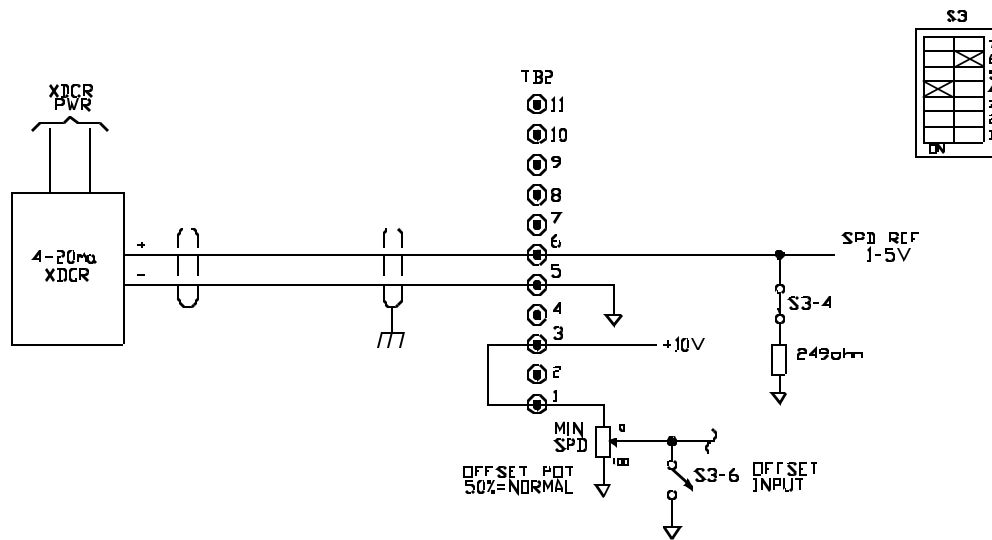


FIGURE 14. SIGNAL CONNECTION DIAGRAM, 4 - 20 mA INTERFACE

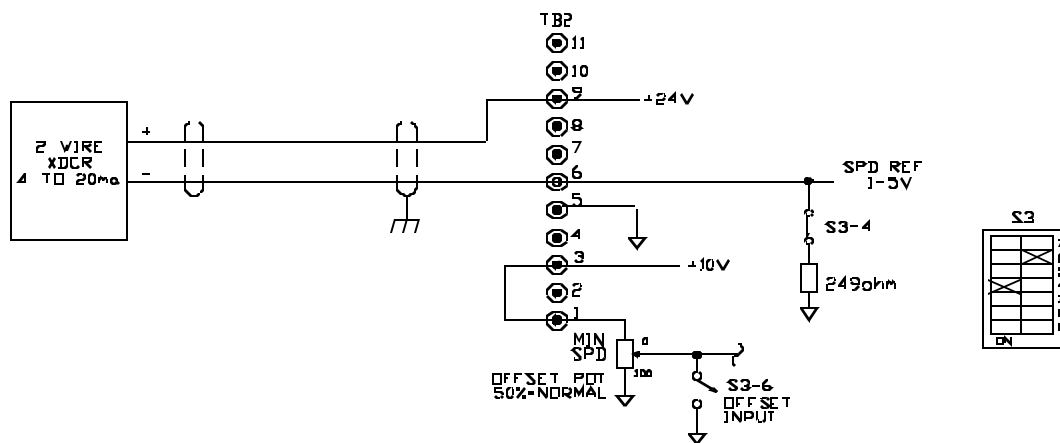


FIGURE 15. SIGNAL CONNECTION DIAGRAM, 2-WIRE TRANSDUCER

BOOK0795-F

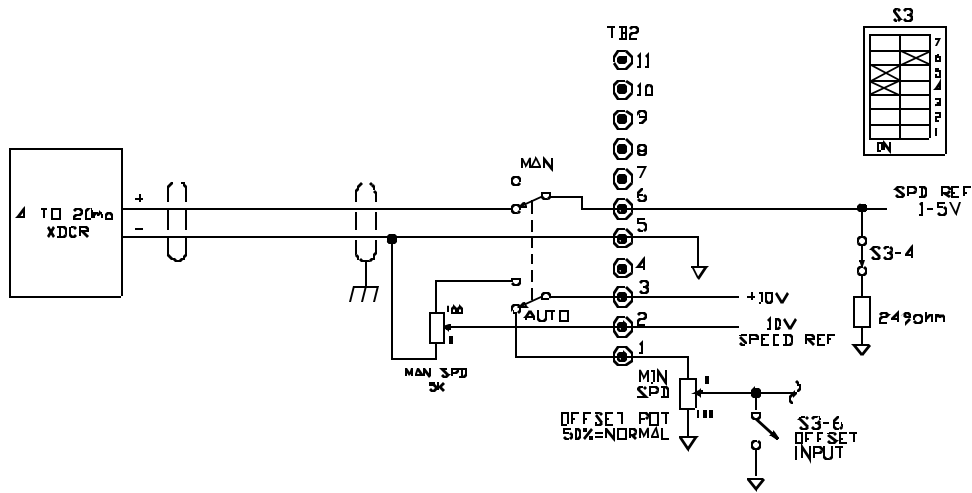


FIGURE 16. SIGNAL CONNECTION DIAGRAM, 4 - 20 mA TRANSDUCER WITH MANUAL/AUTO SWITCH

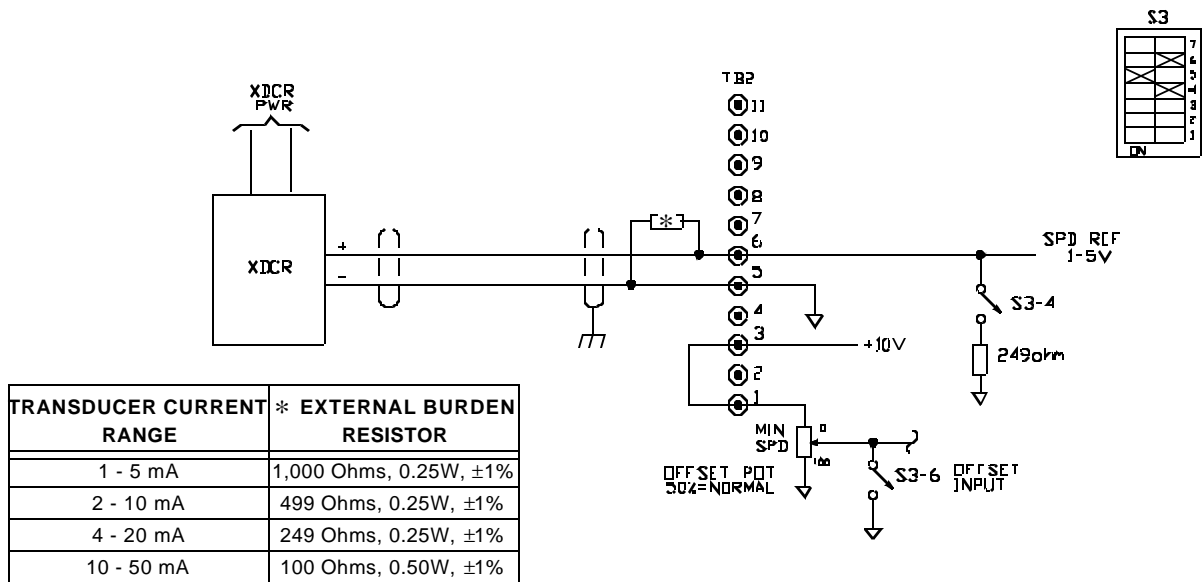


FIGURE 17. SIGNAL CONNECTION DIAGRAM, TRANSDUCER WITH EXTERNAL BURDEN RESISTOR

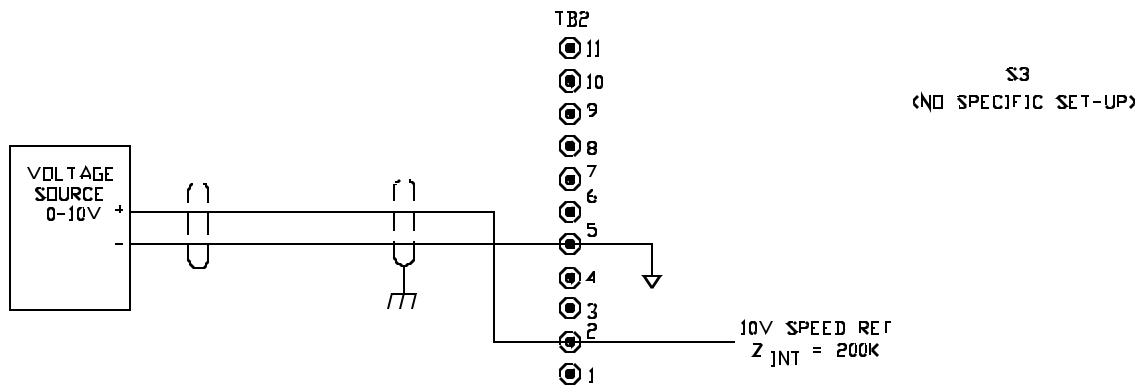


FIGURE 18. SIGNAL CONNECTION DIAGRAM, 0 - 10 VDC EXTERNAL SPEED REFERENCE SIGNAL

INITIAL STARTUP

1. Open the controller cover (if used) by removing the four cover screws.
2. Be familiar with all options installed in the controller by reviewing the instruction sheets supplied with the options.
3. Be sure all wiring is correct and all wiring terminations are tightened securely.
4. Be sure the controller is calibrated correctly. See steps 4 and 5 under “Installing The Controller” on page 5.
5. Be sure the AC supply voltage to the controller agrees with the controller data label.
6. The potentiometers in the controller are factory adjusted as shown in Table 4. These settings will provide satisfactory operation for most applications. If different settings are required, refer to “Adjustment Instructions” starting on page 21.

TABLE 4. INITIAL POTENTIOMETER SETTINGS

POTENTIOMETER	SETTING	DESCRIPTION
ACCEL	2/3 Turn Clockwise	8 Seconds
CUR LMT	Fully Clockwise (100%)	150% Load
DECEL	2/3 Turn Clockwise	8 Seconds
IR/TACH	Fully Counterclockwise (0%)	0% Boost
MAX SPD	3/4 Turn Clockwise	100% Speed
MIN SPD (Offset)	Fully Counterclockwise (0%)	0% Speed

7. If the controller has a cover, place it on the controller and secure it with the four cover screws.
8. Turn-on the AC supply to the controller.
9. Check motor rotation, as follows:
 - a. If a MOTOR SPEED potentiometer is used, turn it fully counterclockwise. If an external signal is used for the speed reference, set it at minimum.
 - b. If a RUN-STOP-JOG switch is used, place it in RUN position. Otherwise, initiate a Run command.
 - c. Turn the MOTOR SPEED potentiometer clockwise or increase the speed reference signal, as applicable. To stop the motor, place the switch in STOP position or initiate a Stop command, as applicable.

If the motor rotates in the wrong direction, turn-off the AC supply to the controller, and then interchange the motor armature leads at the motor connection box or at the controller terminal board.

10. Refer to Section III, “Operation” for operating instructions.

BOOK0795-F

Blank Page

SECTION III

OPERATION

POWER ON/OFF

To energize the drive, turn-on the AC supply voltage to the controller. When this occurs, the motor shunt field energizes with rated field voltage, and potentially hazardous voltage is present at the motor armature terminals. **These voltages can cause electric shock resulting in personal injury or loss of life.**

If the AC supply is interrupted, and the controller is not set up for line starting, the motor will not restart when the AC supply is restored until the controller is reset by initiating a Stop command and then a Start command. If the controller is set up for line starting, and the AC supply is interrupted, the motor will restart when the AC supply is restored, provided the external AC line contactor is pulled in.

RUN

If a RUN-STOP-JOG switch is used, place the switch in RUN position. Otherwise, initiate a Run command. A Run command will accelerate the motor to the setting of the MOTOR SPEED potentiometer or external speed reference signal, as applicable. The rate of acceleration is preset by the ACCEL potentiometer on the controller control board.

STOP

If a RUN-STOP-JOG switch is used, place the switch in STOP position. Otherwise, initiate a Stop command. A Stop command will stop the motor at a rate proportional to the stopping rate of the motor load.

If the controller has dynamic braking, the motor stopping time will be reduced. Dynamic braking provides exponential rate braking of the motor armature, which occurs when the circuit is opened between the controller and the motor armature, and one or more resistors connect across the motor armature.

The dynamic braking resistors provide initial braking torque as shown in Table 5.

TABLE 5. DYNAMIC BRAKING CHARACTERISTICS^a

COMPONENT	MODEL	RATED VOLTAGE	RATED HORSEPOWER									
			1/6	1/4	1/3	1/2	3/4	1	1-1/2	2	3	5
BRAKING TORQUE (%)	2601 2602 2612	115V	300	215	170	110	75	60	NA	NA	NA	NA
		230V	NA	NA	NA	400	320	220	145	105	85	96
	2611	115V	180	129	103	66	44	34	NA	NA	NA	NA
		230V	NA	NA	400	278	190	130	88	62	NA	NA
STOPS PER MINUTE	2601 2602 2612	115V	9	6	5	5	4	4	NA	NA	NA	NA
		230V	NA	NA	NA	5	4	4	3	3	2	2
	2611	115V	15	12	11	8	6	2	NA	NA	NA	NA
		230V	NA	NA	12	8	6	1	1	1	NA	NA

a. HIGH INERTIA LOADS MAY EXTEND BRAKING TIME AND CAUSE THE WATTAGE RATING OF THE DYNAMIC BRAKING RESISTORS TO BE EXCEEDED.

BOOK0795-F

An antiplug feature is included with optional Armature Contactor Reversing With Dynamic Braking (Option 1004). This feature prevents restarting the motor before the motor has braked to a stop.

SPEED CONTROL

Motor speed is directly proportional to the setting of the MOTOR SPEED potentiometer or the magnitude of an external speed reference signal, as applicable. This potentiometer or the speed reference signal may be adjusted while the motor is running or may be preset before the motor is started.

The rates of acceleration and deceleration are preset by the ACCEL and DECEL potentiometers, respectively, located on the controller control board.

Maximum speed and minimum speed (or offset) are preset by the MAX SPD and MIN SPD potentiometers, respectively, located on the control board.

JOG

If a RUN-STOP-JOG switch is used, place the switch in JOG position. Otherwise initiate a Jog command. Jog is momentary, causing motor rotation only while the switch is held in JOG position or while a Jog command is active. Release the switch to stop the motor.

Normally, jog speed is directly proportional to the setting of the MOTOR SPEED potentiometer. If a separate JOG SPEED potentiometer is used, jog speed will be directly proportional to the setting of the JOG SPEED potentiometer.

REVERSE

To reverse motor rotation on controllers with reversing capabilities, initiate a Stop function and then initiate a reversing command. The motor will then accelerate to the setting of the MOTOR SPEED potentiometer or external speed reference signal, as applicable. Forward and reverse speed ranges are identical.

If a FWD-REV switch is used, it must have a center position interlock, which requires a momentary relaxation of pressure before the opposite position can be engaged. The center position causes a Stop command and allows time for the motor to stop before a Reverse command is initiated. If a Reverse command is initiated while the motor is rotating, motor and controller damage may occur.

If Option 1004 (Armature Contactor Reversing With Dynamic Braking) is installed, an antiplug feature prevents reversing the motor before the motor has stopped.

INOPERATIVE MOTOR

If the motor stops and/or won't start, turn-off the AC supply to the controller, remove the controller cover (if used), and check the AC line fuse on the controller control board. For the location of the fuse, see Figure 22 (page 43) or Figure 23 (page 44), as applicable. If the fuse is blown, refer to the Troubleshooting Table (Table 6).

If the fuse is not blown, the internal overload monitor may have shut down the controller. The overload monitor will shut down the controller if the motor armature current exceeds 120% of rated for a length of time of continuous operation. The length of time is determined by the amount of the overload. If the overload monitor trips, reset the controller by initiating a Stop command, removing the overload, and then initiating a Run command to restart. Repeated shutdown indicates an overload condition (mechanical or electrical) which must be removed. Refer to the Troubleshooting Table (Table 6).

BOOK0795-F

Blank Page

SECTION IV

MAINTENANCE AND REPAIR

GENERAL

1. Keep the controller dry and free of dust, dirt, and debris. No parts require periodic replacement.
2. Periodically turn-off the AC line supply to the controller and check all wire terminations to be sure they are tight.
3. Visually check components for damage due to overheating or breakage. All damaged and/or faulty components must be replaced for satisfactory operation.
4. Maintain the motor according to maintenance instructions supplied by the motor manufacturer.

ADJUSTMENT INSTRUCTIONS

ACCELERATION

1. Set the MOTOR SPEED potentiometer at 100% or the external speed reference signal at maximum, as applicable.
2. Initiate a Run command and observe the time required for the motor to reach maximum speed.
3. Adjust the ACCEL potentiometer for the desired rate. Full clockwise rotation is the fastest acceleration (0.2 second), and full counterclockwise rotation is the slowest acceleration (30 seconds).

DECELERATION

1. With the motor running at maximum speed, quickly reset the MOTOR SPEED potentiometer to zero, or quickly decrease the speed reference signal to minimum, as applicable, and observe the time required for the motor to reach minimum speed.
2. Adjust the DECEL potentiometer for the desired rate. Full clockwise rotation is the fastest deceleration (0.2 second), and full counterclockwise rotation is the slowest deceleration (30 seconds).

IR COMPENSATION

IR compensation is used only when the controller is programmed for armature feedback. The IR/TACH potentiometer is factory set at zero (full counterclockwise rotation) for satisfactory operation with most motors. If improved speed regulation is desired, readjust IR compensation as follows:

BOOK0795-F

1. Be sure Segments 2 and 3 of DIP Switch S3 are in ON (Closed) position.
2. If the motor is shunt-wound, run it at rated base speed. If the motor is a permanent-magnet type, run it about 1/3 speed.
3. Turn the IR/TACH potentiometer clockwise *slowly* until motor speed becomes unstable. Then turn the potentiometer counterclockwise until motor speed stabilizes.

MAXIMUM SPEED (ARMATURE FEEDBACK)

The MAX SPD potentiometer adjusts maximum speed by setting maximum armature voltage. The voltage range is from 50% to 100% of rated armature voltage. If the controller is programmed for tachometer feedback, the MAX SPD potentiometer sets the armature backup voltage.

1. Be sure Segments 2 and 3 of DIP Switch S3 are in ON (Closed) position.
2. Turn the MAX SPD potentiometer fully clockwise (100%). This setting provides 90 VDC armature voltage with a 115 VAC line, or 180 VDC armature voltage with a 230 VAC line.
3. Run the motor at maximum speed, and turn the MAX SPD potentiometer counterclockwise for the desired maximum speed.

NOTE: If the MAX SPD potentiometer is turned too far counterclockwise, speed instability may occur.

MAXIMUM SPEED (TACHOMETER FEEDBACK)

Tachometer feedback provides speed regulation characteristics as shown in Table 12, page 35. However, these characteristics are based on the use of Fincor Electronics cataloged motors and generators. Regulation characteristics and drive performance cannot be guaranteed with motors and/or tachometer generators that have not been evaluated. For example, some tachometer generators with low voltage/RPM ratios may not provide adequate feedback signal levels at low speed.

1. Be sure Segments 2 and 3 of DIP Switch S3 are in OFF (Open) position.
2. Set Segment 1 of DIP Switch S3 for the expected tachometer generator speed at maximum speed, as follows:

SEGMENT 1 POSITION	TACH VOLTAGE
ON (Closed)	8V - 30V
OFF (Open)	31V - 175V

3. Turn the IR/TACH potentiometer fully counterclockwise (0%). This setting provides maximum motor speed.
4. Be sure the MAX SPD potentiometer has been adjusted correctly.

5. Run the motor at maximum speed, and start turning the IR/TACH potentiometer clockwise until motor speed increases above desired speed. Continue turning the potentiometer clockwise until motor speed decreases to desired speed.

MINIMUM SPEED

1. Be sure Segment 6 of DIP Switch S3 is in ON (Closed) position.
2. Turn the MIN SPD potentiometer fully counterclockwise (0%) for zero speed.
3. Set the MOTOR SPEED potentiometer at 0% or the external speed reference signal at minimum, as applicable.
4. Initiate a Run command and adjust the MIN SPD potentiometer for the desired minimum speed (adjustable from 0 to 40% of motor base speed).

OFFSET

An offset adjustment is desirable when a 4 mA to 20 mA speed reference signal is used. The MIN SPD potentiometer compensates for the 4 mA offset.

1. Be sure Segment 6 of DIP Switch S3 is in OFF (Open) position, and a wire jumper connects between TB2-1 and TB2-3.
2. Set the speed reference signal at 4 mA and initiate a Run command.
3. Adjust the MIN SPD potentiometer as desired.

NOTE: The MIN SPD potentiometer may be ineffective between 50% and 100%.

CURRENT LIMIT

1. Turn the CUR LMT potentiometer fully clockwise (100%) to limit motor armature current at 150% of rated.
2. Turn the CUR LMT potentiometer counterclockwise to reduce maximum motor armature current.

- NOTES:
- a. An LED glows red on the controller control board when motor armature current is being limited.
 - b. An external 5K ohm Current (Torque) Limit potentiometer can be used as shown in Figure 12 on page 12. Segment 5 of DIP Switch S3 must be in OFF (Open) position if an external Current (Torque) Limit potentiometer is desired.

TROUBLESHOOTING

TABLE 6. TROUBLESHOOTING

INDICATION	POSSIBLE CAUSE	CORRECTIVE ACTION
1. Motor won't start (See "Inoperative Motor," page 18.)	AC line open	Be sure rated AC line voltage is applied to the controller.
	Operator controls inoperative or connected incorrectly	Repair accordingly.
	Open circuit between Connectors E1 and E2 in 1/6 - 3 HP controllers	A wire jumper or switch must connect E1 to E2.
	Controller not reset	Initiate a Stop command and then a Start command.
	Line Voltage Selection Jumper J1 in wrong position	See Step 5 on page 5 under, "Installing The Controller."
	Controller not enabled	Be sure +24 VDC is applied to Terminal TB2-8.
	Loss of speed reference signal	Check for 0 - 10 VDC, 4 - 20 mA, or 0 - 5 VDC speed reference signal, as applicable.
	Controller not adjusted correctly	Turn the ACCEL and CUR LIM potentiometers fully clockwise (100%).
	DIP Switch S3 not set correctly	See Table 13, page 36.
	Open shunt field winding or wiring to the motor shunt field, causing loss of torque ^a	Check the motor shunt field and associated circuitry for a loose connection or a broken wire. Repair accordingly.
	Motor failure	Repair or replace the motor.
Control board failure	Replace the control board.	
2. Controller fuse blows when AC line power is applied to the controller	Wiring faulty or incorrect	Check all external wiring terminating in the controller. Correct accordingly.
	Circuit, component, or wiring grounded	Remove ground fault.
	Two or more SCR's shorted	Replace shorted SCR's or the control board.
	Varistor RV1 shorted	Replace RV1 or the control board.
	Shunt Field Bridge BR1 shorted ^f	Replace BR1 or the control board.
	Motor shunt field shorted or grounded ^f	Repair or replace the motor.
	Control board failure	Replace the control board.
Contd on next page		

TABLE 6. TROUBLESHOOTING

INDICATION	POSSIBLE CAUSE	CORRECTIVE ACTION
3. Controller fuse blows when a Start command is initiated	One or more SCR's or Diode D1 shorted	Replace shorted devices or the control board.
	Motor shorted or grounded	Repair or replace the motor.
	Control board failure causing SCR's to turn-on fully	Replace the control board.
4. Controller fuse blows while the motor is running	Motor overloaded	Check shunt field current. ^a Low shunt field current causes excessive armature current. If field current is adequate, check for a mechanical overload. If the unloaded motor shaft does not rotate freely, check motor bearings. Also check for a shorted motor armature. Motor overload can also be caused by incorrect gear ratio. Correct accordingly.
	Loose or corroded connection. Wiring faulty, incorrect, or grounded	Check all terminals, connections, and wiring between the line, controller, and motor.
	Motor shorted or grounded	Repair or replace the motor.
	One or more SCR's or Diode D1 breaking down (shorting intermittently)	Replace shorted devices or the control board.
	Control board failure causing SCR false firing or misfiring	Replace the control board.
5. Minimum speed excessive	Minimum speed not adjusted correctly	Turn the MIN SPD potentiometer counter-clockwise.
	Control board failure	Replace the control board.
6. Maximum speed excessive	Maximum speed set too high	Turn the MAX SPD potentiometer counter-clockwise.
	Controller not calibrated correctly	Refer to Steps 4 and 5 on page 5.
	Open shunt field winding or wiring to the motor shunt field ^a	Check the motor shunt field and associated circuitry for a loose connection or a broken wire. Repair accordingly.
	Motor field demagnetized ^b	Replace the motor.
Contd on next page		

TABLE 6. TROUBLESHOOTING

INDICATION	POSSIBLE CAUSE	CORRECTIVE ACTION
7. Motor won't reach top speed	Low line voltage	Check for rated line voltage, $\pm 10\%$, on the controller line terminals.
	Motor overloaded	Check shunt field current. ^a Low shunt field current causes excessive armature current. If field current is adequate, check for a mechanical overload. If the unloaded motor shaft does not rotate freely, check motor bearings. Also check for a shorted motor armature. Motor overload can also be caused by incorrect gear ratio. Correct accordingly.
	Maximum speed set too low	Turn the MAX SPD potentiometer clockwise.
	Current limit set too low	Turn the CUR LMT potentiometer clockwise.
	Current Scaling Jumper J4 in wrong position	See Step 4 and Table 3, page 5.
	Motor field demagnetized ^b	Replace the motor.
	Control board failure	Replace the control board.
8. Unstable speed	AC line voltage fluctuating	Observe line voltage with a voltmeter or oscilloscope. If fluctuations occur, correct condition accordingly.
	Loose or corroded connection. Wiring faulty, incorrect, or grounded	Check all terminals, connections, and wiring between the line, operator controls, controller, and motor.
	Oscillating load connected to the motor	Stabilize the load. Turning the IR/TACH potentiometer counterclockwise may minimize oscillations.
	Voltage Selection Jumpers J1, J2, J3 in wrong position	See Step 5 on page 5 under, "Installing The Controller."
	IR compensation not adjusted correctly	See the IR Compensation adjustment instructions on page 21.
	Maximum speed not adjusted correctly	See the Maximum Speed (Armature Feedback) adjustment instructions on page 22.
	Motor faulty	Check motor brushes. Replace if needed. Repair or replace the motor.
Tachometer generator or coupling faulty (if used)	Repair accordingly.	
Contd on next page		

TABLE 6. TROUBLESHOOTING

INDICATION	POSSIBLE CAUSE	CORRECTIVE ACTION
9. Line and motor armature current excessive	Motor overloaded	Check shunt field current. ^a Low shunt field current causes excessive armature current. If field current is adequate, check for a mechanical overload. If the unloaded motor shaft does not rotate freely, check motor bearings. Also check for a shorted motor armature. Motor overload can also be caused by incorrect gear ratio. Correct accordingly.
10. Shunt field current ^a too low	Open shunt field winding or wiring to the motor shunt field	Check the motor shunt field and associated circuitry for a loose connection or a broken wire. Repair accordingly.
	Shunt field connected for incorrect voltage	Check motor rating and refer to Table 14, page 37.
	Shunt Field Bridge BR1 failure	Replace BR1 or the control board.
11. Shunt field current ^a too high	Shunt field connected for incorrect voltage	Check motor rating and refer to Table 14, page 37.
	Shunt field windings shorted	Measure the shunt field resistance and compare with the motor rating. Repair or replace the motor.
12. Motor thermal guard tripped (if used)	Ventilation insufficient	Remove dirt, dust, and debris from the motor intake and exhaust screens.
	Excessive motor load at low speed	Reduce the load or increase the speed.
	Line and motor armature current excessive	See Indication 9.
	Motor overheating from friction	Check for misalignment. Realign the motor.
	Shorted motor windings or faulty bearings	Repair or replace the motor.

a. Does not apply to permanent-magnet motors.

b. Does not apply to shunt-wound motors.

BOOK0795-F

Blank Page

SECTION V

OPTIONS

Options are available for Series 2600/2610 Controllers which increase the functional use of the basic controller. Table 7 (page 22) lists all available options and allowable option combinations.

Options can be added to the basic controller at any time. Each option consists of all required components, mounting hardware, and instruction sheet.

TABLE 7. ALLOWABLE OPTION COMBINATIONS

OPTION TYPE	OPTION GROUP	OPTION NUMBER	OPTION CODE ^a	OPTION
Enclosure Options - Choice of any or all within this group. May be combined with options from any other groups.	A	1638	XK	Hinge, Enclosure Cover (Models 2601 And 2602 Only)
	A	1170A	XK	Fan Assembly (5 HP Units Only) (Required When Enclosed Model 2602 Is Operated At 5 HP Rating)
Options Used To Convert Open Chassis Units Into Enclosed Package Controllers - Choice of one within this group. May be combined with options from any other groups.	B	1639	XK	Cover Assembly, Blank Type P0
	B	1639C	XK	Cover Assembly, Type P1
	B	1639E	XK	Cover Assembly, Type P2
	B	1639G	XK	Cover Assembly, Type P3
Power Options	C	1010	XK	Circuit Breaker - Two Pole (Model 2601 Only)
	C	1014	XK	AC Line Switch (Model 2602 Only)
	C	1004	XK	Armature Contactor Reversing With Dynamic Braking (May Be Combined With All Options In This Group)
Input Signal Options - Choice of one within this group unless Option 1037 is selected. May be combined with options from any other groups except Group F. Option 1775 is required for all options in this group.	D	1775	XK	Interface, Signal Options
	D	1037	XK, P	Input, External Interface
	D	1049	XK, P	Follower, External DC Signal
	D	1050	XK, P	Follower, External AC Signal
	D	1050A	XK, P	Follower, AC Current Transducer
	D	1051	XK, P	Follower, MIRC
	D	1055	XK, P	Follower, AC Or DC Tachometer Generator
	D	1057A	XK, P	Follower, Digital Pulse Generator
Feedback Options - Choice of one within this group unless Option 1037 is selected. May be combined with options from any other groups except Group F. Option 1775 is required for all options in this group.	E	1775	XK	Interface, Signal Options
	E	1037	XK, P	Feedback, External Interface
	E	1061C	XK, P	Feedback, AC Or DC Tachometer Generator
	E	1061F	XK, P	Feedback, AC Or DC Tachometer Generator With Tach Loss
	E	1062A	XK, P	Feedback, Digital Pulse Generator
	E	1064	XK, P	Torque (Current) Limit Control
Input And Feedback Options - May be combined with options from any other groups except Groups D and E.	F	1190	XK, P	Torque Taper
	F	1064A	XK	Follower, Current Regulator
	F	1191	XK	Centerwind Torque Control
External Options - Choice of any or all within this group	F	1220	XK	Constant Velocity Winder
	G	1120	K	Operator Control Station - Remote
	G	1120A	K	Motor Speed Potentiometer, Ten-Turn With Analog Dial
	G	1120B	K	Motor Speed Potentiometer, One-Turn
	G	1120C	K	Motor Speed Potentiometer, Ten-Turn With Digital Dial
	G	1022	K	Jog, Toggle Switch Selection
	G	1058A	K	Follower/Manual Mode Select Switch
Miscellaneous Options - Choice of any or all within this group when mounted externally. Choice of one when mounted in a Model 2601 or 2602. May be combined with options from any other groups.	G	1037A	K	Input-Feedback Adapter, External - One Position
	G	1166	K	Equipment Manual
	H	1047	XK	Controlled (Ramp) Stop
	H	1081B	XK	Current (Torque) Monitor
	H	1015	XK	Magnetic Control Interface (115V)

- a. XK = Factory Installed Or Field Kit
- K = Field Kit
- P = Plug-In Option

SECTION VI**PARTS LIST****TABLE 8. PARTS LIST, SERIES 2600/2610 CONTROLLERS**

PART	RATING	FINCOR PART NUMBER			
		MODEL 2601	MODEL 2602	MODEL 2611	MODEL 2612
Control Board	NA	106105702	106109601	106105701	106105702
Fuse, Line	30A, 600V (ATM-30)	3002396	NA	3002396	3002396
	60A, 300V (SC-60)	NA	3002526	NA	NA
SCR	55A, 800V	3302231	NA	NA	3302231
	65A, 600V	NA	3302223	NA	NA
	15A, 600V	NA	NA	3302201	NA
Silicon Rectifier (Freewheeling Diode)	15A, 600V	NA	NA	3303207	NA
	24A, 600V	3303292	3303292	NA	3303292

BOOK0795-F

Blank Page

SECTION VII

RATINGS AND SPECIFICATIONS**RATINGS**

1. Current/Torque Reference Potentiometer. 5K Ohms, 1/2W
2. Duty. Continuous
3. Horsepower Range. 1/6 - 5 HP (See Table 1, Page 1)
4. Line Fuse Interrupting Capacity. 100,000 Amperes
5. Line Power. 115V Or 230V, Single-Phase, 50 Or 60 Hz
6. Motor Speed Potentiometer. 5K Ohms, 1/2W
7. Overload Capacity, Armature Circuit. 150% For 1 Minute
8. Service Factor. 1.0

TABLE 9. TYPICAL APPLICATION DATA

COMPONENT			RATINGS									
RATED HORSEPOWER (HP)			1/6	1/4	1/3	1/2	3/4	1	1-1/2	2	3	5
RATED KILOWATTS (kW)			0.124	0.187	0.249	0.373	0.560	0.746	1.120	1.492	2.238	3.730
1-PHASE AC INPUT (FULL-LOAD)	Line Amps	115V Unit	3.9	5.0	6.0	8.7	12.4	15.8	NA	NA	NA	NA
		230V Unit	NA	NA	NA	4.2	5.9	8.8	12.6	15.8	22.0	32.0
	KVA		0.48	0.58	0.71	1.00	1.40	2.00	3.00	4.00	5.00	8.00
DC OUTPUT (FULL-LOAD)	Motor Armature Amps	90V	2.0	2.8	3.5	5.4	8.1	10.5	NA	NA	NA	NA
		180V	NA	NA	NA	2.6	3.8	5.5	8.2	11.6	15.1	25.0
	Motor Field Amps (Maximum)	Series 2600	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0	2.0
		Series 2611	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	1.0	NA
Series 2612		1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	1.5	NA	
FULL-LOAD TORQUE (lb-ft) with 1750 RPM Base Speed Motors			0.5	0.75	1.0	1.5	2.2	3.0	4.5	6.0	9.0	15.0
MINIMUM TRANSFORMER KVA FOR VOLTAGE MATCHING OR ISOLATION			0.5	0.75	0.75	1.0	1.5	2.0	3.0	5.0	7.5	10.0

TABLE 10. OPERATING VOLTAGES AND SIGNALS

POWER SOURCE (Single-Phase)	OUTPUT VDC		SPEED REFERENCE SIGNAL ^a	MAGNETIC CONTROL VOLTAGE
	Armature	Field		
115V, 50 or 60 Hz	0 - 90	50/100	0 - 5 VDC, 0 - 10 VDC, 4 - 20 mA	24 VDC
230V, 50 or 60 Hz	0 - 180	100/200		

a. Grounded or ungrounded. Choice of one.

TABLE 11. CONTROLLER WEIGHTS

CONTROLLER MODEL	WEIGHT - LBS (KG)		
	1/6 - 2	3	5
2601	7.70 (3.50)		NA
2602	8.20 (3.72)		8.60 (3.90)
2601A	8.50 (3.86)		NA
2602A	8.90 (4.04)		9.30 (4.22)
2601P0, P1, P3	11.60 (5.26)		NA
2602P0, P1, P3	12.10 (5.49)		12.50 (5.67)
2601AP0, P1, P3	12.40 (5.62)		NA
2602AP0, P1, P3	12.80 (5.81)		13.20 (6.00)
2611, 2612	3.25 (1.47)		NA
2611A, 2612A	3.80 (1.72)		NA
2611P0, P1, P2	5.50 (2.50)	NA	
2611AP0, P3	6.05 (2.74)	NA	

OPERATING CONDITIONS

1. Altitude, Standard. 1000 Meters (3300 Feet) Maximum.¹
2. Ambient Temperature². 0 - 40°C (32°F - 104°F)
3. Line Frequency Variation. ± 2 Hz Of Rated
4. Line Voltage Variation. ±10% Of Rated
5. Relative Humidity. 95% Noncondensing

1. Controller can be derated by 1% per 100 meters to operate at higher altitudes.
 2. 55°C (131°F) maximum in enclosed areas where open-chassis controllers are mounted.

PERFORMANCE CHARACTERISTICS

1. Controlled Speed Range 0 To Motor Base Speed
2. Displacement Power Factor (Rated Speed/Rated Load). 87%
3. Efficiency (Rated Speed/Rated Load)
 - a. Controller Only. 98%
 - b. Controller With Motor, Typical. 85%
4. Speed Regulation. Regulation percentages are of motor base speed under steady-state conditions

TABLE 12. SPEED REGULATION CHARACTERISTICS

REGULATION METHOD	VARIABLE				
	Load Change (95%)	Line Voltage ($\pm 10\%$) ^a	Field Heating (Cold/Normal)	Temperature ($\pm 10^\circ\text{C}$)	Speed Range
Standard Voltage Feedback with IR Compensation	2%	$\pm 1\%$	5 - 12%	$\pm 2\%$	50:1
Optional Speed (Tach) Feedback (Option 1061C) with Sigmation or 5PY DC Tach ^b	0.5%	$\pm 1\%$	0.2%	$\pm 2\%$	200:1

a. With Precision Reference (Option 1059), regulation due to $\pm 10\%$ line voltage change is $\pm 0.1\%$.
 b. Speed regulation characteristics are based on the use of Fincor Electronics cataloged motors and tachometer generators. Regulation characteristics cannot be guaranteed with motors and/or tachometer generators that have not been evaluated.

ADJUSTMENTS

1. Acceleration, Linear. 0.2 - 30 Seconds
2. Deceleration, Linear. 0.2 - 30 Seconds
3. IR (Load) Compensation. 0 - 10% Boost
4. Jog Speed. 0 - 100% Of Motor Base Speed
5. Maximum Speed. 50% - 100% Of Motor Base Speed
6. Minimum Speed. 0 - 40% Of Motor Base Speed
7. Torque (Current) Limit. 0 - 150% Of Full-Load Torque

SPECIFICATIONS

1. **AC LINE PROTECTION** - A 100,000 ampere interrupting capacity AC line fuse provides instantaneous protection from peak loads and fault currents. This line fuse is located inside the controller. A molded-case, magnetic-trip circuit breaker (Option 1010) is available for Model 2601 Controllers, which provides a manual disconnection to the controller, and also provides automatic instantaneous trip protection from a peak load.
2. **AUXILIARY CONTACT** - A normally-open Form A relay contact, rated 5 ampere @115 VAC and 30 VDC, is available for external use. The relay energizes when a Run command is initiated, and de-energizes when a Normal Stop command is initiated, the overload monitor trips, or the anti-restart circuit is activated.
3. **CONTROL VOLTAGE** - A transformer coupled 24 VDC power supply isolates all magnetic control logic and operator controls from the AC power source for operator protection.
4. **DIP SWITCH SETTINGS** - A 7-position DIP Switch (S3) is used to program the controller for various applications as shown in Table 13.

TABLE 13. DIP SWITCH S3 SETTINGS

SEGMENT	SEGMENT POSITION		DESCRIPTION
	ON (Closed)	OFF (Open)	
1	X		Low voltage tachometer generator signal (8 VDC - 30 VDC)
		X	High voltage tachometer generator signal (31 VDC - 175 VDC)
2	X		Armature feedback
		X	Tachometer feedback with armature feedback backup
3	X		Armature feedback
		X	Tachometer feedback with armature feedback backup
4	X		4 mA - 20 mA input speed reference signal
		X	0 - 5 VDC input speed reference signal
5	X		Enables the internal current limit circuit, adjustable with the CUR LMT potentiometer.
		X	Enables the use of an external current (torque) limit potentiometer (5K ohm, 1/2W)
6	X		Selects the MIN SPD potentiometer as a minimum speed adjustment
		X	Selects the MIN SPD potentiometer as an offset adjustment for a 4 mA - 20 mA input speed reference signal
7	X		Enables anti-restart. Prevents the controller from restarting automatically after an AC power interruption.
		X	Line starting. Disables anti-restart.

5. **FEEDBACK** - Two selectable modes of analog feedback are provided, as follows. See Table 12 (page 35) for speed regulation characteristics.
- Armature Feedback** - Counter EMF voltage feedback with IR compensation, adjustable for individual motor characteristics.
 - DC Tachometer Feedback** - The controller provides voltage scaling, and terminals for accepting the output of a DC tachometer generator, mechanically coupled to the drive motor armature. The controller will automatically transfer to armature feedback if the tachometer signal is lost. Tachometer generators with an output of 8 VDC to 175 VDC at maximum speed may be used.
6. **FIELD SUPPLY** - A half-wave or full-wave shunt field supply is available as shown in Table 14.

TABLE 14. SHUNT FIELD DATA

CONTROLLER RATING (VAC)	SHUNT FIELD VOLTAGE (VDC)		MOTOR SHUNT FIELD LEAD CONNECTIONS	
	Half-Wave	Full-Wave ^a	F1	F2
115	50		F/2	F-
		100	F+	F-
230	100		F/2	F-
		200	F+	F-

a. Low inductance motors require a full-wave field to prevent current instability.

7. **ISOLATED REGULATOR** - The internal DC circuits are isolated from the AC power source for operator and equipment safety, and for simplified application. The common of the input speed reference signal may be grounded or connected without additional isolation to other drive controllers or grounded external signal sources. This isolation eliminates line voltage to ground potentials on the motor speed potentiometer.
8. **MOTOR CONTACTOR** - Controller model numbers with an 'A' suffix, e.g., 2601A, 2611AP3, have a DC magnetic armature contactor, which disconnects both motor armature leads from the controller. An antiplug circuit ensures that the contactor does not make or break DC.
9. **MOTOR OVERLOAD** - A nonadjustable inverse time overload circuit continuously monitors motor armature current and shuts down the controller whenever the current exceeds 120% of rated for a length of time of continuous operation. The length of time is determined by the amount of overload.
10. **POWER CONVERSION** - The DC power bridge consists of four SCR's and a freewheeling diode. Each device is rated at least 600 PIV. The controller base forms an integral heat sink, with the power devices electrically isolated from the base.
11. **SELECTABLE CAPABILITIES** - The DIP Switch (S3) allows the user to select various modes of operation, as follows:

BOOK0795-F

- a. **External DC Signal Follower** - The controller will operate with an external 0 - 5 VDC, 0 - 10 VDC, or 4 - 20 mA speed reference signal. The signal may be grounded or not grounded, isolated or not isolated. Motor speed will be proportional to the signal.

0 - 5 VDC - Place S3-4 in OFF (Open) position, and connect the signal to TB2-6.

0 - 10 VDC - Place S3-4 and S3-6 in ON (Closed) position, and connect the signal to TB2-2.

4 - 20 mA - Place S3-4 in ON (Closed) position, and connect the signal to TB2-6 (+) and TB2-5 (-). To use the MIN SPD potentiometer as a 4 mA offset adjustment, place S3-6 in OFF (Open) position, and jumper TB2-1 to TB2-3.

- b. **Line Starting** - By placing S3-7 in OFF (Open) position, the 'anti-restart' feature will be disabled, and the controller may be started and stopped with an external AC line contactor. In addition, a wire jumper must be connected between TB2-8 and TB2-9. If full speed operation is desired, connect another wire jumper between TB2-2 and TB2-3.

- c. **Tachometer Feedback** - To select tachometer feedback with armature feedback backup, place S3-2 and S3-3 in OFF (Open) position, and connect the tachometer generator signal to TB2-7 (-) and TB2-5 (+). Select the tachometer generator voltage range with S3-1, as follows:

8 VDC - 30 VDC at maximum speed, place S3-1 in ON (Closed) position.

31 VDC - 175 VDC at maximum speed, place S3-1 in OFF (Open) position.

- d. **Torque Regulator** - The controller will function as a torque regulator when S3-5 is set to OFF (Open) position. This allows an external potentiometer to set maximum motor torque (0 - 150% of rated).


12. STATUS INDICATOR - A bicolor LED glows red when motor armature current is being limited by the controller current limit, and glows green when armature current is not being limited.

13. VOLTAGE TRANSIENT PROTECTION - A metal oxide suppressor (varistor) across the AC line is combined with RC snubbers across the power bridge to limit potentially damaging high voltage spikes from the AC power source.

SECTION VIII


DRAWINGS

BOOK0795-F

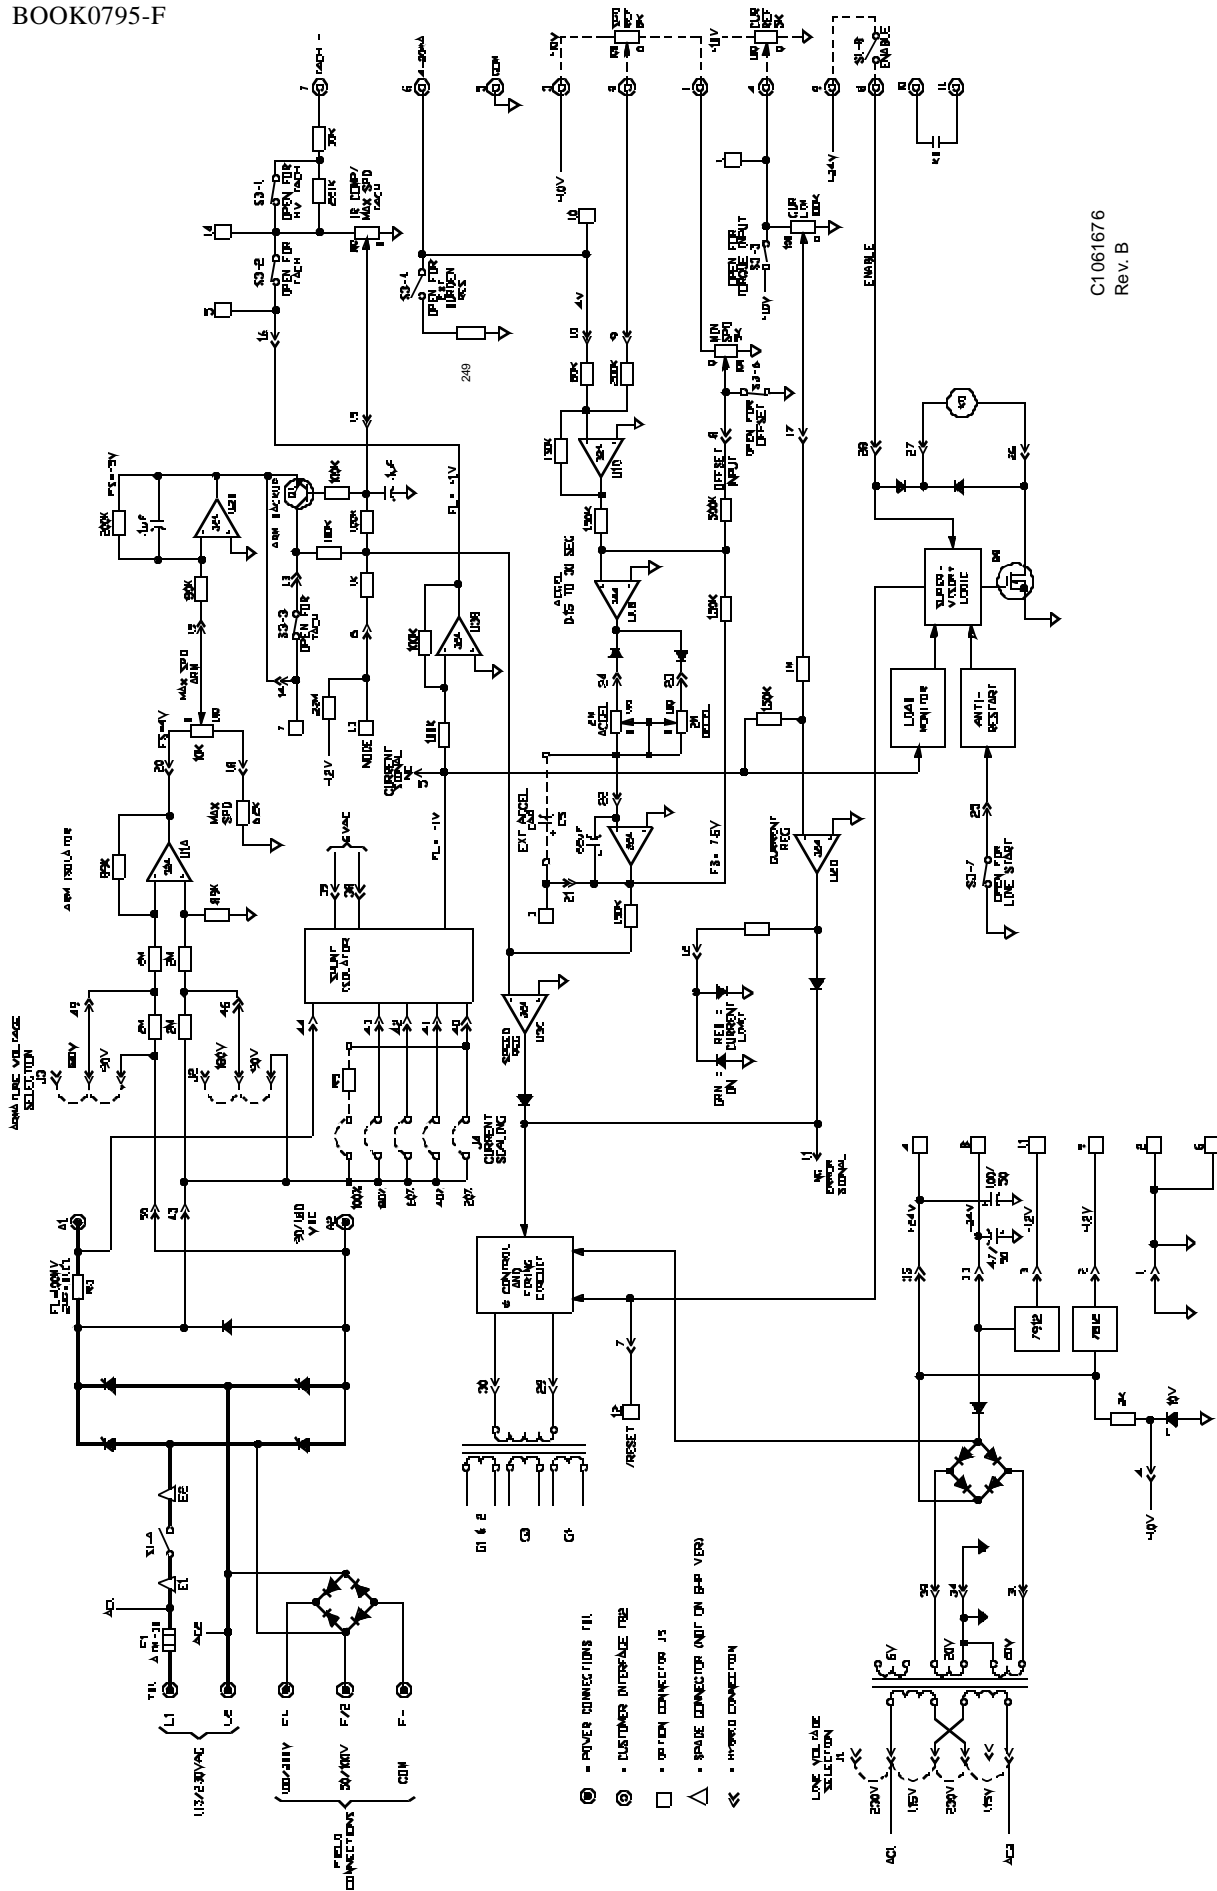

C1061676
Rev. B

FIGURE 19. FUNCTIONAL SCHEMATIC, SERIES 2600/2610

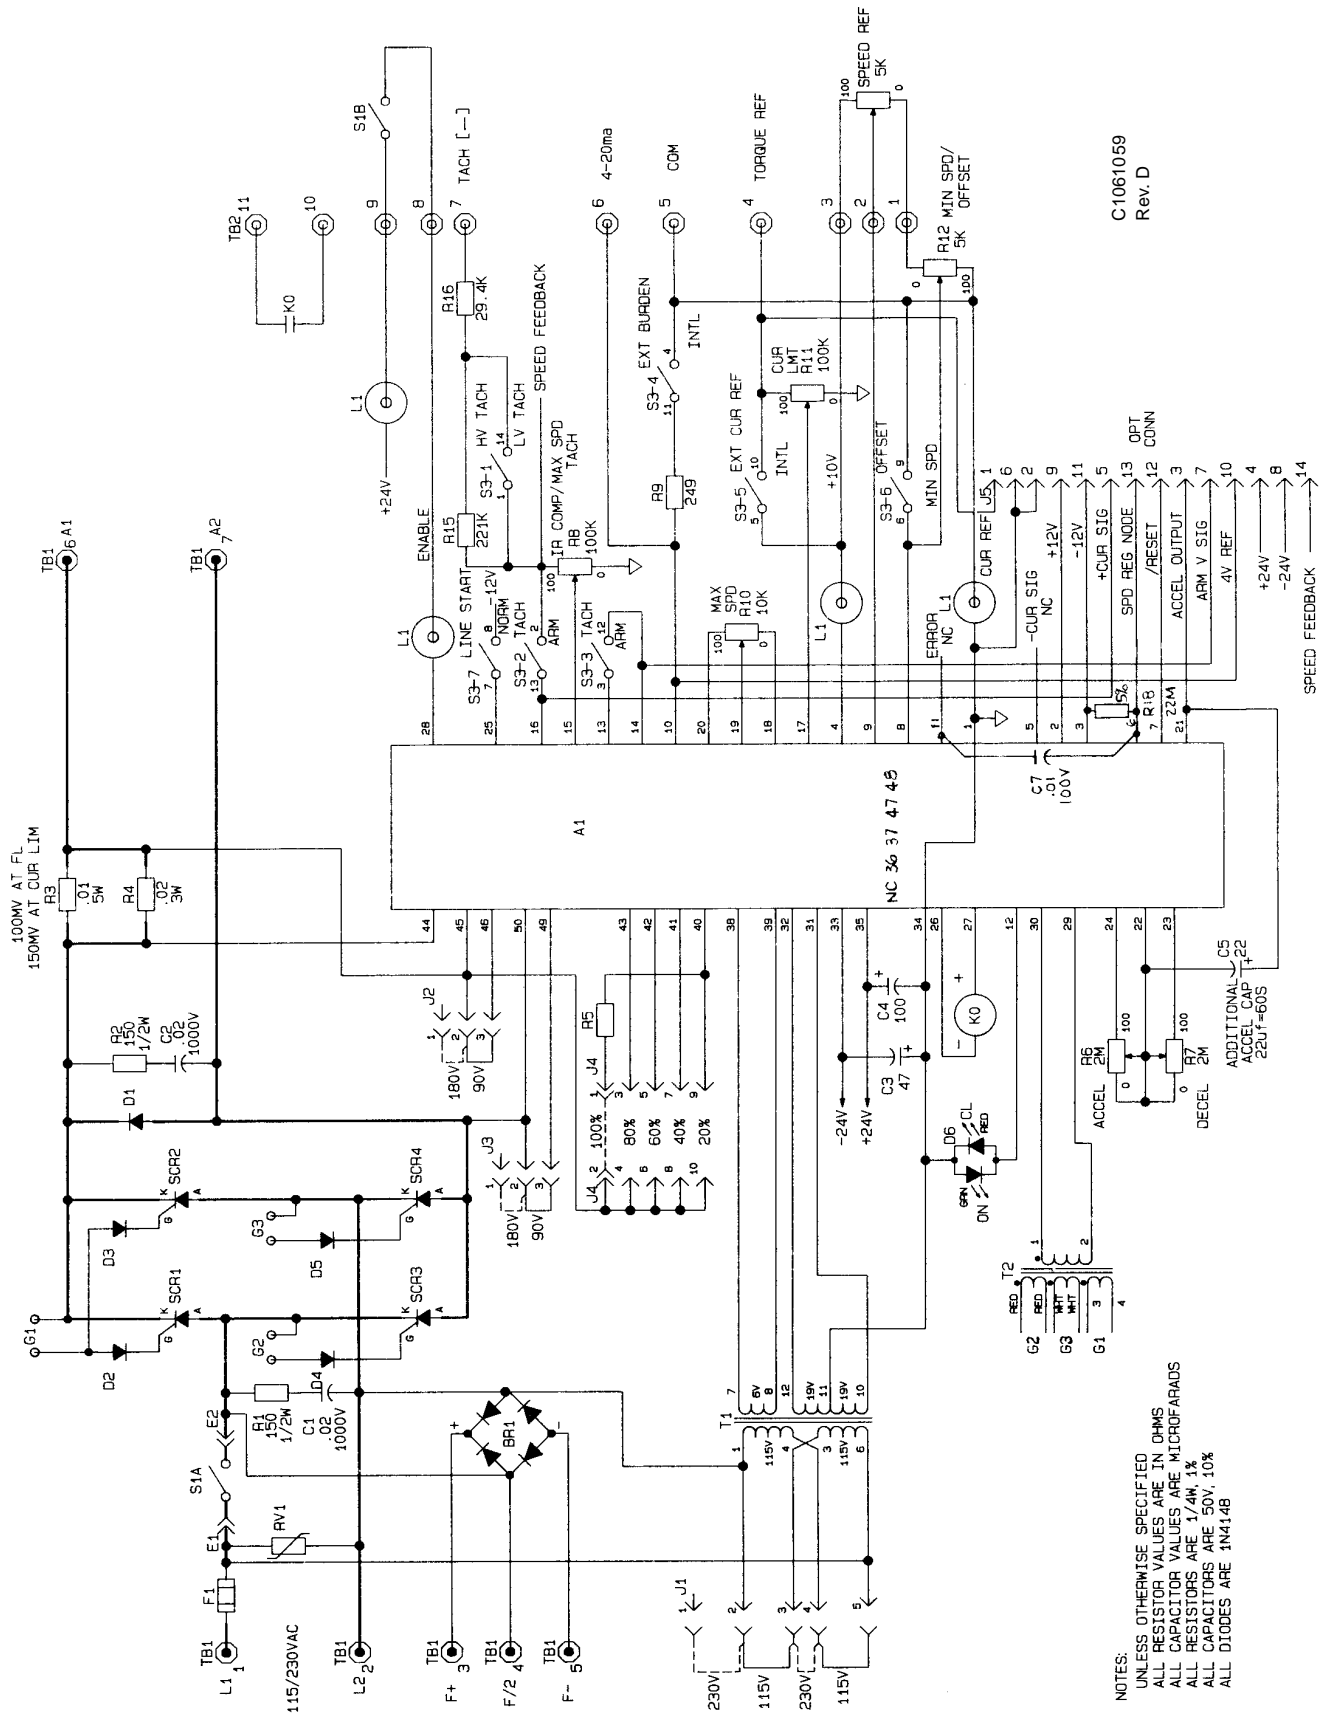

C1061059
REV. D

FIGURE 20. SCHEMATIC, SERIES 2600/2610, 1/6 - 3 HP

NOTES:
UNLESS OTHERWISE SPECIFIED
ALL RESISTOR VALUES ARE IN OHMS
ALL CAPACITOR VALUES ARE MICROFARADS
ALL RESISTORS ARE 1/4W, 1%
ALL CAPACITORS ARE 50V, 10%
ALL DIODES ARE 1N4148

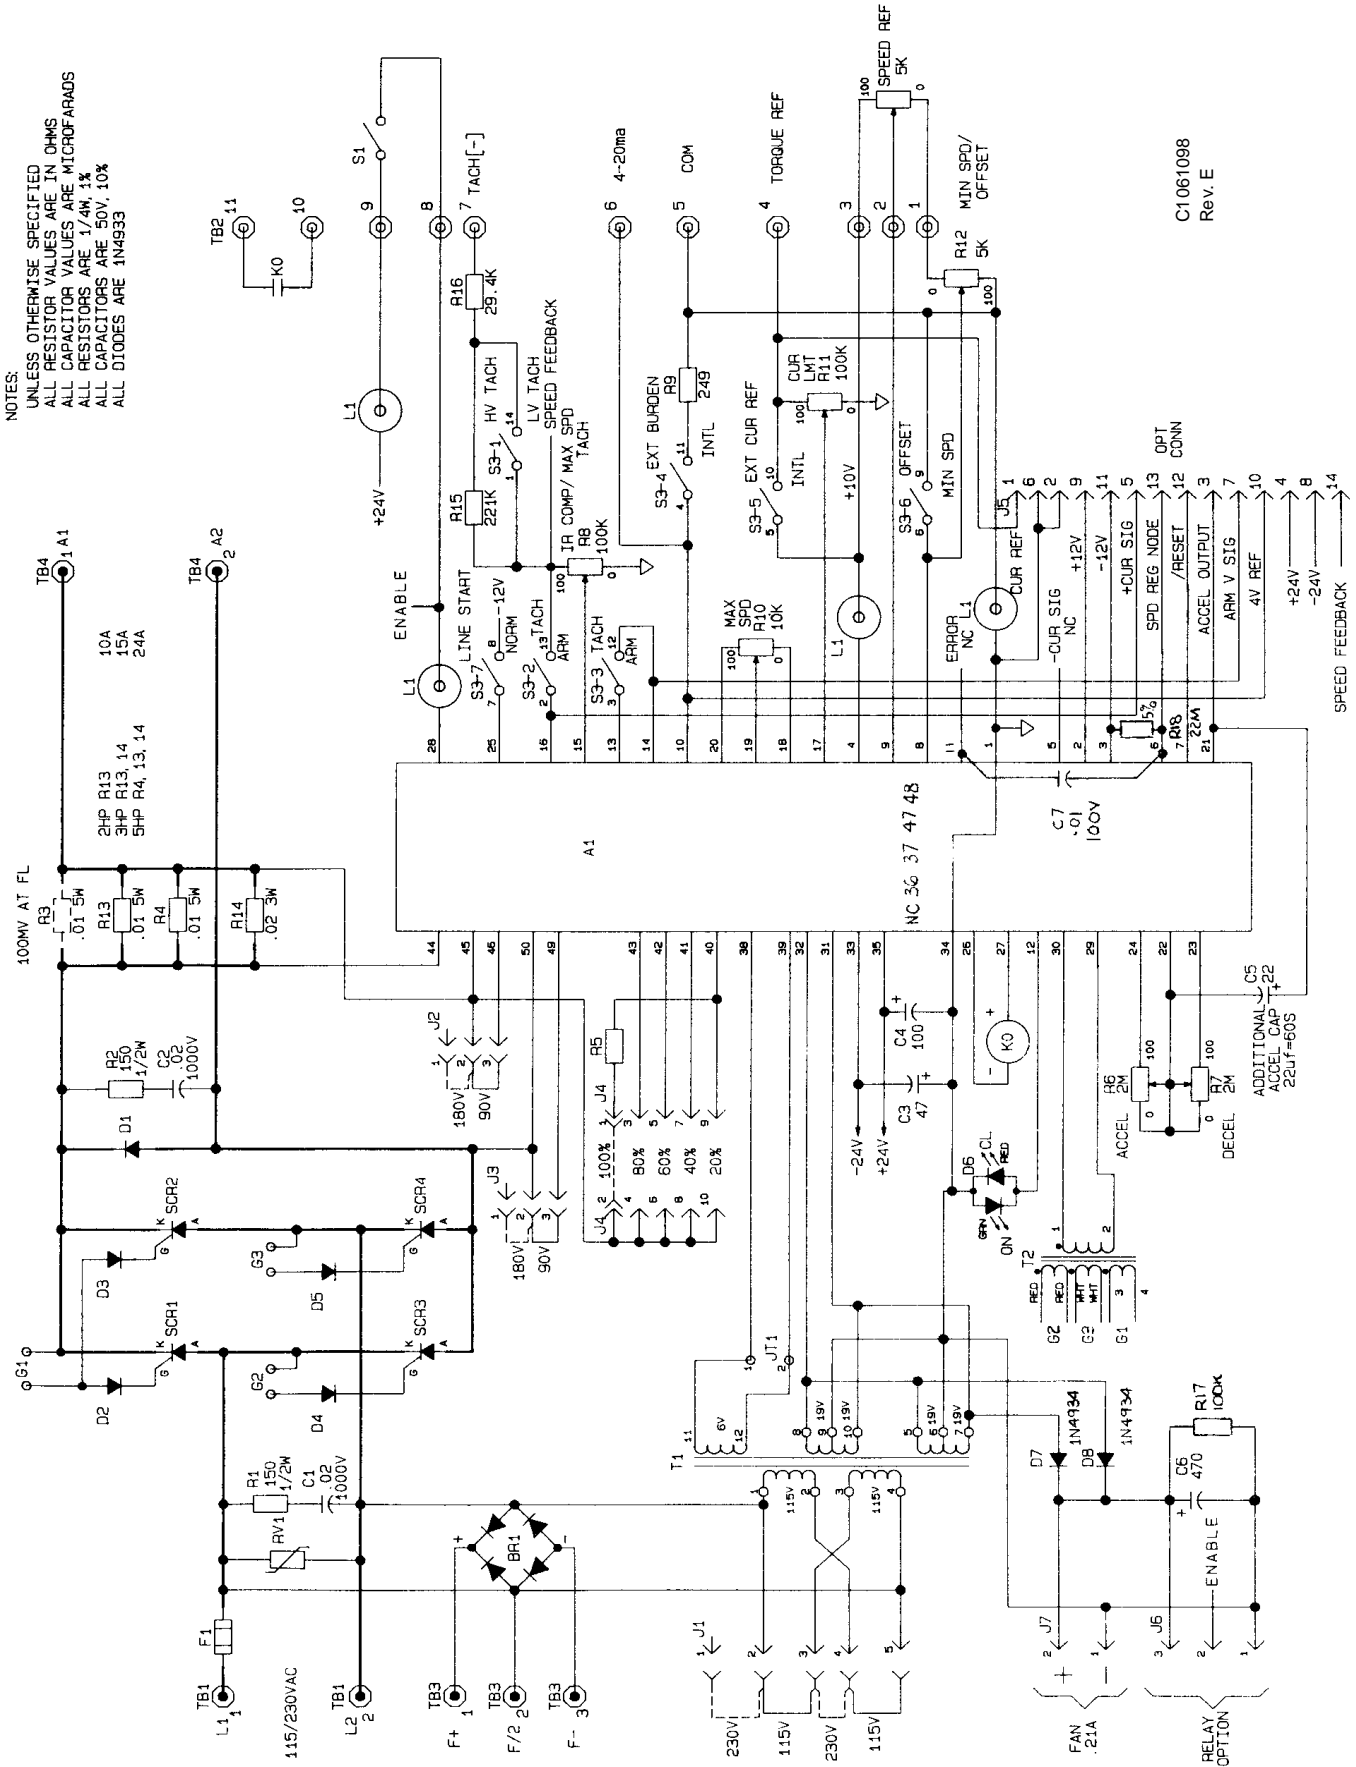


FIGURE 21. SCHEMATIC, SERIES 2600, 5 HP

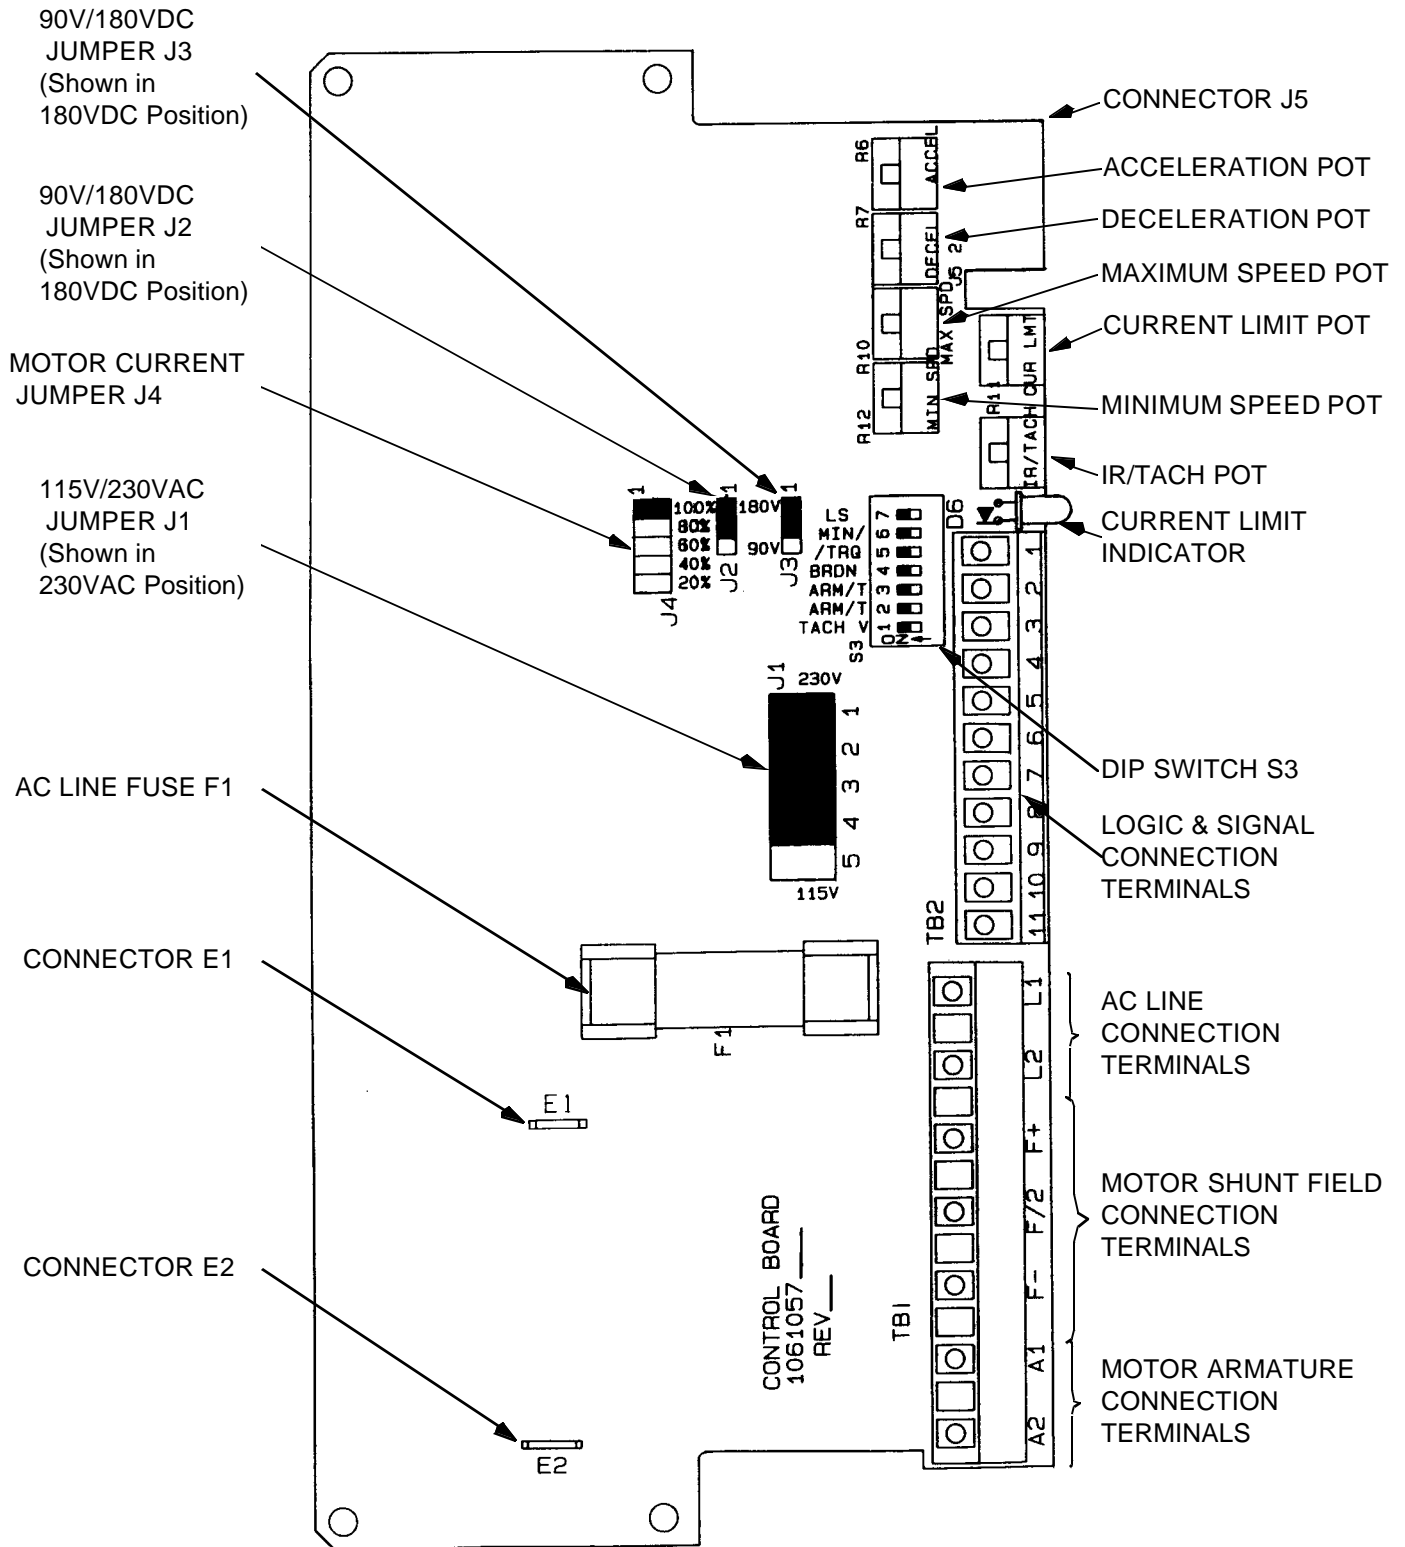


FIGURE 22. SERIES 2600/2610 CONTROL BOARD, 1/6 - 3 HP

BOOK0795-F

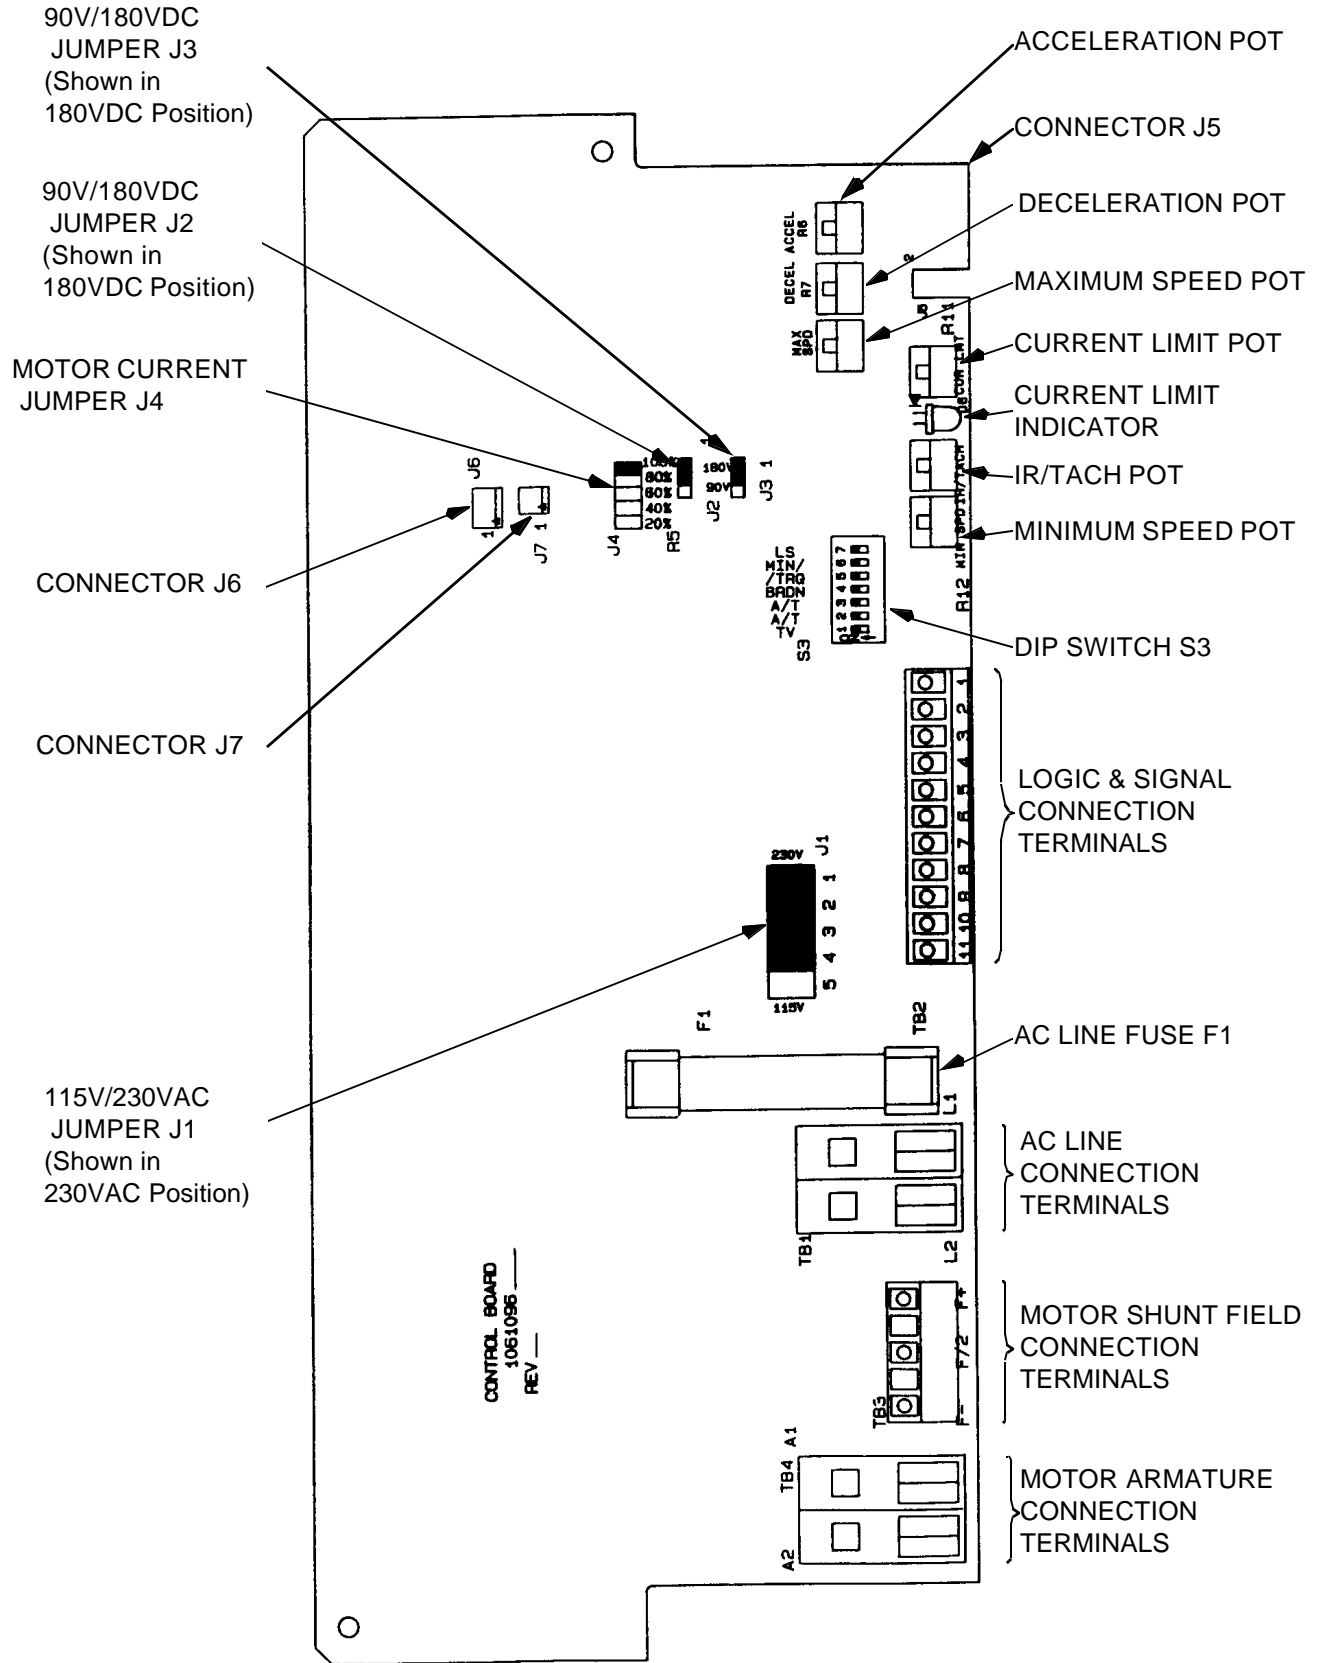


FIGURE 23. SERIES 2600 CONTROL BOARD, 5 HP

A

AC Line Protection 36
 AC Supply Transients 4
 ACCEL Potentiometer 21
 Acceleration 21, 35
 Altitude 34
 Ambient Temperature 34
 Antiplug Circuit 37
 Antiplug Feature 18
 Anti-restart Feature 38
 Armature Feedback 37
 Atmosphere 3
 Auxiliary Contact 36

B

Branch Circuit Protection 4

C

Calibration 5
 Circuit Breaker (Option 1010) 4
 Conduit Entry 5
 Connector J1 5
 Control Voltage 36
 Control Wiring 4
 Controlled Speed Range 35
 Controller Construction 3
 Controller Mounting 3
 Cover Hinges (Option 1638) 3
 CSA 1,4
 CUR LMT Potentiometer 23
 Current (Torque) Limit Potentiometer 23
 Current Limit 23
 Current Limiting Fuses 4
 Current/Torque Reference Potentiometer 33

D

DC Tachometer Feedback 37
 DECEL Potentiometer 21
 Deceleration 21, 35
 DIP Switch (S3) 37
 DIP Switch Settings 36
 Displacement Power Factor 35
 Duty 33
 Dynamic Braking 17
 Dynamic Braking Resistors 17

E

Efficiency 35
 External DC Signal Follower 38

F

Feedback 37
 Field Supply 37
 Full-wave Field 6, 7
 Fused Disconnect Switch 4

G

Ground Screw 4
 Grounding 4

H

Half-wave Shunt Field Voltage 6, 7
 Horsepower Range 33

I

IR (Load) Compensation 21, 35
 IR/TACH Potentiometer 21, 23
 Isolated Regulator 37
 Isolation Transformer 4

J

Jog Speed 35
 JOG SPEED Potentiometer 18
 Jumper J4 5
 Jumpers J1, J2, and J3 5

L

Line Frequency Variation 34
 Line Fuse 18, 36
 Line Fuse Interrupting Capacity 33
 Line Power 33
 Line Starting 17, 38
 Line Supply 4
 Line Voltage Variation 34
 Low Inductance Motors 6, 7

M

MAX SPD Potentiometer 22
 Maximum Speed 35
 Maximum Speed (Armature Feedback) 22
 Maximum Speed (Tachometer Feedback) 22
 MIN SPD Potentiometer 23

Minimum Speed 23, 35
Minimum Transformer KVA 4, 33
Motor Contactor 37
Motor Overload 37
Motor Rotation 15
Motor Speed Potentiometer 33

N

National Electrical Code 1, 4
NEMA 1
NEMA Type 4 and 12, 3

O

Offset 23
Options 5
Oscillating Load 26
Overload Capacity, Armature Circuit 33
Overload Circuit 37
Overload Monitor 19

P

Power Bridge 37
Power Conversion 37
Power Factor Correction Capacitors 4
Power Wiring 6, 7

R

Relative Humidity 34

S

Selectable Capabilities 37
Service Factor 33
Shielded Wire 5
Shipping Damage 5
Short-circuit Current 4
Signal Wiring 4
Speed Regulation 35
STATUS INDICATOR 38

T

Tachometer Feedback 38
Tachometer Generators 37
Torque (Current) Limit 35
Torque Regulator 38
Transformer 4
Transients 4

U

Underwriters Laboratories Listed 1

V

Varistor 4, 38
Vibration 3
Voltage Transient Protection 38

W

Wiring Practices 4