4.9 DIGITAL OPERATOR FUNCTIONS

The VS-626VM3 supports the multi-functional display operator, and enables the following:

① Display of control signal status

Status of control signals of individual parts is displayed to monitor the status of operation. For the display items, see Table 4.2.

② Display and setup of control constants

Control constants must be set up for normal operation according to the specifications. Tables 13.4 to 13.6 list the control constants.

3 Display of activated protective functions

Protective functions activated when an error occurs during operation are displayed. Table 4.3 lists the protective functions. Nothing is displayed when operation is normal.

4 Operation by the digital operator

Stand-alone operation without sequence input signals and speed reference is possible using the digital operator. For details of the operation, see Par. 8.1, "Stand-alone Operation by Speed Control with Digital Operator."

Fig. 4.27 shows the display unit and manipulation keys of the digital operator (JVOP-100).

Fig. 4.28 shows the tree of display items.

Key	Function
PRGM DRIVE	 Emergency stop key for the digital operator. No operation in other modes of operation.
DSPL	 When an item is displayed:
DATA ENTER	 When an item is displayed:
	 Selects values and item numbers to be set up. Updates te error occurrence sequence.
RESET	 Resets an error. (Effective only when error display is on.) Shift of selected column. (blinking at a currently selected column.)
RUN	Operation reference
STOP	• Stop reference
F W D R E V	• Selects a rotation direction
log	Jogging operation

Fig. 4.27 Display Unit and Keys of the Operator

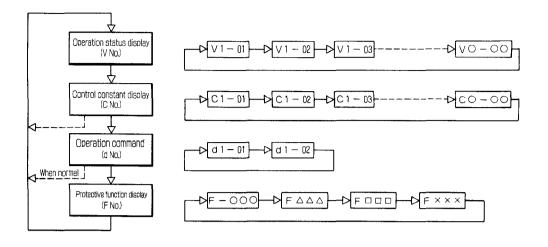


Fig. 4.28 Tree of Display