 


Connector Identification and Wire Harness Routing

Connector or Terminal	Number of Cavities/ Color	Location	Connects to	Notes
-----------------------------	---------------------------------	----------	-------------	-------

Engine Wire Harness

C101	14-GRY	Right side of engine compartment	Main wire harness	LS M/T LS A/T and L M/T L A/T
C102	14-BLU	Right side of engine compartment	Main wire harness	
C102	10-GRY	Right side of engine compartment	Main wire harness	
C102	6-GRY	Right side of engine compartment	Main wire harness	
C103	14-GRY	Right side of engine compartment	Main wire harness	
C104	14-GRY	Right side of engine compartment	Main wire harness	
C105	2-GRY	Engine	Engine oil temperature sensor	
C106	3-GRY	Engine	EGR control solenoid valve	M/T M/T
C107	2-GRY	Engine	Engine coolant temperature (ECT) sensor	
C108	3-GRY	Engine	Throttle position (TP) sensor	
C109	3-GRY	Engine compartment	Vehicle speed sensor (VSS)	
C110	2-GRY	Engine compartment	Power steering pressure (PSP) switch	
C111	4-GRY	Engine	Right heated oxygen sensor (HO2S)	
C112	1-GRY	Engine compartment	Noise condenser	
C113	8-GRY	Right side of engine compartment	Ignition control module (ICM)	
C114	8-GRY	Engine compartment	Junction connector	
C115	1-BLK	Engine	Engine oil pressure switch	
C116	2-GRY	Middle of engine	Idle air control (IAC) valve	
C117	1-BLK	Middle of engine	Engine coolant temperature (ECT) gauge sending unit	
C118	2-GRY	Middle of engine	Intake air temperature (IAT) sensor	
C119	8-GRY	Engine	Crankshaft position/cylinder position (CKP/CYL) sensor	
C120	3-GRY	Middle of engine	Knock sensor sub-harness	
C121	2-GRY	Engine compartment	Neutral position switch	
C122	2-GRY	Engine compartment	Back-up light switch	
C123	4-GRY	Engine	Left heated oxygen sensor (HO2S)	
C124	1-BLK	Engine compartment	Starter solenoid	
C125	8-GRY	Engine compartment	Fuel injector resistors	
C126	2-GRY	Engine compartment	Engine compartment wire harness	
C128	1-GRY	Left front corner of engine compt.	A/C compressor clutch	
C129	4-GRN	Left front corner of engine compt.	Alternator	
C130	2-BLK	Engine	No. 1 Ignition coil	
C131	2-BLK	Engine	No. 2 Ignition coil	
C132	2-BLK	Engine	No. 3 Ignition coil	
C133	2-BLK	Engine	No. 4 Ignition coil	
C134	2-BLK	Engine	No. 5 Ignition coil	
C135	2-BLK	Engine	No. 6 Ignition coil	
C136	2-GRY	Middle of engine	No. 1 Fuel injector	
C137	2-GRY	Middle of engine	No. 2 Fuel injector	
C138	2-GRY	Middle of engine	No. 3 Fuel injector	
C139	2-GRY	Middle of engine	No. 4 Fuel injector	



Connector or Terminal	Number of Cavities/ Color	Location	Connects to	Notes
-----------------------	---------------------------	----------	-------------	-------

Engine Wire Harness (cont'd)

C140	2-GRY	Middle of engine	No. 5 Fuel injector	LS LS LS M/T
C141	2-GRY	Middle of engine	No. 6 Fuel injector	
C142	3-BLU	Middle of engine	TCS control valve angle sensor	
C143	2-GRY	Middle of engine	TCS control valve actuator	
C144	3-GRY	Middle of engine	Reverse lockout solenoid sub-harness	
T101		Left side of engine compartment	Under-hood fuse/relay box	
T102		Engine compartment	Alternator	
G101		Engine	Engine ground, via engine wire harness	
G102		Right valve cover	Engine ground, via engine wire harness	

