

Connector Identification and Wire Harness Routing

Connector or Terminal	Number of Cavities/ Color	Location	Connects to	Notes
-----------------------	---------------------------	----------	-------------	-------

Main Wire Harness (Under-hood branch)

C101	14-GRY	Right side of engine compartment	Engine wire harness	LS M/T L M/T and LS A/T L A/T
C102	14-BLU	Right side of engine compartment	Engine wire harness	
C102	10-GRY	Right side of engine compartment	Engine wire harness	
C102	6-GRY	Right side of engine compartment	Engine wire harness	
C103	14-GRY	Right side of engine compartment	Engine wire harness	
C104	14-GRY	Right side of engine compartment	Engine wire harness	
C352	2-WHT	Right side of engine compartment	Test tachometer connector	
C357	2-ORN	Right side of engine compartment	ABS pressure switch	
C358	10-ORN	Right side of engine compartment	ABS solenoids	
C359	4-GRY	Under right side of dash	EGR control solenoid valve and fuel pressure regulator control solenoid valve	L LS M/T LS
C360	3-GRY	Under right side of dash	MAP sensor	
C361	3-GRY	Under right side of dash	Ignition timing adjuster	
C362	20-BLU	Under-hood relay box C	Junction connector	
C363	4-CAVITY	Under-hood relay box C	Cigarette lighter relay	
C364	4-CAVITY	Under-hood relay box C	Ceiling light relay	
C365	4-CAVITY	Under-hood relay box C	ABS rear fail-safe relay	
C366	4-CAVITY	Under-hood relay box C	TCS fail-safe relay	
C367	4-CAVITY	Under-hood relay box C	Reverse lockout relay	
C368	4-CAVITY	Under-hood relay box C	Seat heater relay	
C369	4-CAVITY	Under-hood relay box C	A/C compressor clutch relay	
C370	4-CAVITY	Under-hood relay box C	ABS front fail-safe relay	
G302		Right side of engine compartment	Body ground, via engine wire harness	

