

Fuel and Emissions

Special Tools

'91-'92	11-2d
'93-'95	11-2b

Component Locations Index

'91-'92	11-3d
'93-'95	11-3b

System Description

Vacuum Connections

'91-'92	11-5d
'93-'95	11-6b

Electrical Connections

11-10b

System Connectors

Engine Compartment ...	11-20b
Dash and Floor	11-26b
Trunk Area	11-30b

Troubleshooting

Troubleshooting Guide	11-32b
Self-diagnostic Procedures	11-34b
How to Read Flowcharts ...	11-39b

PGM-FI System

System Description

'91-'92	11-24d
'93-'95	11-40b

MIL Circuit Troubleshooting ...

11-42b

Idle Control System

Troubleshooting Guide

11-80b

System Description

11-81b

Troubleshooting Flowcharts

Idle Air Control Valve

11-84b

Air Conditioning Signal

11-86b

Alternator FR Signal

11-88b

Automatic Transaxle Gear

Position Signal (A/T)

11-90b

Neutral Switch Signal (M/T) .

11-92b

Clutch Switch Signal (M/T) .

11-94b

Starter Switch Signal

11-96b

Brake Switch Signal

11-98b

Power Steering Pressure

Switch Signal

11-100b

Fast Idle Thermo Valve

Description

11-101b

Inspection

11-101b

Starting Air Valve

Description

11-102b

Idle Speed Setting

Inspection/Adjustment

11-103b

Fuel Supply System

System Troubleshooting Guide

11-105b

System Description

11-106b

Fuel Pressure Relieving/Inspection

'91

11-90d

'93

11-106b

Fuel Injectors Replacement

11-111b

Injector Resister

11-113b

Description

11-113b

Testing

11-113b

Fuel Pressure Regulator

Description

11-114b

Testing

'91-'92

11-98d

'93-'95

11-114b

Replacement

11-115b

Fuel Filter Replacement

11-118b

Fuel Pump

Description

'91-'92

11-103d

'93-'95

11-119b

Testing

11-120b

Replacement

11-120b

PGM-FI Main Relay

Description

11-121b

Testing

11-121b

Fuel Tank Replacement

11-124b

Intake Air System

System Troubleshooting Guide

11-125b

System Description

11-126b

Air Cleaner Replacement

11-127b

Throttle Cable

Inspection/Adjustment

11-128b

Installation

11-128b

Throttle Body

Description

11-129b

Inspection

11-129b

Disassembly

11-131b

Intake Air Bypass Control

System

Description

11-132b

Troubleshooting Flowchart .

11-133b

Control Valve Test

11-137b

Disassembly

11-138b

Emission Control System

System Troubleshooting Guide

11-139b

System Description

11-140b

Tailpipe Emission

11-140b

Three Way Catalytic Converter

Description

'91-'92 Models

11-125d

'93-'95 Models

11-141b

Inspection

'91-'92 Models

11-126d

'93-'95 Models

11-143b

Positive Crankcase Ventilation

System

Description

11-151b

Inspection

11-151b

Evaporative Emission Control .

11-152

Description

11-152b

Two Way Valve Testing

11-157b
