

Manual Transmission

Special Tools	13-2b	Deletion of Secondary Spring ('94-'95)	13-2a	Installation	13-31b
Reverse Lockout System				Synchro Ring, Gear	
Description	13-3b	Installation		Inspection	13-32b
Maintenance		'91-'92	13-40b	Oil Pump	
Transmission Oil	13-4b	'93-'95	13-56b	Clearance Inspection	13-33b
Back-up Light Switch, Neutral		5th Gear ('91-'92)		Mainshaft Bearing (Clutch Housing)	
Position Switch Replacement		Removal	13-11d	Replacement	13-34b
'91-'92	13-3d	Installation	13-39d	Countershaft Bearing (Clutch Housing)	
'93-'95	13-5b	5th/6th Gear ('93-'95)		Replacement	13-35b
Reverse Lockout System		Removal	13-21b	Mainshaft Oil Seal (Clutch Housing)	
Component Location Index ..	13-6b	Installation	13-55b	Replacement	13-36b
Troubleshooting Flowchart ..	13-8b	Transmission Housing		Mainshaft/Countershaft	
Reverse Lockout Relay		Removal		Reassembly, Clearance Inspection	
Test	13-12b	'91-'92	13-12d	'91-'92	13-24d
Reverse Lockout Solenoid		'93-'95	13-22b	'93-'95	13-37b
Test	13-12b	Reassembly		Secondary Gear Assembly	
Replacement	13-13b	'91-'92	13-36d	Component Location Index ..	13-42b
Transmission Assembly		'93-'95	13-52b	Extension Shaft	
Removal		Bearing Installation	13-54b	Removal	13-43b
'91-'92	13-4d	Mainshaft, Countershaft,		Oil Seal (Secondary Gear)	
'93-'95	13-14b	Reverse Gear Shaft		Replacement	13-43b
Installation		Disassembly	13-24b	Oil Seal	
'91-'92	13-41d	Installation	13-50b	Removal	13-44b
'93-'95	13-58b	Mainshaft, Countershaft		Tapered Roller Bearing	
Component Location Index		Inspection	13-26b	Replacement	13-45b
'91-'92	13-8d	Reverse Shift Holder, Shift Fork		Preload Adjustment	13-46b
'93-'95	13-18b	Clearance Inspection	13-28b	Oil Seal	
Transmission Cover		Change Holder, Shift Fork		Installation	13-48b
Removal	13-20b	Clearance Inspection	13-30b	Gearshift Mechanism	
Deletion of Secondary Cover		Synchro Sleeve, Synchro Hub		Overhaul	13-63b
('94-'95)	13-2a	Inspection	13-31b		