

Automatic Transmission

Special Tools	14-2b	Lower Valve Body Assembly		Main Valve Body Disassembly/ Inspection/Reassembly ...	14-118b	Tapered Roller Bearing	
Description		Removal/Installation	14-90b	Regulator Valve Body Disassembly/ Inspection/Reassembly ...	14-120b	Replacement	14-139b
General Operation	14-3b	Disassembly/ Reassembly	14-91b	Accumulator Body Disassembly/ Inspection/Reassembly ...	14-121b	Preload Adjustment	14-142b
Clutches	14-6b	Removal	14-106b	Oil Pump Body Disassembly/ Inspection/Reassembly ...	14-122b	Oil Seal	
Power Flow	14-9b	Throttle Valve Body/ Linear Solenoid		Oil Pump Inspection	14-123b	Removal	14-140b
Electronic Control System	14-19b	Test	14-92b	Reverse Accumulator/1st-hold Accumulator		Installation	14-143b
Hydraulic Control	14-22b	Replacement	14-92b	Disassembly/Inspection/ Reassembly	14-124b	Bearing Outer Race	
Hydraulic Flow	14-26b	Shift Control		Disassembly	14-125b	Replacement	14-140b
Lock-up System	14-36b	Solenoid Valve A/B		Rear Cover Disassembly/ Inspection/Reassembly ...	14-126b	Clutch	
Parking Brake Mechanism	14-42b	Test	14-93b	Reverse Idler Gear Disassembly/ Inspection/Reassembly ...	14-127b	Component Location Index	14-144b
Electrical System		Replacement	14-93b	Mainshaft		Disassembly	14-147b
Component Location Index ...	14-46b	Transmission		Disassembly/Inspection/ Reassembly	14-128b	Reassembly	14-149b
* Troubleshooting Procedures	14-47b	Transmission		Inspection	14-129b	Torque Converter Housing Bearings	
Symptom-to-Component Chart		Removal		Countershaft		Mainshaft Bearing/Oil Seal	
'91	14-48e	'91-'92	14-92d	Disassembly/Inspection/ Reassembly	14-132b	Replacement	14-153b
'92-'95	14-50b	'93-'95	14-94b	Inspection	14-133b	Countershaft Bearing	
Lock-up Control Solenoid Valve A/B		Deletion of Secondary Cover	14-6a	'91-'94	14-9a	Replacement	14-154b
Test	14-72b	Deletion of Secondary Spring	14-6a	'95		Transmission Housing	
Replacement	14-73b	'94-'95	14-6a	2nd Gear One-way Clutch/ Parking Gear Disassembly/ Inspection	14-135b	Bearing Replacement	14-154b
Shift Control		Deletion of ATF Magnet	14-7a	1st Gear One-way Clutch/Countershaft		Parking Brake Mechanism	
Solenoid Valve A/B Test ...	14-74b	Component Location Index		1st, 2nd Gear Disassembly/ Inspection/Reassembly ...	14-136b	Disassembly/Inspection/ Reassembly	14-155b
Linear Solenoid Test	14-75b	Housing/Lower Valve Body	14-98b	Countershaft 2nd Gear/ One-way Clutch Hub/Ball Bearing		Transmission	
Kick-down Switch		Rear Cover	14-100b	Disassembly	14-137b	Reassembly	14-156b
Replacement	14-76b	Transmission Housing ...	14-102b	Inspection	14-138b	Installation	
Adjustment	14-76b	Torque Converter Housing/ Valve Body	14-104b	Secondary Driven Gear		'91-'92	14-156d
Mainshaft/Countershaft		Rear Cover Removal	14-108b	Shaft Oil Seal Replacement	14-138b	'93-'95	14-163b
Speed Sensors		Transmission Housing				Cooler Flushing	14-168b
Replacement	14-77b	Removal	14-110b			Torque Converter	
Hydraulic System		Torque Converter Housing/ Valve Body Removal	14-112b			Disassembly	14-162b
Symptom-to-component		Valve Body Repair	14-114b			* Shift Cable	
Chart	14-78b	Valve Assembly	14-115b			Removal/Installation	14-170b
* Road Test		Valve Caps Description	14-116b			Adjustment	14-172b
'91	14-82e	Secondary Valve Body Disassembly/ Inspection/Reassembly				* Shift Lever Assembly	
'92	14-80d	'91-'92	14-111d			Disassembly/Reassembly .	14-173b
'93-'95	14-82b	'93-'95	14-117b			Inspection/Adjustment	14-174b
Stall Speed Test	14-84b					* A/T Gear Position	
Fluid Level						Indicator Panel Adjustment	14-175b
Checking/Changing	14-85b						
Pressure Testing							
'91-'92	14-86d						
'93-'95	14-86b						