

Steering

*: Read [SRS precautions](#) before working in this area

Special Tools	17-2b
Component Location	
Index	17-3b
System Description	
Fluid Flow Diagram	17-4b
Steering Pump	17-5b
Fluid Reservoir/Filter	17-6b
4-Way Valve	17-7b
Full-lock Unloader System	17-9b
Power Steering Speed Sensor ...	17-9b
Troubleshooting	
General Troubleshooting	17-12b
Noise and Vibration	17-15b
Fluid Leaks	17-16b
Maintenance	
Pump Belt Adjustment	17-17b
On-Car Check	
Rack Guide Adjustment	17-17b
Fluid Replacement	17-18b
Pump Pressure Check	17-19b
Steering Wheel Rotational Play ..	17-20b

Power Assist Check With Car	
Parked	17-20b
Assist Check at Road Speed	17-21b
Power Steering Speed Sensor	
Replacement	17-21b
Steering Wheel	
*Removal	17-22b
Disassembly/Reassembly	17-23b
*Installation	17-24b
Steering Column	
*Removal	
'91-'93	17-26c
'94-'95	17-26b
Inspection	
'91-'93	17-28c
'94-'95	17-28b
*Installation	
'91-'93	17-29c
'94-'95	17-29b

Power Steering Pump	
Replacement	17-31b
Pulley Replacement	17-32b
Flow Control Valve Inspection	
and Replacement	17-32b
Disassembly	17-34b
Component Location	
Index	17-37b
Reassembly	17-38b
Power Steering Gearbox	
Gearbox Removal	17-41b
Gearbox Installation	17-43b
Valve Body Unit Overhaul	17-45b
Component Location	
Index	17-50b
Steering Gearbox Overhaul	17-51b
Ball Joint Boot Replacement	17-65b