

Suspension

Special Tools	18-2b
Component Location Index	18-3b
Wheel Alignment	
Caster	18-4b
Camber	18-4b
Front Toe Inspection/ Adjustment	18-5b
Rear Toe Inspection/ Adjustment	18-5b
Turning Angle Inspection/ Adjustment	18-6b
Wheel Measurements	
Bearing End Play	18-7b
Wheel Runout	18-7b

Front Suspension	
Torque Specifications	18-8b
Component Location Index	18-9b
Knuckle/Hub Replacement	18-10b
Ball Joint Boot Replacement	18-16b
Suspension Arms	
Removal/Inspection	18-15
Installation	18-16
Front Damper	
Removal	18-17b
Disassembly/Inspection	18-17b
Inspection	18-18b
Reassembly	18-19b
Installation	18-19b
Disposal ('91-'93)	18-32c

Rear Suspension	
Torque Specifications.....	18-20b
Hub Bearing Unit	
Replacement	18-21b
Component Location Index	18-24b
Knuckle/Upper Arm/Lower Arm/Radius Rods	
Removal	18-25b
Ball Joint Boot Replacement	18-28b
Rear Damper	
Removal	18-28b
Disassembly/Inspection	18-29b
Inspection	18-30b
Reassembly	18-31b
Installation	18-31b