

Body Electrical

*: Read [SRS precautions](#) before working in this area

Special Tools	23-2	Noise Condenser Capacity Test	23-105	Engine Coolant Temperature (ECT) Gauge	23-141	Headlights Adjustment	23-181
Troubleshooting Tips and Precautions	23-3	Spark Plug Inspection	23-106	ECT Gauge Test	23-141	Assembly Replacement	23-184
Five-step Troubleshooting	23-5	Radiator and Condenser Fan Controls Component Location Index	23-107	ECT Sending Unit Test	23-141	Bulb Replacement	23-184
Relay and Control Unit Locations Engine Compartment	23-8	Description	23-109	Break Warning System Parking Brake Switch Test	23-142	Front Side Marker/Parking Lights Replacement	23-185
Dashboard '91-'92	23-9	Troubleshooting	23-112	Brake Fluid Level Switch Test	23-142	Front Turn Signal Lights Replacement	23-186
'93-'95	23-9	Control Unit Terminal '91-'92 Models	23-128	Seat Belt Reminder System Seat Belt Switch Test	23-143	Taillights Replacement	23-187
Floor, Roof and Rear Bulkhead	23-14	'93-'95 Models	23-113	Low Fuel Indicator Indicator Light Test	23-143	Bulb Replacement	23-187
Dashboard, Door and Floor	23-12	Control Module Terminal '91-'92 Models	23-128	Key-in Reminder System Ignition Key Switch Test	23-144	License Place Lights Replacement	23-188
Floor	23-13	'93-'95 Models	23-113	Lights-On Reminder System Chime Test	23-144	Rear Parking Lights Replacement	23-188
Under-dash Fuse/Relay Box Removal/Installation	23-76	Fan Motor Test	23-114	Interlock System Component Location Index	23-145	Dash Lights Brightness Control Component Location Index '91-'92	23-193
Power Relays Test	23-71	Engine Oil Temperature Sensor Test	23-114	Control Unit Input Test	23-147	'93-'95	23-189
* Ignition Switch Test '91-'92	23-78	Radiator Fan Control Sensor Test	23-115	Key Interlock Solenoid Test	23-148	Control Unit Input Test	23-191
'93-'95	23-78	Charging System Component Location Index	23-116	Shift Lock Solenoid Test/Replacement	23-149	Controller Test/Replacement	23-192
Electrical Switch Replacement	23-78	Troubleshooting Charging System Light Test	23-118	A/T Gear Position Indicator Component Location Index	23-150	Interior Lights Trunk Lights and Latch Switch Trunk Light Replacement	23-210
Steering Lock Replacement	23-79	Alternator Regulator Test	23-120	Indicator Input Test	23-152	Latch Switch Test/Replacement	23-210
Battery Test	23-74	Alternator Replacement	23-122	A/T Gear Position Switch Test	23-154	Glove Box Light Test	23-211
Starting System Component Location Index	23-82	Alternator Overhaul	23-123	A/T Gear Position Switch Replacement	23-155	Vanity Mirror Light Test	23-211
Description	23-83	Rectifier Test	23-124	Bulb Replacement	23-157	Entry Light Control System Component Location Index	23-193
Starter Test	23-86	Alternator Bush Inspection	23-124	Safety Indicator Component Location Index	23-157	Controller Test (LS Model) '91-'92	23-200
Clutch Interlock Switch Test (M/T)	23-88	Rotor Slip Ring Test	23-125	Description	23-157	'93-'95	23-196
Starter Replacement	23-89	Stator Test	23-125	Indicator Input Test	23-160	Controller Light Bulb Replacement '91-'92	23-200
Starter Overhaul	23-90	Alternator Belt Inspection and Adjustment	23-126	Troubleshooting	23-162	'93-'95	23-196
Starter Solenoid Test	23-91	Gauge Assembly Gauge/Indicator Location Index	23-127	Bulb Replacement	23-162	Front Ceiling Light Test /Replacement	23-197
Armature Inspection and Test	23-92	Removal	23-132	Brake Light Failure Sensor Test	23-163	Rear Ceiling Light Test /Replacement	23-198
Starter Brush Holder Test	23-94	Disassembly	23-134	Integrated Control Unit Input Test '91-'92	23-170	Foot Well Light Replacement	23-199
Starter Brush Inspection	23-95	Bulb Location '91-'92 Models	23-139	'93-'95	23-166	Courtesy Light Replacement	23-200
Overrunning Clutch Inspection	23-95	'93-'95 Models	23-135	Lighting System Component Location Index	23-171	Ignition Key Light Replacement	23-200
Overrunning Clutch Removal	23-96	Speedometer/Trip Meter/Odometer Troubleshooting	23-136	Daytime Running Lights Control Unit Input Test	23-184	Door Switch Test	23-201
Starter Reassembly	23-96	Vehicle Speed Sensor (VSS) Replacement	23-138	'91 (Canada)	23-184	Ignition Key Switch Test	23-202
Performance Test	23-97	Engine Oil Pressure Warning System Pressure Switch Test	23-138	'92-'95	23-178	Driver's Door Outside Handle Switch Test	23-202
Ignition System Component Location Index	23-99	Fuel Gauge Gauge Test	23-139	Combination Light Switch Test	23-176		
Description	23-100	Sending Unit Test	23-140	Replacement	23-180		
Ignition Timing Inspection and Setting	23-102						
Idle Speed Inspection	23-103						
Ignition Control Module (ICM) Input Test	23-104						
Ignition Coil Test	23-105						

Body Electrical (Cont'd)

Trunk Light and Latch Switch	
Trunk Light Replacement	23-203
Latch Switch Replacement	23-203
Glove Box Light Test	23-204
Vanity Mirror Light Test	23-204
Brake Lights	
Brake Switch Test	23-206
High Mount Brake Light Replacement	23-206
Back-up Lights	
Switch Test	23-208
Side Marker/Turn Signal/Hazard Flasher System	
Component Location Index	23-209
Hazard Warning Switch Removal	23-211
Hazard Warning Switch Test	23-211
Turn Signal/Hazard Relay Input Test	23-212
Cigarette Lighter	
Component Location Index	23-214
Replacement	23-216
Stereo Sound System	
*Component Location Index	23-217
*Unit Removal	23-220
Unit Terminals	
'91-'92 Models	23-223
'93-'95 Models	23-221
Power Antenna Motor Test	23-222
Antenna Mast Replacement	23-223
Antenna Mast Installation ('95)	20-12
Antenna Tube Replacement ('95)	20-13
Power Antenna Motor Replacement	23-224
Amplifier Removal	23-224
Speaker Replacement	
Front	
'91-'92	23-226
'93-'95	23-226
Rear	
'91-'92	23-226
'93-'95	23-227
Tweeter	
'91-'92	23-227
Front ('93-'95)	23-226
Rear ('93-'95)	23-227
Cable Reel Harness Test	23-228
Radio Remote Switch	
Removal	23-229b

Radio Remote Switch Test	23-229
Horns	
*Component Location	
Index	23-241
Horn Test	23-243
Switch Test	23-244
Seat Belt Tension Reducer	
Test	23-276
Seat Belt Switch	
Test	23-277
Moonroof	
Component Location	
Index	23-246
Troubleshooting	23-248
Function Test	23-249
Switch Removal	23-249
Motor Test	23-250
Switch Test	23-250
Power Door Closer System	
Component Location Index	23-278
Description	23-280
Control Unit Input Test	
'91-'93	23-283
'94-'95	23-283
Power Door Closer Test	23-284
Power Seat Belt Presenters	
Component Location Index	23-285
Description	23-285
Test	
'91-'92	23-283
'93-'95	23-287
Seat Heaters	
Component Location Index	
'91 (Canada)	23-324
'92-'95	23-288
Troubleshooting	
'91 (Canada)	23-326
'92-'95	23-290
Control Unit Input Test	
'91 (Canada)	23-327
'92-'95	23-291
Switch Removal	
'91 (Canada)	23-328
'92-'95	23-292
Switch Test	
'91 (Canada)	23-328
'92-'95	23-292
Heater Test	
'91 (Canada)	23-329
'92-'95	23-293
Cruise Control	
Component Location Index	23-303

Troubleshooting	
'91-'92 Models	23-341
'93-'95 Models	23-305
Control Unit Input Test	23-306
Main Switch Test	23-308
SET/RESUME/CANCEL Switch	
Test	23-309
Brake Switch Test	23-310
Clutch Switch Test	23-310
A/T Gear Position Switch	
Test	23-311
Actuator Assembly Test ...	23-311
Actuator Cable Adjustment	23-312
Security Alarm System	
Wiring Location	23-313
Component Location Index	23-314
Description	23-316
Troubleshooting	
'91-'92 Models	23-356
'93-'95 Models	23-320
Control Unit Input Test	
'91	23-359
'92	23-357
'93-'95 Models	23-321
Indicator Replacement	23-324
Hood Switch Test/	
Replacement	23-324
Trunk Latch Switch Test ...	23-325
Trunk Key Cylinder Switch	
Test	23-325
Power Driver's Seat ('91-'93)	
Component Location Index	23-288
Description	23-289
Power Seat Control	
Unit Input Test	23-292
Power Seat Switch Test	23-307
Motor Test	23-308
Memory Sensor Test	23-309
Recline Memory Limit	
Switch Test	23-310
Position Memory Switch	
Test	23-311
Driving Position Memory System (DPMS) ('94-'95)	
Component Location	
Index	23-326
Description	23-328
Self Diagnostic	
Procedures	23-332
DTC Chart	23-333
Troubleshooting Guide	23-336
Pre-troubleshooting Tests ..	23-335

Control Unit and	
Control Unit Connector	23-342
DPMS Control Unit Input/Output	
Signal	23-377
Driving Position Memory	
Switch Test	23-382
Steering Column	
Switch Test	23-384
Tilt/Extend-retract	
Motor Test	23-382
Tilt/Extend-retract Memory	
Sensor Test	23-383
Driver's Power Seat Switch	
Test	23-385
Power Seat Motor	
Test	23-386
Power Seat Memory	
Sensor Test	23-387
Power Seat Recline Memory	
Limit Switch Test	23-388
Rear Window Defogger	
*Component Location	
Index	23-230
Troubleshooting	
'91-'92	23-247
'93-'95	23-232
Switch	
Removal	23-233
Test	23-233
Function Test	23-234
Defogger Wire Repair	23-234
Clock	
Replacement	23-236
Terminals	23-236
Trunk Opener	
Component Location	
Index	23-237
Main Switch Test/	
Replacement	23-239
Opener Switch Test/	
Replacement	23-240
Solenoid Test/Replacement	23-240
Power Door Locks	
Component Location	
Index	23-267
Description	23-267
Troubleshooting	
'91-'92	23-271
'93-'95	23-269
Control Unit Input Test	23-284
'91-'92	23-272
'93-'95	23-270

Body Electrical (Cont'd)

Driver's Door Lock Actuator Test	23-272	Master Switch Test	23-264	Power Passenger's Seat Component Location Index		Troubleshooting	
Passenger's Door Lock Actuator Test	23-273	Passenger's Switch Test	23-265	'91-'92	23-318	Self-diagnosis Function	23-408
Driver's Door Key Cylinder Switch Test	23-274	Passenger's Window Motor Test	23-266	'93-'95	23-389	SRS Indicator Light	
Door Lock Switch Test	23-274	Driver's Window Motor Test	23-265	Power Seat Switch Test	23-391	Troubleshooting	23-408
Power Mirrors		Wiper/Washers		Rear Access Slide Removal ('93-'95)	23-392	Connecting Short Connectors ('92-'95 Models)	23-409
Component Location		Component Location		Rear Access Slide Switch Test ('93-'95)	23-392	Test Harness and Attachment Points	23-411
Index	23-251	Index	23-294	Motor Test		Troubleshooting	
Function Test	23-253	Troubleshooting		'91-'92	23-321	SRS Indicator Does Not Light	
Switch Test	23-254	'91-'92	23-330	'93-'95	23-393	'91	23-374
Motor Test	23-255	'93-'95	23-296	Supplement Restraint System (SRS)		'92	23-379
Replacement	23-256	Control Unit Input Test	23-325	Component Location Index	23-396	'93-'95 Models	23-412
Actuator Replacement ('95)	20-6	Wiper/Washer Switch Test	23-297	Description	23-397	SRS Indicator Light Stay on	
Power Windows		Windshield Wiper Motor Test	23-299	Wiring Locations	23-399	Continuously	23-416
Component Location		Washer Motor Test	23-300	General Precautions	23-400	Airbag Assembly	
Index	23-257	Switch Replacement	23-298	Airbag Handling and Storage	23-400	Replacement	23-432
Description	23-257	Wiper/Washers		Seat Belt Pretensioner Handling and Storage	23-401	Airbag/Seat Belt	
Troubleshooting		Washer Level Switch Test (Canada)	23-300	Steering-Related		Pretensioner Disposal	23-435
'91-'92	23-261	Windshield Wiper Motor Replacement	23-301	Precautions	23-402	Cable reel	
'95-'96	23-259	Washer Replacement	23-302	Wiring Precautions	23-403	Replacement	23-440
Master Unit Input Test	23-260			Sensor Inspection	23-406	Dash Sensor	
Master Switch				Inspection after		Replacement	23-444
Replacement	23-262			Deployment	23-406	SRS Unit	
Passenger's Window						Replacement	23-446
Switch Replacement	23-262					Seat Belt Pretensioner	
						Replacement	23-448