

Body Electrical

*: Read [SRS precautions](#) before working in this area

Special Tools	23-2b
Troubleshooting	
Tips and Precautions	23-3b
Five-step Troubleshooting	23-5b
Relay and Control Unit Locations	
Engine Compartment	23-8b
Dashboard	
'91-'92	23-9d
'93-'95	23-9b
Floor, Roof and Rear	
Bulkhead	23-14b
Dashboard, Door and Floor	23-12b
Floor	23-13b
Under-dash Fuse/Relay Box	
Removal/Installation	23-76b
Power Relays Test	23-71b
* Ignition Switch Test	
'91-'92	23-78d
'93-'95	23-78b
Electrical Switch	
Replacement	23-78b
Steering Lock Replacement	23-79b
Battery Test	23-74b
Gauge Assembly	
Gauge/Indicator Location	
Index	23-127b
Removal	23-132b
Disassembly	23-134b
Bulb Location	
'91-'92 Models	23-139d
'93-'95 Models	23-135b
Speedometer/Trip Meter/Odometer	
Troubleshooting	23-136b
Vehicle Speed Sensor (VSS)	
Replacement	23-138b

Engine Oil Pressure Warning System	
Pressure Switch Test	23-138b
Fuel Gauge	
Gauge Test	23-139b
Sending Unit Test	23-140b
Engine Coolant Temperature	
(ECT) Gauge	
ECT Gauge Test	23-141b
ECT Sending Unit Test	23-141b
Brake Warning System	
Parking Brake Switch	
Test	23-142b
Brake Fluid Level Switch	
Test	23-142b
Seat Belt Reminder System	
Seat Belt Switch Test	23-143b
Low Fuel Indicator	
Indicator Light Test	23-143b
Key-in Reminder System	
Ignition Key Switch Test	23-144b
Lights-On Reminder System	
Chime Test	23-144b
Interlock System	
Component Location Index	23-145b
Control Unit Input Test	23-147b
Key Interlock Solenoid Test	23-148b
Shift Lock Solenoid	
Test/Replacement	23-149b
A/T Gear Position Indicator	
Component Location Index	23-150b
Indicator Input Test	23-152b
A/T Gear Position Switch	
Test	23-154b
A/T Gear Position Switch	
Replacement	23-155b
Bulb Replacement	23-157b

Safety Indicator	
Component Location Index	23-157b
Description	23-157b
Indicator Input Test	23-160b
Troubleshooting	23-162b
Bulb Replacement	23-162b
Brake Light Failure Sensor	
Test	23-163b
Integrated Control Unit Input Test	
'91-'92	23-170d
'93-'95	23-166b
Lighting System	
Component Location	
Index	23-171b
Daytime Running Lights Control	
Unit Input Test	
'91 (Canada)	23-184e
'92-'95	23-178b
Combination Light Switch	
Test	23-176b
Replacement	23-180b
Headlights	
Adjustment	23-181b
Assembly Replacement	23-184b
Bulb Replacement	23-184b
Front Side Marker/Parking Lights	
Replacement	23-185b
Front Turn Signal Lights	
Replacement	23-186b
Taillights	
Replacement	23-187b
Bulb Replacement	23-187b
License Plate Lights	
Replacement	23-188b
Rear Parking Lights	
Replacement	23-188b

Dash Lights Brightness Control	
Component Location Index	
'91-'92	23-193d
'93-'95	23-189b
Control Unit Input Test	23-191b
Controller Test/Replacement	23-192b
Interior Lights	
Trunk Lights and Latch Switch	
Trunk Light Replacement	23-203b
Latch Switch Test/	
Replacement	23-203b
Glove Box Light Test	23-204b
Vanity Mirror Light Test	23-204b
Entry Light Control System	
Component Location Index	23-193b
Controller Test (LS Model)	
'91-'92	23-200d
'93-'95	23-196b
Controller Light Bulb Replacement	
'91-'92	23-200d
'93-'95	23-196b
Front Ceiling Light Test	
/Replacement	23-197b
Rear Ceiling Light Test	
/Replacement	23-198b
Foot Well Light	
Replacement	23-199b
Courtesy Light	
Replacement	23-200b
Ignition Key Light	
Replacement	23-200b
Door Switch Test	23-201b
Ignition Key Switch Test	23-202b
Driver's Door Outside Handle	
Switch Test	23-202b

Body Electrical (Cont'd)

Brake Lights			
Brake Switch Test	23-206b		
High Mount Brake Light Replacement	23-206b		
Back-up Lights			
Switch Test	23-208b		
Side Marker/Turn Signal/Hazard Flasher System			
Component Location Index	23-209b		
Hazard Warning Switch Removal	23-211b		
Hazard Warning Switch Test	23-211b		
Turn Signal/Hazard Relay Input Test	23-212b		
Cigarette Lighter			
Component Location Index	23-214b		
Replacement	23-216b		
Stereo Sound System			
*Component Location Index	23-217b		
*Unit Removal	23-220b		
Unit Terminals			
'91-'92 Models	23-223d		
'93-'95 Models	23-221b		
Power Antenna Motor Test	23-222b		
Antenna Mast Replacement	23-223b		
Antenna Mast Installation ('95)	20-12a		
Antenna Tube Replacement ('95)	20-13a		
Power Antenna Motor Replacement	23-224b		
Amplifier Removal	23-224b		
Speaker Replacement			
Front			
'91-'92	23-226d		
'93-'95	23-226b		
Rear			
'91-'92	23-226d		
'93-'95	23-227b		
Tweeter			
'91-'92	23-227d		
Front ('93-'95)	23-226b		
Rear ('93-'95)	23-227b		
Cable Reel Harness Test	23-228b		
Radio Remote Switch Removal	23-229b		
Radio Remote Switch Test	23-229b		
Horns			
*Component Location Index	23-241b		
Horn Test	23-243b		
Switch Test	23-244b		
Seat Belt Tension Reducer Test	23-276b		
Seat Belt Switch Test	23-277b		
Moonroof			
Component Location Index	23-246b		
Troubleshooting	23-248b		
Function Test	23-249b		
Switch Removal	23-249b		
Motor Test	23-250b		
Switch Test	23-250b		
Power Door Closer System			
Component Location Index	23-278b		
Description	23-280b		
Control Unit Input Test			
'91-'93	23-283c		
'94-'95	23-283b		
Power Door Closer Test	23-284b		
Power Seat Belt Presenters			
Component Location Index	23-285b		
Description	23-285b		
Test			
'91-'92	23-283d		
'93-'95	23-287b		
Seat Heaters			
Component Location Index			
'91 (Canada)	23-324e		
'92-'95	23-288b		
Troubleshooting			
'91 (Canada)	23-326e		
'92-'95	23-290b		
Control Unit Input Test			
'91 (Canada)	23-327e		
'92-'95	23-291b		
Switch Removal			
'91 (Canada)	23-328e		
'92-'95	23-292b		
Switch Test			
'91 (Canada)	23-328e		
'92-'95	23-292b		
Heater Test			
'91 (Canada)	23-329e		
'92-'95	23-293b		
Security Alarm System			
Wiring Location	23-313b		
Component Location Index	23-314b		
Description	23-316b		
Troubleshooting			
'91-'92 Models	23-356d		
'93-'95 Models	23-320b		
Control Unit Input Test			
'91	23-359e		
'92	23-357d		
'93-'95 Models	23-321b		
Indicator Replacement	23-324b		
Hood Switch Test/Replacement	23-324b		
Trunk Latch Switch Test	23-325b		
Trunk Key Cylinder Switch Test	23-325b		
Power Driver's Seat ('91-'93)			
Component Location Index	23-288c		
Description	23-289c		
Power Seat Control Unit Input Test	23-292c		
Power Seat Switch Test	23-307c		
Motor Test	23-308c		
Memory Sensor Test	23-309c		
Recline Memory Limit Switch Test	23-310c		
Position Memory Switch Test	23-311c		
Driving Position Memory System (DPMS) ('94-'95)			
Component Location Index	23-326b		
Description	23-328b		
Self Diagnostic Procedures	23-332b		
DTC Chart	23-333b		
Troubleshooting Guide	23-336b		
Pre-troubleshooting Tests	23-335b		
Control Unit and Control Unit Connector	23-342b		
DPMS Control Unit Input/Output Signal	23-377b		
Driving Position Memory Switch Test	23-382b		
Steering Column Switch Test	23-384b		
Tilt/Extend-retract Motor Test	23-382b		
Tilt/Extend-retract Memory Sensor Test	23-383b		
Driver's Power Seat Switch Test	23-385b		
Power Seat Motor Test	23-386b		
Power Seat Memory Sensor Test	23-387b		
Power Seat Recline Memory Limit Switch Test	23-388b		
Rear Window Defogger			
*Component Location Index	23-230b		
Troubleshooting			
'91-'92	23-247d		
'93-'95	23-232b		
Switch			
Removal	23-233b		
Test	23-233b		
Function Test	23-234b		
Defogger Wire Repair	23-234b		
Clock			
Replacement	23-236b		
Terminals	23-236b		
Trunk Opener			
Component Location Index	23-237b		
Main Switch Test/Replacement	23-239b		
Opener Switch Test/Replacement	23-240b		
Solenoid Test/Replacement	23-240b		
Power Door Locks			
Component Location Index	23-267b		
Description	23-267b		
Troubleshooting			
'91-'92	23-271d		
'93-'95	23-269b		
Control Unit Input Test	23-284		
'91-'92	23-272d		
'93-'95	23-270b		

Body Electrical (Cont'd)

Driver's Door Lock Actuator			
Test	23-272b		
Passenger's Door Lock			
Actuator Test	23-273b		
Driver's Door Key Cylinder			
Switch Test	23-274b		
Door Lock Switch Test	23-274b		
Power Mirrors			
Component Location			
Index	23-251b		
Function Test	23-253b		
Switch Test	23-254b		
Motor Test	23-255b		
Replacement	23-256b		
Actuator Replacement ('95) .	20-6a		
Power Windows			
Component Location			
Index	23-257b		
Description	23-257b		
Troubleshooting			
'91-'92	23-261d		
'95-'96	23-259b		
Master Unit Input Test	23-260b		
Master Switch			
Replacement	23-262b		
Passenger's Window			
Switch Replacement	23-262b		
Master Switch Test	23-264b		
Passenger's			
Switch Test	23-265b		
Passenger's Window			
Motor Test	23-266b		
Driver's Window Motor Test	23-265b		
Wiper/Washers			
Component Location			
Index	23-294b		
Troubleshooting			
'91-'92	23-330d		
'93-'95	23-296b		
Control Unit Input Test	23-325		
Wiper/Washer Switch			
Test	23-297b		
Windshield Wiper Motor			
Test	23-299b		
Washer Motor Test	23-300b		
Switch Replacement	23-298b		
Wiper/Washers			
Washer Level Switch			
Test (Canada)	23-300b		
Windshield Wiper Motor			
Replacement	23-301b		
Washer Replacement	23-302b		
Power Passenger's Seat			
Component Location Index			
'91-'92	23-318d		
'93-'95	23-389b		
Power Seat Switch Test	23-391b		
Rear Access Slide Removal			
('93-'95)	23-392b		
Rear Access Slide Switch			
Test ('93-'95)	23-392b		
Motor Test			
'91-'92	23-321d		
'93-'95	23-393b		