

Engine Electrical

Starting System

Component Location Index	23-82b
Description	23-83b
Starter Test	23-86b
Clutch Interlock Switch Test (M/T)	23-88b
Starter Replacement	23-89b
Starter Overhaul	23-90b
Starter Solenoid Test	23-91b
Armature Inspection and Test	23-92b
Starter Brush Holder Test	23-94b
Starter Brush Inspection	23-95b
Overrunning Clutch Inspection	23-95b
Overrunning Clutch Removal	23-96b
Starter Reassembly	23-96b
Performance Test	23-97b

Ignition System

Component Location Index	23-99b
Description	23-100b
Ignition Timing Inspection and Setting	23-102b
Idle Speed Inspection	23-103b
Ignition Control Module (ICM) Input Test	23-104b
Ignition Coil Test	23-105b
Noise Condenser Capacity Test	23-105b
Spark Plug Inspection	23-106b
Radiator and Condenser Fan Controls	
Component Location Index	23-107b
Description	23-109b
Troubleshooting	23-112b
Control Unit Terminal	
'91-'92 Models	23-128d
'93-'95 Models	23-113b

Control Module Terminal

'91-'92 Models	23-128d
'93-'95 Models	23-113b
Fan Motor Test	23-114b
Engine Oil Temperature Sensor Test	23-114b
Radiator Fan Control Sensor Test	23-115b
Charging System	
Component Location Index	23-116b
Troubleshooting	
Charging System Light Test	23-118b
Alternator Regulator Test	23-120b
Alternator Replacement	23-122b
Alternator Overhaul	23-123b
Rectifier Test	23-124b
Alternator Bush Inspection	23-124b
Rotor Slip Ring Test	23-125b

Stator Test

Stator Test	23-125b
Alternator Belt Inspection and Adjustment	23-126b
Cruise Control	
Component Location Index	23-303b
Troubleshooting	
'91-'92 Models	23-341d
'93-'95 Models	23-305b
Control Unit Input Test	23-306b
Main Switch Test	23-308b
SET/RESUME/CANCEL Switch Test	23-309b
Brake Switch Test	23-310b
Clutch Switch Test	23-310b
A/T Gear Position Switch Test	23-311b
Actuator Assembly Test	23-311b
Actuator Cable Adjustment	23-312b