

## Supplemental Restraint System (SRS)

### Supplement Restraint System (SRS)

Component Location Index	23-396b
Description	23-397b
Wiring Locations	23-399b
General Precautions	23-400b
Airbag Handling and Storage	23-400b
Seat Belt Pretensioner Handling and Storage	23-401b

### Steering-Related

Precautions	23-402b
Wiring Precautions	23-403b
Sensor Inspection	23-406b
Inspection after Deployment	23-406b
Troubleshooting	
Self-diagnosis Function	23-408b
SRS Indicator Light Troubleshooting	23-408b

### Connecting Short Connectors

('92-95 Models)	23-409b
Test Harness and Attachment Points	23-411b
Troubleshooting	
SRS Indicator Does Not Light	
'91	23-374e
'92	23-379d
'93-'95 Models	23-412b
SRS Indicator Light Stay on Continuously	23-416b

### Airbag Assembly

Replacement	23-432b
Airbag/Seat Belt Pretensioner Disposal	23-435b
Cable Reel Replacement	23-440b
Dash Sensor Replacement	23-444b
SRS Unit Replacement	23-446b
Seat Belt Pretensioner Replacement	23-448b