





Lock Cylinder Replacement

Coupe:

NOTE: Raise the glass fully.

1. Remove the door panel, then peel the plastic cover off as necessary.
2. Release the retainer clip with a flat tip screwdriver as shown.
3. Pull out the lock cylinder from the outer handle.

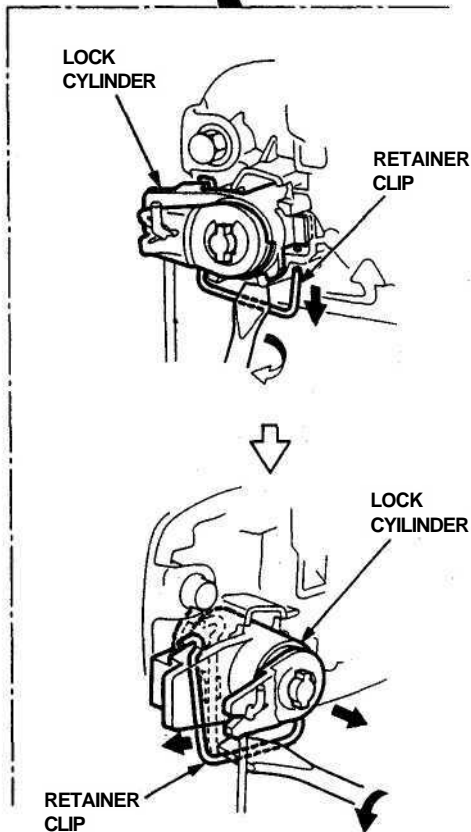
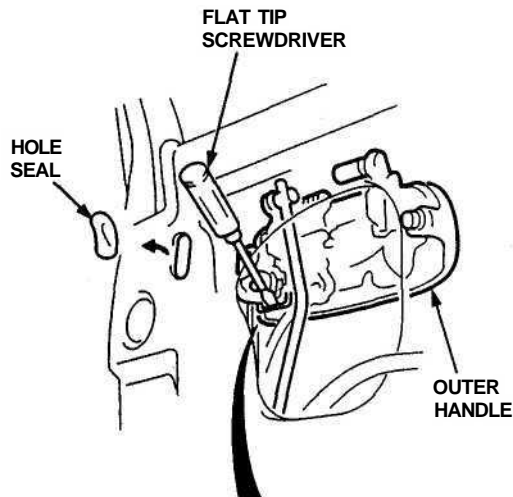


4. Remove the bolts.


5. Pull out the outer handle, then pry the outer handle rod out of its joint using diagonal cutters.

NOTE:

- To ease reassembly, apply adhesive tape to the outer handle rod joint before disconnecting it.
- Take care not to damage the outer handle.
- Take care not to bend the outer handle rod.
- Use a shop towel to protect the opening in the door.

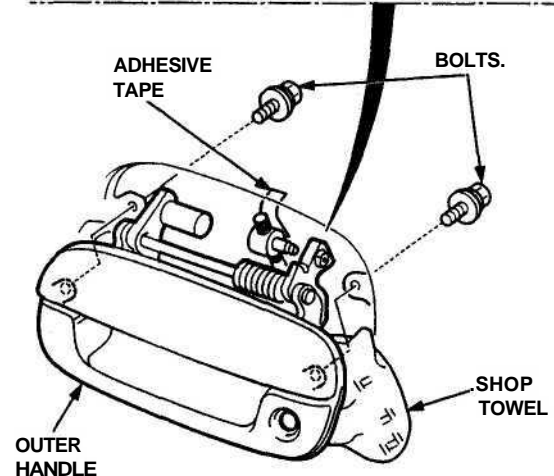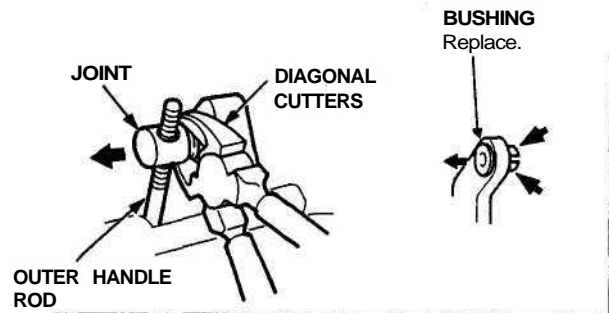

6. Remove the retainer clip from the outer handle.

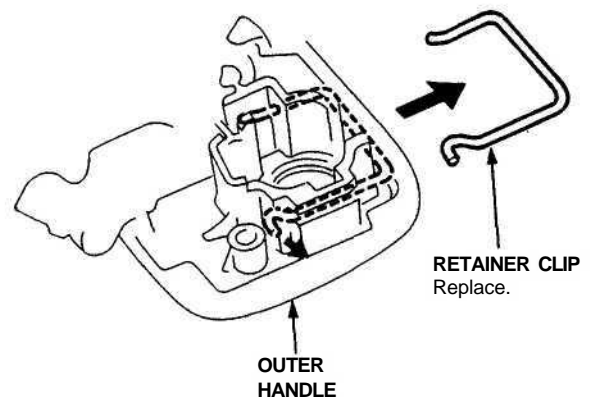


(cont'd)


Doors

Lock Cylinder Replacement (cont'd)


7. Install the new retainer clip on the outer handle.

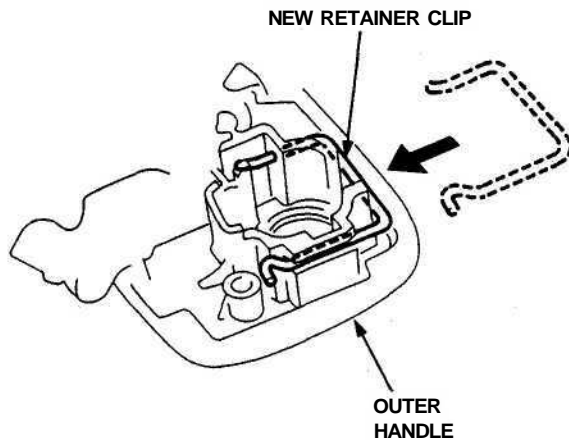


8. Install the outer handle.

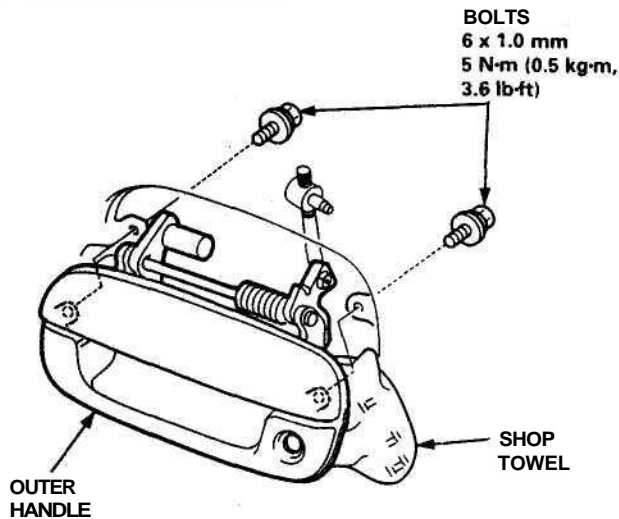

9. Install the lock cylinder.

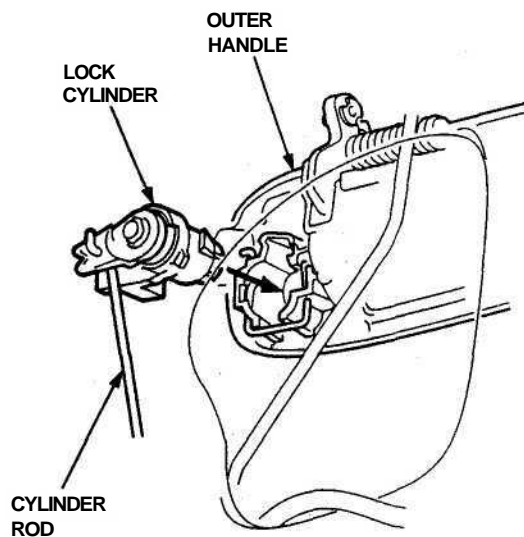

10. Connect the outer handle rod securely.

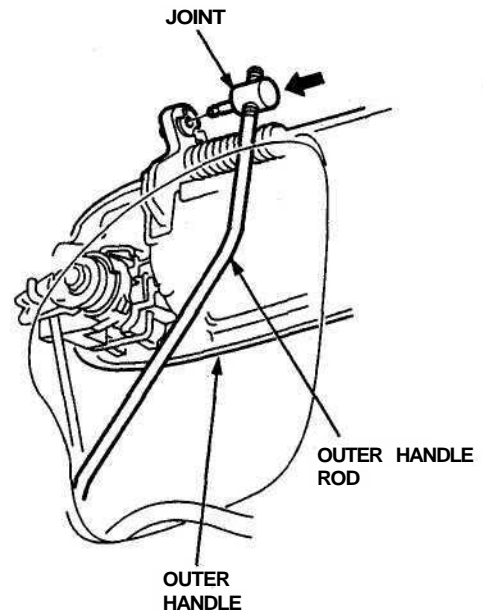

11. Make sure the door locks and opens properly.
12. Install the plastic cover and hole seal.
13. Install the door panel.