



Power Mirrors

Power Mirror Actuator Replacement (Coupe)

1. With the mirror still on the car, press in on the upper half of the mirror to create a gap at the lower edge between the mirror housing and the mirror. Look up through the gap to locate the two slots in the bottom of the actuator.

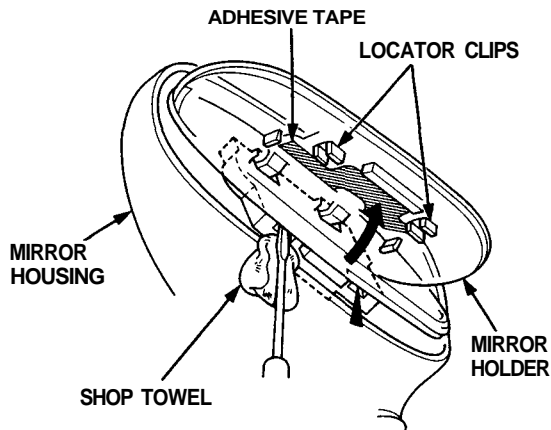


2. Insert a flat tip screwdriver into the two slots. The mirror is fastened to the actuator with double-backed adhesive tape. Twist the screwdriver gently to release the mirror. (Protect the paint with a towel inserted between the screwdriver and the mirror housing.)

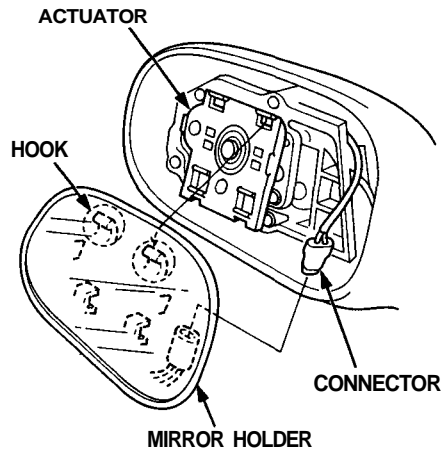


3. Release the mirror holder hooks from the actuator, and remove the mirror. Disconnect the 2-P mirror heater connector.
4. Without removing the center screw, remove the four Phillips head screws that attach the actuator to the mirror housing.

5. Disconnect the four actuator wires; gently pull the base of the rubber seal around each actuator wire.
6. Connect the actuator wires to the new actuator exactly as they were. Press each seal firmly against the back of the new actuator.

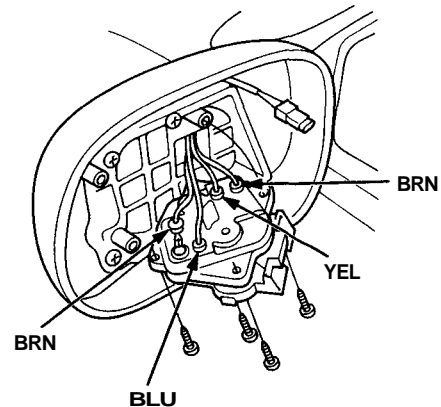

7. Attach the actuator to the housing with the four Phillips head screws removed in step 4. Connect the 2-P mirror heater connector.
8. Refasten the mirror holder hooks.
9. Lock the lower locator clips and restick the double-backed adhesive tape by squeezing the actuator and the mirror together at the lower edge with your fingers.

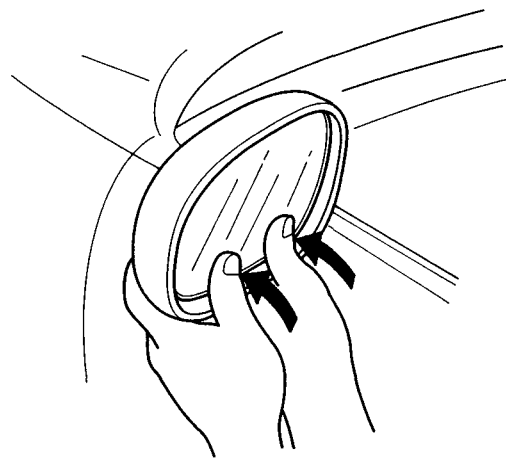

10. Run the actuator motor through its full range in all four directions. The mirror should move smoothly.