




## Antenna Tube Replacement

1. Remove the antenna mast (see page 23-231).
2. Remove the antenna tube/motor assembly (see page 23-231).
3. Remove the tube clamping screw, and pull the antenna tube out of the motor.
4. Remove the plastic guide and plastic insulator tube, and install them in the new antenna tube.

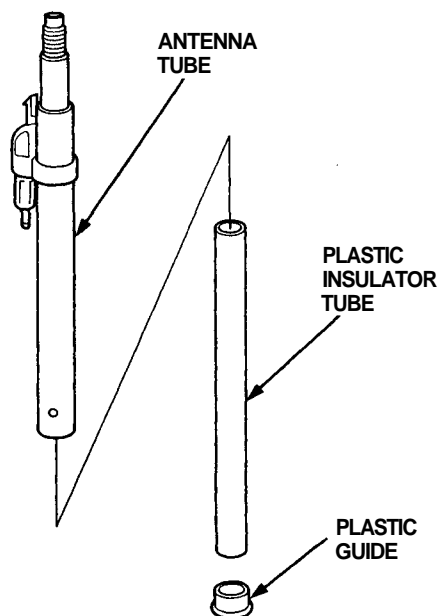

5. Insert the new antenna tube.


### With an alignment mark:

- Insert the new antenna tube into the motor, and align the mark on the tube with the screw that is used to clamp the tube to the motor.


### Without an alignment mark:

- Insert only the tube, and install the tube/motor assembly in the car.
- Adjust the tube so that the collar fits properly against the body, and mark the tube and motor.
- Remove the tube/motor assembly again.
- Align the mark on the tube with the mark on the motor, and tighten the clamping screw.

### With an alignment mark:

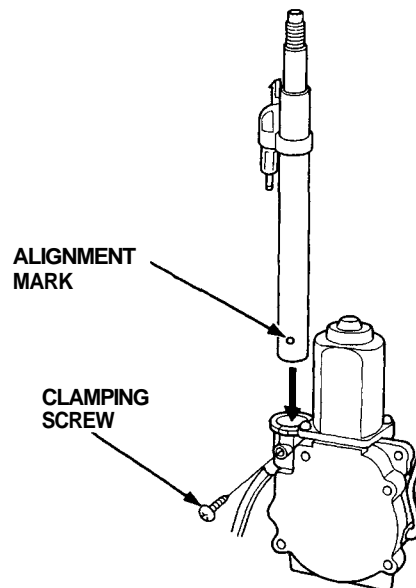

### Without an alignment mark:

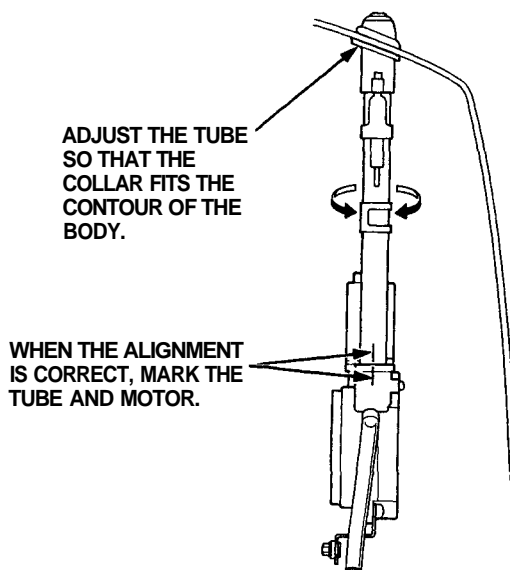

6. Install the tube/motor assembly in the car (see page 23-12).
7. Insert the mast into the tube (see page 23-231).